



CX950, CX951, XC9525, XC9535 MFPs

User's Guide

Contents

Safety information	6
Conventions	6
Product statements	6
Learn about the printer	10
Finding information about the printer	10
Finding the printer serial number	11
Finding the serial number of the optional trays	12
Finding the serial number of the output options	14
Printer configurations	17
Using the control panel	19
Home screen icons	20
Colors of the indicator light.....	21
Using the automatic document feeder and scanner glass	21
Locating the security slot.....	22
Selecting paper	22
Additional printer features and support	87
Set up, install, and configure	89
Selecting a location for the printer.....	89
Printer ports.....	90
Configuring apps and solutions.....	92
Setting up and using the accessibility features	94
Setting up the printer to fax	102
Loading paper and specialty media	109
Installing and updating software, drivers, and firmware	127
Installing hardware options	133
Networking	305
Secure the printer	309
Erasing printer memory.....	309
Erasing printer storage drive	309
Restoring factory default settings.....	309
Statement of Volatility.....	310

Print	312
Printing from a computer	312
Printing from a mobile device	313
Printing from a flash drive	314
Configuring confidential jobs	316
Printing confidential and other held jobs	316
Printing a font sample list	317
Printing a directory list	317
Placing separator sheets in print jobs	317
Canceling a print job	318
Adjusting toner darkness	318
Copy	319
Making copies	319
Copying photos	319
Copying on letterhead	319
Copying on both sides of the paper	319
Reducing or enlarging copies	320
Collating copies	320
Placing separator sheets between copies	320
Copying multiple pages onto a single sheet	321
Copying cards	321
Creating a copy shortcut	321
Email	322
Configuring the email SMTP settings	322
Scanning to email	331
Creating an email shortcut	331
Fax	333
Sending a fax	333
Scheduling a fax	333
Creating a fax destination shortcut	334
Changing the fax resolution	334
Adjusting the fax darkness	334
Printing a fax log	334
Blocking junk faxes	334
Holding faxes	335
Forwarding a fax	335

Scan	336
Scanning to a computer	336
Scanning to an FTP server	337
Creating an FTP shortcut	338
Scanning to a network folder.....	338
Configuring a network folder destination.....	338
Creating a network folder shortcut	338
Scanning to a flash drive	339
Printer menus	340
Menu map	340
Device	341
Print.....	358
Paper.....	369
Copy	372
Fax	377
Email	391
FTP.....	398
USB Drive	403
Network/Ports.....	409
Security	427
Cloud Services	437
Reports.....	437
Troubleshooting	439
Forms Merge	439
Printing the Menu Settings Page report	440
Maintain the printer	441
Checking the status of parts and supplies	441
Configuring supply notifications	441
Setting up email alerts.....	441
Printing printer reports and logs	442
Ordering parts and supplies	443
Replacing parts and supplies	447
Cleaning printer parts.....	488
Saving energy and paper	496
Moving the printer to another location.....	497
Troubleshoot a problem	498

Print quality problems.....	498
Printer error codes	499
Printing problems	515
The printer is not responding	534
Unable to read flash drive	534
Enabling the USB port.....	534
Indicator light is alternating between blue and blinking red	535
Clearing jams	535
Network connection problems.....	587
Hardware options problems	588
Issues with supplies	590
Paper feed problems.....	591
Emailing problems.....	593
Faxing problems.....	594
Scanning problems	596
Color quality problems	600
Contacting customer support	603
Recycle and dispose.....	604
Recycling Lexmark products	604
Recycling Lexmark packaging	604
Notices	605
Product information	605
Edition and legal notices	605
Specifications	608
Environmental and sustainability notices	611
Notices for wireless products	614
Other regulatory notices.....	617

Safety information

Conventions

Note: A *note* identifies information that could help you.

Warning: A *warning* identifies something that could damage the product hardware or software.

WARNING (in full capitals): A *WARNING* indicates a risk of death or serious injury if not avoided.

CAUTION: A *caution* indicates a potentially hazardous situation that could injure you.

Different types of caution statements include:



CAUTION—POTENTIAL INJURY

Indicates a risk of injury.



CAUTION—SHOCK HAZARD

Indicates a risk of electrical shock.



CAUTION—HOT SURFACE

Indicates a risk of burn if touched.



CAUTION—TIPPING HAZARD

Indicates a crush hazard.



CAUTION—PINCH HAZARD

Indicates a risk of being caught between moving parts.

Product statements



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION—POTENTIAL INJURY

Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



CAUTION—POTENTIAL INJURY

Only a Lexmark Inline Surge Protector that is properly connected between the printer and the power cord provided with the printer may be used with this product. The use of non-Lexmark surge protection devices may result in a risk of fire, property damage, or poor printer performance.



CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY

Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet and telephone system connections) are properly installed in their marked plug-in ports.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



CAUTION—POTENTIAL INJURY

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.



CAUTION—POTENTIAL INJURY

When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all doors and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has separate floor-standing optional trays or output options attached to it, then disconnect them before moving the printer.
- If the printer has a caster base, then carefully roll it to the new location. Use caution when passing over thresholds and breaks in flooring.
- If the printer does not have a caster base but is configured with optional trays or output options, then remove the output options and lift the printer off the trays. Do not try to lift the printer and any options at the same time.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.

Safety information

- Any cart used to move the hardware options must have a surface able to support the dimensions of the options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.



CAUTION—TIPPING HAZARD

Installing one or more options on your printer or MFP may require a caster base, furniture, or other feature to prevent instability causing possible injury. For more information on supported configurations, see www.lexmark.com/multifunctionprinters.



CAUTION—TIPPING HAZARD

To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.



CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



CAUTION—PINCH HAZARD

To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, doors, trays, and covers.



CAUTION—POTENTIAL INJURY

This product uses a laser. Use of controls or adjustments or performance of procedures other than those specified in the *User's Guide* may result in hazardous radiation exposure.



CAUTION—POTENTIAL INJURY

Do not use aerosol cleaners. Aerosol cleaners can cause explosions or fires when used on electromechanical equipment.



CAUTION—POTENTIAL INJURY

When handling cartridges, for example toner cartridges, avoid skin and eye contact. Eye contact with toner can cause irritation and inflammation. Do not attempt to disassemble the cartridge, which can increase the risk of skin or eye contact.



CAUTION—POTENTIAL INJURY

The lithium battery in this product is not intended to be replaced. There is a danger of explosion if a lithium battery is incorrectly replaced. Do not recharge, disassemble, or incinerate a lithium battery. Discard used lithium batteries according to the manufacturer's instructions and local regulations.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do not dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.

Battery type: CR6821

Nominal battery voltage: 3V

Do not force discharge, recharge, disassemble, heat above 60°C (140°F), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.



This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for the use of other replacement parts.

Refer service or repairs, other than those described in the user documentation, to a service representative.

SAVE THESE INSTRUCTIONS.

Learn about the printer


Finding information about the printer

What are you looking for?	Find it here
Initial setup instructions	See the setup documentation that came with the printer.
<ul style="list-style-type: none"> • Printer software • Print or fax driver • Printer firmware • Utility 	Go to www.lexmark.com/downloads .
Interactive <i>User's Guide</i>	Go to https://support.lexmark.com .
How-to videos	Go to https://infoserve.lexmark.com/ids/idv .
Help information for using the printer software.	<p>Help for Microsoft Windows or Macintosh operating systems—Open a printer software program or application, and then click Help.</p> <p> Click  to view context-sensitive information.</p> <div style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc;"> <p>Notes</p> <ul style="list-style-type: none"> • Help is automatically installed with the printer software. • Depending on the operating system, the printer software is either in the printer program folder or on the desktop. </div>


What are you looking for?	Find it here
<ul style="list-style-type: none"> • Documentation • Live chat support • Email support • Voice support 	<p>Go to https://support.lexmark.com.</p> <div style="background-color: #f0f0f0; padding: 5px; border: 1px solid #ccc;"> <p>Note: Select your country or region, and then select your product to view the appropriate support site.</p> </div> <p>Support contact information for your country or region can be found on the website or on the printed warranty that came with the printer.</p> <p>Have the following information ready when you contact customer support:</p> <ul style="list-style-type: none"> • Place and date of purchase • Machine type and serial number <p>For more information, see Finding the printer serial number on page 11.</p>
<ul style="list-style-type: none"> • Safety information • Regulatory information • Warranty information • Environmental information 	<p>Warranty information varies by country or region:</p> <ul style="list-style-type: none"> • In the U.S.—See the Statement of Limited Warranty included with the printer, or go to https://support.lexmark.com. • In other countries and regions—See the printed warranty that came with the printer. <p><i>Product Information Guide</i>—See the documentation that came with the printer or go to https://support.lexmark.com.</p>
<p>Information on Lexmark digital passport</p>	<p>Go to https://csr.lexmark.com/digital-passport.php.</p>

Finding the printer serial number


1. Open the tray.

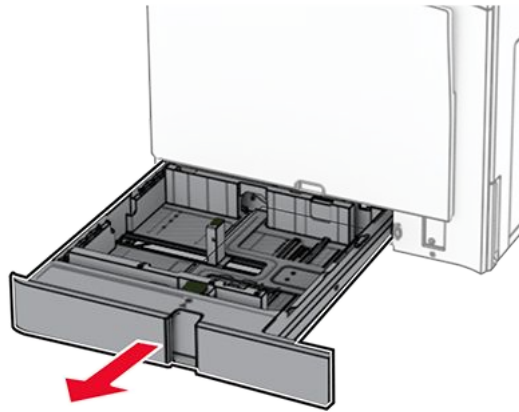




2. Locate the serial number at the right side of the printer.

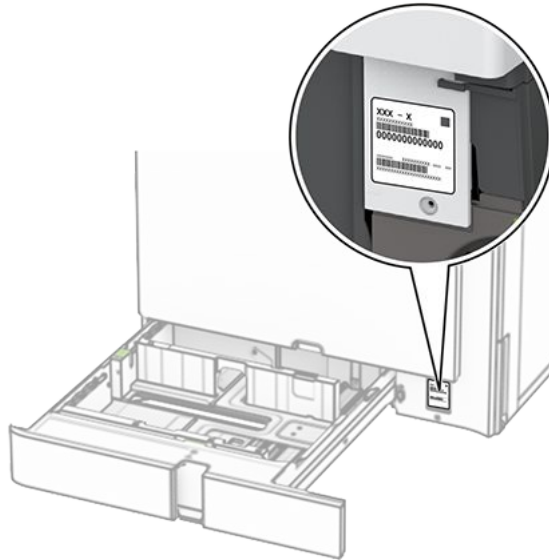




Finding the serial number of the optional trays


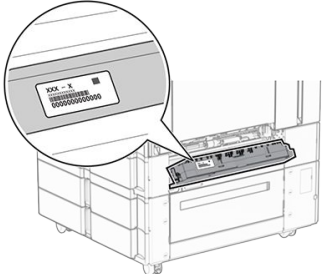
Tray name	Location of the serial number	
Optional 550-sheet tray	Door D	




Learn about the printer

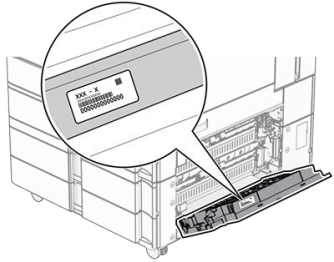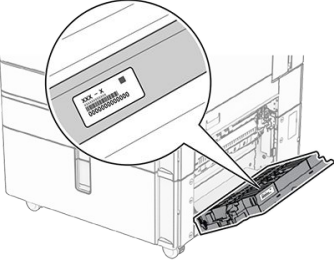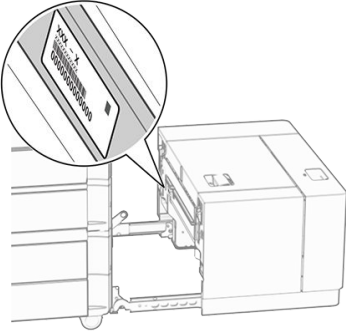
Tray name	Location of the serial number	
2 x 550-sheet tray	Door E	
2000-sheet tandem tray	Door E	
1500-sheet tray	Left side of the tray	

Finding the serial number of the output options

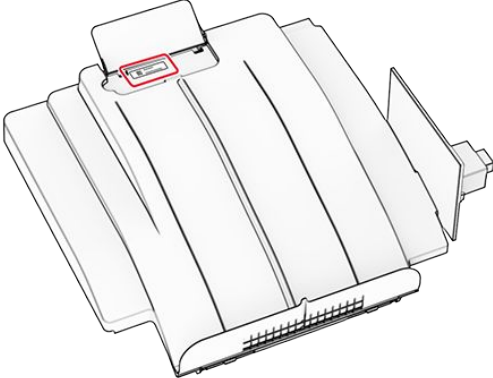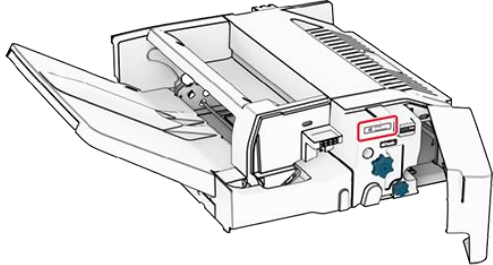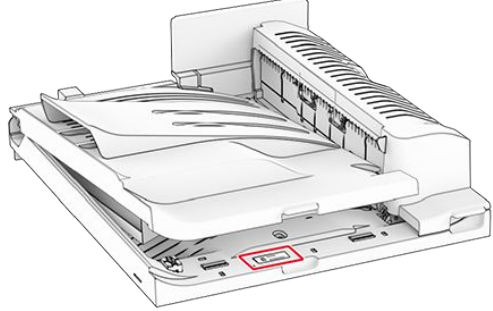Output option	Procedure
Offset stacker	<ol style="list-style-type: none"><li data-bbox="865 353 1145 385">1. Open the paper stop.<li data-bbox="865 403 1337 461">2. Locate the serial number on the offset stacker. 
Folding paper transport	<ol style="list-style-type: none"><li data-bbox="865 972 1050 1003">1. Open door F.<li data-bbox="865 1021 1407 1079">2. Locate the serial number on the front side of the folding paper transport. 
Paper transport	<ol style="list-style-type: none"><li data-bbox="865 1473 1050 1505">1. Open door F.<li data-bbox="865 1523 1337 1581">2. Locate the serial number on the paper transport. 

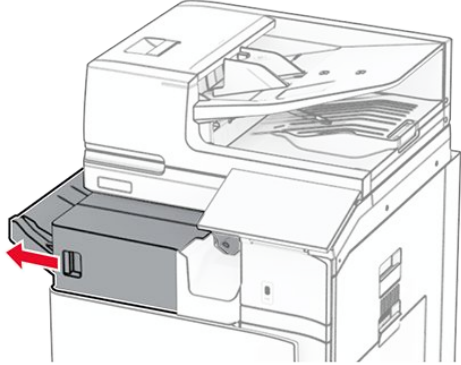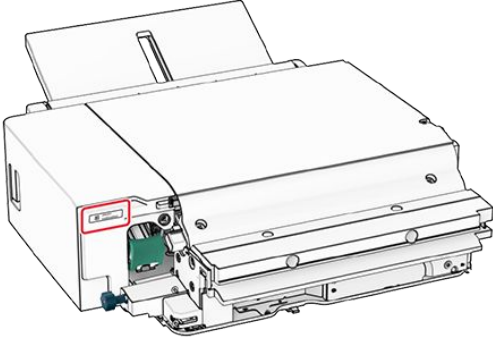Output option	Procedure
Staple finisher	<ol style="list-style-type: none"><li data-bbox="863 248 1406 309">1. Grab handle F, and then slide out the staple finisher to remove it.  <ol style="list-style-type: none"><li data-bbox="863 719 1390 779">2. Locate the serial number beside the staple cartridge holder. 

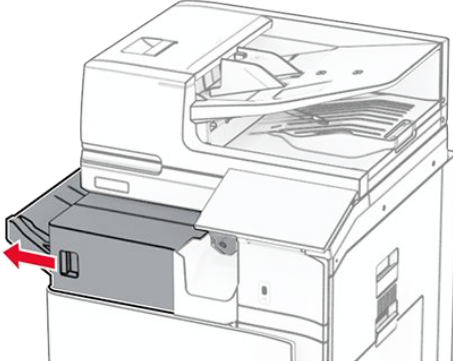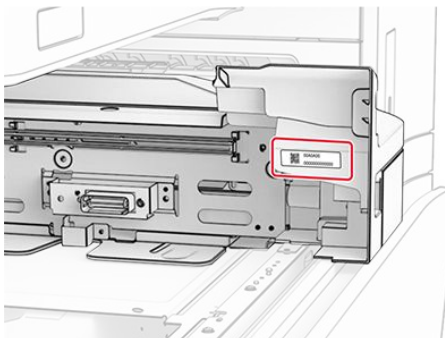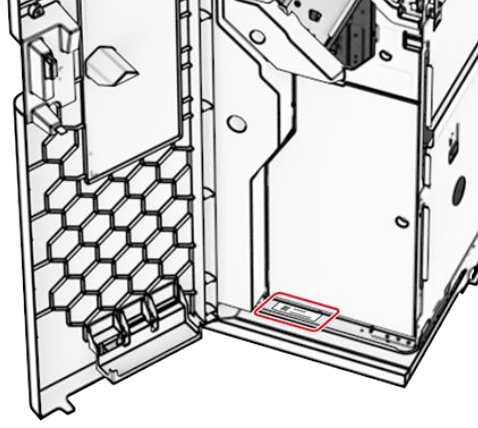
Output option	Procedure
Staple finisher hole punch kit	<ol style="list-style-type: none"><li data-bbox="865 250 1072 277">1. Grab handle F.<li data-bbox="865 300 1407 358">2. Slide out the staple finisher until the left side of the hole punch kit is visible.  <ol style="list-style-type: none"><li data-bbox="865 766 1391 824">3. Locate the serial number on the left side of the hole punch kit. 
Staple, hole punch finisher	<ol style="list-style-type: none"><li data-bbox="865 1299 1168 1326">1. Open the finisher door.<li data-bbox="865 1348 1407 1406">2. Locate the serial number on the base of the staple, hole punch finisher. 

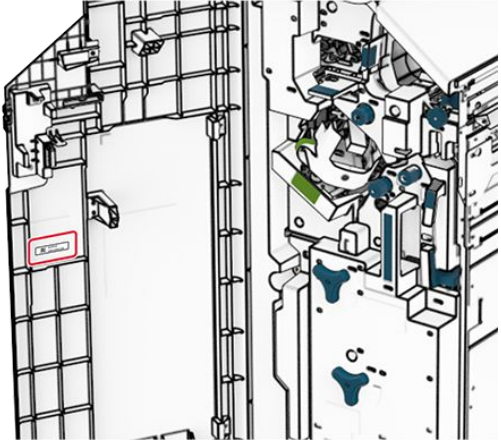Output option	Procedure
Booklet finisher	<ol style="list-style-type: none"> 1. Open the finisher door. 2. Locate the serial number at the back of the door. 

Printer configurations

Note: Make sure to configure the printer on a flat, sturdy, and stable surface.

Basic model

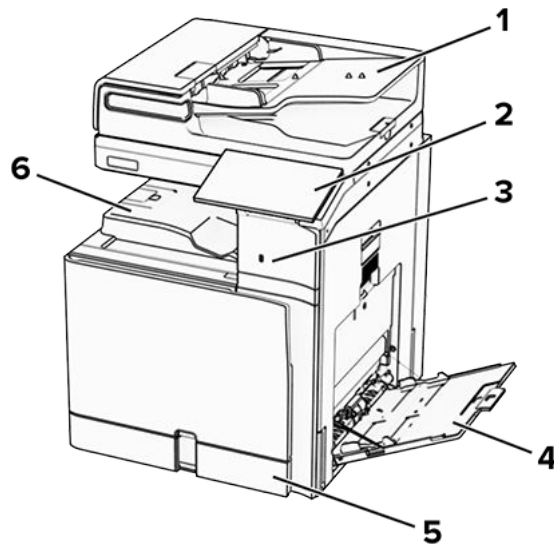

1	Automatic document feeder (ADF)
2	Control panel
3	USB port
4	Multipurpose feeder

5	Standard 550-sheet tray
6	Standard bin

Configured model




CAUTION—TIPPING HAZARD

Installing one or more options on your printer or MFP may require a caster base, furniture, or other feature to prevent instability causing possible injury. For more information on supported configurations, see www.lexmark.com/multifunctionprinters.



CAUTION—TIPPING HAZARD

To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

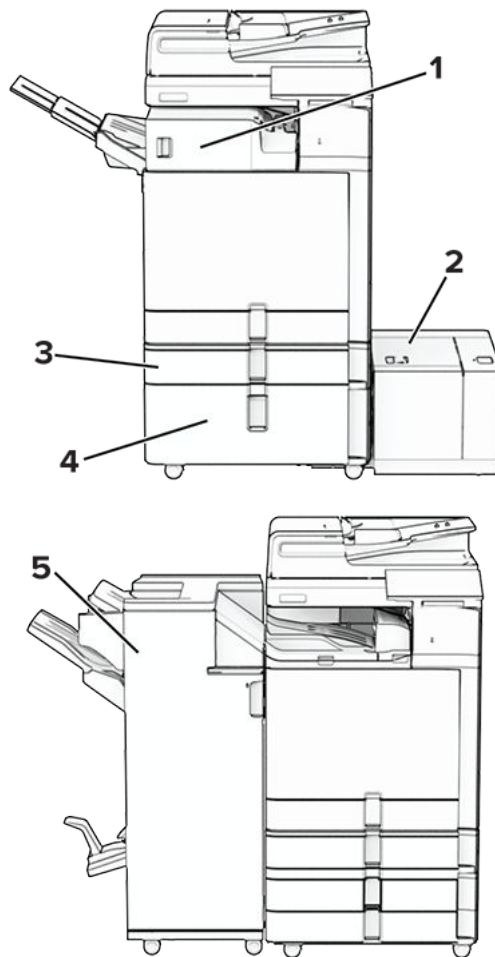

#	Hardware option	Alternative hardware option
1	Staple finisher ¹	<ul style="list-style-type: none"> • Offset stacker¹ • Staple finisher with hole punch¹ • Paper transport • Folding paper transport

#	Hardware option	Alternative hardware option
2	1500-sheet tray ²	None
3	Optional 550-sheet tray ³	None
4	2000-sheet tandem tray ⁴	<ul style="list-style-type: none"> • 2 x 550-sheet tray⁴ • Cabinet⁴
5	Booklet finisher ⁵	Staple, hole punch finisher ⁵

¹ Cannot be installed together with a booklet finisher or staple, hole punch finisher.

² Must be always installed together with an optional 550-sheet tray and either the 2 x 550-sheet tray or 2000-sheet tandem tray.

³ Must be always installed directly under the printer and must not be installed together with another optional 550-sheet tray.

⁴ Must be always installed under the optional 550-sheet tray.

⁵ Must be always installed together with an optional 550-sheet tray and one of the following: 2 x 550-sheet tray, 2000-sheet tandem tray, or cabinet.

Using the control panel




	Control panel part	Function
1	Power button	<ul style="list-style-type: none"> • Turn on or turn off the printer. <div style="border: 1px solid gray; background-color: #f0f0f0; padding: 5px; margin: 10px 0;"> <p>Note: To turn off the printer, press and hold the power button for five seconds.</p> </div> <ul style="list-style-type: none"> • Set the printer to sleep mode. • Wake the printer from sleep or hibernate mode.

	Control panel part	Function
2	Display	<ul style="list-style-type: none"> View printer messages and supply status. Set up and operate the printer.
3	Indicator light	Check the status of the printer.

Home screen icons

Note: Your home screen may vary depending on your home screen customization settings, administrative setup, and active embedded solutions.


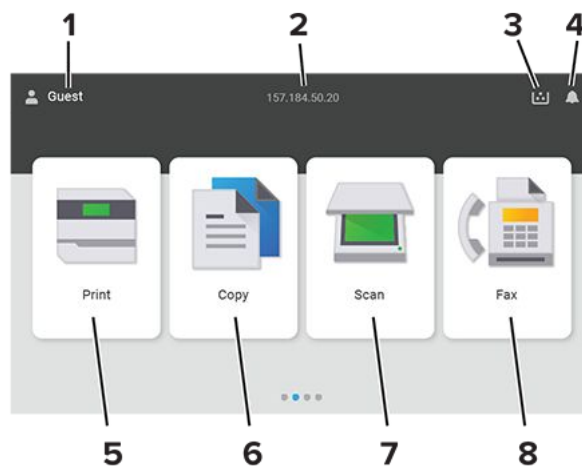


#	Icon name	Function
1	User	Show if a user is logged in to the printer.
2	Displayed information	Show customized printer information such as the printer IP address or the date and time.
3	Supply	Show the status of supplies.
4	Notification	<ul style="list-style-type: none"> Show a printer warning or error message whenever the printer requires intervention to continue processing. View more information on the printer warning or message and how to clear it.
5	Print	Print photos and documents.
6	Copy	Copy photos and documents.
7	Scan	Scan photos and documents.
8	Fax	Send fax messages.

Colors of the indicator light


Color of the indicator light	Printer status
Off	The printer is off.
Solid blue	The printer is ready.
Blinking blue	The printer is printing or processing data.
Blinking red	The printer requires user intervention.
Solid amber	The printer is in sleep mode.
Blinking amber	The printer is in deep sleep or hibernate mode.
Alternating between blue and blinking red	The printer is not responding or showing anything on the display. For more information, see Indicator light is alternating between blue and blinking red on page 535 .

Using the automatic document feeder and scanner glass

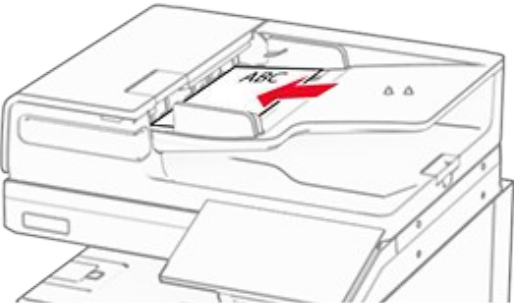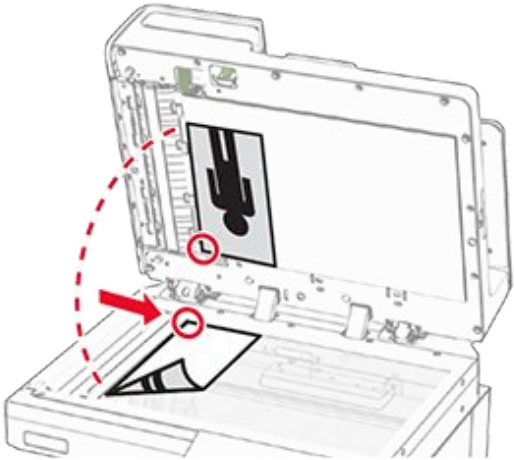Automatic document feeder (ADF)	Scanner glass
 <ul style="list-style-type: none"> • Use the ADF for multiple-page or two-sided documents. • Load an original document faceup. For multiple-page documents, make sure to align the leading edge before loading. • Make sure to adjust the ADF guides to match the width of the paper that you are loading. 	 <ul style="list-style-type: none"> • Use the scanner glass for single-page documents, book pages, small items (such as postcards or photos), transparencies, photo paper, or thin media (such as magazine clippings). • Place the document facedown in the corner with the arrow.

Locating the security slot

The printer is equipped with a security lock feature. Attach a security lock compatible with most laptop computers in the location shown to secure the printer in place.

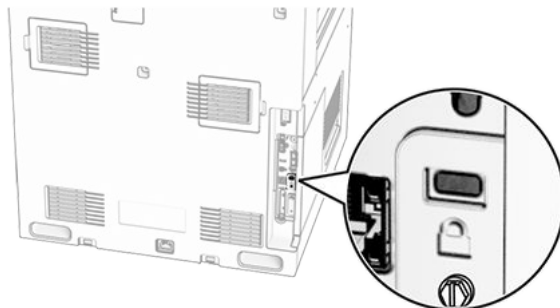

Selecting paper

Paper guidelines

Use the appropriate paper to prevent jams and help ensure trouble-free printing.

- Always use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, types, or weights in the same tray.
- Do not use coated papers unless they are specifically designed for electrophotographic printing.

For more information, see *Paper and Specialty Media Guide* at <https://support.lexmark.com>.

Paper characteristics

The following paper characteristics affect print quality and reliability. Consider these factors before printing on them.

Weight

Trays can feed paper of varying weights. Paper lighter than 60 g/m² (16 lb-bond) may not be stiff enough to feed properly, and may cause jams. For more information, see the **Supported paper weights** topic.

Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions can contribute to paper curling before printing and can cause feeding problems.

Smoothness

Paper smoothness directly affects print quality. If paper is too rough, toner cannot fuse to it properly. If paper is too smooth, it can cause paper feeding or print quality issues. We recommend the use of paper with 50 Sheffield points.

Moisture content

The amount of moisture in paper affects both print quality and the printer ability to feed the paper correctly. Leave paper in its original wrapper until you use it. Exposure of paper to moisture changes can degrade its performance.

Before printing, store paper in its original wrapper for 24 to 48 hours. The environment in which the paper is stored must be the same as the printer. Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

Grain direction

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long* which runs the length of the paper, or *grain short* which runs the width of the paper. For recommended grain direction, see the **Supported paper weights** topic.

Fiber content

Most high-quality xerographic paper is made from 100 percent chemically treated pulped wood. This content provides the paper with a high degree of stability, resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

Unacceptable paper

The following paper types are not recommended for use with the printer:

- Chemically treated papers that are used to make copies without carbon paper. They are also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper.
- Preprinted papers with chemicals that may contaminate the printer.
- Preprinted papers that can be affected by the temperature in the printer fuser.
- Preprinted papers that require a registration (the precise print location on the page) greater than ± 2.3 mm (± 0.09 in.). For example, optical character recognition (OCR) forms.

Sometimes, registration can be adjusted with a software app to print successfully on these forms.

- Coated papers (erasable bond), synthetic papers, or thermal papers.
- Rough-edged, rough or heavily textured surface papers, or curled papers.
- Papers that fail EN12281:2002 (European).
- Paper weighing less than 60 g/m² (16 lb-bond).
- Multiple-part forms or documents.

Using recycled paper

Lexmark works to reduce the environmental impact of paper by providing customers choices when it comes to printing. One way we achieve this is by testing products to ensure recycled paper may be used—specifically, papers made with 30%, 50%, and 100% post-consumer recycled content. Our expectation is that recycled papers perform as well as virgin paper in our printers. While no official standard exists for office equipment use of paper, Lexmark uses European Standard EN 12281 as a minimum properties standard. To ensure breadth of testing, test paper includes 100% recycled papers from North America, Europe, and Asia, and tests are conducted at 8–80% relative humidity. Testing includes duplex printing. Office paper using renewable, recycled, or chlorine-free content may all be used.

Storing paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing.
- Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.
- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40 percent.
- Most label manufacturers recommend printing in a temperature range of 18–24°C (65–75°F) with relative humidity between 40 and 60 percent.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.
- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

Selecting preprinted forms and letterhead

- Use grain long paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid paper with rough or heavily textured surfaces.
- Use inks that are not affected by the resin in toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not.
- Print samples on preprinted forms and letterheads considered for use before buying large quantities. This action determines whether the ink in the preprinted form or letterhead affects print quality.
- When in doubt, contact your paper supplier.
- When printing on letterhead, load the paper in the proper orientation for your printer. For more information, see the *Paper and Specialty Media Guide*.

Supported paper sizes

Paper sizes supported by the basic configuration

Paper size	Orientation	Standard 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
4x6 Card	Short-edge feed	X	✓	X	X
	Long-edge feed	X	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	X	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	X	✓	✓	✓

Learn about the printer

Paper size	Orientation	Standard 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	X	✓	✓
	Long-edge feed	✓	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	X	✓	✓	✓
12x18 304.8 x 457.2 mm (12.0 x 18.0 in.)	Short-edge feed	X	✓	✓	X

Learn about the printer

Paper size	Orientation	Standard 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	✓	✓	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	✓	✓	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	✓	✓	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	✓	✓	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	✓	✓	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	✓	✓	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	✓	✓	X	X

Learn about the printer

Paper size	Orientation	Standard 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	✓	✓	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	✓ ¹	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	X	X	X
Universal	N/A	✓ ²	✓ ^{3, 4}	✓ ⁵	✓ ⁶

¹ Supported only when configured from the Universal Setup menu.

² Supports paper sizes ranging from 95 x 139.7 mm (3.74 x 5.5 in.) to 297 x 355.6 mm (11.69 x 14 in.).

³ The maximum length of the universal paper size in the case of banner paper is 1320.8 mm (52 in.). Load only one sheet of banner paper at a time.

⁴ Supports paper sizes ranging from 95 x 139.7 mm (3.74 x 5.5 in.) to 320 x 457.2 mm (12.6 x 18 in.).

⁵ Supports paper sizes ranging from 105 x 139.7 mm (4.13 x 5.5 in.) to 320 x 457.2 mm (12.6 x 18 in.).

⁶ Supports paper sizes ranging from 105 x 128 mm (4.13 x 5.04 in.) to 297 x 432 mm (11.69 x 17.01 in.).

Paper sizes supported by the optional trays

Paper size	Orientation	Optional 550-sheet tray	2 x 550-sheet tray	2000-sheet tandem tray	1500-sheet tray
4x6 Card	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Optional 550-sheet tray	2 x 550-sheet tray	2000-sheet tandem tray	1500-sheet tray
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	✓	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	X	X
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	✓	X	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	X	X
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	X	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	✓	X	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	X	X
	Long-edge feed	✓	✓	✓	✓

Learn about the printer

Paper size	Orientation	Optional 550-sheet tray	2 x 550-sheet tray	2000-sheet tandem tray	1500-sheet tray
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	X	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	X	X
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	X	X
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	X	X
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	✓	✓	X	X

Learn about the printer

Paper size	Orientation	Optional 550-sheet tray	2 x 550-sheet tray	2000-sheet tandem tray	1500-sheet tray
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	✓	✓	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	✓	✓	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	✓	✓	X	X
Universal	N/A	✓*	✓*	X	X

Learn about the printer

* Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 320 x 457.2 mm (12.6 x 18 in.).

Paper sizes supported by the output bins

Note: Make sure that the paper transport and either of the staple, hole punch finisher or booklet finisher are installed to the printer.

Paper size	Orientation	Paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
4x6 Card	Short-edge feed	✓	✓	✓
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	✓

Learn about the printer

Paper size	Orientation	Paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	✓
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	✓
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	✓
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	✓
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	✓
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	✓
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	✓
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	✓
Universal	N/A	✓ ¹	✓ ¹	✓ ²

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
4x6 Card	Short-edge feed	✓	✓	X	✓
	Long-edge feed	X	X	X	✓
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	✓	✓	X	✓
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	✓	✓	X	✓

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	✓	✓	X	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓	✓	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓	X	✓

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	✓
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X	✓
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	✓
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	✓
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	✓
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X	✓

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X	✓
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	✓
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	✓
Universal	N/A	✓ ¹	✓ ¹	✓ ³	✓ ²

¹ Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 320 x 600 mm (12.6 x 23.62 in.).

² Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 299.7 x 1321 mm (11.8 x 52 in.).

³ Supports paper sizes ranging from 182 x 257 mm (7.17 x 10.12 in.) to 304.8 x 457.2 mm (12 x 18 in.).

Note: Make sure that the folding paper transport and either of the staple, hole punch finisher or booklet finisher are installed to the printer.

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
4x6 Card	Short-edge feed	✓	✓	✓
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	✓
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	✓
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	✓
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	✓
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher		
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	✓
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	✓
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	✓
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	✓
Universal	N/A	✓ ¹	✓ ¹	✓ ²

Paper size	Orientation	Folding paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
4x6 Card	Short-edge feed	✓	✓	X	✓
	Long-edge feed	X	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	✓	✓	X	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓	X	✓
	Long-edge feed	✓	✓	X	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	✓	✓	X	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓	✓	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	✓
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	✓
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	✓
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	✓
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X	✓
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X	✓
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	✓
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher			
		Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Universal	N/A	√ ¹	√ ¹	√ ³	√ ²

¹ Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 320 x 600 mm (12.6 x 23.62 in.).

² Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 297 x 1260 mm (11.69 x 49.6 in.).

³ Supports paper sizes ranging from 182 x 257 mm (7.17 x 10.12 in.) to 304.8 x 457.2 mm (12 x 18 in.).

Paper sizes supported for staple jobs

Paper sizes supported by the staple finisher and staple finisher with hole punch

Paper size	Orientation	Single	Dual	Dual Left
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	√	√	√
	Long-edge feed	√	√	√
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	√	√	√
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	√	√	√
	Long-edge feed	√	√	√

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	X
	Long-edge feed	✓	✓	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	X
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported by the staple, hole punch finisher

Paper size	Orientation	Single	Dual	Dual Left
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	X
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported by the booklet finisher

Paper size	Orientation	Single	Dual	Dual Left
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	X
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Single	Dual	Dual Left
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X

Paper size	Orientation	Single	Dual	Dual Left
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported for punch jobs

Paper sizes supported by the staple finisher with hole punch

Paper size	Orientation	Two-hole	Three-hole	Four-hole
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	X	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	X	X
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	X	X
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported by the staple, hole punch finisher

Paper size	Orientation	Two-hole	Three-hole	Four-hole
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	X	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	X	X
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	X	X
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported by the booklet finisher

Paper size	Orientation	Two-hole	Three-hole	Four-hole
4x6 Card	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X
	Long-edge feed	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	X	X
	Long-edge feed	✓	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	X	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	X	X
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	X	X
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X

Learn about the printer

Paper size	Orientation	Two-hole	Three-hole	Four-hole
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X

Paper sizes supported for fold jobs

Paper sizes supported by the folding paper transport

Paper size	Orientation	Folding paper transport only			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Standard bin			
4x6 Card	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport only			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Standard bin			
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	X	X	X	X
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	X	X	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport only			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Standard bin			
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	X	X	X	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	X	X	X	X
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport only			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Standard bin			
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport only			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Standard bin			
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	X

Paper sizes supported by the paper transport and booklet finisher

Paper size	Orientation	Paper transport + Booklet finisher	
		V-fold multiple	V-fold
		Bin 2	Standard bin, bin 1, bin 2
4x6 Card	Short-edge feed	X	X
	Long-edge feed	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓
	Long-edge feed	X	X

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher	
		V-fold multiple	V-fold
		Bin 2	Standard bin, bin 1, bin 2
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓
	Long-edge feed	X	X
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓
	Long-edge feed	X	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher	
		V-fold multiple	V-fold
		Bin 2	Standard bin, bin 1, bin 2
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	✓	✓
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X

Learn about the printer

Paper size	Orientation	Paper transport + Booklet finisher	
		V-fold multiple	V-fold
		Bin 2	Standard bin, bin 1, bin 2
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X

Paper sizes supported by the folding paper transport and staple, hole punch finisher

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Bin 2		Standard bin, bin 2	
4x6 Card	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Bin 2		Standard bin, bin 2	
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	X	X	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	X	X	X	X
	Long-edge feed	X	X	X	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓	✓
	Long-edge feed	X	X	X	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Bin 2		Standard bin, bin 2	
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X	✓
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Bin 2		Standard bin, bin 2	
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher			
		C-fold	Z-fold	Z-fold half sheet	V-fold
		Bin 2		Standard bin, bin 2	
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	X

Paper sizes supported by the folding paper transport and booklet finisher

Paper size	Orientation	Folding paper transport + Booklet finisher				
		C-fold	Z-fold	Z-fold half sheet	V-fold multiple	V-fold
		Bin 3	Bin 3	Standard bin, bin 1, bin 3	Bin 2	Standard bin, bin 1, bin 2, bin 3
4x6 Card	Short-edge feed	X	X	X	X	X
	Long-edge feed	X	X	X	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X	X	X	X
	Long-edge feed	X	X	X	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	X	X	X	X	X
	Long-edge feed	X	X	X	X	X
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓	✓	✓	✓
	Long-edge feed	X	X	X	X	X
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓	✓	✓	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher				
		C-fold	Z-fold	Z-fold half sheet	V-fold multiple	V-fold
		Bin 3	Bin 3	Standard bin, bin 1, bin 3	Bin 2	Standard bin, bin 1, bin 2, bin 3
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	X	X	X	✓	✓
	Long-edge feed	X	X	X	X	X
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	X	X	✓	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	X	X	X	X	X
	Long-edge feed	X	X	X	X	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	X	X	X	X	X
	Long-edge feed	X	X	X	X	X
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓	✓	✓	✓
	Long-edge feed	X	X	X	X	X
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	X	X	X	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓	✓	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓	✓	✓	✓

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher				
		C-fold	Z-fold	Z-fold half sheet	V-fold multiple	V-fold
		Bin 3	Bin 3	Standard bin, bin 1, bin 3	Bin 2	Standard bin, bin 1, bin 2, bin 3
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓	✓	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X	X	X	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X	X	X	✓
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X	X	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X	X	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X	X	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X	X	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Booklet finisher				
		C-fold	Z-fold	Z-fold half sheet	V-fold multiple	V-fold
		Bin 3	Bin 3	Standard bin, bin 1, bin 3	Bin 2	Standard bin, bin 1, bin 2, bin 3
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X	X	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X	X	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X	X	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X	X	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X	X	X	X

Paper sizes supported for offset stacking jobs

Paper sizes supported by the offset stacker or staple finisher

Paper size	Orientation	Offset stacker	Staple finisher
4x6 Card	Short-edge feed	X	X
	Long-edge feed	X	X

Learn about the printer

Paper size	Orientation	Offset stacker	Staple finisher
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	X
	Long-edge feed	✓	X
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓

Learn about the printer

Paper size	Orientation	Offset stacker	Staple finisher
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	X	X
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	✓	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	✓	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	✓	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	✓	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	✓	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	✓	X

Learn about the printer

Paper size	Orientation	Offset stacker	Staple finisher
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	✓	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	✓	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	✓	X
Universal	N/A	✓ ¹	✓ ²

¹ Supports paper sizes ranging from 95 x 148 mm (3.74 x 5.83 in.) to 304.8 x 600 mm (12 x 23.62 in.).

² Supports paper sizes ranging from 148 x 148 mm (5.83 x 5.83 in.) to 297 x 419.1 mm (11.69 x 16.5 in.).

Paper sizes supported by finishers with a paper transport unit

Paper size	Orientation	Paper transport + Staple, hole punch finisher	Paper transport + Booklet finisher
		Bin 1	
4x6 Card	Short-edge feed	X	X
	Long-edge feed	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	✓	✓

Learn about the printer

Paper size	Orientation	Paper transport + Staple, hole punch finisher	Paper transport + Booklet finisher
		Bin 1	
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	✓	✓
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓

Learn about the printer

Paper size	Orientation	Paper transport + Staple, hole punch finisher	Paper transport + Booklet finisher
		Bin 1	
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X

Learn about the printer

Paper size	Orientation	Paper transport + Staple, hole punch finisher	Paper transport + Booklet finisher
		Bin 1	
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X
Universal	N/A	√*	√*

* Supports paper sizes ranging from 139.7 x 148 mm (5.5 x 5.83 in.) to 304.8 x 457.2 mm (12 x 18 in.).

Paper sizes supported by finishers with a folding paper transport

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher	Folding paper transport + Booklet finisher
		Bin 1	
4x6 Card	Short-edge feed	X	X
	Long-edge feed	X	X
A6 105 x 148 mm (4.13 x 5.83 in.)	Short-edge feed	X	X
	Long-edge feed	X	X
A5 148 x 210 mm (5.83 x 8.27 in.)	Short-edge feed	√	√
	Long-edge feed	√	√
A4 210 x 297 mm (8.27 x 11.7 in.)	Short-edge feed	√	√
	Long-edge feed	√	√
A3 297 x 420 mm (11.69 x 16.54 in.)	Short-edge feed	√	√
JIS B5 182 x 257 mm (7.17 x 10.1 in.)	Short-edge feed	√	√
	Long-edge feed	√	√
JIS B4 257 x 364 mm (10.12 x 14.33 in.)	Short-edge feed	√	√

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher	Folding paper transport + Booklet finisher
		Bin 1	
Statement 139.7 x 215.9 mm (5.5 x 8.5 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Executive 184.2 x 266.7 mm (7.25 x 10.5 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Letter 215.9 x 279.4 mm (8.5 x 11 in.)	Short-edge feed	✓	✓
	Long-edge feed	✓	✓
Folio 215.9 x 330.2 mm (8.5 x 13 in.)	Short-edge feed	✓	✓
Oficio (Mexico) 215.9 x 340.4 mm (8.5 x 13.4 in.)	Short-edge feed	✓	✓
Legal 215.9 x 355.6 mm (8.5 x 14 in.)	Short-edge feed	✓	✓
Ledger 279.4 x 431.8 mm (11 x 17 in.)	Short-edge feed	✓	✓
12x18 304.8 x 457.2 mm (12 x 18 in.)	Short-edge feed	✓	✓
SRA3 320.04 x 449.58 mm (12.6 x 17.7 in.)	Short-edge feed	X	X
Envelope (Choukei #3) 120 x 235 mm (4.75 x 9.25 in.)	Short-edge feed	X	X

Learn about the printer

Paper size	Orientation	Folding paper transport + Staple, hole punch finisher	Folding paper transport + Booklet finisher
		Bin 1	
Hagaki 100 x 148 mm (3.94 x 5.83 in.)	Short-edge feed	X	X
B5 Envelope 176 x 250 mm (6.93 x 9.84 in.)	Short-edge feed	X	X
Envelope (Commercial #9) 98.4 x 225.4 mm (3.875 x 8.9 in.)	Short-edge feed	X	X
Envelope (Commercial #10) 104.8 x 241.3 mm (4.12 x 9.5 in.)	Short-edge feed	X	X
Envelope (Monarch 7-3/4) 98.4 x 190.5 mm (3.875 x 7.5 in.)	Short-edge feed	X	X
Envelope (DL) 110 x 220 mm (4.33 x 8.66 in.)	Short-edge feed	X	X
Envelope (ISO C4) 229 x 324 mm (9 x 12.8 in.)	Short-edge feed	X	X
Envelope (ISO C5) 162 x 229 mm (6.38 x 9 in.)	Short-edge feed	X	X
Universal	N/A	√*	√*

* Supports paper sizes ranging from 139.7 x 148 mm (5.5 x 5.83 in.) to 304.8 x 457.2 mm (12 x 18 in.).

Supported paper weights

550-sheet tray, 2 x 550-sheet tray, 1500-sheet tray, and 2000-sheet tandem tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
60–300 g/m ² (16–80-lb bond)	60–300 g/m ² (16–80-lb bond)	60–220 g/m ² (16–59-lb bond)	50–150 g/m ² (14–40-lb bond)

Supported paper types

Paper types supported by the basic configuration

Paper type	Standard 550-sheet tray	Multipurpose feeder	Two-sided printing	Automatic document feeder
Plain paper	✓	✓	✓	✓
Card stock	✓	✓	✓	X
Recycled	✓	✓	✓	✓
Glossy	✓	✓	✓	X
Heavy glossy	✓	✓	✓	X
Labels	✓	✓	X	X
Vinyl labels	✓	✓	X	X
Bond	✓	✓	✓	✓
Envelope	✓	✓	X	X
Rough envelope	✓	✓	X	X
Letterhead	✓	✓	✓	✓
Preprinted	✓	✓	✓	✓
Colored paper	✓	✓	✓	✓
Light paper	✓	✓	✓	✓
Heavy paper	✓	✓	✓	✓
Rough cotton	✓	✓	✓	X
Custom type	✓	✓	✓	✓

Paper types supported by the optional trays

Paper type	Optional 550-sheet tray	2 x 550-sheet tray	2000-sheet tandem tray	1500-sheet tray
Plain paper	✓	✓	✓	✓
Card stock	✓	✓	✓	✓
Transparencies	X	X	X	X
Recycled	✓	✓	✓	✓
Glossy	✓	✓	✓	✓
Heavy glossy	✓	✓	✓	✓
Labels	✓	✓	X	X
Vinyl labels	✓	✓	X	X
Bond	✓	✓	✓	✓
Envelope	✓	✓	X	X
Rough envelope	✓	✓	X	X
Letterhead	✓	✓	✓	✓
Preprinted	✓	✓	✓	✓
Colored paper	✓	✓	✓	✓
Light paper	✓	✓	✓	✓
Heavy paper	✓	✓	✓	✓
Rough cotton	✓	✓	✓	✓
Custom type	✓	✓	✓	✓

Paper types supported by the output bin (with folding paper transport)

Paper type	Folding paper transport + Staple, hole punch finisher		
	Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Plain paper	✓	✓	✓
Card stock	✓	✓	✓
Recycled	✓	✓	✓
Glossy	✓	✓	✓
Heavy glossy	✓	✓	✓
Labels	✓	✓	✓

Learn about the printer

Paper type	Folding paper transport + Staple, hole punch finisher		
	Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Paper transport bin)
Vinyl labels	✓	✓	✓
Bond	✓	✓	✓
Envelope	X	X	✓
Rough envelope	X	X	✓
Letterhead	✓	✓	✓
Preprinted	✓	✓	✓
Colored paper	✓	✓	✓
Light paper	✓	✓	✓
Heavy paper	✓	✓	✓
Rough cotton	✓	✓	✓
Custom type	✓	✓	✓

Paper type	Folding paper transport + Booklet finisher			
	Standard bin (Finisher top bin)	Bin 1 (Finisher stapler/punch, offset bin)	Bin 2 (Finisher booklet bin)	Bin 3 (Paper transport bin)
Plain paper	✓	✓	✓	✓
Card stock	✓	✓	X	✓
Recycled	✓	✓	✓	✓
Glossy	✓	✓	✓	✓
Heavy glossy	✓	✓	X	✓
Labels	✓	✓	X	✓
Vinyl labels	✓	✓	X	✓
Bond	✓	✓	✓	✓
Envelope	X	X	X	✓
Rough envelope	X	X	X	✓
Letterhead	✓	✓	X	✓
Preprinted	✓	✓	X	✓
Colored paper	✓	✓	✓	✓
Light paper	✓	✓	✓	✓
Heavy paper	✓	✓	X	X
Rough cotton	✓	✓	X	X
Custom type	✓	✓	✓	✓

Paper types supported by the folding paper transport, offset stacker, staple finisher

Paper type	Folding paper transport only	Offset stacker	Staple finisher
Plain paper	✓	✓	✓
Card stock	✓	✓	✓
Recycled	✓	✓	✓
Glossy	✓	✓	✓
Heavy glossy	✓	✓	✓
Labels	✓	✓	✓
Vinyl labels	✓	✓	✓
Bond	✓	✓	✓
Envelope	✓	✓	✓
Rough envelope	✓	✓	✓
Letterhead	✓	✓	✓
Preprinted	✓	✓	✓
Colored paper	✓	✓	✓
Light paper	✓	✓	✓
Heavy paper	✓	✓	✓
Rough cotton	✓	✓	✓
Custom type	✓	✓	✓

Paper types supported by the staple, hole punch finisher and booklet finisher

Paper type	Finisher top bin (Standard bin)			
	Offset	Hole punch	Staple	Fold
Plain paper	✓	✓	X	✓
Card stock	X	✓	X	X
Recycled	X	✓	X	✓
Glossy	X	✓	X	✓
Heavy glossy	X	✓	X	X
Labels	X	X	X	X
Vinyl labels	X	X	X	X

Paper type	Finisher top bin (Standard bin)			
	Offset	Hole punch	Staple	Fold
Bond	X	✓	X	✓
Letterhead	X	✓	X	✓
Preprinted	X	✓	X	✓
Colored paper	X	✓	X	✓
Light paper	X	✓	X	✓
Heavy paper	X	✓	X	X
Rough cotton	X	✓	X	X
Custom type	X	✓	X	✓

Paper type	Finisher staple bin (Bin 1)			
	Offset	Hole punch	Staple	Fold
Plain paper	✓	✓	✓	✓
Card stock	✓	X	X	X
Recycled	✓	✓	✓	✓
Glossy	✓	✓	✓	✓
Heavy glossy	✓	X	X	X
Labels	✓	X	X	X
Vinyl labels	✓	X	X	X
Bond	✓	✓	✓	✓
Letterhead	✓	✓	✓	✓
Preprinted	✓	✓	✓	✓
Colored paper	✓	✓	✓	✓
Light paper	✓	✓	✓	✓
Heavy paper	✓	X	X	X
Rough cotton	✓	✓	X	X
Custom type	✓	✓	✓	✓

Additional printer features and support

Supported applications

Application	Printer models
Scan Center	CX950, CX951, MX953, XC9525, XC9535

Application	Printer models
Display Customization	CX950, CX951, MX953, XC9525, XC9535
Customer Support	XC9525, XC9535
Device Quotas	XC9525, XC9535
Cloud Connector	XC9525, XC9535

Supported flash drives and file types

Flash drives

- Flash drives that support USB 2.0 or lower.
- Flash drives that support a New Technology File System (NTFS) or the File Allocation Table (FAT32) file system.

File types

Documents	Images
<ul style="list-style-type: none">• PDF (version 2.0 or earlier)• Microsoft file formats (DOC, DOCX, XLS, XLSX, PPT, PPTX)	<ul style="list-style-type: none">• JPEG or JPG• TIFF or TIF• GIF• BMP• PNG• PCX• DCX

Available internal options

- Hard disk
- Licensed features
 - IPDS
 - Bar Code
- Lexmark™ internal solutions port (ISP)
 - RS-232C Serial Card
 - MarkNet™ N8230 Fiber Ethernet 100BASE-FX(LC), 1000BASE-SX(LC)

Set up, install, and configure

Selecting a location for the printer

- Leave enough room to open trays, covers, and doors and to install hardware options.
- Set up the printer near an electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not place or use this product near water or wet locations.

- Make sure that airflow in the room meets the latest revision of the ASHRAE 62 standard or the CEN Technical Committee 156 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
 - Clean, dry, and free of dust.
 - Away from stray staples and paper clips.
 - Away from the direct airflow of air conditioners, heaters, or ventilators.
 - Free from direct sunlight and humidity extremes.
- Observe the recommended temperatures and avoid fluctuations:

Ambient temperature	10 to 32.2°C (50 to 90°F)
Storage temperature	15.6 to 32.2°C (60 to 90°F)

- Allow the following recommended amount of space around the printer for proper ventilation:

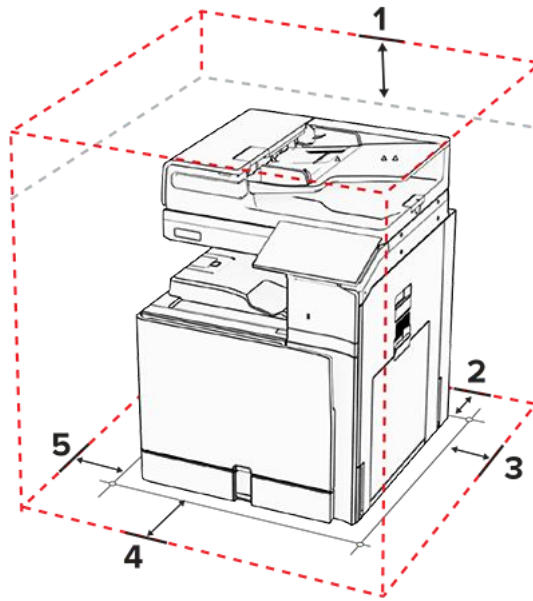

1	Top	355 mm (14 in.)
2	Rear	203 mm (8 in.)
3	Right side	574 mm (22.6 in.)
4	Front	338 mm (13.3 in.)
5	Left side	152 mm (6 in.)

Printer ports



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.




CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the USB cable, any wireless network adapter, or the printer in the areas shown while actively printing.

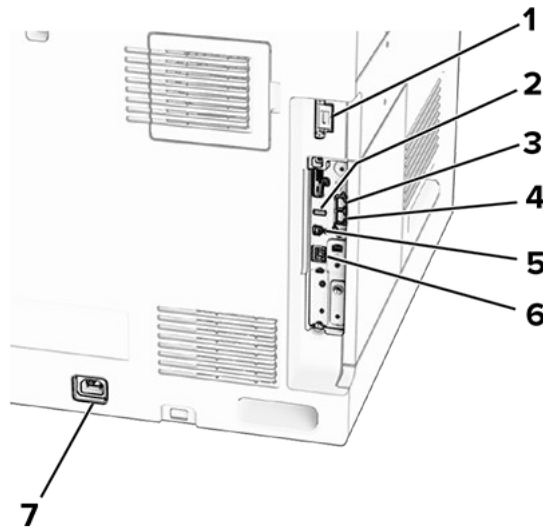

	Printer port	Function
1	Finisher or option port	Connect the printer to a finisher or an option.
2	USB port	Attach a keyboard or any compatible option.
3	LINE port Note: Available only when a fax card is installed.	Connect the printer to an active telephone line through a standard wall jack (RJ-11), DSL filter, or VoIP adapter, or any other adapter that allows you to access the telephone line to send and receive faxes.
4	EXT port Note: Available only when a fax card is installed.	Connect more devices (telephone or answering machine) to the printer and the telephone line. Use this port if you do not have a dedicated fax line for the printer and if this connection method is supported in your country or region.
5	USB printer port	Connect the printer to a computer.
6	Ethernet port	Connect the printer to a network.
7	Power cord socket	Connect the printer to a properly grounded electrical outlet.

Configuring apps and solutions

Setting up Scan Center

1. From the control panel, select **Scan Center**.
2. Select and create a destination, and then configure the settings.

Note: Only destinations created from the Embedded Web Server are saved. For more information, see the documentation for the solution.

3. Scan the document.

Using Display Customization

Note: Make sure that the **Screen Saver**, **Slideshow**, and **Wallpaper** settings are enabled from the Embedded Web Server. Navigate to **Apps > Display Customization > Configure**.

Managing screen saver and slide show images

1. In the **Screen Saver and Slideshow Images** section, add, edit, or delete an image.

Notes

- You can add up to 10 images.
- When enabled, the status icons appear on the screen saver only when there are errors, warnings, or cloud-based notifications.

2. Apply the changes.

Changing the wallpaper image

1. From the control panel, select **Change Wallpaper**.
2. Select an image to use.
3. Apply the changes.

Running a slide show from a flash drive

1. Insert a flash drive into the front USB port.
2. From the control panel, select **Slideshow**.

Note

You can remove the flash drive after the slide show starts, but the images are not stored in the printer. If the slide show stops, then insert the flash drive again to view the images.

Configuring Bookmarks

Creating bookmarks

Set up, install, and configure

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Bookmarks** > **Add Bookmark**, and then type a bookmark name.
3. Select an **Address** protocol type, and then do one of the following:
 - For HTTP and HTTPS, type the URL that you want to bookmark.
 - For HTTPS, make sure to use the host name instead of the IP address. For example, type myWebsite.com/sample.pdf instead of typing 123.123.123.123/sample.pdf. Make sure that the host name also matches the Common Name (CN) value in the server certificate. For more information on obtaining the CN value in the server certificate, see the help information for your web browser.
 - For FTP, type the FTP address. For example, myServer/myDirectory. Enter the FTP port number. Port 21 is the default port for sending commands.
 - For SMB, type the network folder address. For example, myServer/myShare/myFile.pdf. Type the network domain name.
 - If necessary, select the **Authentication** type for FTP and SMB.

Notes

- The application supports the following file types: PDF, JPEG, and TIFF. Other file types such as DOCX and XLSX are supported in some printer models.
- To limit access to the bookmark, enter a PIN.

4. Click **Save**.

Creating folders

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Navigate to **Bookmarks** > **Add Folder**, and then type a folder name.

Note: To limit access to the folder, enter a PIN.

3. Click **Save**.

Configuring Address Book

Adding contacts

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Address Book**, and then click **Add Contact**.
3. If necessary, specify a login method to allow application access.
4. Click **Save**.

Adding groups

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Address Book**, and then click **Add Group**.
3. Type a group name, and then type the contacts you want to add to the group.

Note: You can assign one or more contacts to the group.

4. Click **Save**.

Setting up and using the accessibility features

Activating Voice Guidance

From the home screen

1. In one motion and using one finger, slowly swipe left then up on the display until you hear a voice message.
2. Using two fingers, select **OK**.

Note: If the gesture does not work, then apply more pressure.

From the keyboard

1. Press and hold the **5** key until you hear a voice message.
2. Press **Tab** to navigate the focus cursor to the OK button, and then press **Enter**.

Notes

- When Voice Guidance is activated, always use two fingers to select any item on the display.
- Voice Guidance has limited language support.

Deactivating Voice Guidance

1. In one motion and using one finger, slowly swipe left then up on the display until you hear a voice message.
2. Using two fingers, do either of the following:
 - Select **Voice Guidance**, and then select **OK**.
 - Select **Cancel**.


Note: If the gesture does not work, then apply more pressure.

Pressing the power button or putting the printer in Sleep or Hibernate mode also deactivates Voice Guidance.




Navigating the screen using gestures

Notes

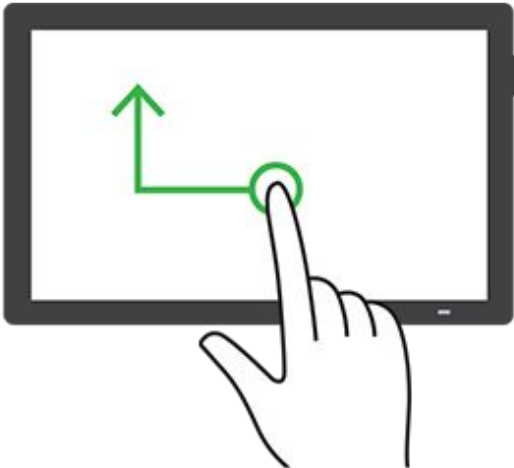
- Most of the gestures are applicable only when Voice Guidance is activated.
- Use a physical keyboard to type characters and adjust certain settings.

Gesture	Function
<p data-bbox="177 1088 576 1120">Swipe left then up using one finger</p> 	<p data-bbox="821 1088 1233 1120">Launch or exit Accessibility mode.</p> <p data-bbox="839 1155 1374 1211">Note: This gesture is also applicable when the printer is in normal mode.</p>



Set up, install, and configure




Gesture	Function
<p data-bbox="177 219 496 248">Double-tap using one finger</p> 	<p data-bbox="821 219 1262 248">Select an option or item on the screen.</p>
<p data-bbox="177 828 675 857">Double-tap the home icon using two fingers</p> 	<p data-bbox="821 828 1235 857">Deactivate the Accessibility mode.</p>
<p data-bbox="177 1406 480 1435">Triple-tap using one finger</p> 	<p data-bbox="821 1406 1254 1435">Zoom in or zoom out text and images.</p> <div data-bbox="826 1458 1417 1541" style="background-color: #f0f0f0; padding: 5px;"><p data-bbox="839 1469 1369 1529">Note: Enable Magnification mode to use the zoom feature.</p></div>



Set up, install, and configure

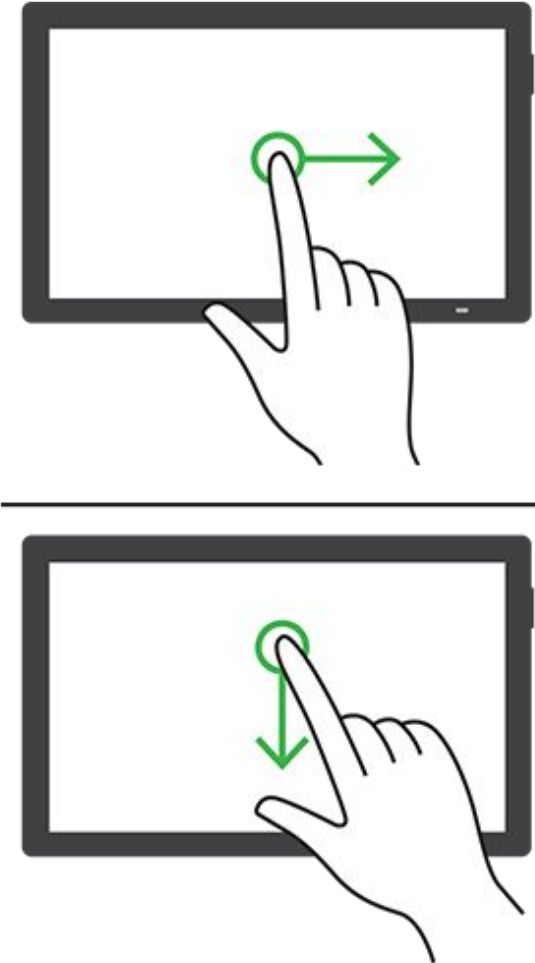Gesture	Function
<p data-bbox="177 219 671 250">Swipe right or swipe down using one finger</p>  <p>The image contains two line drawings of a hand interacting with a tablet. The top drawing shows the index finger touching the screen, with a green circle at the contact point and a green arrow pointing to the right. The bottom drawing shows the index finger touching the screen, with a green circle at the contact point and a green arrow pointing downwards.</p>	<p data-bbox="823 219 1238 250">Move to the next item on the screen.</p>

Set up, install, and configure

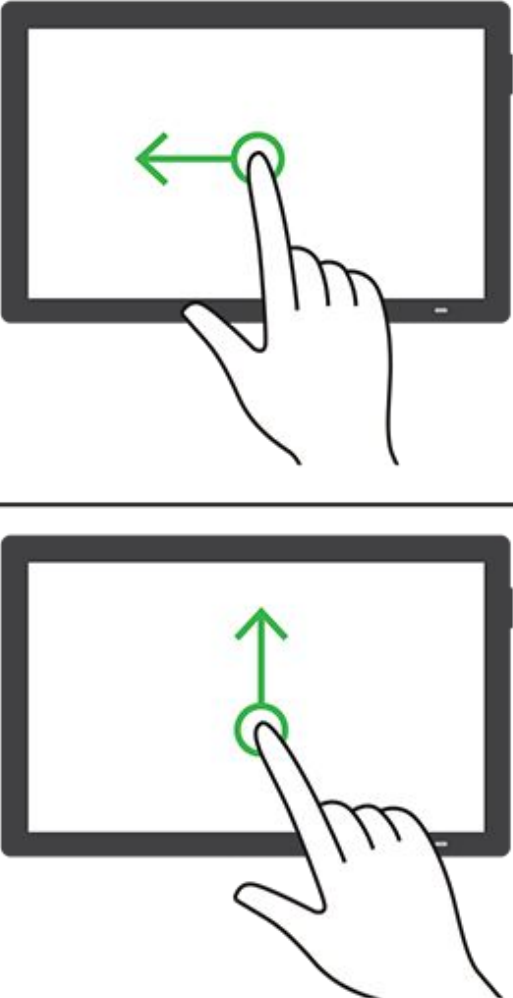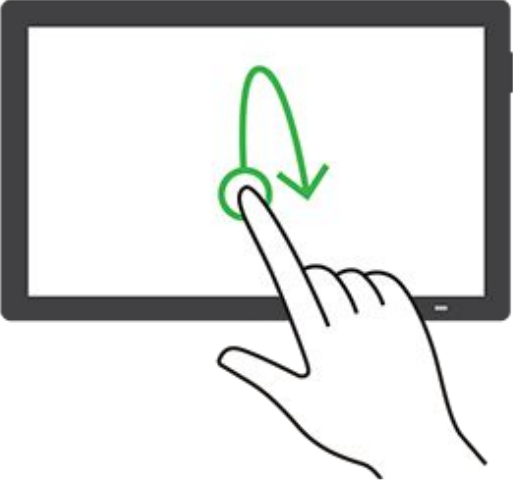Gesture	Function
<p data-bbox="178 224 622 255">Swipe left or swipe up using one finger</p> 	<p data-bbox="823 224 1289 255">Move to the previous item on the screen.</p>
<p data-bbox="178 1348 603 1379">Swipe up then down using one finger</p> 	<p data-bbox="823 1348 1232 1379">Move to the first item on the screen.</p>

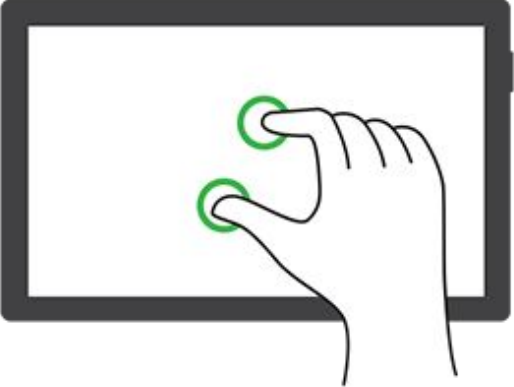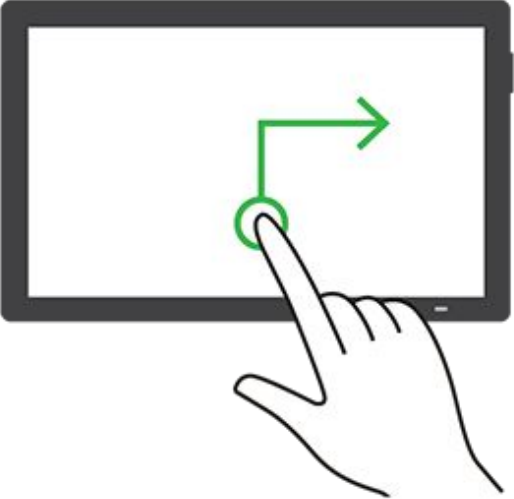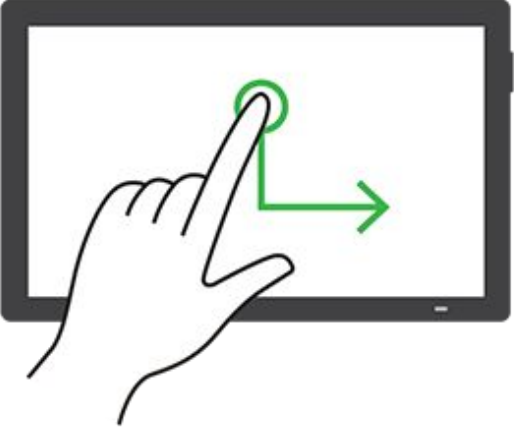Gesture	Function
<p data-bbox="177 226 225 248">Pan</p> 	<p data-bbox="825 226 1406 282">Access parts of the zoomed image that are beyond the limit of the screen.</p> <div data-bbox="825 304 1406 544"><p data-bbox="842 322 932 349">Notes</p><ul data-bbox="898 383 1394 495" style="list-style-type: none"><li data-bbox="898 383 1394 416">• Use two fingers to drag a zoomed image.<li data-bbox="898 427 1394 495">• Enable Magnification mode to use the pan gesture.</div>
<p data-bbox="177 745 592 768">Swipe up then right using one finger</p> 	<p data-bbox="825 745 1062 768">Increase the volume.</p> <div data-bbox="825 797 1406 875"><p data-bbox="842 808 1374 864">Note: This gesture is also applicable when the printer is in normal mode.</p></div>
<p data-bbox="177 1361 624 1384">Swipe down then right using one finger</p> 	<p data-bbox="825 1361 1070 1384">Decrease the volume.</p> <div data-bbox="825 1413 1406 1491"><p data-bbox="842 1424 1374 1480">Note: This gesture is also applicable when the printer is in normal mode.</p></div>

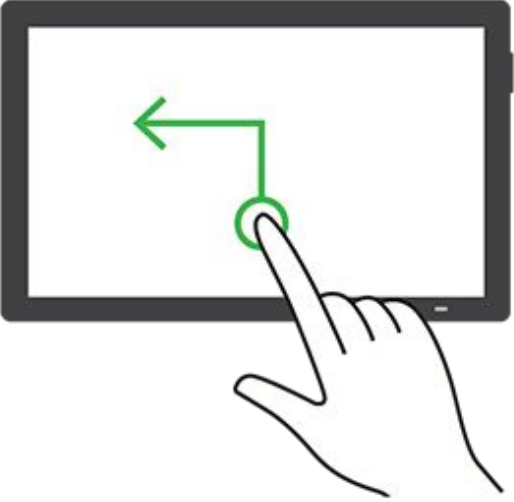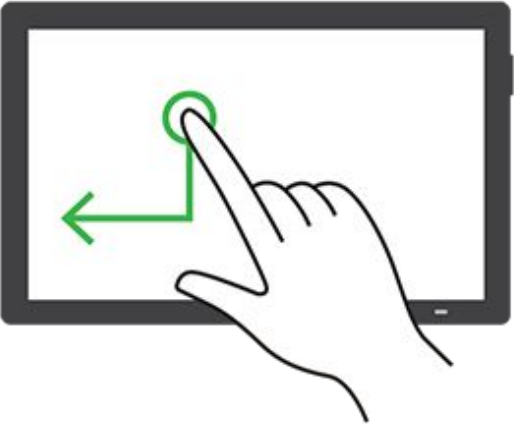Gesture	Function
<p data-bbox="177 224 576 253">Swipe up then left using one finger</p>  A diagram showing a hand with the index finger touching a tablet screen. A green circle is at the point of contact. A vertical green line goes up from the circle, and a horizontal green line goes left from the top of that vertical line, ending in an arrowhead. This illustrates a 'swipe up then left' gesture.	<p data-bbox="821 224 1393 253">Exit an application and return to the home screen.</p>
<p data-bbox="177 840 608 869">Swipe down then left using one finger</p>  A diagram showing a hand with the index finger touching a tablet screen. A green circle is at the point of contact. A vertical green line goes down from the circle, and a horizontal green line goes left from the bottom of that vertical line, ending in an arrowhead. This illustrates a 'swipe down then left' gesture.	<p data-bbox="821 840 1185 869">Go back to the previous setting.</p>

Using the on-screen keyboard

When the on-screen keyboard appears, do one or more of the following:

- Touch a key to announce and type the character in the field.
- Drag a finger across different characters to announce and type the character in the field.
- Touch a text box using two fingers to announce the characters in the field.
- Touch **Backspace** to delete characters.

Enabling Magnification mode

1. In one motion and using one finger, slowly swipe left then up on the display until you hear a voice message.

Note: For printer models without built-in speakers, use headphones to hear the message.

2. Using two fingers, do the following:

Note: If the gesture does not work, then apply more pressure.

- a. Touch **Magnification mode**.
- b. Touch **OK**.

Note: If the gesture does not work, then apply more pressure.

For more information on navigating a magnified screen, see [Navigating the screen using gestures on page 95](#).

Adjusting the Voice Guidance speech rate

1. From the control panel, navigate to **Settings** › **Device** › **Accessibility** › **Speech Rate**.
2. Select the speech rate.

Adjusting the default headphone volume

1. From the control panel, navigate to **Settings** › **Device** › **Accessibility**.
2. Adjust the headphone volume.

Note: The volume resets to the default value after the user exits Accessibility mode or when the printer wakes from sleep or hibernate mode.

Adjusting the default internal speaker volume

1. From the control panel, swipe right to the control center.
2. Adjust the volume.

Notes

- If **Quiet Mode** is enabled, then the audible alerts are turned off. This setting also slows the printer performance.
- The volume resets to the default value after the user exits the Accessibility mode or when the printer wakes from sleep or hibernate mode.

Enabling spoken passwords or personal identification numbers

1. From the control panel, navigate to **Settings** › **Device** › **Accessibility** › **Speak Passwords/PINs**.
2. Enable the setting.

Setting up the printer to fax


Setting up the fax function using analog fax

Notes

- A fax card must be installed for the printer to use analog fax.
- Some connection methods are applicable only in some countries or regions.
- If the fax function is enabled and not fully set up, then the indicator light may blink red.
- If you do not have a TCP/IP environment, then use the control panel to set up fax.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch cables or the printer in the area shown while actively sending or receiving a fax.

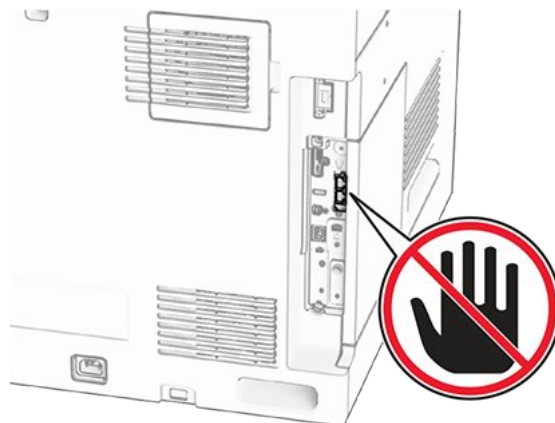

Using the control panel

1. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **General Fax Settings**.
2. Configure the settings.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** › **Fax** › **Fax Setup** › **General Fax Settings**.
3. Configure the settings.
4. Apply the changes.

Setting up the fax function using etherFAX

Notes

- The printer firmware must be updated to the latest version. For more information, see the **Printer firmware instructions** section.
- An appropriate license bundle must be installed in your printer. For more information, contact etherFAX.
- Make sure that you have registered your printer to the etherFAX portal. For more information, go to <https://www.etherfax.net/lexmark>.
- The printer serial number is required on registration. For more information, see [Finding the printer serial number on page 11](#).

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** › **Fax** › **Fax Setup** › **General Fax Settings**.

Note: **Fax Setup** appears only if **Fax Mode** is set to **Fax**.

3. In the **Fax Name** field, type a unique name.
4. In the **Fax Number** field, enter the fax number that etherFAX provided.
5. From the **Fax Transport** menu, select **etherFAX**.

Notes

- This menu shows up only when more than one fax transport is available.
- If the printer only has etherFAX installed, then it is automatically configured.

6. Apply the changes.

Setting up the fax function using fax server

Notes

- This feature lets you send fax messages to a fax service provider that supports email receiving.
- This feature supports outgoing fax messages only. To support fax receive, make sure that you have a device-based fax, such as analog fax, etherFAX, or Fax over IP (FoIP), configured in your printer.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings > Fax**.
3. From the **Fax Mode** menu, select **Fax Server**, and then click **Save**.
4. Click **Fax Server Setup**.
5. In the **To Format** field, type [#]@myfax.com, where [#] is the fax number and **myfax.com** is the fax provider domain.

Notes

- If necessary, configure the **Reply Address**, **Subject**, or **Message** fields.
- To let the printer receive fax messages, enable the device-based fax receive setting. Make sure that you have a device-based fax configured.

6. Click **Save**.
7. Click **Fax Server Email Settings**, and then enable **Use Email SMTP Server**.

Note: If the settings are not configured, then see [Configuring the email SMTP settings on page 322](#).

8. Apply the changes.

Setting up fax using a standard telephone line

Note: These instructions apply only to printers that have a fax card installed.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.



CAUTION—POTENTIAL INJURY

To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

Setup 1: Printer is connected to a dedicated fax line

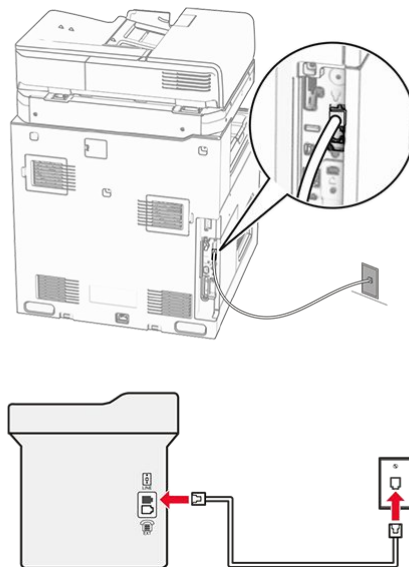

1. Connect one end of the telephone cable to the line port of the printer.
2. Connect the other end of the cable to an active analog telephone wall jack.



Notes

- You can set the printer to receive faxes automatically (set **Auto Answer** to **On**) or manually (set **Auto Answer** to **Off**).
- If you want to receive faxes automatically, then set the printer to pick up on a specified number of rings.

Setup 2: Printer is sharing the line with an answering machine


Note: If you subscribe to a distinctive ring service, then make sure that you set the correct ring pattern for the printer. Otherwise, the printer does not receive faxes even if you have set it to receive faxes automatically.

Connected to the same telephone wall jack

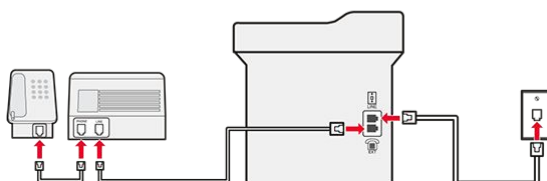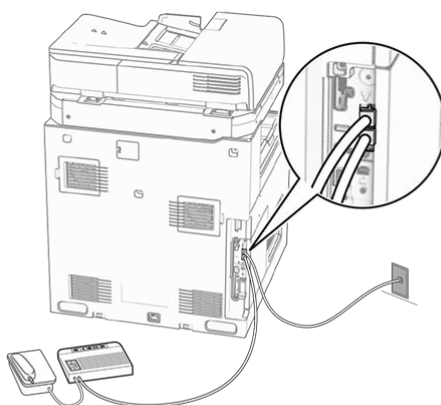

1. Connect one end of the telephone cable to the line port of the printer.
2. Connect the other end of the cable to an active analog wall jack.
3. Connect the answering machine to the telephone port of the printer.

Connected to different wall jacks

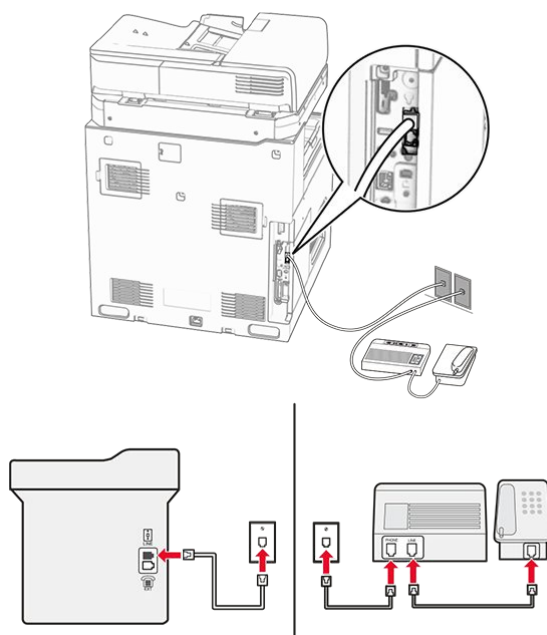

1. Connect one end of the telephone cable to the line port of the printer.
2. Connect the other end of the cable to an active analog wall jack.

Notes

- If you have only one telephone number on your line, then set the printer to receive faxes automatically.
- Set the printer to pick up calls two rings after the answering machine. For example, if the answering machine picks up calls after four rings, then set the printer **Rings to Answer** setting to **6**.

Setting up fax in countries or regions with different telephone wall jacks and plugs

Note: These instructions apply only to printers that have a fax card installed.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections, such as the power cord, fax feature, or telephone, during a lightning storm.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, do not use the fax feature during a lightning storm.




CAUTION—POTENTIAL INJURY


To reduce the risk of fire, use only a 26 AWG or larger telecommunications (RJ-11) cord when connecting this product to the public switched telephone network. For users in Australia, the cord must be approved by the Australian Communications and Media Authority.

The standard wall jack adopted by most countries or regions is RJ-11. If the wall jack or equipment in your facility is not compatible with this type of connection, then use a telephone adapter. An adapter for your country or region may not come with your printer, and you may need to purchase it separately.

There may be an adapter plug installed in the telephone port of the printer. Do not remove the adapter plug from the telephone port of the printer if you are connecting to a serial or cascaded telephone system.

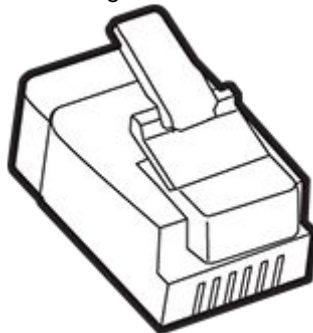

Connecting the printer to a non-RJ-11 wall jack

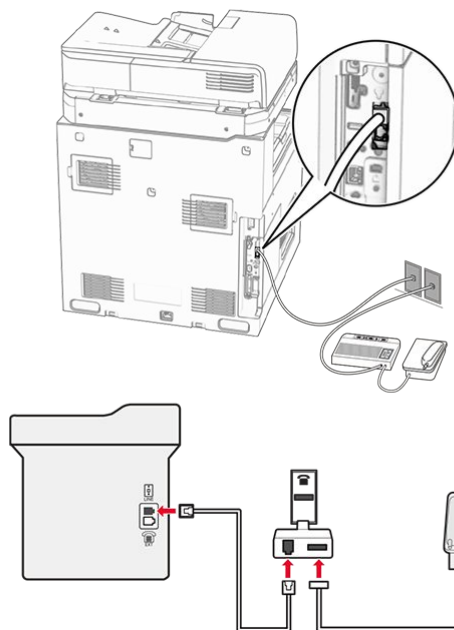

1. Connect one end of the telephone cable to the line port of the printer.
2. Connect the other end of the cable to the RJ-11 adapter, and then connect the adapter to the wall jack.

Note: If you want to connect another device with a non-RJ-11 connector to the same wall jack, then connect it directly to the telephone adapter.

Connecting to a distinctive ring service

A distinctive ring service lets you have multiple telephone numbers on one telephone line. Each telephone number is assigned a different ring pattern.

1. From the control panel, navigate to **Settings** > **Fax** > **Fax Setup** > **Fax Receive Settings** > **Admin Controls** > **Answer On**.
2. Select a ring pattern.

Setting the fax date and time

1. From the control panel, navigate to **Settings** > **Device** > **Preferences** > **Date and Time** > **Configure**.
2. Configure the settings.

Configuring daylight saving time

1. From the control panel, navigate to **Settings** > **Device** > **Preferences** > **Date and Time** > **Configure**.
2. In the **Time Zone** menu, select **(UTC+user) Custom**.

3. In the **Configure** menu, select **UTC (GMT) Offset**.
4. Configure the settings.

Configuring the fax speaker settings

1. From the control panel, navigate to **Settings > Fax > Fax Setup > Speaker Settings**.
2. Do the following:
 - Set **Speaker Mode** to **Always On**.
 - Set **Speaker Volume** to **High**.
 - Activate **Ringer Volume**.

Loading paper and specialty media

Setting the paper size and type

1. From the control panel, navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.
2. Select a paper source.
3. Set the paper size and type.

Setting the paper weight and texture

Selecting the correct paper weight and texture settings in your printer to match the paper type that you loaded helps prevent print quality issues.

1. From the control panel, navigate to **Settings > Paper > Media Configuration > Media Type Setup**.
2. Select the paper type, and then adjust the **Weight** and **Texture** settings.

Use the following table for reference.

Notes

- Check the ream packaging to confirm the weight of the paper that you loaded.
- Paper type and weight support varies by printer model. For more information, see [Supported paper types on page 83](#) and [Supported paper weights on page 83](#).

	Printer settings				
Paper weight specs	Paper type	Paper weight	Paper texture	Fuser temperature	Toner transfer setting
60–74 g/m ² (16–20-lb bond)	Plain paper	Light	Smooth	Light paper low	Light weight, Copy/Office

Set up, install, and configure

	Printer settings				
Paper weight specs	Paper type	Paper weight	Paper texture	Fuser temperature	Toner transfer setting
60–74 g/m ² (16–20-lb bond)	Plain paper	Light	Normal	Light paper normal	Light weight, Copy/Office
60–74 g/m ² (16–20-lb bond)	Plain paper	Light	Rough	Light paper high	Light weight, Copy/Office
74–90 g/m ² (20–24-lb bond)	Plain paper	Normal	Smooth	Plain paper low	Normal weight, Copy/Office
74–90 g/m ² (20–24-lb bond)	Plain paper	Normal	Normal	Plain paper normal	Normal weight, Copy/Office
74–90 g/m ² (20–24-lb bond)	Plain paper	Normal	Rough	Plain paper high	Normal weight, Copy/Office
90–120 g/m ² (24–32-lb bond)	Plain paper	Heavy	Smooth	Heavy paper low	Heavyweight, Premium
90–120 g/m ² (24–32-lb bond)	Plain paper	Heavy	Normal	Heavy paper normal	Heavyweight, Premium
90–120 g/m ² (24–32-lb bond)	Plain Paper	Heavy	Rough	Heavy paper high	Heavyweight, Premium
60–74 g/m ² Cotton (16–20-lb bond)	Rough cotton	Light	Rough	Heavy paper normal	Up to 25% cotton
74–90 g/m ² Cotton (20–24-lb bond)	Rough cotton	Normal	Rough	Heavy paper normal	Up to 25% cotton
90–120 g/m ² Cotton (24–32-lb bond)	Rough cotton	Heavy	Rough	Heavy paper normal	100% cotton
105–165 g/m ² Coated (39–60-lb cover)	Glossy	Light	Smooth	Light paper normal	High gloss/Glossy
105–165 g/m ² Coated (39–60-lb cover)	Glossy	Light	Normal	Light paper normal	High gloss/Glossy

Set up, install, and configure

	Printer settings				
Paper weight specs	Paper type	Paper weight	Paper texture	Fuser temperature	Toner transfer setting
105–165 g/ m ² Coated (39–60-lb cover)	Glossy	Light	Rough	Light paper normal	High gloss/ Glossy
165–220 g/ m ² Coated (60–80-lb cover)	Glossy	Normal	Smooth	Light paper high	High gloss/ Glossy
165–220 g/ m ² Coated (60–80-lb cover)	Glossy	Normal	Normal	Light paper high	High gloss/ Glossy
165–220 g/ m ² Coated (60–80-lb cover)	Glossy	Normal	Rough	Light paper high	High gloss/ Glossy
220–300 g/ m ² Coated (80–110-lb cover)	Glossy	Heavy	Smooth	Heavy paper high	High gloss/ Glossy
220–300 g/ m ² Coated (80–110-lb cover)	Glossy	Heavy	Normal	Heavy paper high	High gloss/ Glossy
220–300 g/ m ² Coated (80–110-lb cover)	Glossy	Heavy	Rough	Heavy paper high	High gloss/ Glossy
120–160 g/ m ² (66–90- lb index)	Card stock	Light	Smooth	Heavy paper low	Card Stock
120–160 g/ m ² (66–90- lb index)	Card stock	Light	Normal	Heavy paper low	Card Stock
120–160 g/ m ² (66–90- lb index)	Card stock	Light	Rough	Heavy paper low	Card Stock
160–220 g/ m ² (90–120- lb index)	Card stock	Normal	Smooth	Heavy paper normal	Card Stock
160–220 g/ m ² (90–120- lb index)	Card stock	Normal	Normal	Heavy paper normal	Card Stock

Set up, install, and configure

	Printer settings				
Paper weight specs	Paper type	Paper weight	Paper texture	Fuser temperature	Toner transfer setting
160–220 g/m ² (90–120-lb index)	Card stock	Normal	Rough	Heavy paper normal	Card Stock
220–300 g/m ² (120–166-lb index)	Card stock	Heavy	Smooth	Heavy paper high	Card Stock
220–300 g/m ² (120–166-lb index)	Card stock	Heavy	Normal	Heavy paper high	Card Stock
220–300 g/m ² (120–166-lb index)	Card stock	Heavy	Rough	Heavy paper high	Card stock
80–130 g/m ²	Label	Light	Smooth	Heavy paper low	Paper label
80–130 g/m ²	Label	Light	Normal	Heavy paper low	Paper label
80–130 g/m ²	Label	Light	Rough	Heavy paper low	Paper label
130–180 g/m ²	Label	Normal	Smooth	Heavy paper normal	Paper label
130–180 g/m ²	Label	Normal	Normal	Heavy paper normal	Paper label
130–180 g/m ²	Label	Normal	Rough	Heavy paper normal	Paper label
180–230 g/m ²	Label	Heavy	Smooth	Heavy paper high	Paper label
180–230 g/m ²	Label	Heavy	Normal	Heavy paper high	Paper label
180–230 g/m ²	Label	Heavy	Rough	Heavy paper high	Paper label
160–180 g/m ²	Vinyl Label	Light	Smooth	Heavy paper low	Vinyl label
160–180 g/m ²	Vinyl Label	Light	Normal	Heavy paper low	Vinyl label
160–180 g/m ²	Vinyl Label	Light	Rough	Heavy paper low	Vinyl label

Set up, install, and configure

	Printer settings				
Paper weight specs	Paper type	Paper weight	Paper texture	Fuser temperature	Toner transfer setting
180–220 g/m ²	Vinyl Label	Normal	Smooth	Heavy paper normal	Vinyl label
180–220 g/m ²	Vinyl Label	Normal	Normal	Heavy paper normal	Vinyl label
180–220 g/m ²	Vinyl Label	Normal	Rough	Heavy paper normal	Vinyl label
220–300 g/m ²	Vinyl Label	Heavy	Smooth	Heavy paper high	Vinyl label
220–300 g/m ²	Vinyl Label	Heavy	Normal	Heavy paper high	Vinyl label
220–300 g/m ²	Vinyl Label	Heavy	Rough	Heavy paper high	Vinyl label
52–75 g/m ² (14-lb bond)	Envelope	Light	Smooth	Plain paper low	Envelope
52–75 g/m ² (14-lb bond)	Envelope	Light	Normal	Plain paper low	Envelope
52–75 g/m ² (14-lb bond)	Envelope	Light	Rough	Plain paper low	Envelope
75–90 g/m ² (20-lb bond)	Envelope	Normal	Smooth	Heavy paper low	Envelope
75–90 g/m ² (20-lb bond)	Envelope	Normal	Normal	Heavy paper low	Envelope
75–90 g/m ² (20-lb bond)	Envelope	Normal	Rough	Heavy paper low	Envelope
> 90 g/m ² (24-lb bond)	Envelope	Heavy	Smooth	Heavy paper normal	Envelope
> 90 g/m ² (24-lb bond)	Envelope	Heavy	Normal	Heavy paper normal	Envelope
> 90 g/m ² (24-lb bond)	Envelope	Heavy	Rough	Heavy paper normal	Envelope

Notes

- Light Paper uses the same transfer and fuser settings as Plain Paper–Light, based on the selected texture.
- Letterhead, Preprinted, Colored Paper, Bond, and Recycled use the same transfer and fuser settings as Plain Paper–Normal, based on the selected texture.
- Heavy Paper has the same transfer and fuser settings as Plain Paper–Heavy, based on the selected texture.
- Toner transfer is the process of placing the toner on the paper.
- Fusing is the process of melting and fixing the toner to the paper.

Configuring Universal paper settings

The **Universal Setup** menu lets you set the width and height of a paper size that is not preset in the printer.

1. From the control panel, navigate to **Settings** › **Paper** › **Media Configuration** › **Universal Setup**.
2. Select **All Input Trays**, and then configure the settings for the paper size that you want to customize.

Loading the 550-sheet tray




CAUTION—TIPPING HAZARD

To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1. Open the tray.


Note: To avoid jams, do not open trays while the printer is busy.

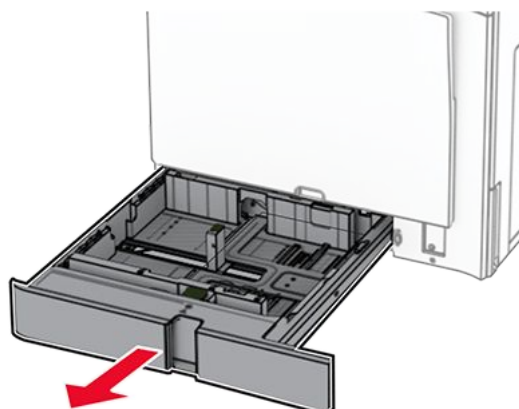


2. Adjust the guides to match the size of the paper that you are loading.

Notes

- Use the indicators on the bottom of the tray to position the guides.
- Prepunched paper is supported only in the standard 550-sheet tray.
- A3-size paper is supported only in the optional 550-sheet tray.

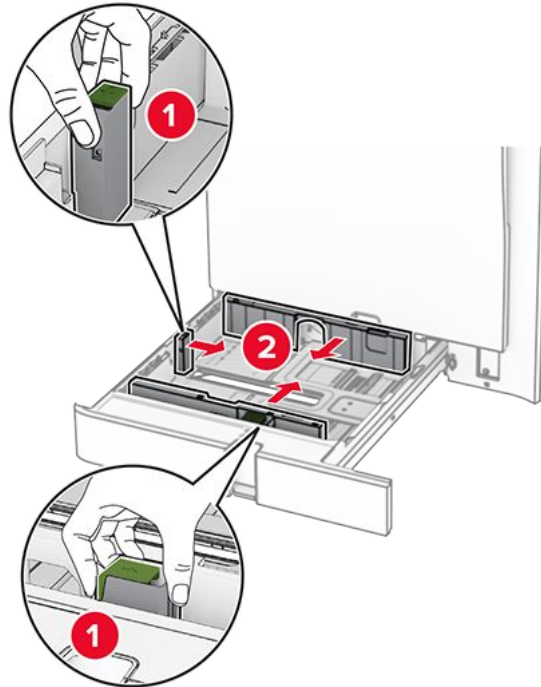


3. Flex, fan, and align the paper edges before loading.

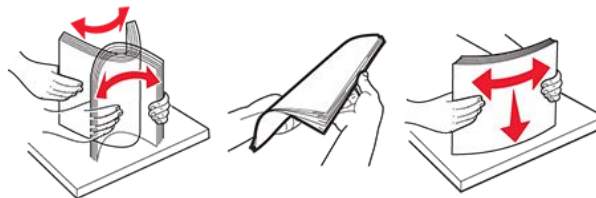

4. Load the paper stack with the printable side faceup.

Notes

- Do not slide paper into the tray.
- Make sure that the stack height is below the maximum fill line. Overfilling may cause paper jams.




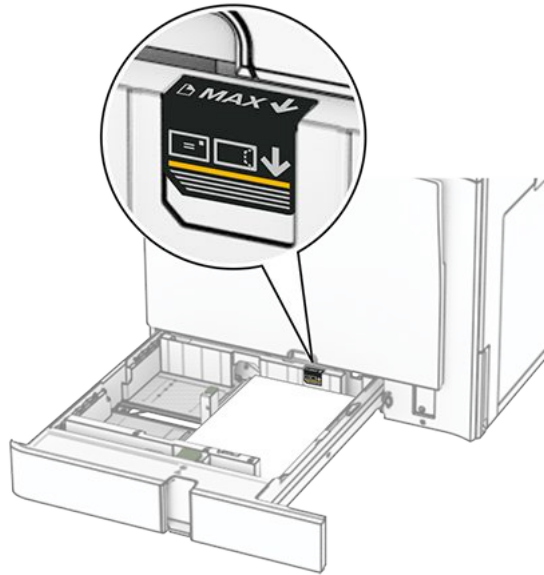


5. Insert the tray.





If necessary, set the paper size and paper type to match the paper loaded in the tray.

Note: When a finisher is installed, the pages are rotated to 180° when printed.







When loading letterhead, do any of the following:

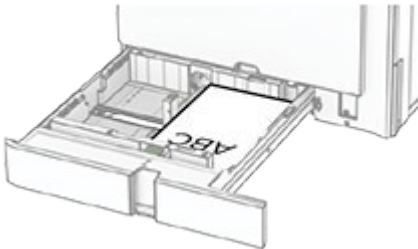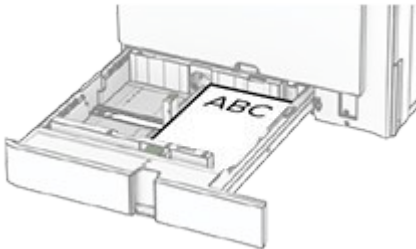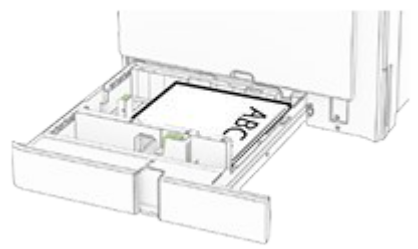
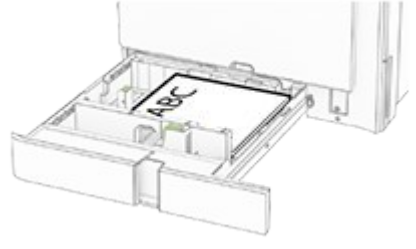
Without an optional finisher	With an optional finisher
 <p>One-sided, long-edge printing</p>	 <p>One-sided, long-edge printing</p>
 <p>One-sided, short-edge printing</p>	 <p>One-sided, short-edge printing</p>

Set up, install, and configure

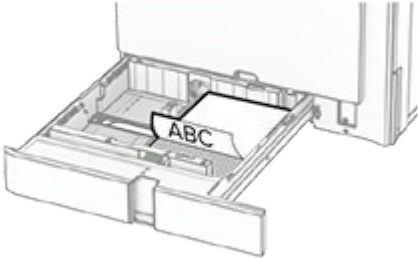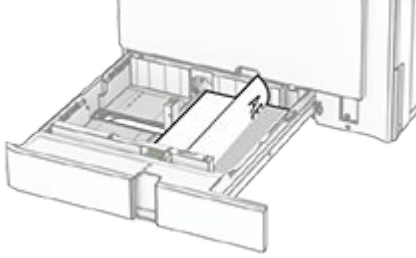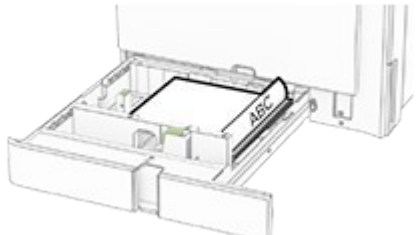Without an optional finisher	With an optional finisher
 <p data-bbox="304 499 643 528">Two-sided, long-edge printing</p>	 <p data-bbox="946 499 1284 528">Two-sided, long-edge printing</p>
 <p data-bbox="304 831 643 860">Two-sided, short-edge printing</p>	 <p data-bbox="946 831 1284 860">Two-sided, short-edge printing</p>

When loading prepunched paper, do any of the following:

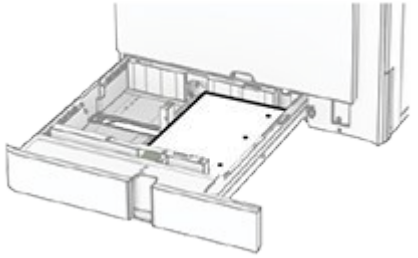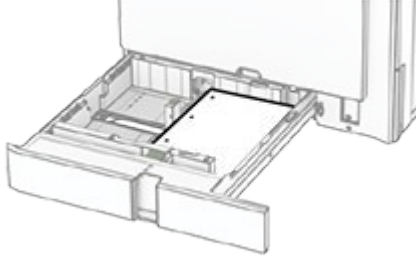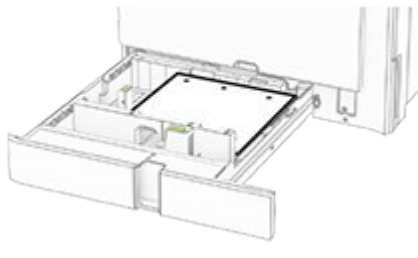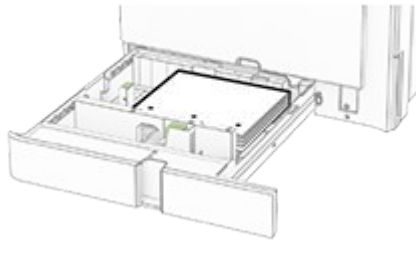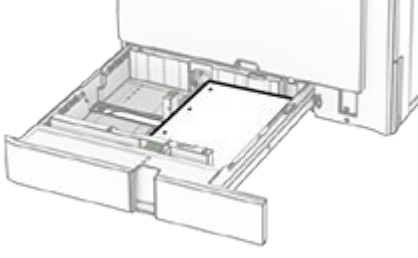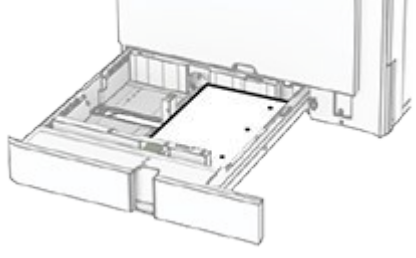Without an optional finisher	With an optional finisher
 <p data-bbox="304 1294 643 1323">One-sided, long-edge printing</p>	 <p data-bbox="946 1294 1284 1323">One-sided, long-edge printing</p>
 <p data-bbox="304 1630 643 1659">One-sided, short-edge printing</p>	 <p data-bbox="946 1630 1284 1659">One-sided, short-edge printing</p>
 <p data-bbox="304 1966 643 1995">Two-sided, long-edge printing</p>	 <p data-bbox="946 1966 1284 1995">Two-sided, long-edge printing</p>

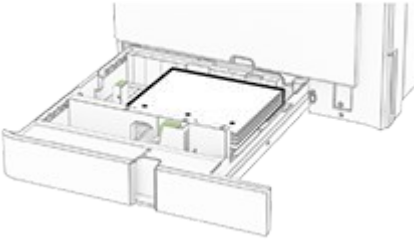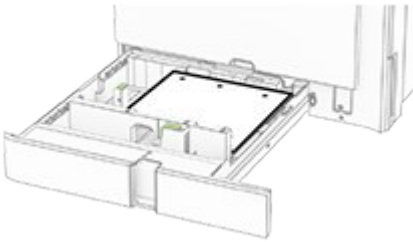Without an optional finisher	With an optional finisher
 <p>Two-sided, short-edge printing</p>	 <p>Two-sided, short-edge printing</p>

Loading the 2000-sheet tandem tray




CAUTION—TIPPING HAZARD


To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1. Open the tray.

Note: To avoid jams, do not pull out trays while the printer is busy.

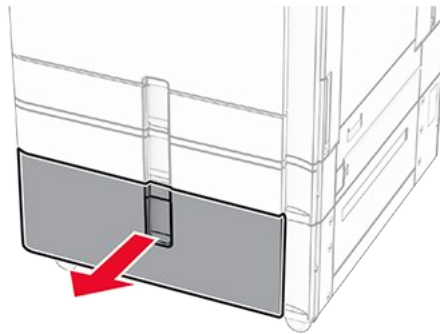


2. Flex, fan, and align the paper edges before loading.

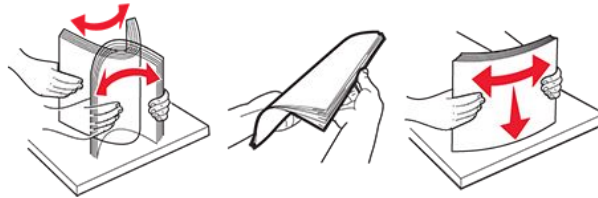


3. Load the paper stack to the right tray insert with the printable side faceup.

Notes

- Do not slide paper into the tray.
- Make sure that the stack height is below the maximum fill line. Overfilling may cause paper jams.

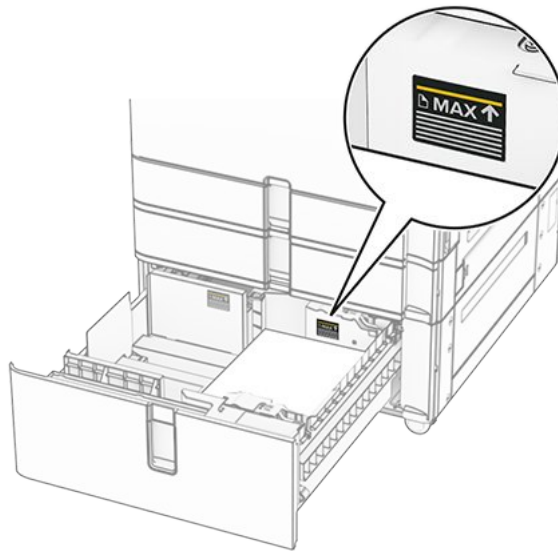


4. Insert the right tray insert into the printer.
5. Load the paper stack to the left tray insert with the printable side faceup.

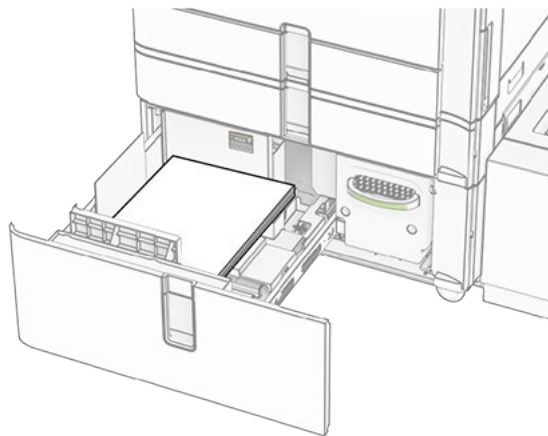


6. Insert the tray.
If necessary, set the paper size and type to match the paper loaded in the tray.

Note: When a finisher is installed, the pages are rotated to 180° when printed.

When loading letterhead for one-sided printing, load it faceup with the header toward the front of the tray.

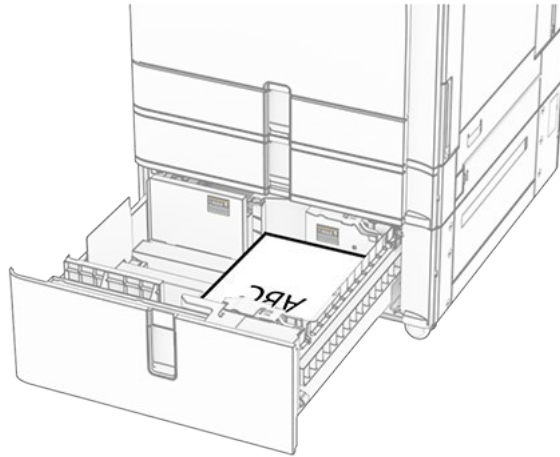

When loading letterhead for two-sided printing, load it facedown with the header toward the front of the tray.

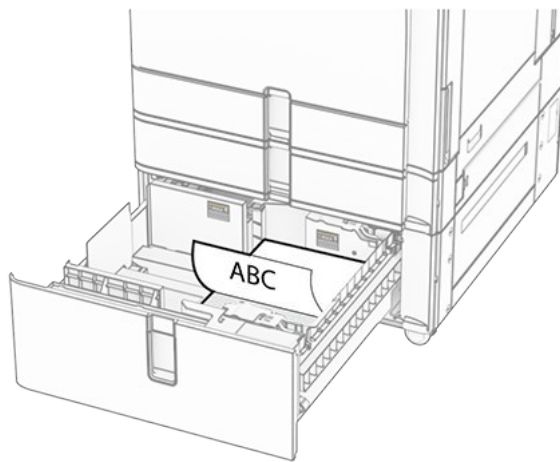

Loading the 1500-sheet tray




CAUTION—TIPPING HAZARD


To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1. Open door K.

Note: To avoid jams, do not open trays while the printer is busy.

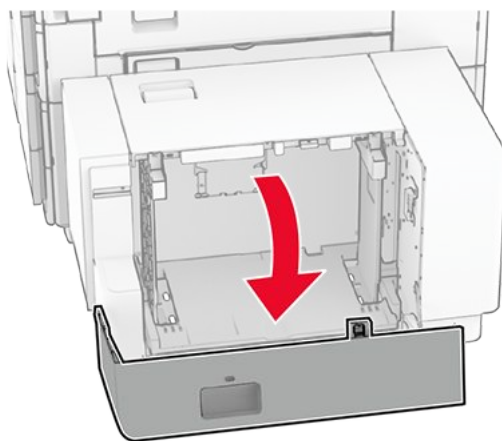


2. Flex, fan, and align the paper edges before loading.

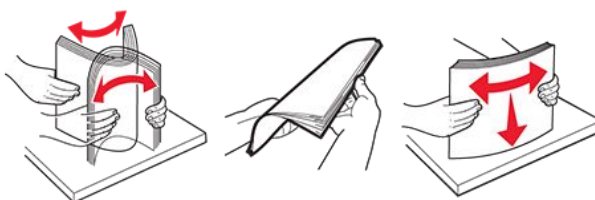

3. Load the paper stack with the printable side facedown.

Notes


- Do not slide paper into the tray.
- Make sure that the stack height is below the maximum fill line. Overfilling may cause paper jams.

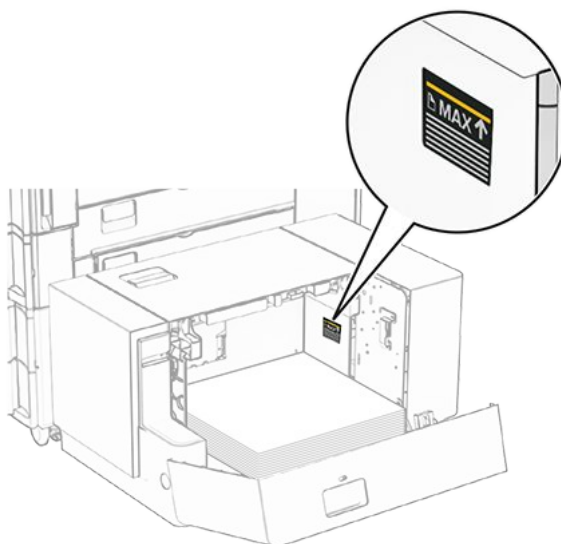


4. Close door K.

If necessary, set the paper size and type to match the paper loaded in the tray.

When loading letterhead for one-sided printing, load it facedown with the header toward the rear of the printer.

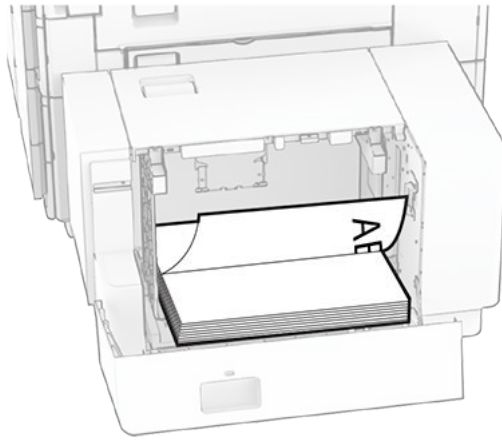


When loading letterhead for two-sided printing, load it faceup with the header toward the rear of the printer.

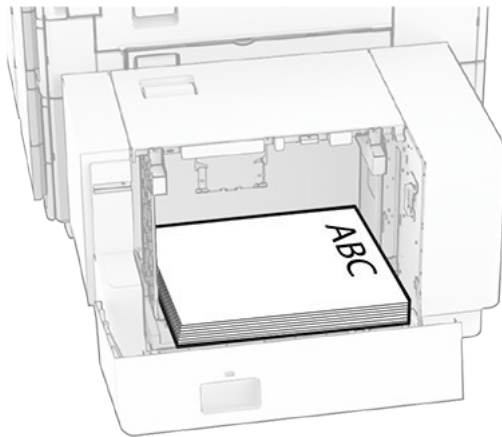


When loading a different paper size, make sure to adjust the guides. Do the following:




1. Using a flat-head screwdriver, remove the screws from the paper guides.

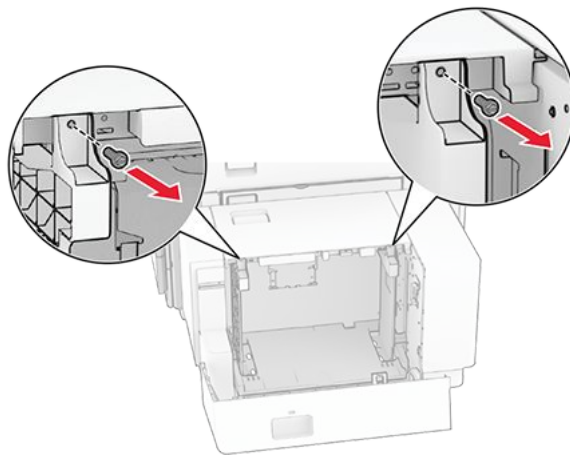


2. Remove the paper guides.

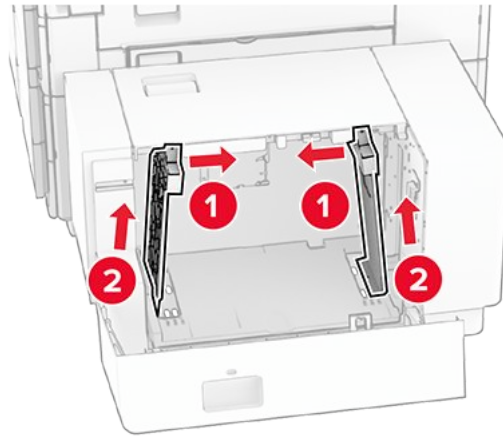

3. Align the paper guides to match the size of the paper that you are loading.

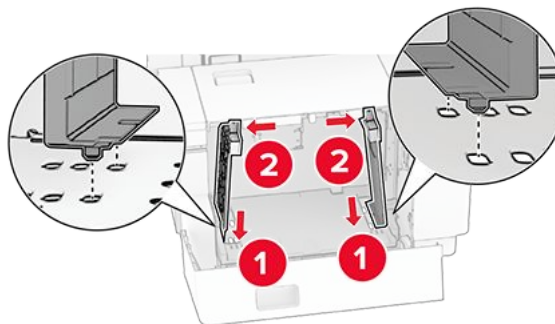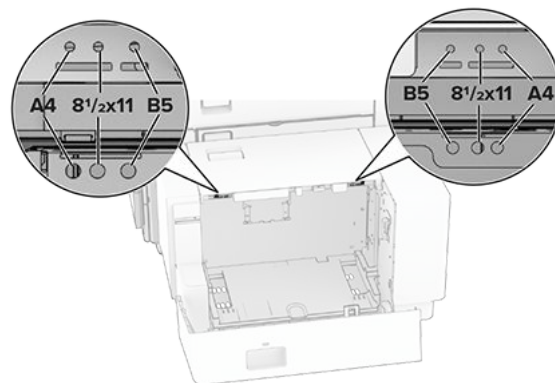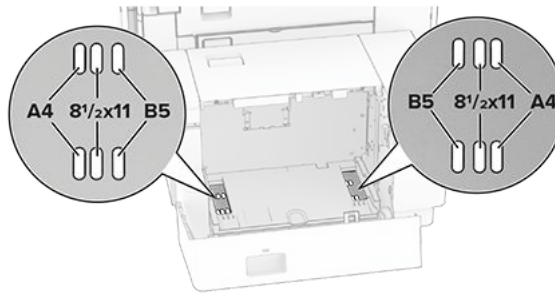


4. Install the screws on the paper guides.

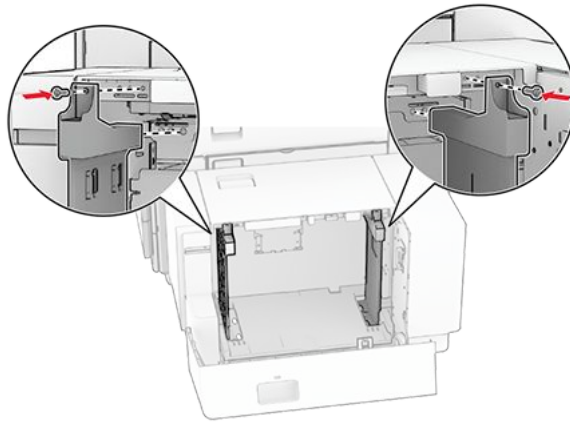


Loading the multipurpose feeder


1. Open the multipurpose feeder.

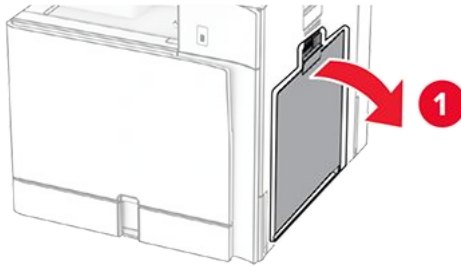

2. Adjust the side guides to match the size of the paper that you are loading.

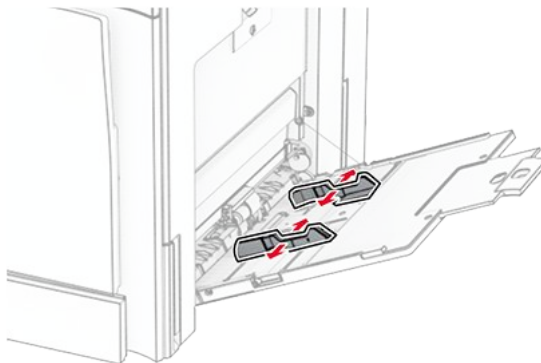

3. Flex, fan, and align the paper edges before loading.

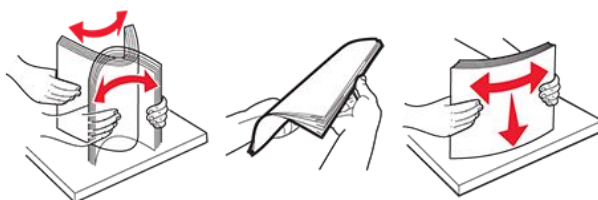


4. Load the paper.

- When loading letterhead, do either of the following:

Without a finisher	With a finisher
<p>One-sided, long-edge printing</p>	<p>One-sided, long-edge printing</p>
<p>Two-sided, long-edge printing</p>	<p>Two-sided, long-edge printing</p>



- When loading prepunched paper, do either of the following:

Without a finisher	With a finisher
<p>One-sided, long-edge printing</p>	<p>One-sided, long-edge printing</p>

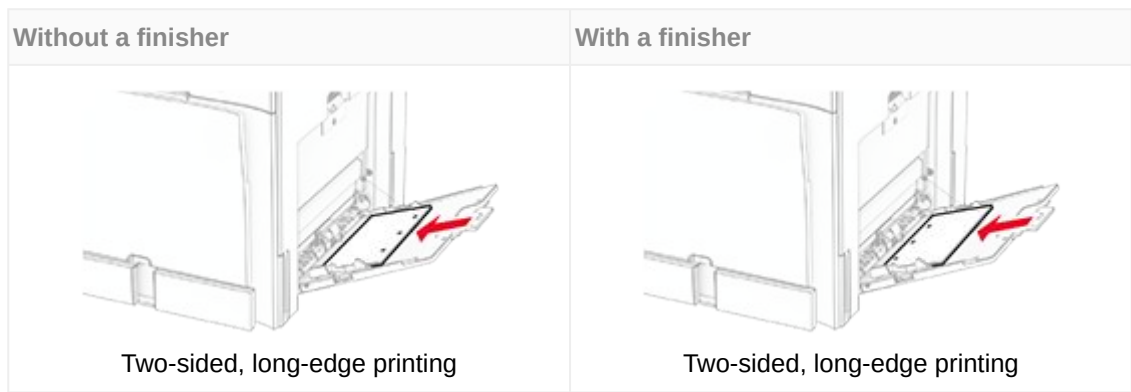

For envelopes

Load envelope with the flap faceup toward the rear of the printer. Load European envelope with the flap faceup entering the multipurpose feeder first.

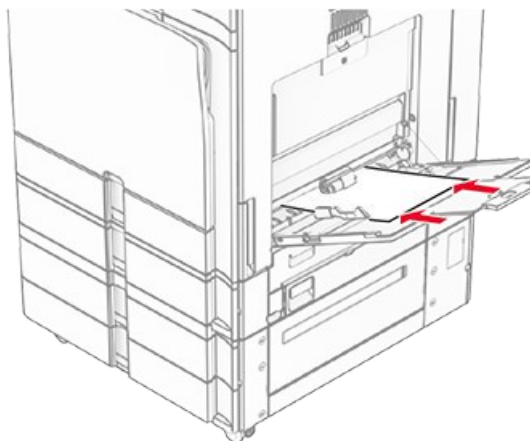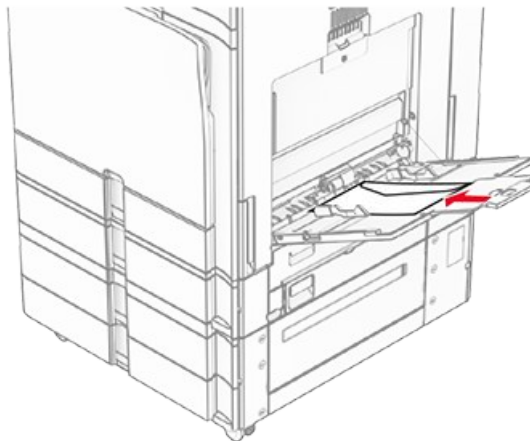

Note: When a finisher is installed, the pages are rotated to 180° when printed.

Linking trays

1. From the control panel, navigate to **Settings** › **Paper** › **Tray Configuration** › **Paper Size/Type**.
2. Select the trays that you want to link, and then set the paper size and paper type.

Notes

- Make sure the trays are loaded with the same paper size and paper type.
- Make sure the paper in each tray is loaded in the same direction.

3. Return to the home screen, and then navigate to **Settings** › **Device** › **Maintenance** › **Configuration Menu** › **Tray Configuration**.
4. Set **Tray Linking** to **Automatic**.

To unlink the trays, make sure that no trays have the same paper size and paper type settings.

Warning—Potential Damage

The temperature of the fuser varies according to the specified paper type. To avoid printing issues, match the paper type setting in the printer with the paper loaded in the tray.

Installing and updating software, drivers, and firmware

Installing the printer software

Installing printer software lets your printer communicate with your computer. It enables full functionality, ensures compatibility with your operating system, and simplifies network or wireless setup. Installing the printer software also installs the print, scan, and fax drivers.

Note: Depending on your operating system, you may use the Microsoft IPP Class Driver or AirPrint to connect the printer to your computer. For more information, go to the Microsoft or Apple support site.

Before you begin, make sure that:

- For network printers, the printer and computer are connected to the same network. Write down the printer IP address that appears at the top of the printer display.
- For local printers, the printer is connected to the computer with a USB cable.

1. Go to <https://support.lexmark.com>, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. In the **Recommended Driver** section, click **Download Driver Package**.

Note: If your computer runs on the Linux operating system, then select a driver from the **Additional downloads compatible with [printer model]** section.

4. Click **Start Download**.
5. Run the installer, and then follow the on-screen instructions.

Adding printers to a computer

Before you begin, do one of the following:

- Connect the printer and the computer to the same network, either Wi-Fi or Ethernet. For more information on connecting the printer to a Wi-Fi network, see [Connecting the printer to a Wi-Fi network on page 305](#).
- Enable the **Wi-Fi Direct** setting. From the control panel, navigate to **Settings > Network/Ports > Wi-Fi Direct > Enable Wi-Fi Direct**.
- Connect the printer to the computer using a USB cable. For more information on the location of the printer USB port, see [Printer ports on page 90](#).

For Windows users

1. Install the print driver on the computer. For more information, see [Installing the printer software on page 127](#).
2. Open **Printers & scanners**.
3. Click **Add device**, and then select the printer that you want to add.

If the printer that you want to add does not appear on the list, then do either of the following:

- For Wi-Fi Direct enabled printers, click **Show Wi-Fi Direct printers**, select a printer, click **Add device**, and then follow the on-screen instructions.
- For Ethernet-connected printers, click **Add a new device manually**, and then from the **Add Printer** window, do the following:
 1. Select **Add a printer using an IP address or hostname**, and then click **Next**.
 2. In the **Device type** field, select **TCP/IP Device**.
 3. In the **Hostname or IP address** field, type the printer IP address, and then click **Next**.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

4. Select a print driver, and then click **Next**.
5. Select **Use the driver that is currently installed (recommended)**, and then click **Next**.
6. Type a printer name, and then click **Next**.
7. Click **Finish**.

For Macintosh users

1. Open **Printers & Scanners**.
2. Click **Add Printer, Scanner, or Fax**, and then select a printer.

Notes

- If you want custom printing features, then install the Lexmark print driver. For more information, see [Installing the printer software on page 127](#).
- If the Lexmark print driver is already installed, then do the following:
 1. In the **Use** menu, choose **Select Software**, and then choose the Lexmark print driver.
 2. Click **OK**.

3. Click **Add**.

Note: Depending on your printer model, a dialog may appear asking you to add a Fax printer.

Exporting a configuration file

Exporting a configuration file lets you save the current settings of your printer to a file, which you can use as a backup or apply to another printer.

1. Open a web browser, and then type the printer IP address in the address field.

Note:

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. From the Embedded Web Server, click **Export Configuration**.
3. Select a configuration to export.

Note: Depending on the configuration that you selected, the files are exported in either ZIP or CSV format.

Importing a configuration file

Importing a configuration file lets you apply previously saved settings to your printer. This is useful when restoring a backup or setting up another printer with the same configuration.

1. Open a web browser, and then type the printer IP address in the address field.

Note:

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. From the Embedded Web Server, click **Import Configuration**.
3. Browse to the location that the file is saved.

Note: Depending on the configuration that you selected, the files are saved in either ZIP or CSV format.

4. Click **Import**.

Adding available options in the print driver

For Windows users

1. Open **Printers & scanners**.
2. Select the printer that you want to update, and then do either of the following:

Set up, install, and configure

- For Windows 7 or later, select **Printer properties**.
 - For earlier versions, select **Properties**.
3. Navigate to the **Configuration** tab, and then select **Update Now - Ask Printer**.
 4. Click **Apply**, and then click **OK**.

For Macintosh users

1. Open **Printers & Scanners**.
2. Click **Add Printer, Scanner, or Fax**, and then select a printer.
3. Choose a print driver.
4. Apply the changes.

Printer firmware instructions

Checking the printer firmware version

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Note:

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Reports > Device > Device Information**.
3. Look for **Base**.

Note: The firmware version appears as sets of letters and numbers separated by periods. For example, ABCDE.123.123.

Using the control panel

1. From the control panel, navigate to **Settings > Device > About this Printer**.
2. Look for **Firmware Version**.

Note: The firmware version appears as sets of letters and numbers separated by periods. For example, ABCDE.123.123.

Downloading the printer firmware

Note: You only need to download the firmware if you are updating the firmware in the Embedded Web Server using the firmware flash file or using a flash drive.


1. Go to www.lexmark.com/downloads, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. In the **Recommended Firmware** section, **Download Firmware Package**.
4. Accept the End-User License Agreement, and then click **Start Download**.
5. Run the installer, and then follow the on-screen instructions.

Updating firmware

Updating the firmware using the control panel

Using Notification Center

1. From the home screen, tap the notification icon to go to the Notification Center screen.
2. Select **Firmware update available**.

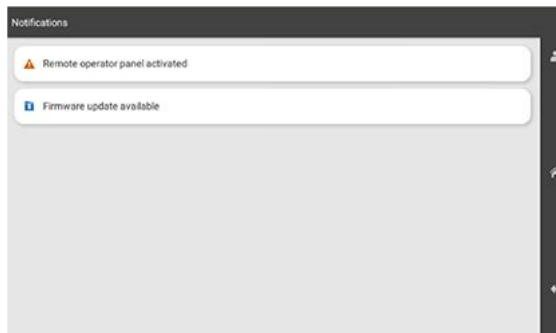

3. Select **Install now**.



The printer restarts automatically after the update.

Using the Settings menu

1. From the control panel, navigate to **Settings** > **Device**.
2. Depending on your printer model, do either of the following:
 - Select **Firmware Update** > **Check for updates**.
 - Select **Update firmware** > **Check for updates now**.
3. If an update is available, then select **Install now**.

The printer restarts automatically after the update.

Updating the firmware using the Embedded Web Server

Using the update button

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Device**.
3. Depending on your printer model, do either of the following:
 - Select **Firmware Update** > **Check for updates**.
 - Select **Update firmware** > **Check for updates now**.
4. If an update is available, then select **Install now**.

The printer restarts automatically after the update.

Using the firmware flash file (.fls)

Before you begin, make sure that:

- You have downloaded the firmware and saved it on your computer or flash drive. For more information, see [Downloading the printer firmware on page 131](#).
- Make sure that the printer and computer are connected to the same network.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Device**.
3. Click **Firmware Update**.
4. In the **Update Firmware from File** section, click **Browse**.
5. Search, and then select the **.fls** file.
6. Click **Upload**.

The printer restarts automatically after the update.

Installing hardware options

Installing the optional 550-sheet tray




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- This option must be always installed directly under the printer and must not be installed together with another optional 550-sheet tray.
- This task requires a flat-head screwdriver.

1. Turn off the printer.

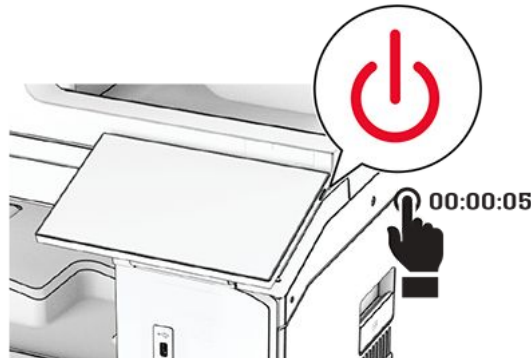


2. Unplug the power cord from the electrical outlet, and then from the printer.

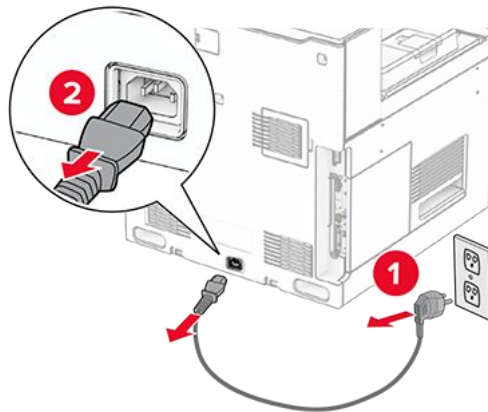


3. Unpack the optional 550-sheet tray.

Note: To prevent tray damage, hold both the front and rear sides when lifting.


4. Attach the right tray cover.

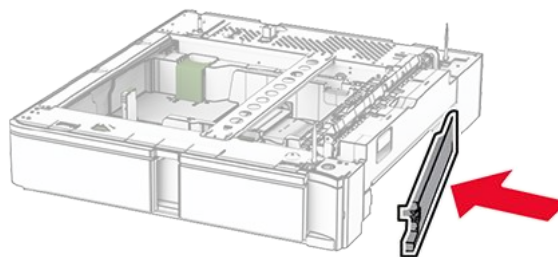


5. Pull out the 550-sheet tray insert.

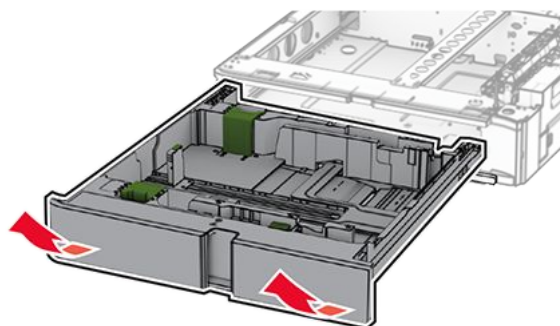


6. Remove the upper tray cover.

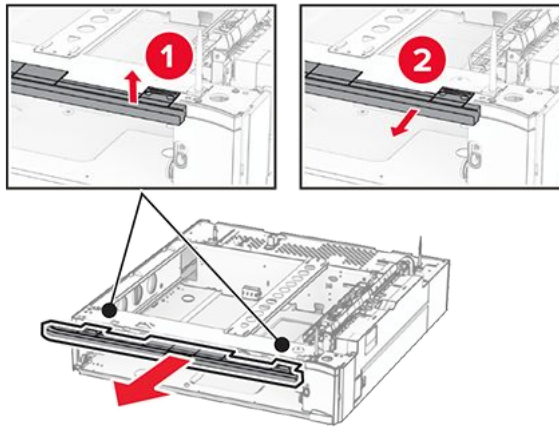


7. Remove the screws.

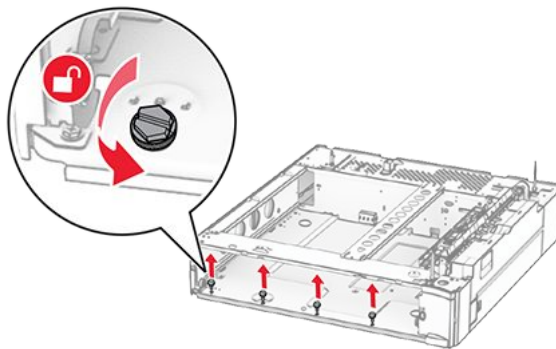


8. Attach the lower tray cover.

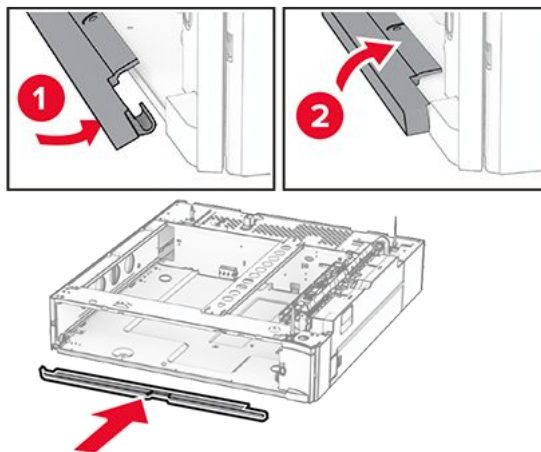


9. Install the screws.

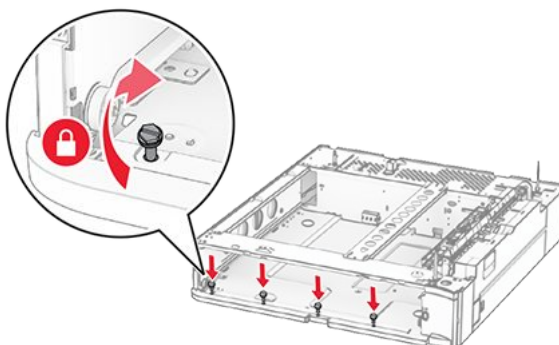

10. Attach the upper tray cover.

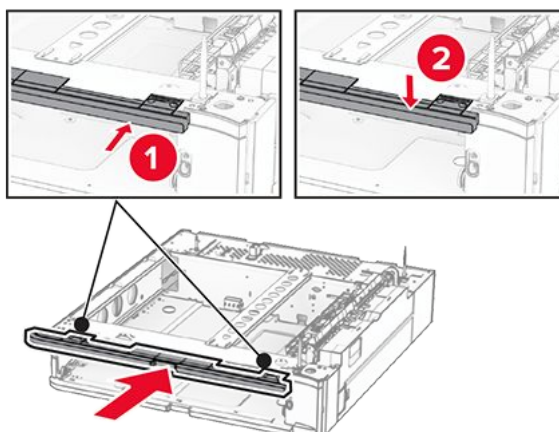

11. Insert the 550-sheet tray insert.
12. Remove the cover under the right side of the printer.

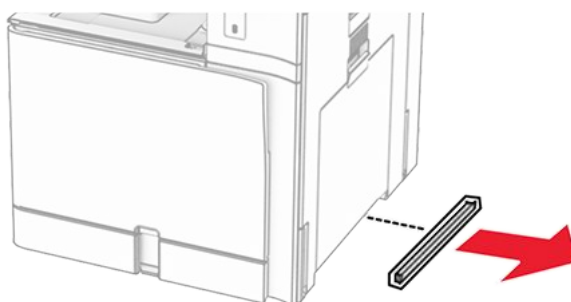


13. Align the printer with the 550-sheet tray, and then lower it into place.




CAUTION—POTENTIAL INJURY


If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.

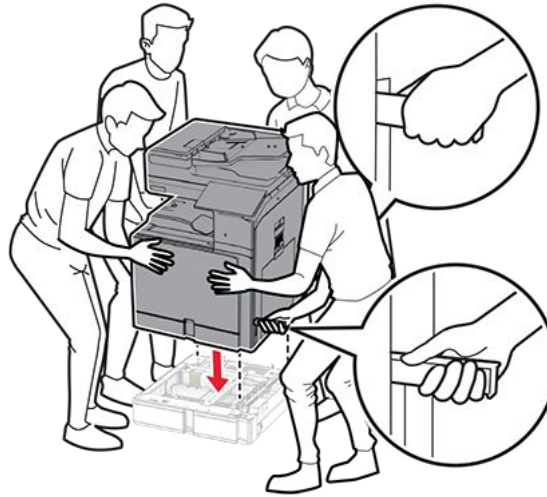



14. Pull out the standard tray insert.

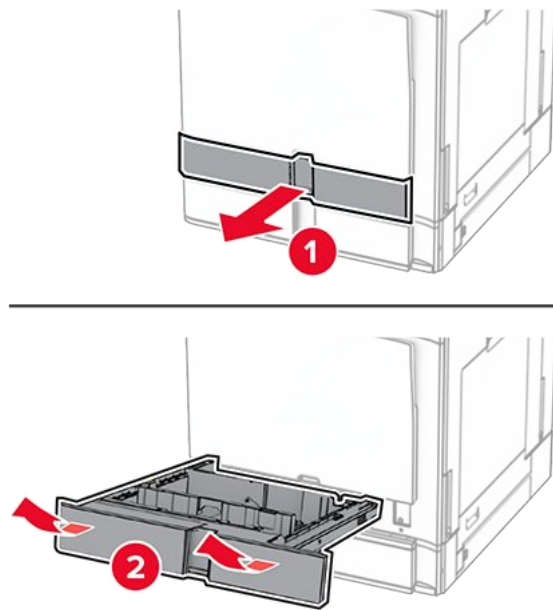


15. Secure the 550-sheet tray to the printer.

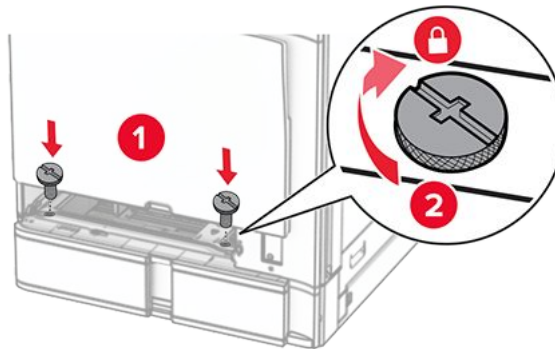

16. Insert the standard tray insert.

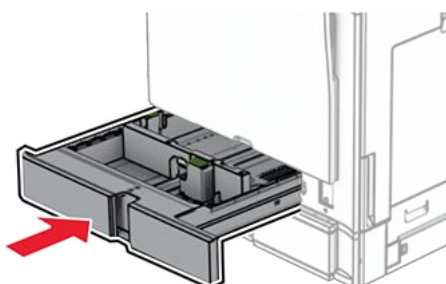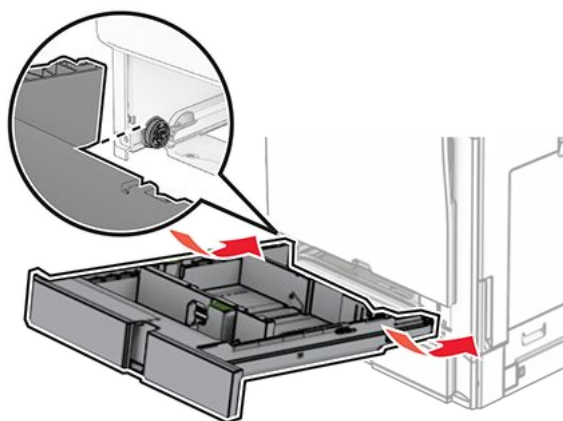

17. Secure the rear part of the 550-sheet tray to the printer.

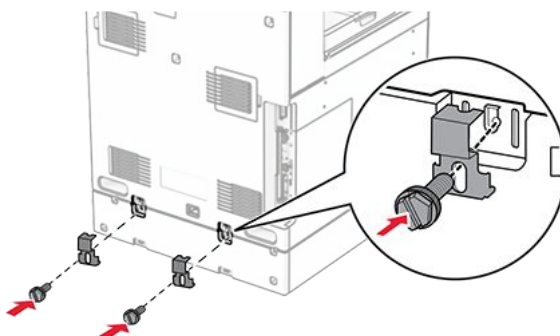

18. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

19. Turn on the printer.

Add the tray in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the 2 x 550-sheet tray




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- This option must be installed together with an optional 550-sheet tray. Place the option at the bottom of the configuration.
- If a 550-sheet tray is already installed, then first uninstall the tray, remove the tray side cover, and remove the lower tray cover. Then place the tray on top of this option.
- This task requires a flat-head screwdriver.


1. Turn off the printer.

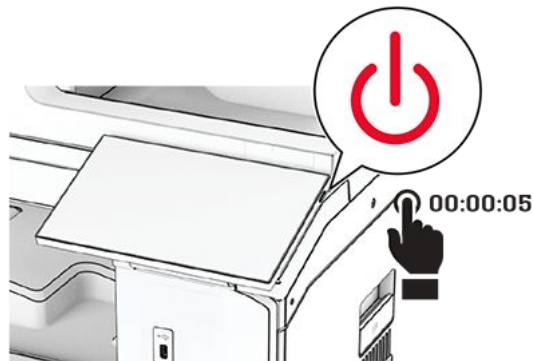

2. Unplug the power cord from the electrical outlet, and then from the printer.

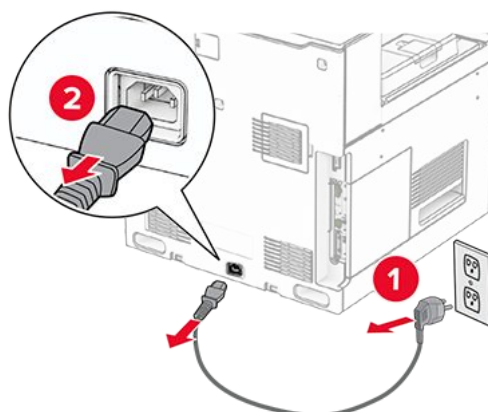


3. Unpack the 2 x 550-sheet tray.
4. Lock the caster to keep the 2 x 550-sheet tray from moving.


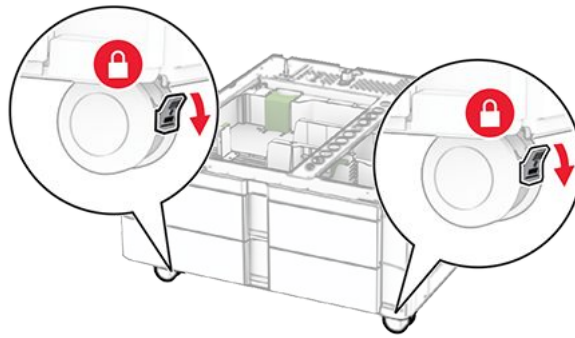


5. Align the 550-sheet tray with the 2 x 550-sheet tray, and then lower it into place.


Note: To prevent tray damage, hold both the front and rear sides when lifting.

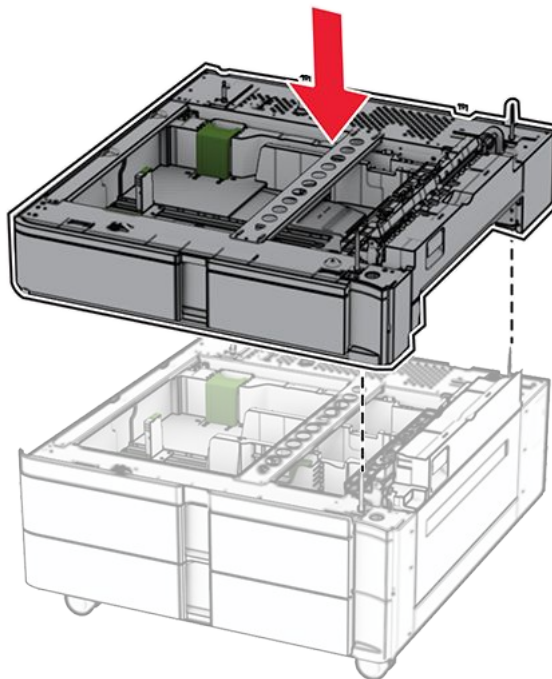



6. Pull out the 550-sheet tray insert.

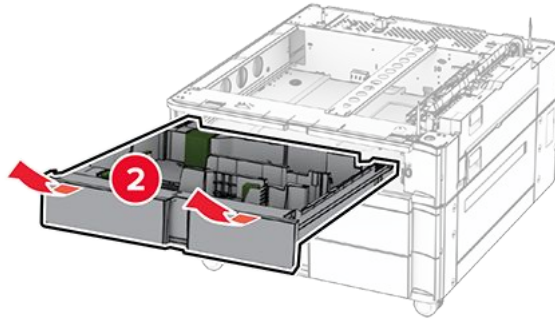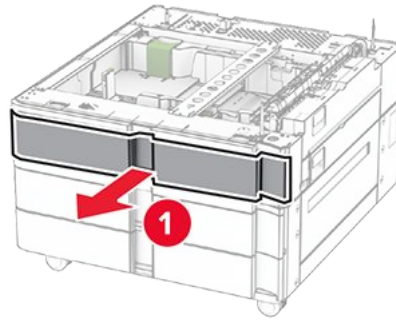


7. Secure the 550-sheet tray to the 2 x 550-sheet tray.

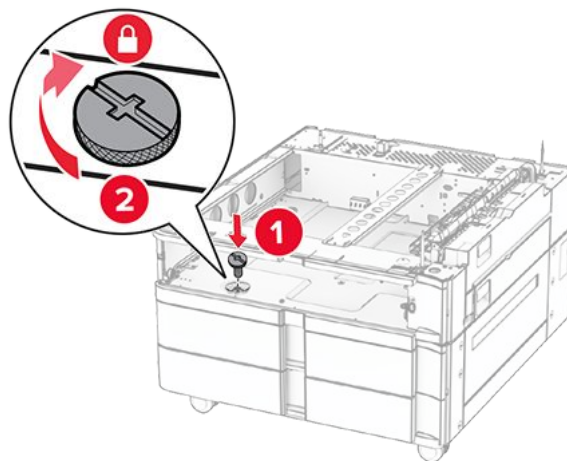


8. Insert the 550-sheet tray insert.

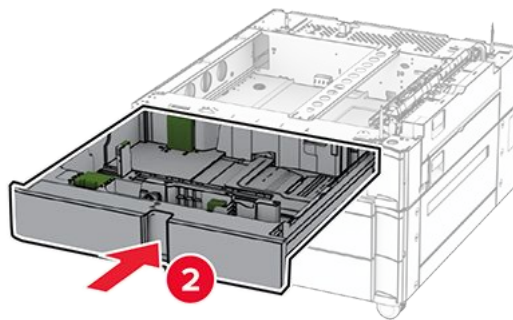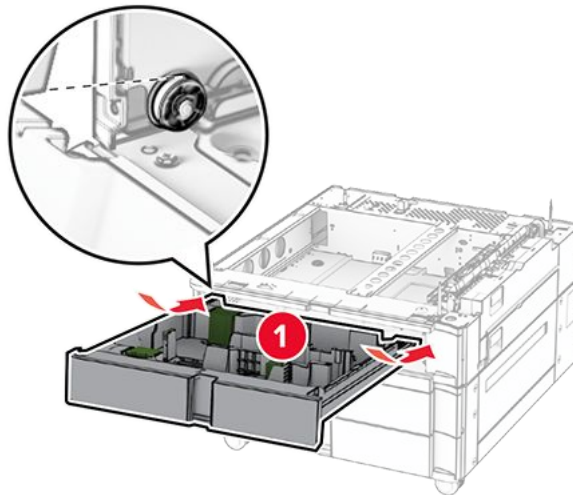

9. Secure the rear part of the 550-sheet tray to the 2 x 550-sheet tray.

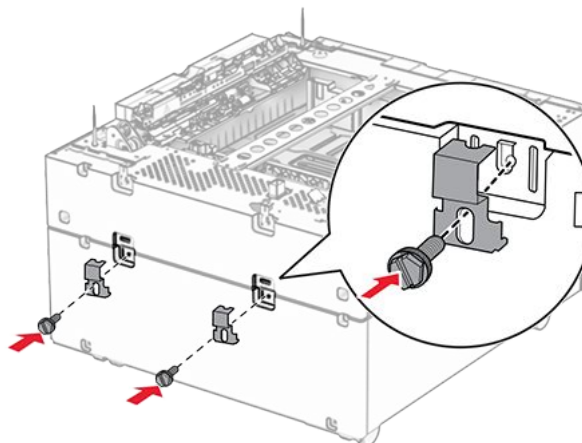

10. Remove the cover under the right side of the printer.

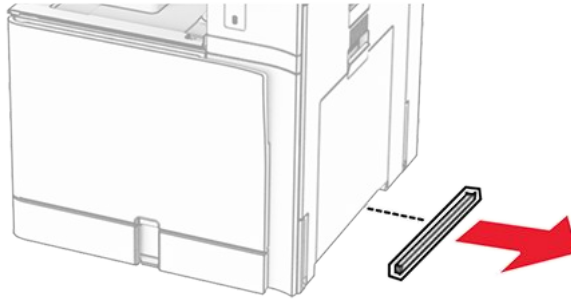


11. Align the printer with the optional trays, and then lower it into place.





CAUTION—POTENTIAL INJURY


If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.

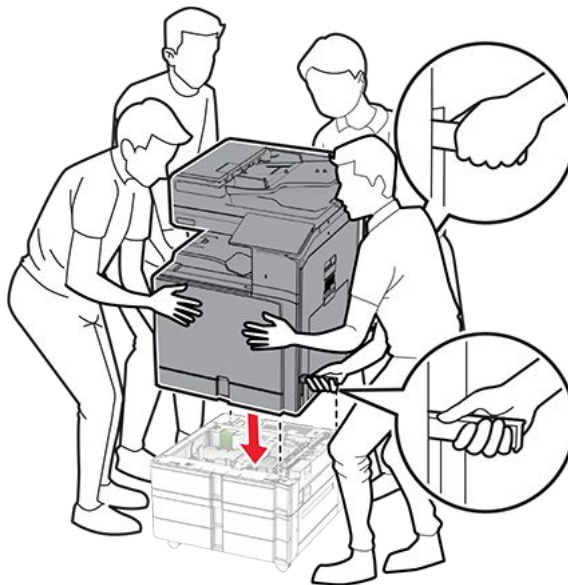

12. Pull out the standard tray insert.

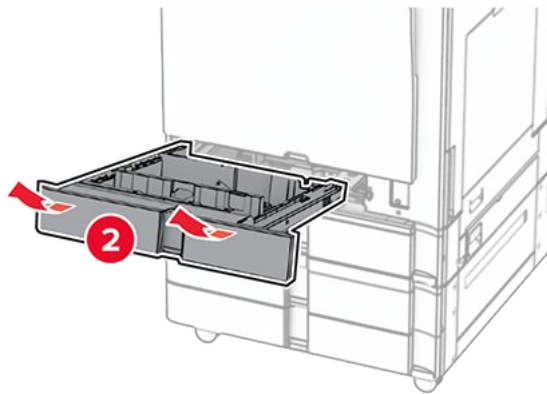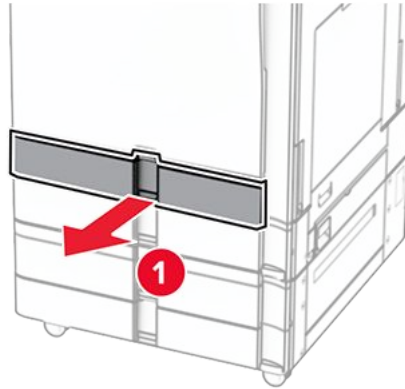


13. Secure the 550-sheet tray to the printer.

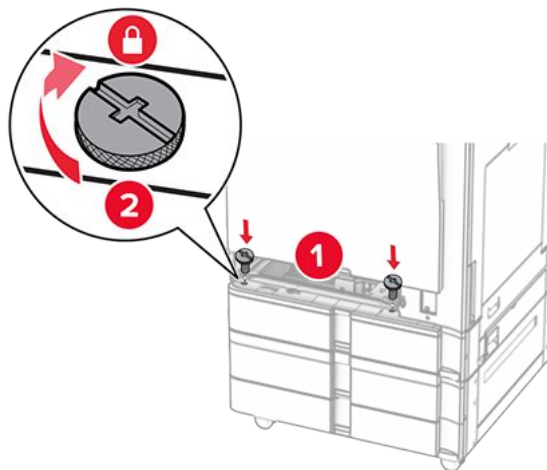

14. Insert the standard tray insert.

15. Secure the rear part of the 550-sheet tray to the printer.

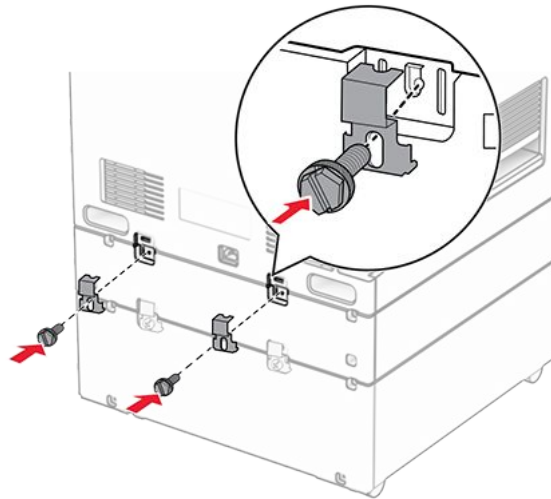

16. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

17. Turn on the printer.

Add the tray in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the 2000-sheet tandem tray




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- This option must be installed together with an optional 550-sheet tray. Place this option at the bottom of the configuration.
- If a 550-sheet tray is already installed, then first uninstall the tray, remove the tray side cover, and remove the lower tray cover. Then place the tray on top of this option.
- This task requires a flat-head screwdriver.


1. Turn off the printer.

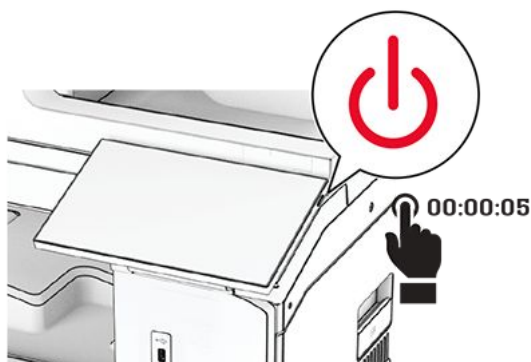

2. Unplug the power cord from the electrical outlet, and then from the printer.

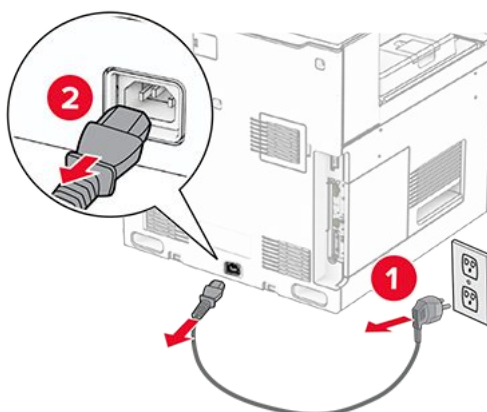


3. Unpack the tandem tray, and then remove all the packing material.
4. Lock the caster to keep the tandem tray from moving.


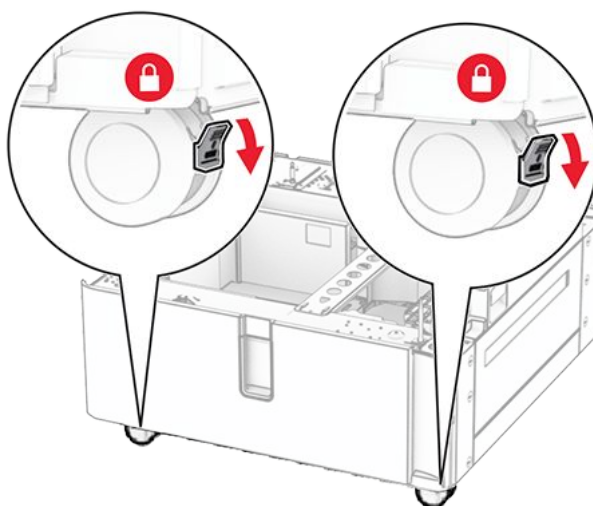


5. Align the 550-sheet tray with the tandem tray, and then lower it into place.


Note: To prevent tray damage, hold both the front and rear sides when lifting.

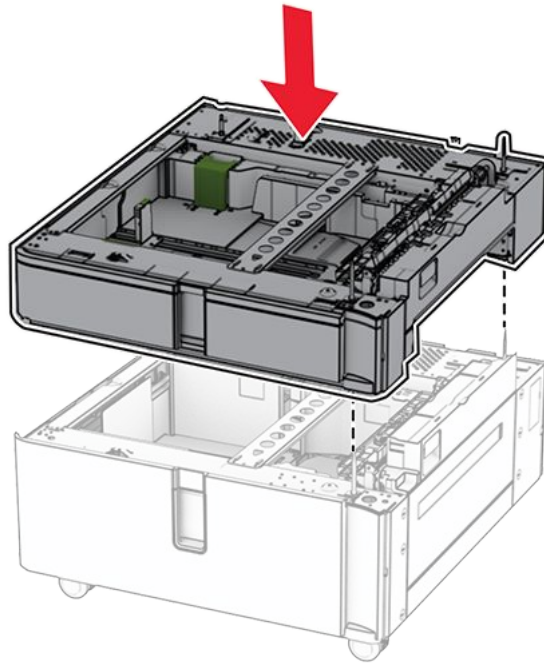


6. Pull out the 550-sheet tray insert.

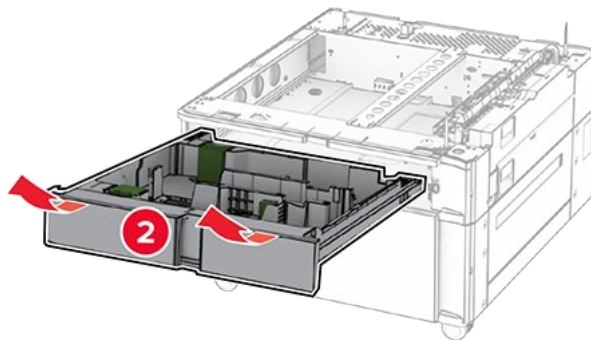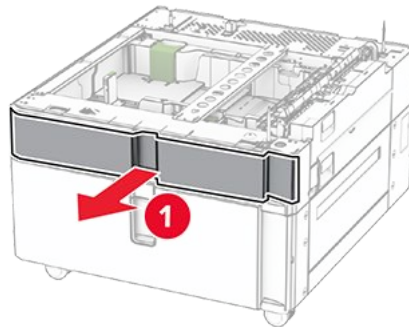


7. Secure the 550-sheet tray to the tandem tray.

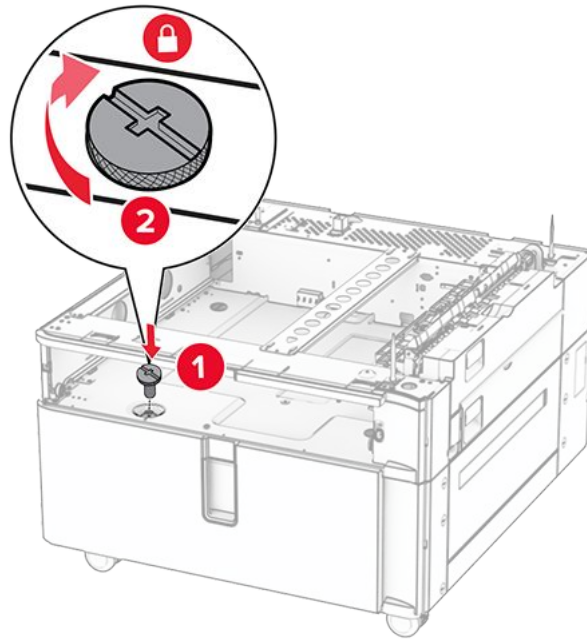

8. Insert the tray insert.
9. Secure the rear part of the 550-sheet tray to the tandem tray.

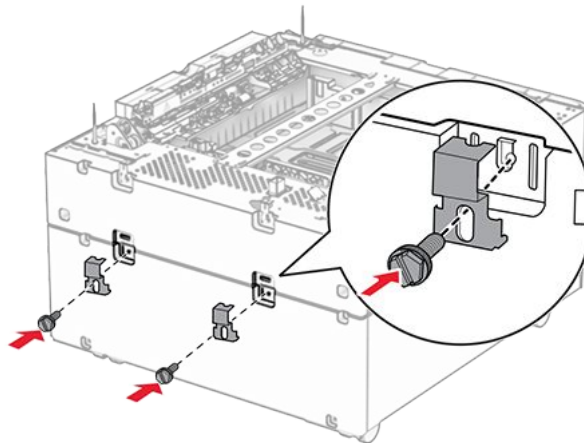

10. Remove the cover under the right side of the printer.

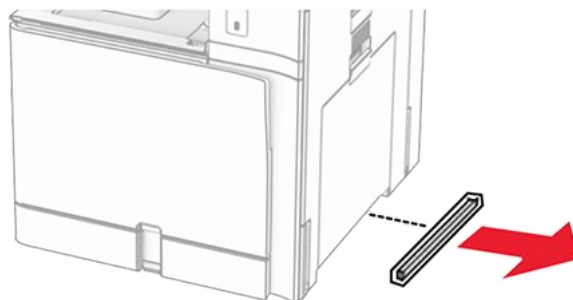


11. Align the printer with the optional trays, and then lower it into place.





CAUTION—POTENTIAL INJURY


If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.

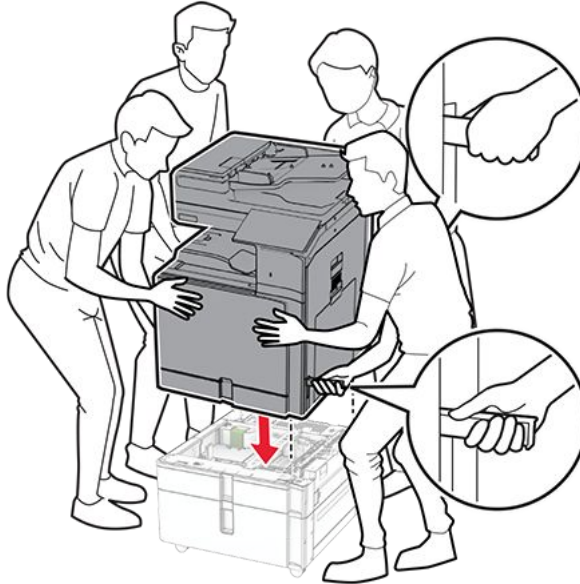


12. Pull out the standard tray.

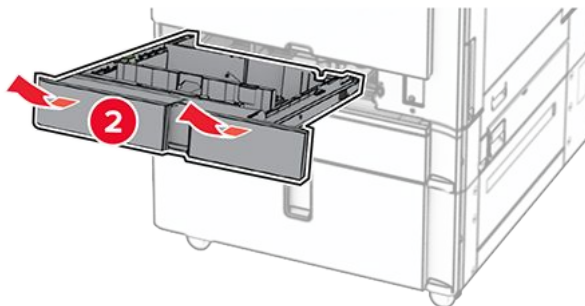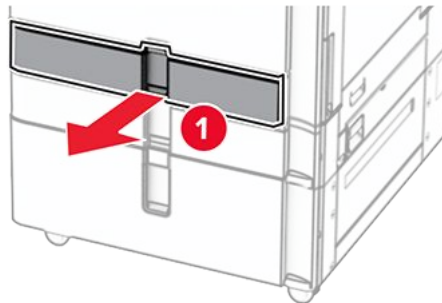

13. Secure the 550-sheet tray to the printer.

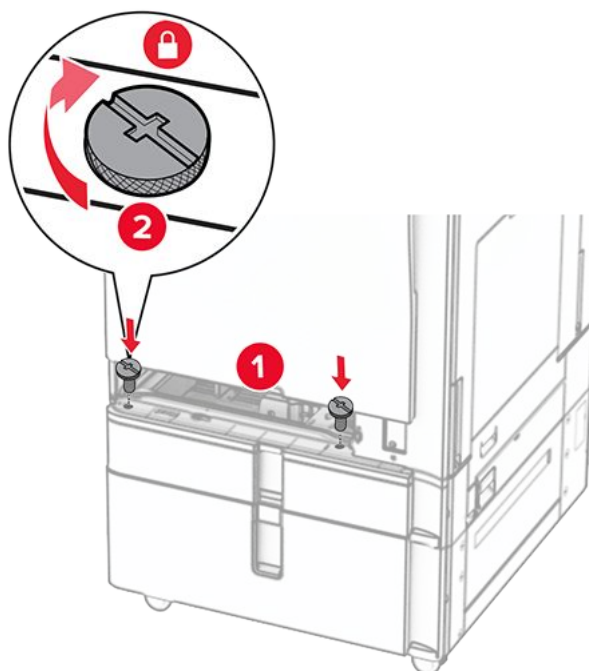

14. Insert the tray.
15. Secure the rear part of the 550-sheet tray to the printer.

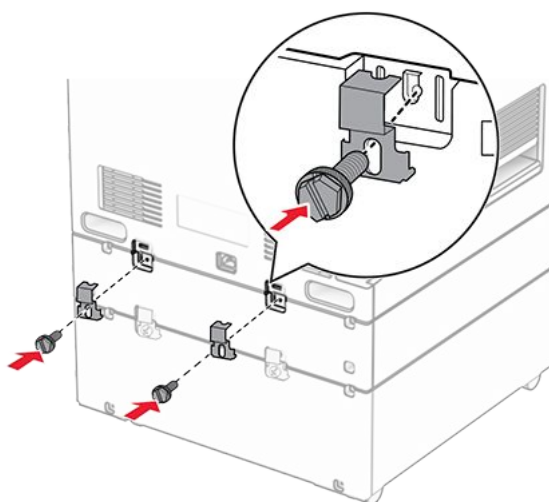

16. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

17. Turn on the printer.

Add the tray in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the cabinet




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- This option must be installed together with a 550-sheet tray. Place this option at the bottom of the configuration.
- If a 550-sheet tray is already installed, then first uninstall the tray and remove the lower tray cover. Then place the tray on top of this option.
- This task requires a flat-head screwdriver.


1. Unpack, and then assemble the cabinet.
2. Turn off the printer.

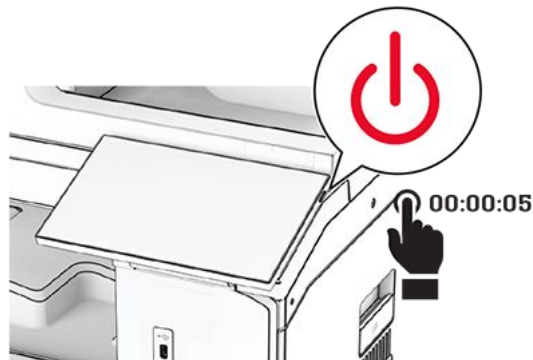


3. Unplug the power cord from the electrical outlet, and then from the printer.

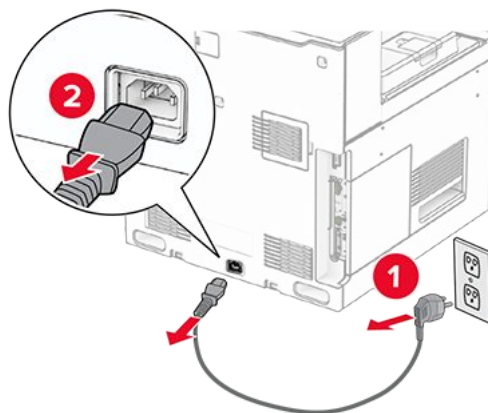

4. Lock the caster to keep the cabinet from moving.

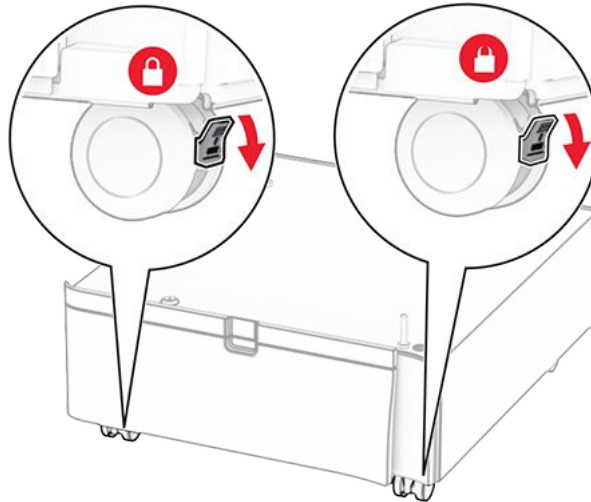


5. Attach the side cover of the 550-sheet tray.


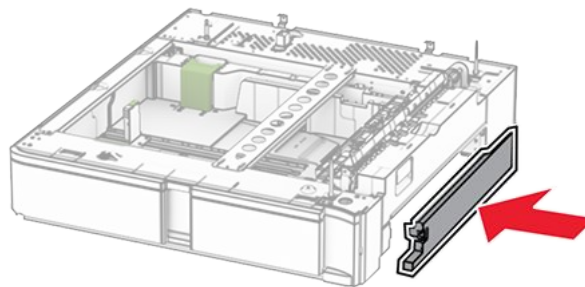


6. Align the tray with the cabinet, and then lower it into place.


Note: To prevent tray damage, hold both the front and rear sides when lifting.

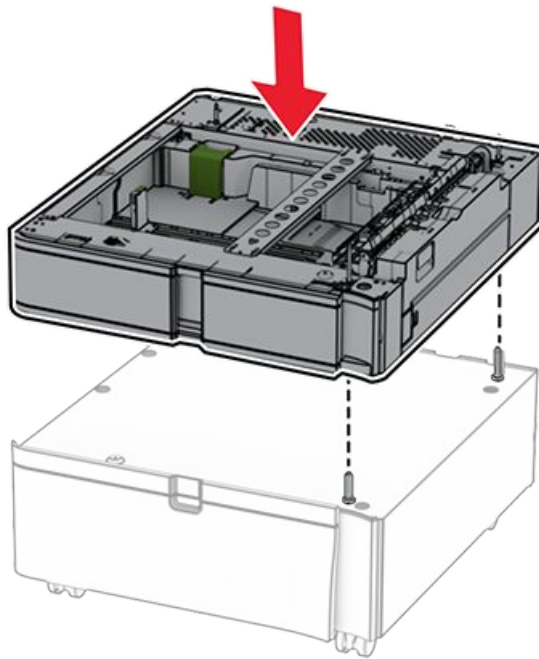


7. Pull out the tray insert.

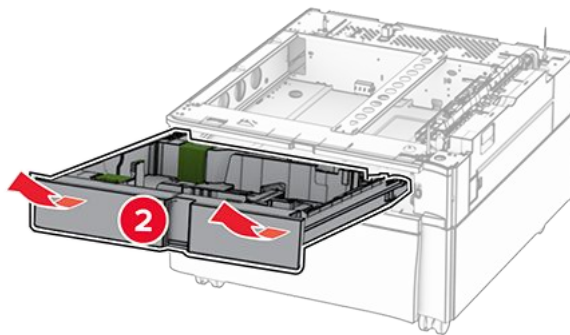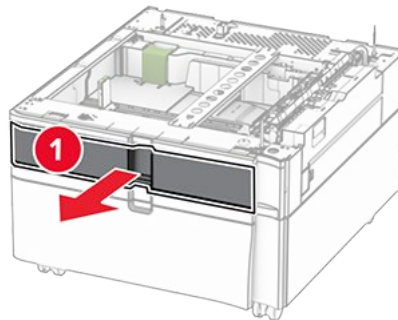


8. Secure the tray to the cabinet.

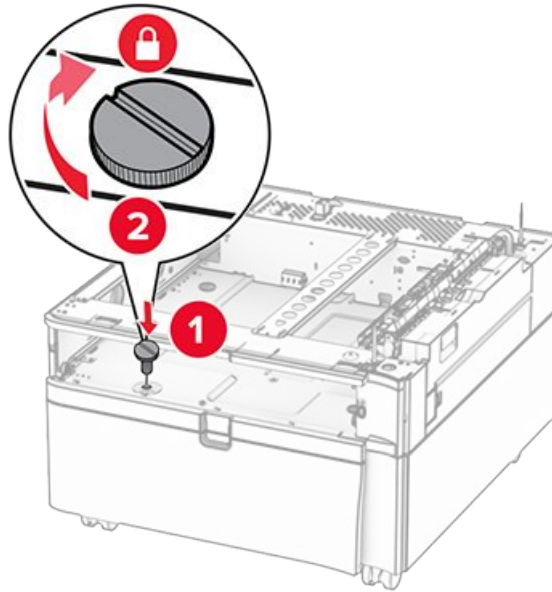

9. Insert the tray insert.
10. Secure the rear part of the tray to the cabinet.

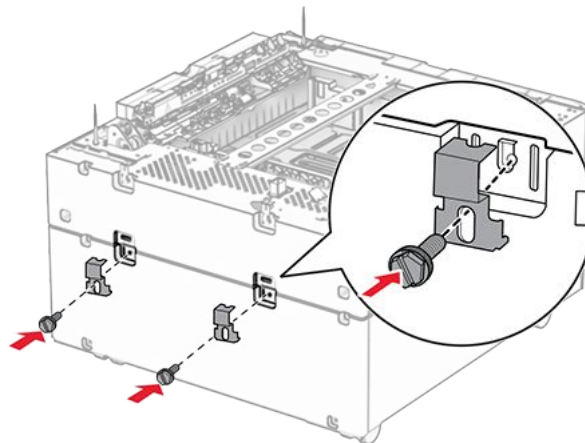

11. Remove the cover under the right side of the printer.

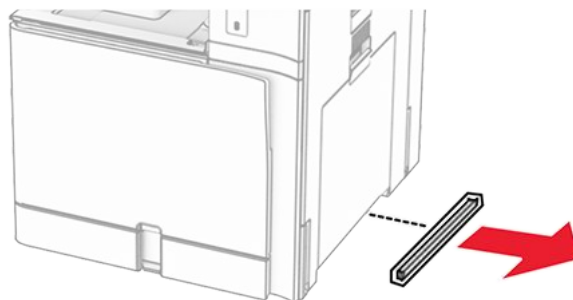


12. Align the printer with the cabinet and the tray, and then lower it into place.




CAUTION—POTENTIAL INJURY


If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.

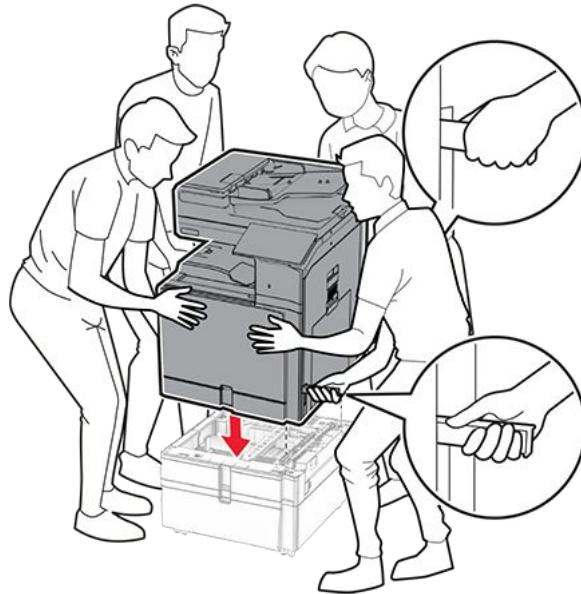

13. Pull out the standard tray insert.
14. Secure the 550-sheet tray to the printer.

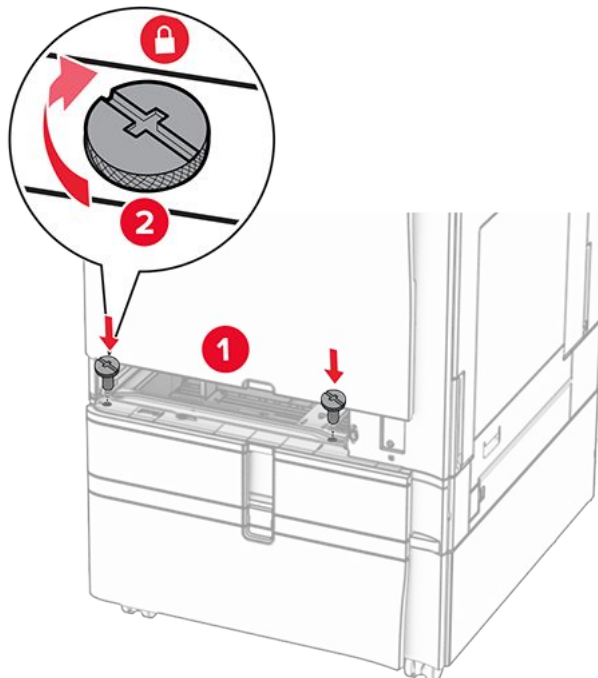

15. Insert the standard tray insert.
16. Secure the rear part of the 550-sheet tray to the printer.

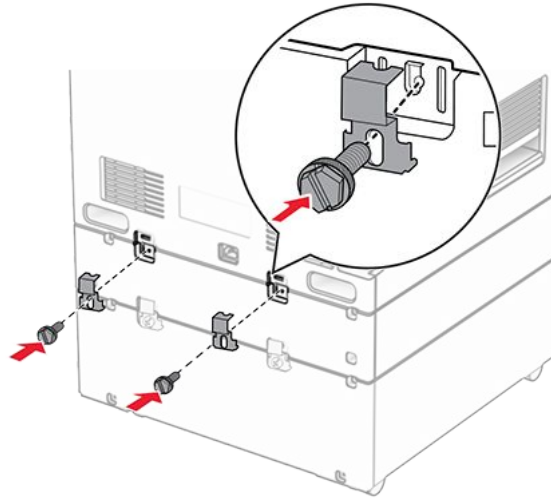

17. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

18. Turn on the printer.

Installing the 1500-sheet tray




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- Before installing this option, make sure that an optional 550-sheet tray and either of the 2 x 500-sheet tray or 2000-sheet tandem tray are already installed.
- This task requires a flat-head screwdriver.

1. Turn off the printer.

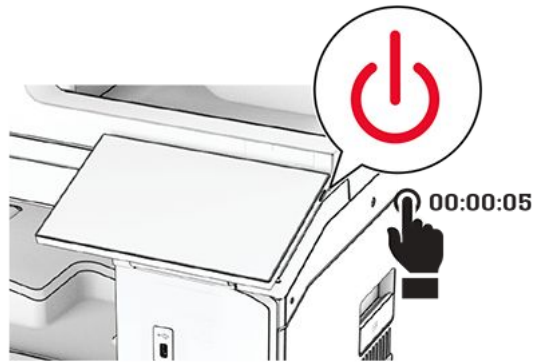


2. Unplug the power cord from the electrical outlet, and then from the printer.

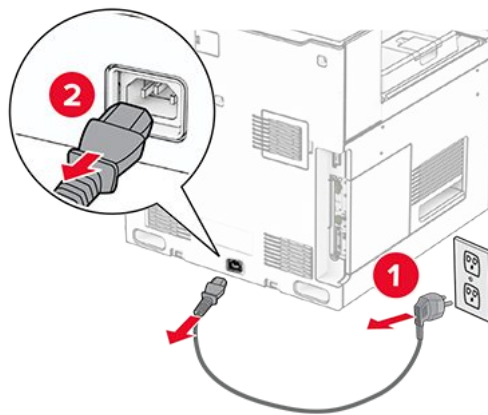


3. Remove the connection cover.

Note: Do not throw away the cover.

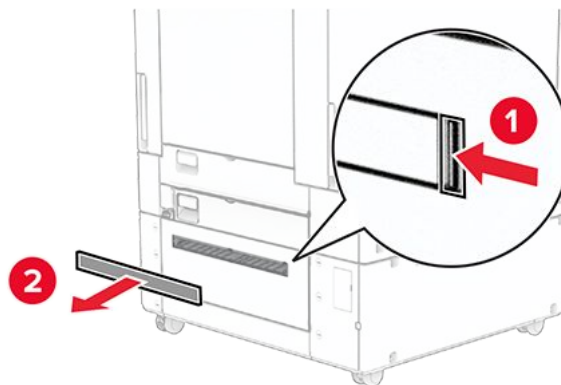


4. Remove the port cover.

Note: Do not throw away the cover.

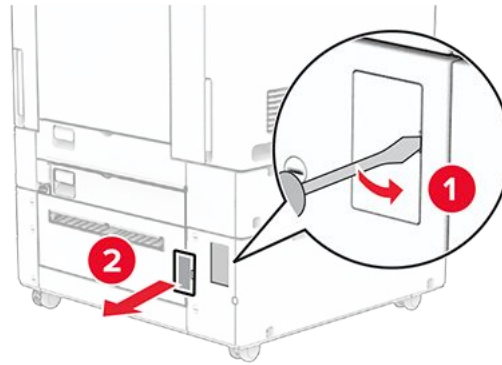


5. Remove the screw caps from the printer.

Note: Do not throw away the screw caps.

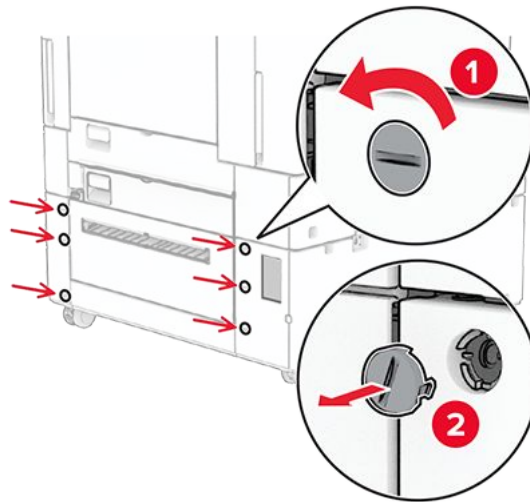


6. Unpack the 1500-sheet tray.
7. Install the screws for the mounting bracket.

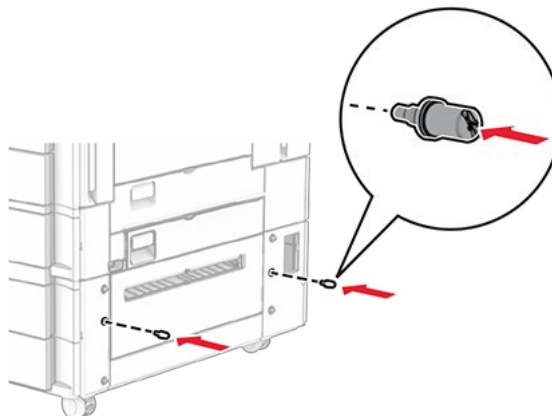


8. Attach the mounting bracket to the printer.


Note: Use the mounting bracket and screws that came with the 1500-sheet tray.

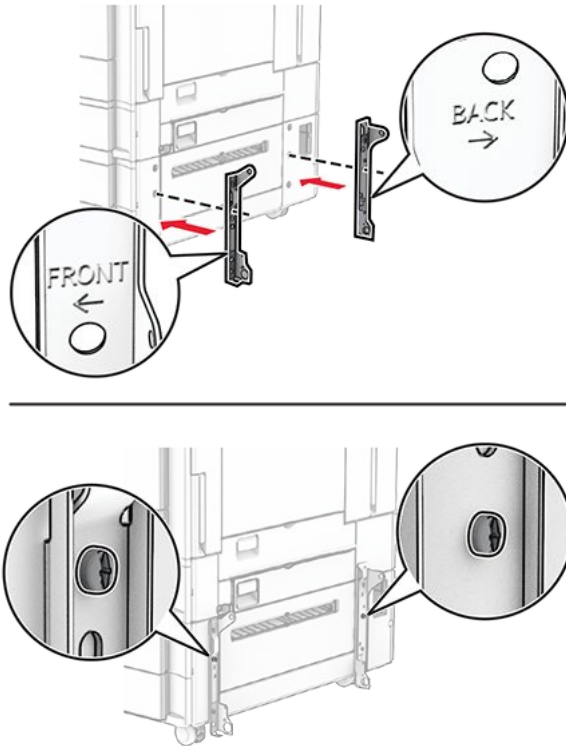



9. Install the remaining screws.

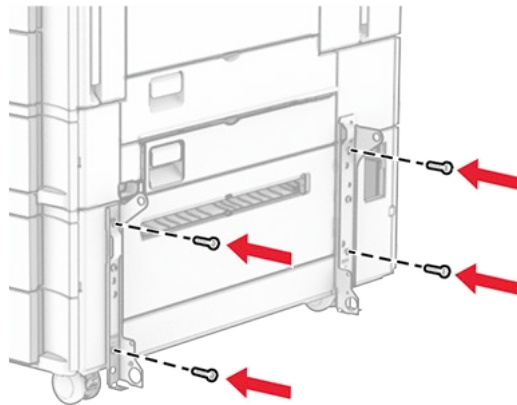



10. Install the 1500-sheet tray.

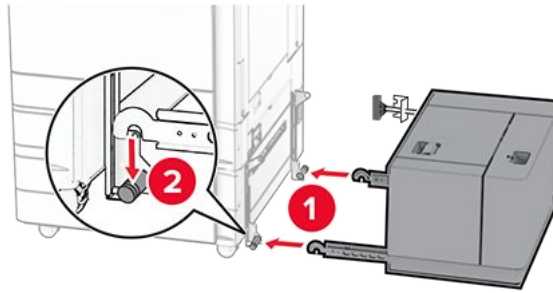


11. Connect the tray cable to the printer.

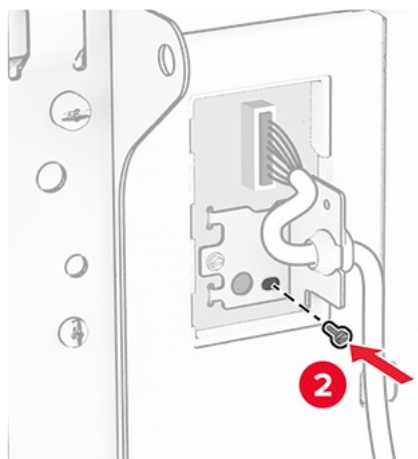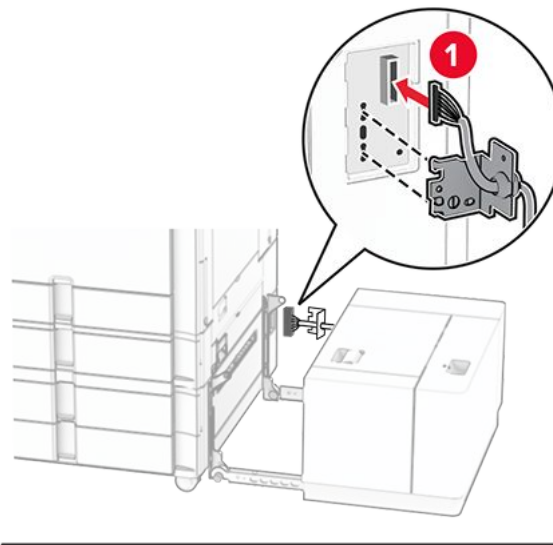

12. Attach the tray cable cover.

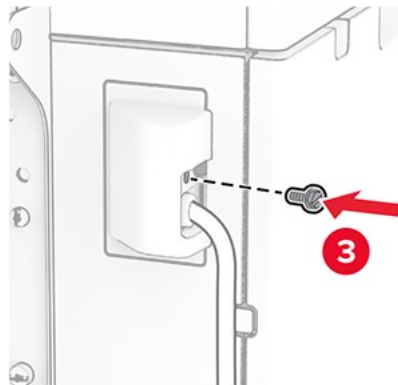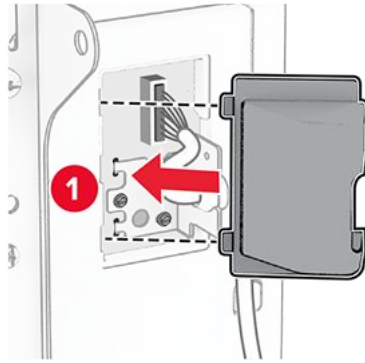

13. Slide the 1500-sheet tray toward the printer.

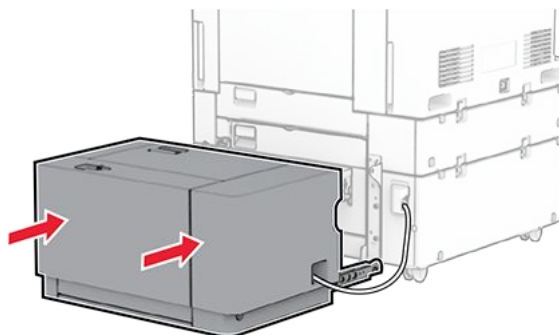

14. Connect one end of the printer power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

15. Turn on the printer.

Add the tray in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the staple finisher




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

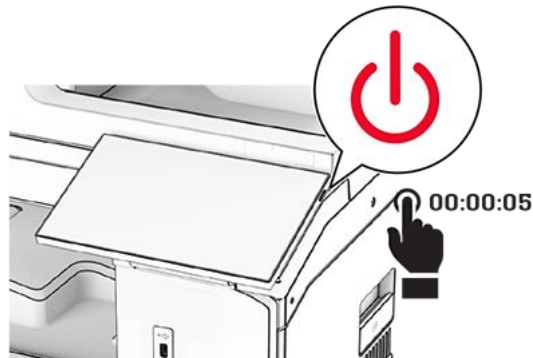


2. Unplug the power cord from the electrical outlet, and then from the printer.

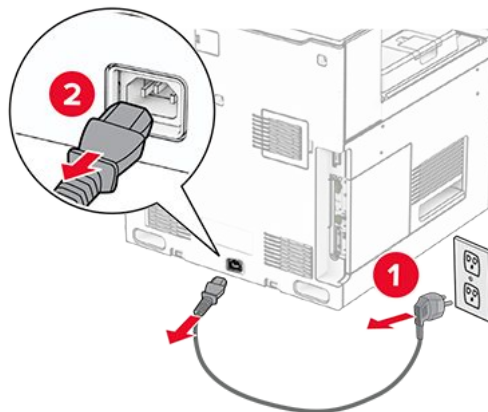


Set up, install, and configure

3. Unpack the staple finisher, and then remove all the packing material.
4. Install the feed guide.

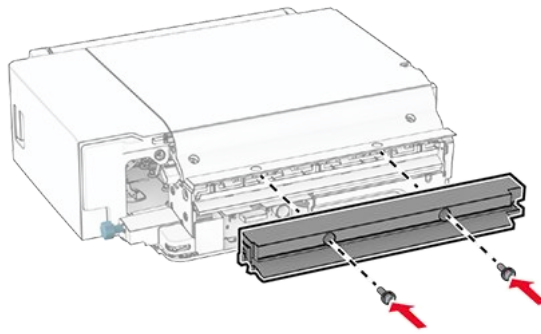


5. Remove the standard bin.

Note: Do not throw away the bin.

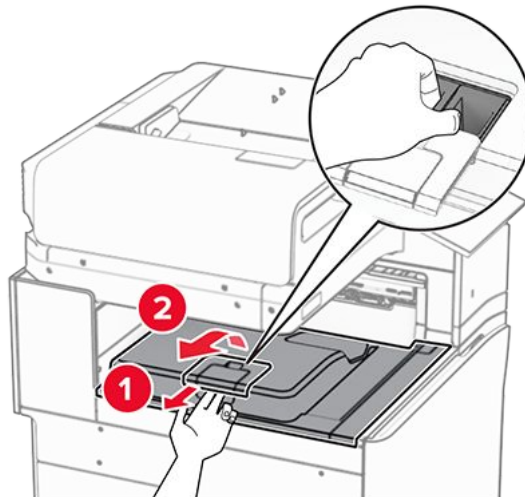


6. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

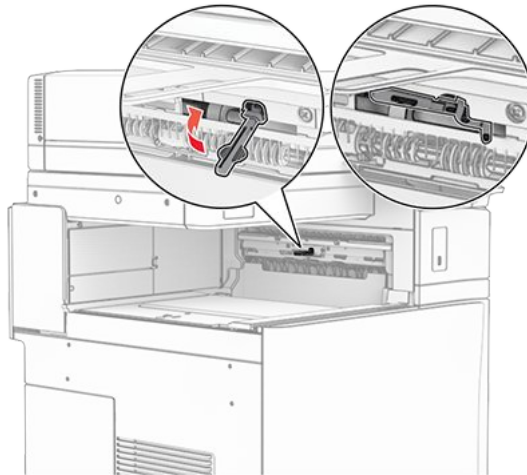


7. Remove the backup roller.


Note: Do not throw away the roller.

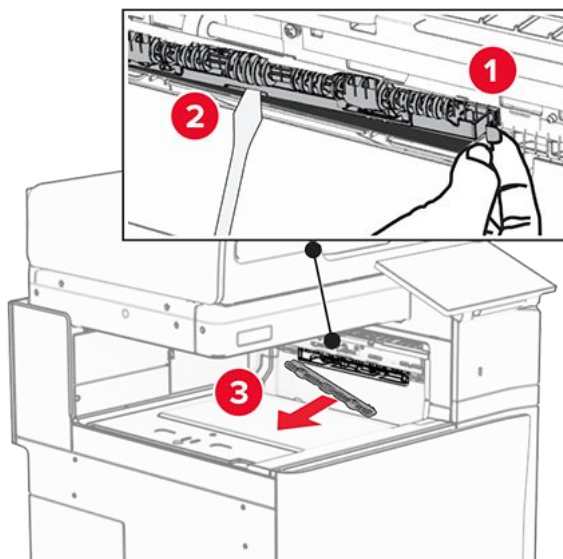


8. Insert the feed roller that came with the staple finisher until it clicks into place.

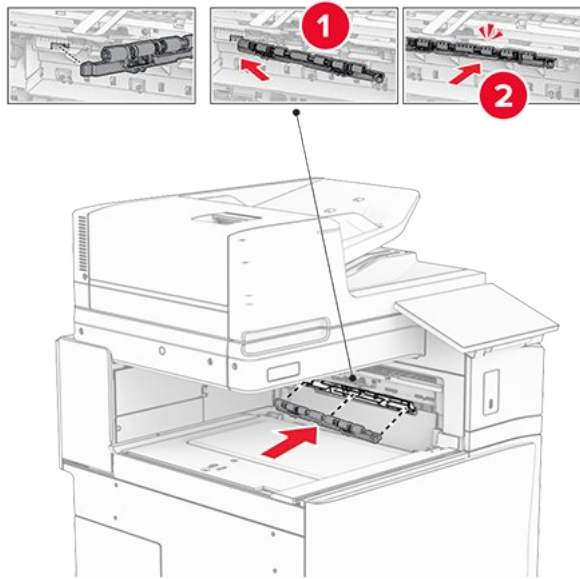

Note: Make sure that the metal spring is in front of the feed roller.

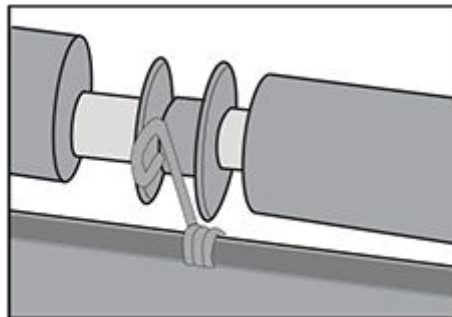


9. Attach the roller cover until it clicks into place.

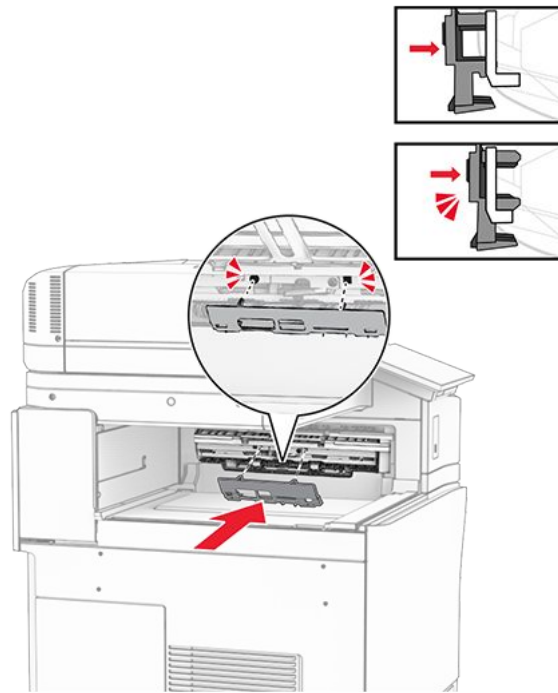


10. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

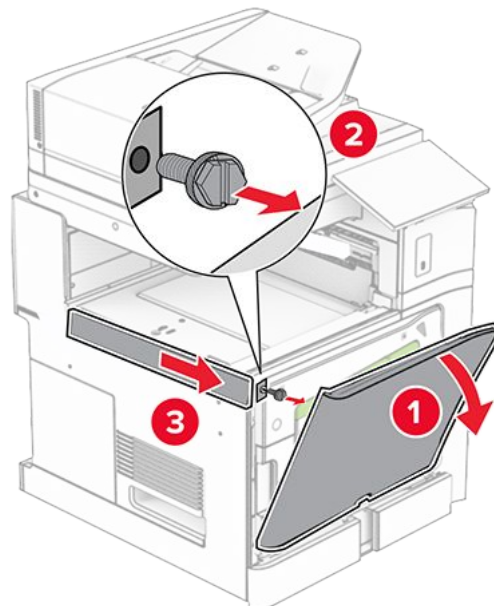


11. Remove the left rear cover.

Note: Do not throw away the screw and cover.

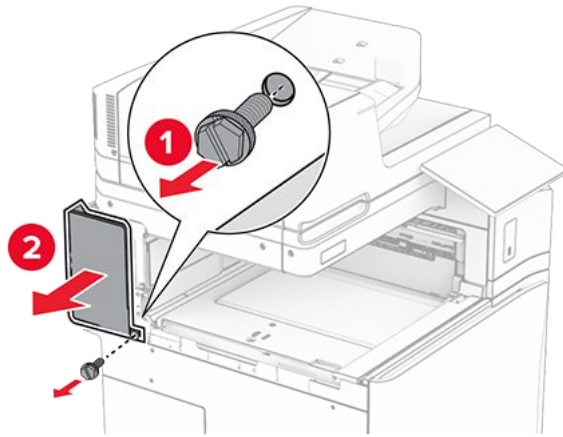


12. Remove the inner bin cover.


Note: Do not throw away the cover.

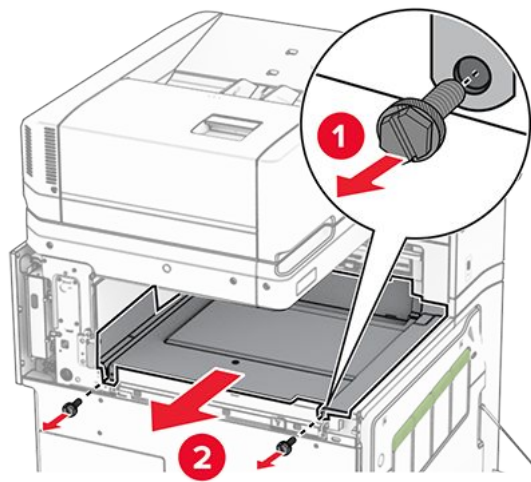



13. Align, and then insert the inner bin cover that came with the staple finisher.

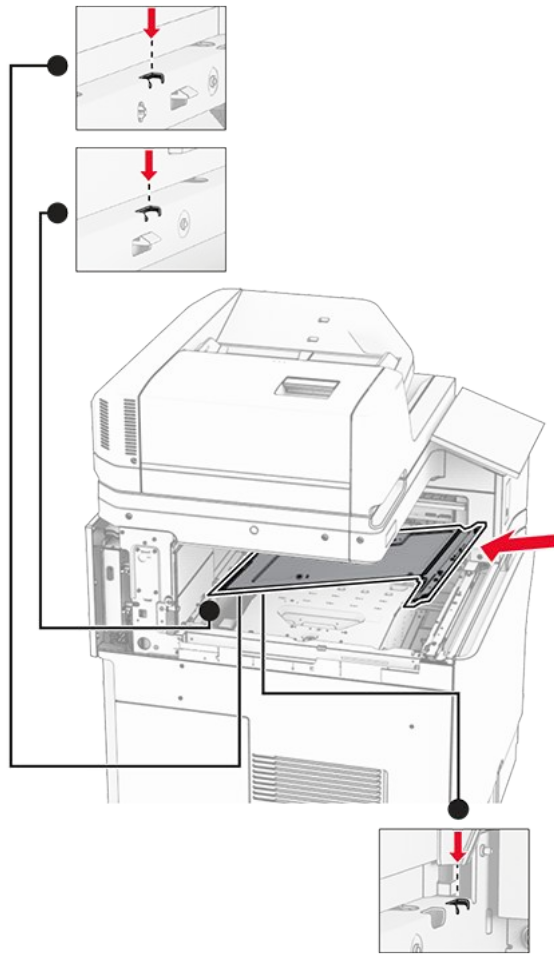


14. Install the screws to the inner bin cover.

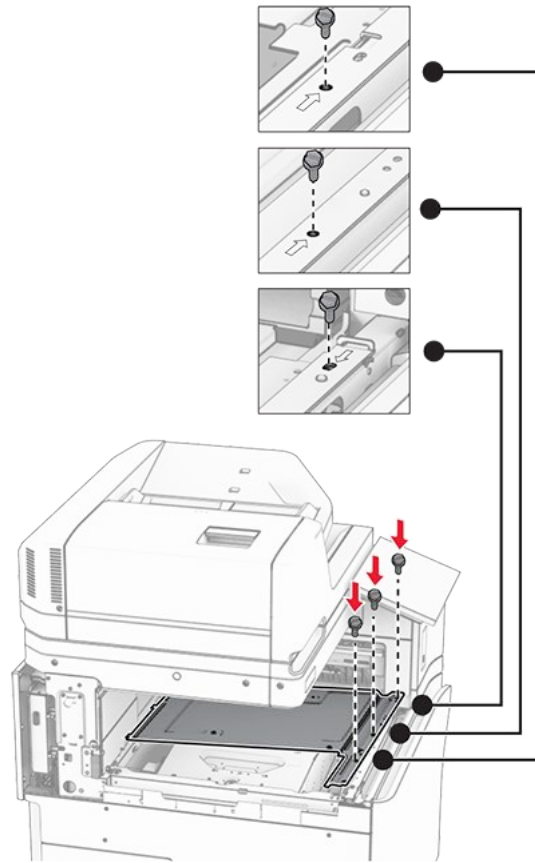

15. Attach the staple finisher slider.

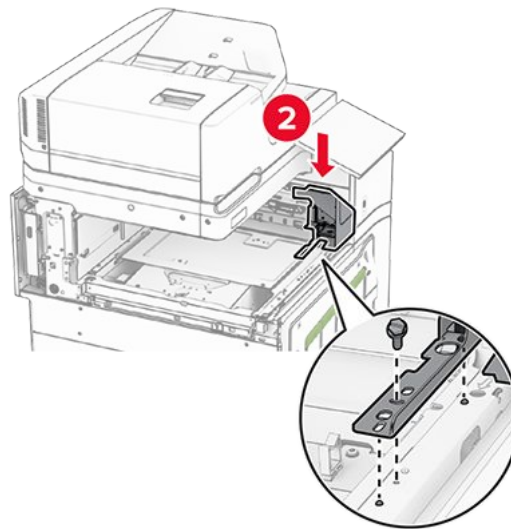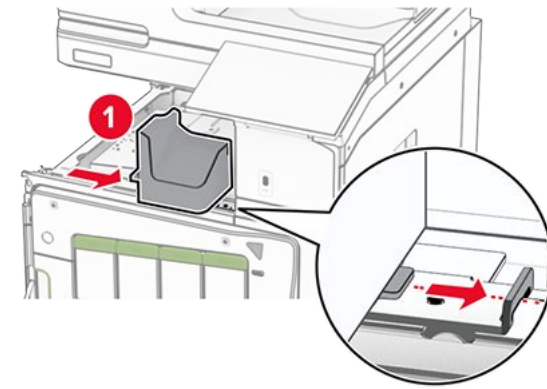


16. Insert the staple finisher.

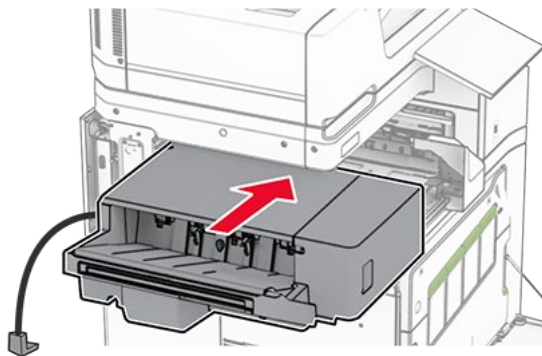


17. Install the mounting bracket to secure the finisher to the printer.


Note: Use the screw that came with the finisher.

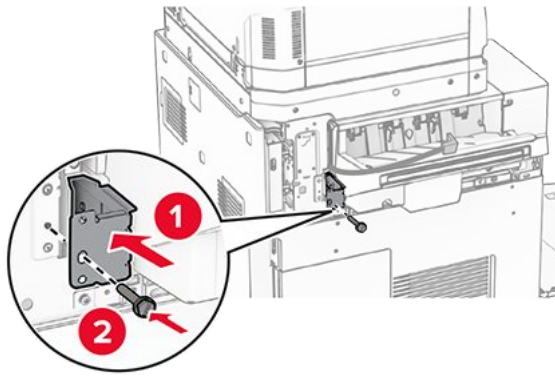


18. Attach the left rear cover, and then slide the staple finisher to the left.

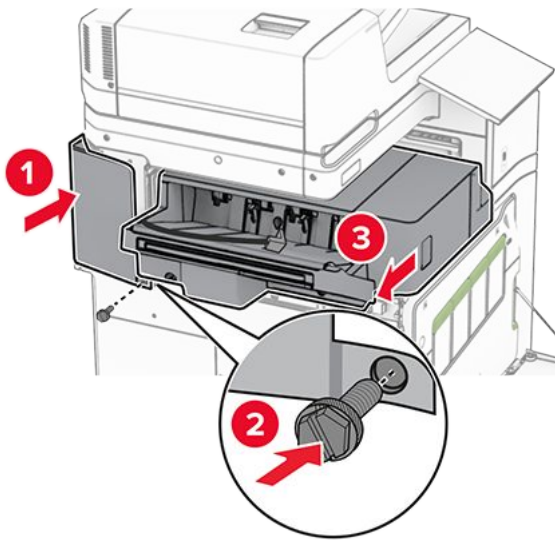


19. Attach the left upper trim cover that came with the finisher.

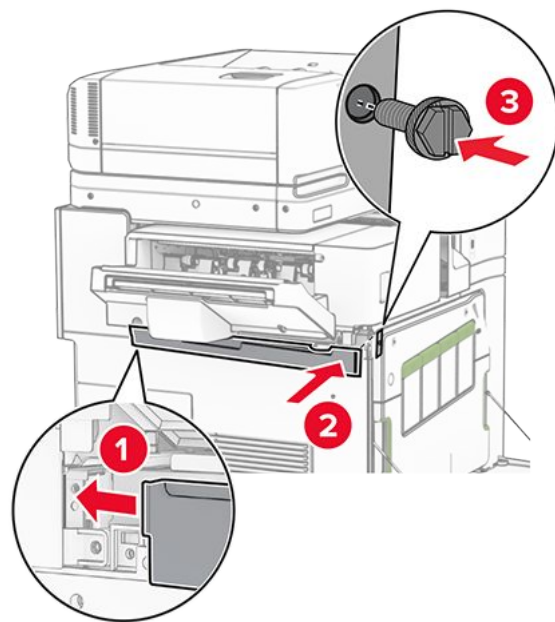


20. Insert the staple cartridge into the finisher until it clicks into place.

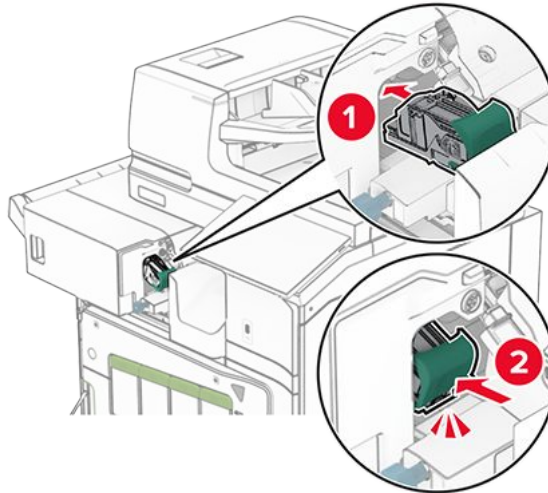

21. Close the front door, and then slide the finisher toward the printer.

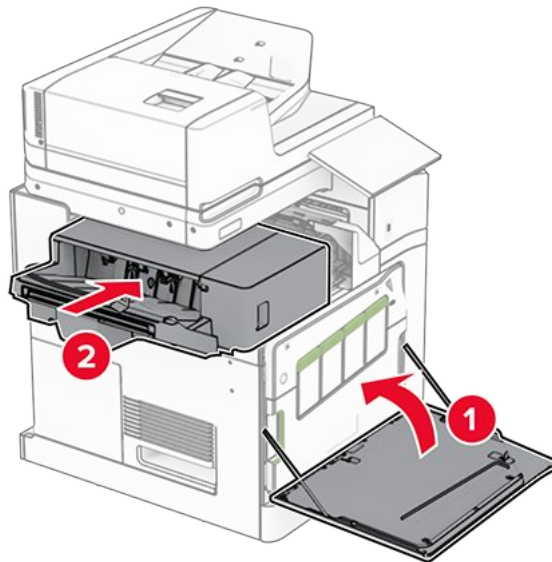

22. Connect the option cable to the printer.

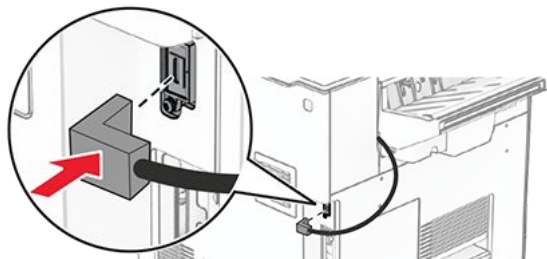

23. Connect one end of the printer power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

24. Turn on the printer.

Add the finisher in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the hole punch kit




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- These instructions apply only when the staple finisher is already installed. If the staple finisher is not yet installed, then see [Installing the staple finisher and hole punch kit on page 183](#).
- This task requires a flat-head screwdriver.


1. Turn off the printer.

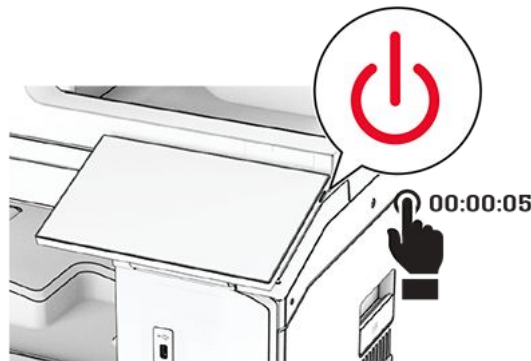


2. Unplug the power cord from the electrical outlet, and then from the printer.

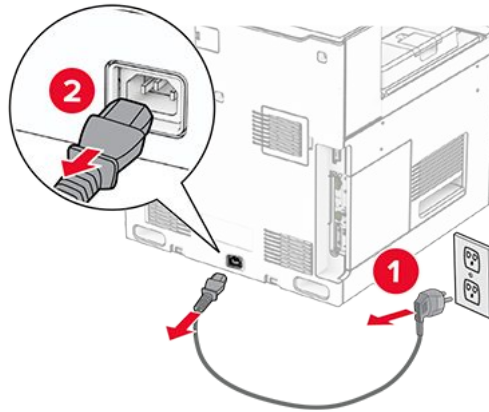

3. Disconnect the option cable from the printer.

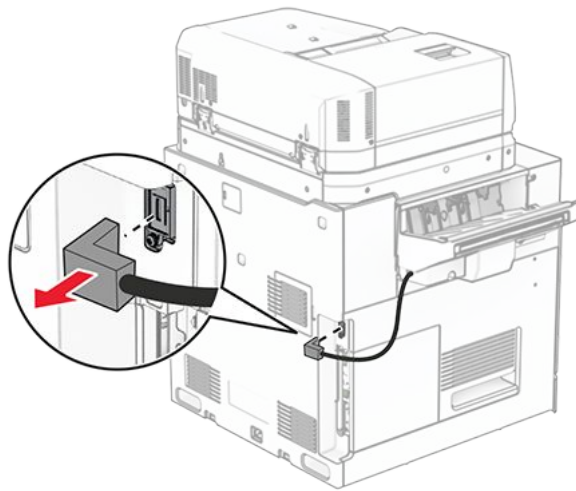


4. Unpack the hole punch kit, and then remove all the packing material.
5. Open the front door, and then slide the staple finisher to the left.

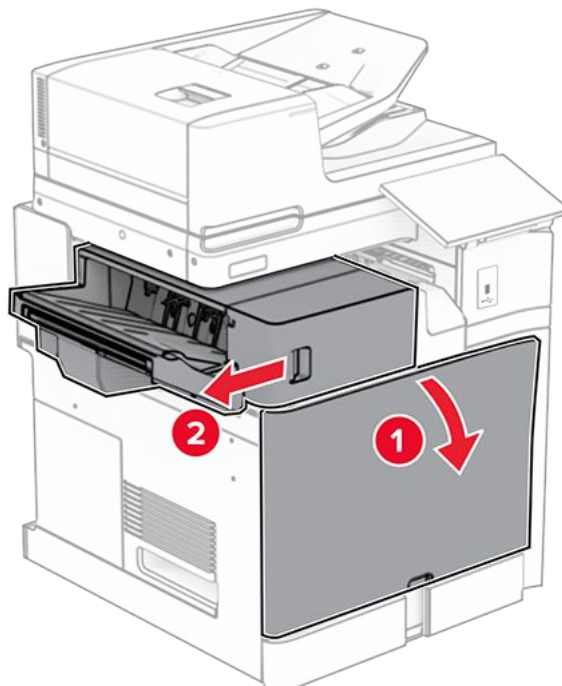

Set up, install, and configure


6. Remove the upper left trim cover.

Note: Do not throw away the cover.

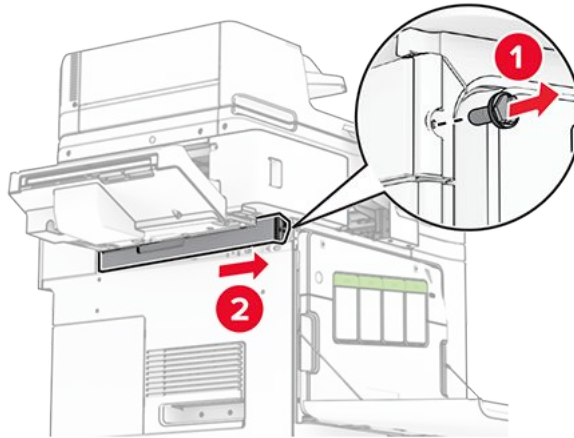


7. Remove the left rear cover.

Note: Do not throw away the cover.

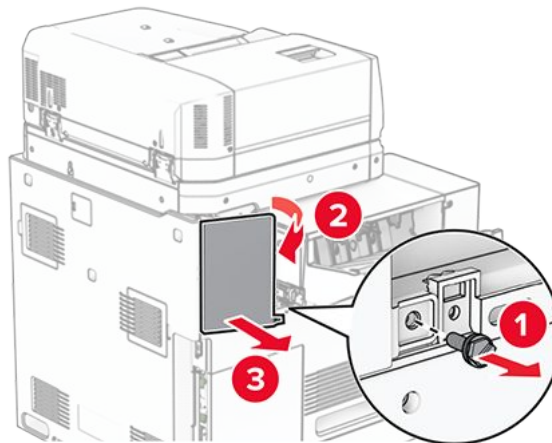


8. Remove the screw from the mounting bracket of the staple finisher.

Note: Do not throw away the screw.

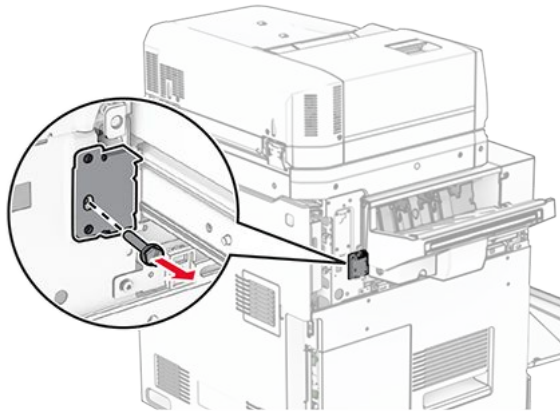


9. Remove the staple finisher.

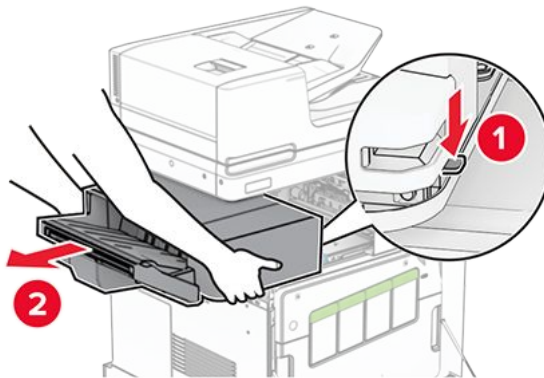


10. Remove the paper transport connector cover and staple finisher cover.

Note: Do not throw away the covers.

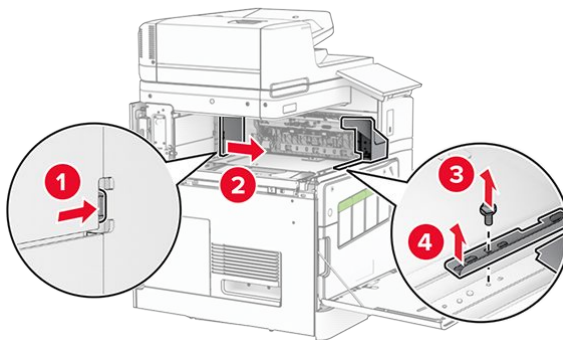


11. Remove the slider and inner bin cover.


Note: Do not throw away the slider and cover.

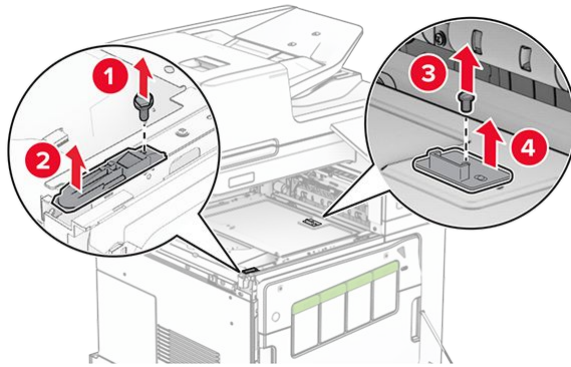


12. Attach the slider that came with the hole punch kit to the inner bin cover.

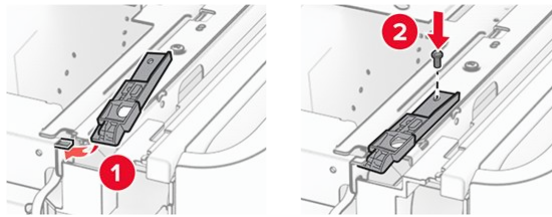


13. Using tweezers, remove the static brush fibers in front of the third feed roller.

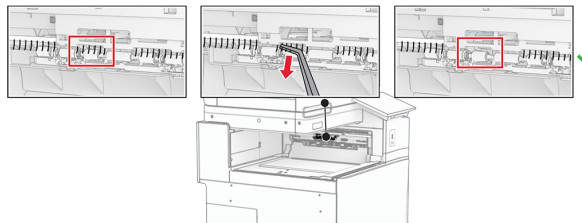


14. Align, and then insert the hole punch kit.

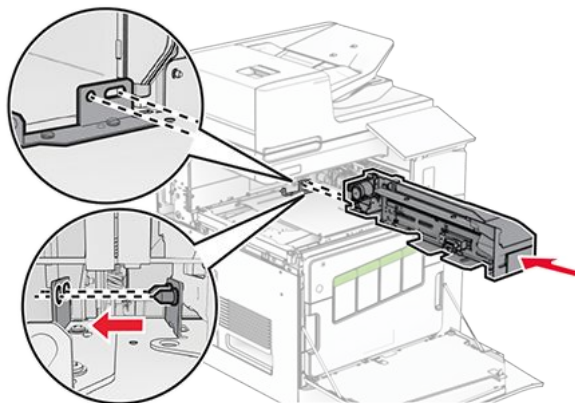


15. Slide the hole punch kit to the left, and then tilt the control panel forward.

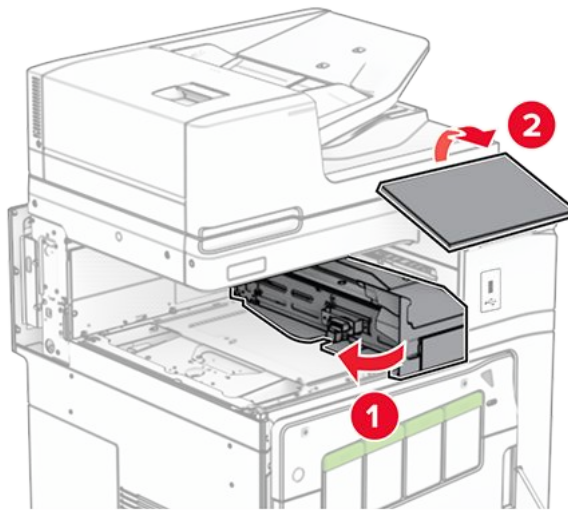


16. Attach the screw to the hole punch kit.

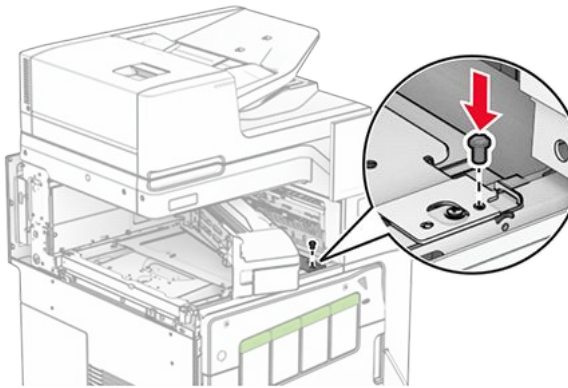


17. Return the control panel to its original position, and then slide the hole punch kit to the right.

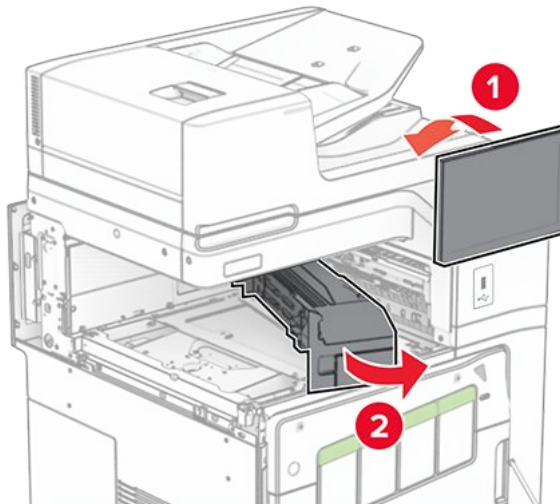


18. Open the hole punch kit.

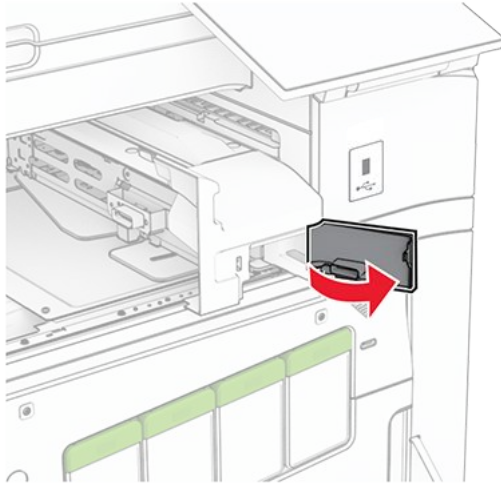


19. Insert the hole punch box.

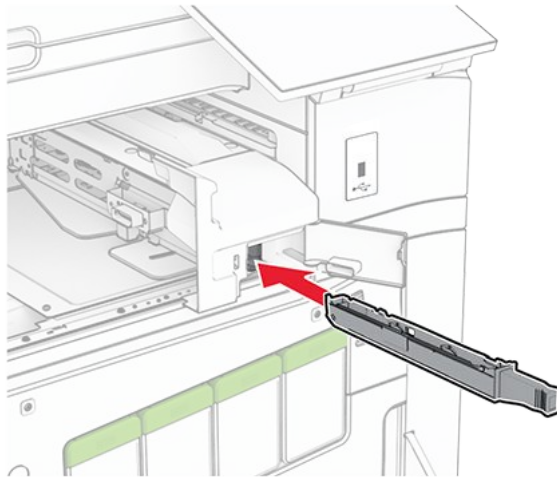


20. Close the hole punch kit.

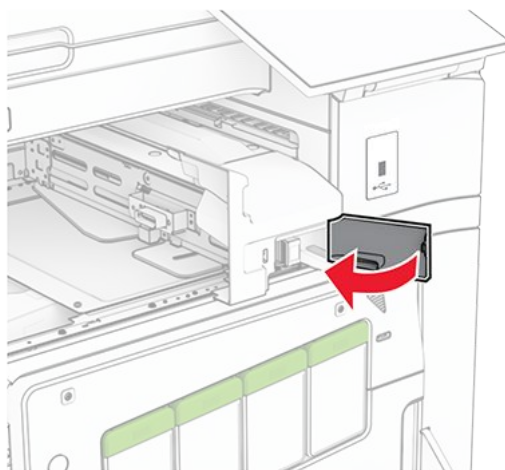

21. Remove the feed guide, and then adjust the mounting bracket of the staple finisher.

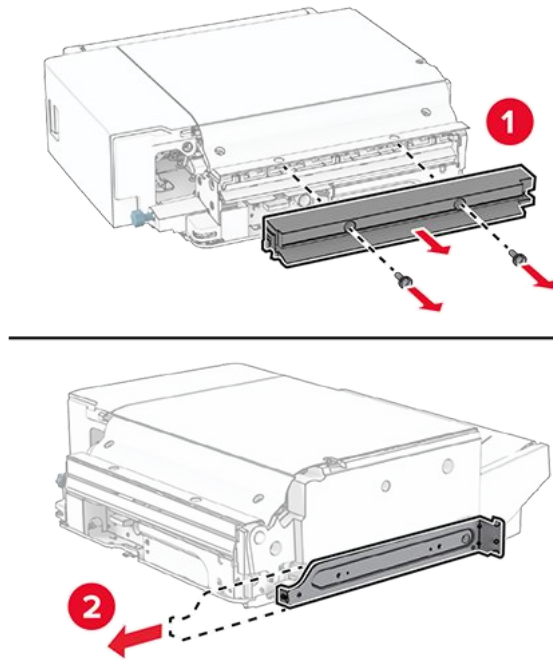


22. Align, and then insert the staple finisher.

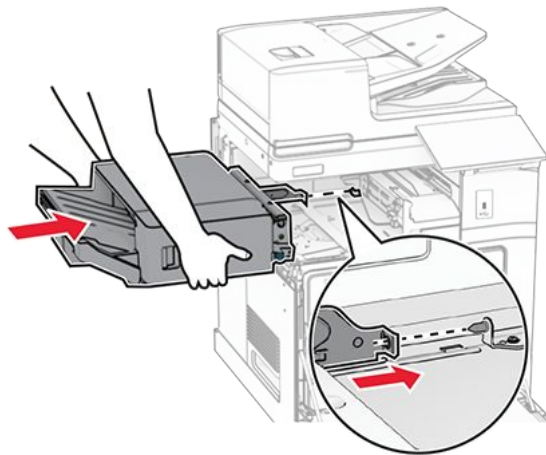


23. Install a screw to the mounting bracket to secure the finisher to the printer.


Note: Use the screw that came with the finisher.

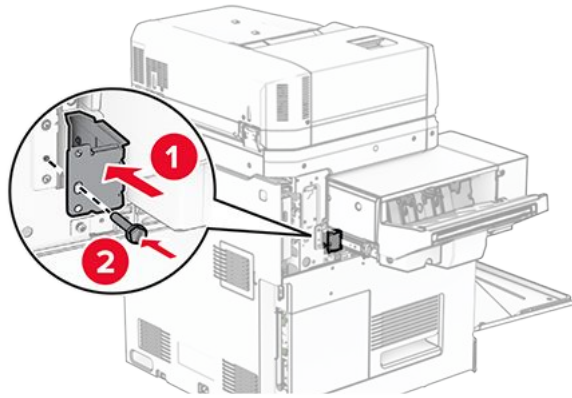


24. Attach a cover into the slider of the staple finisher.

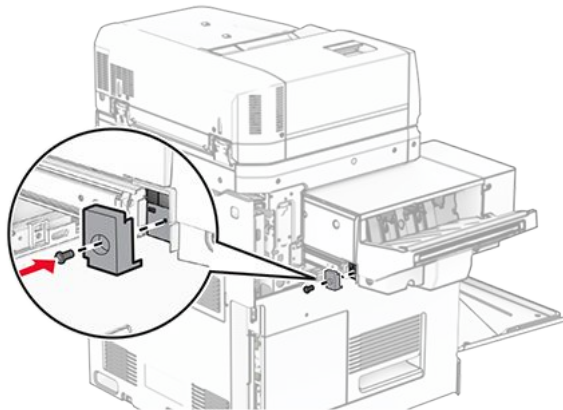

25. Attach a cover under the staple finisher.

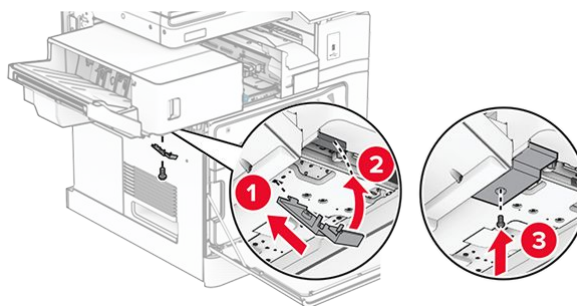


26. Attach the left rear cover.

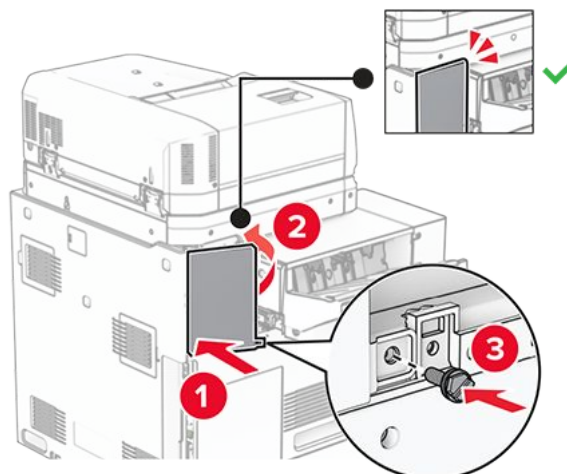


Set up, install, and configure


27. Attach the left upper trim cover that came with the finisher.

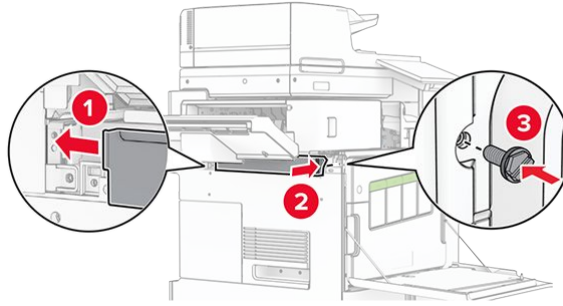

28. Slide the finisher toward the printer, and then close the front door.

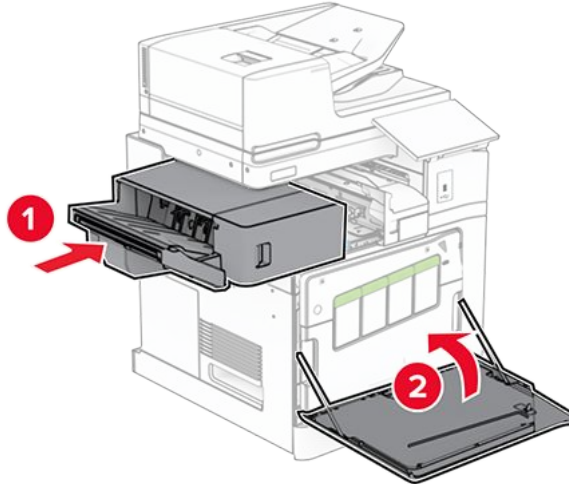

29. Connect the option cable to the printer.

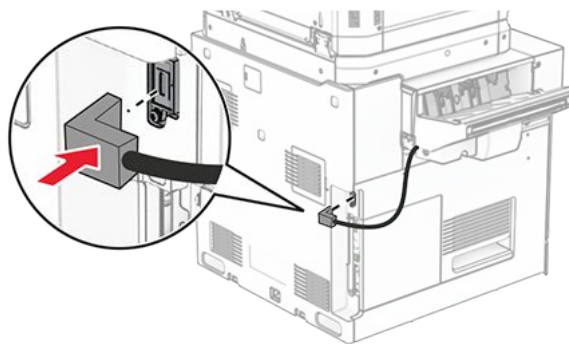

30. Connect one end of the printer power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

31. Turn on the printer.

Add the finisher in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the staple finisher and hole punch kit




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- These instructions apply only when the staple finisher is not yet installed. If the staple finisher is already installed, then see [Installing the hole punch kit on page 173](#)
- This task requires a flat-head screwdriver.

1. Turn off the printer.

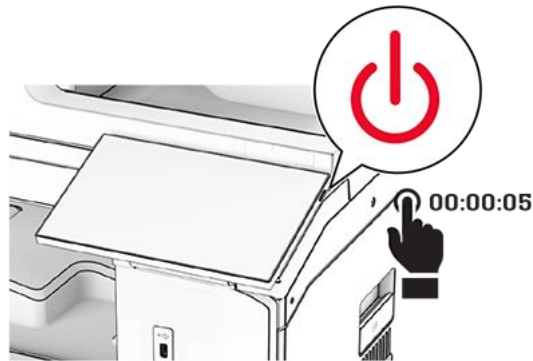


2. Unplug the power cord from the electrical outlet, and then from the printer.

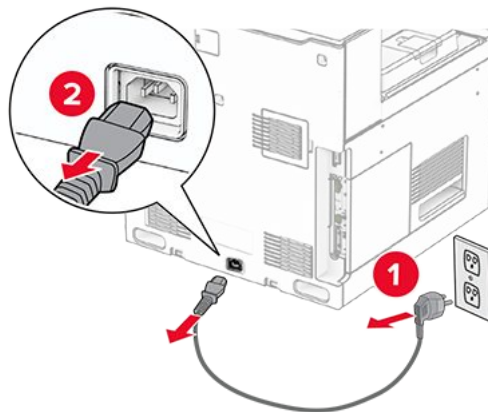


3. Unpack the hole punch kit and staple finisher, and then remove all the packing material.
4. Remove the standard bin.

Note: Do not throw away the bin.

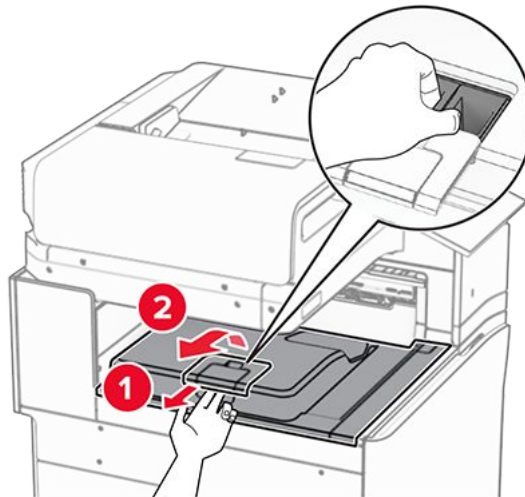


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

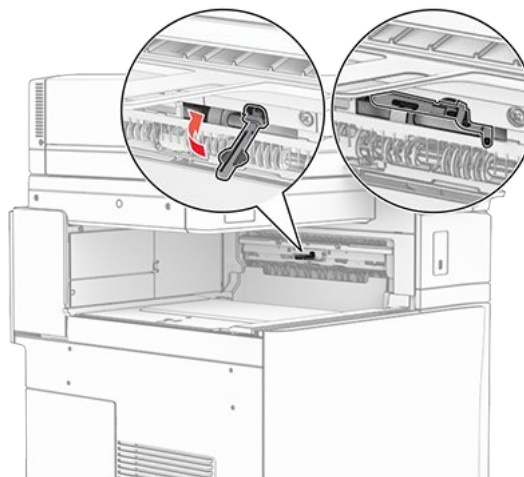


6. Remove the backup roller.


Note: Do not throw away the roller.

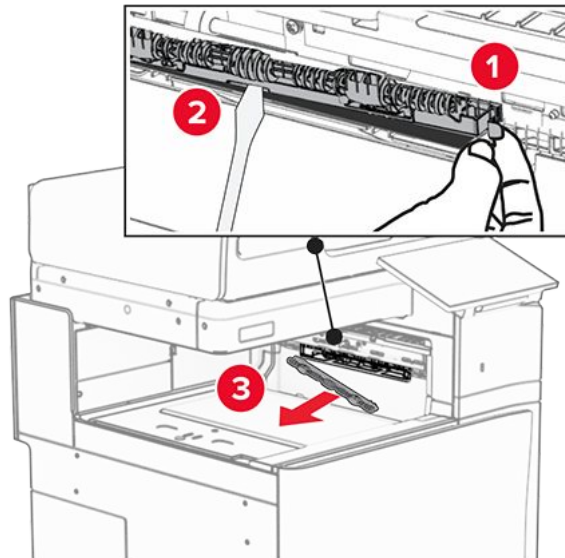


7. Insert the feed roller that came with the staple finisher until it clicks into place.

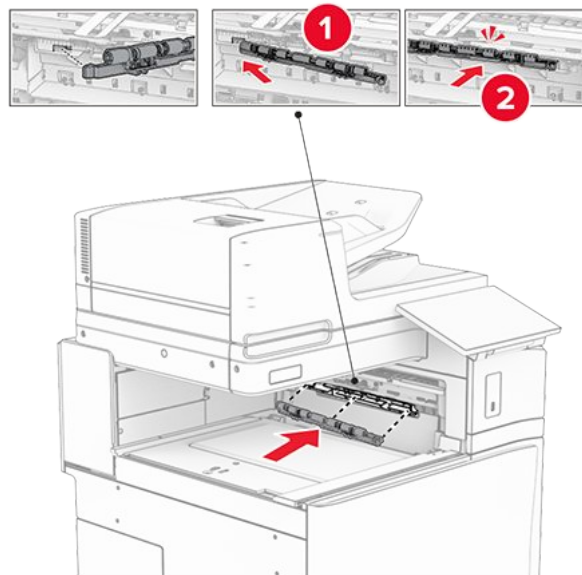


Note: Make sure that the metal spring is in front of the feed roller.

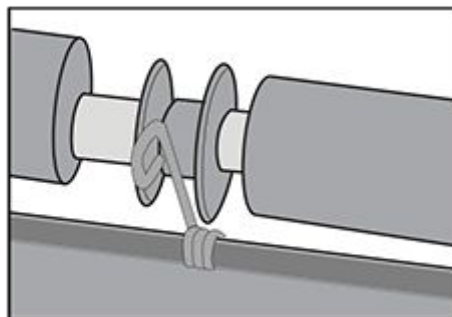

8. Attach the roller cover until it clicks into place.

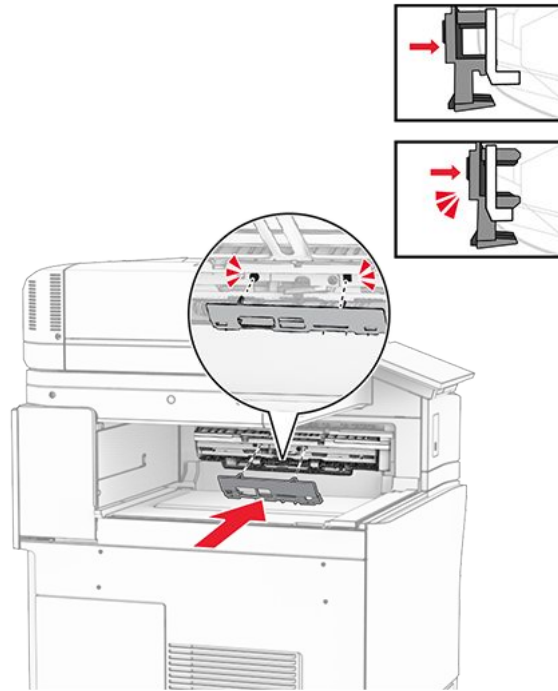


9. Using tweezers, remove the static brush fibers in front of the third feed roller.

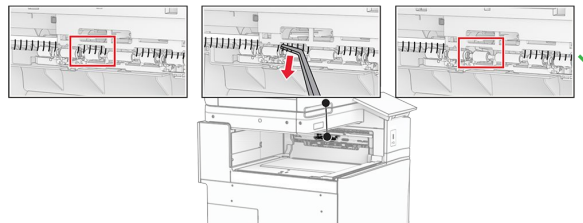


10. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

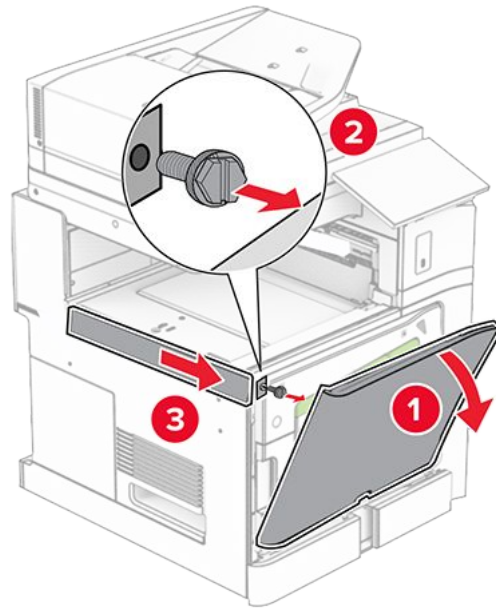


11. Remove the left rear cover.

Note: Do not throw away the screw and cover.

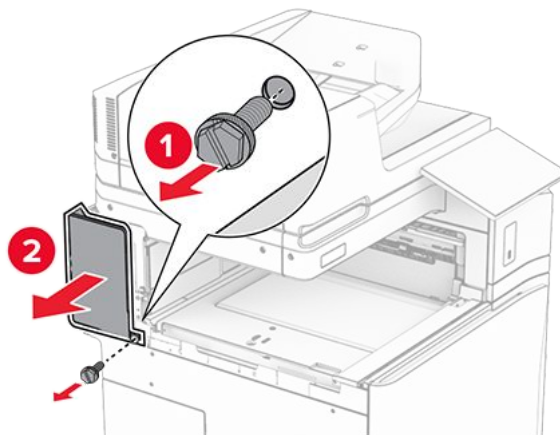


12. Remove the paper transport connector cover.

Note: Do not throw away the cover.

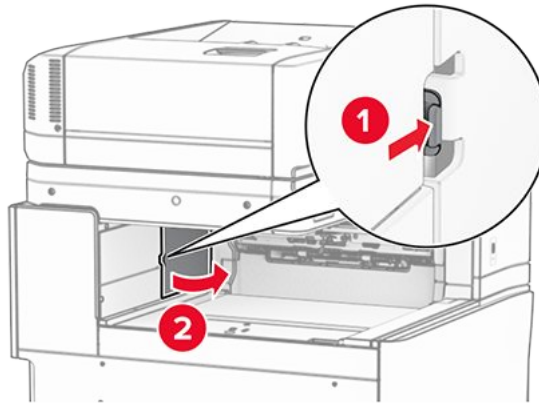


13. Remove the inner bin cover.

Note: Do not throw away the cover.

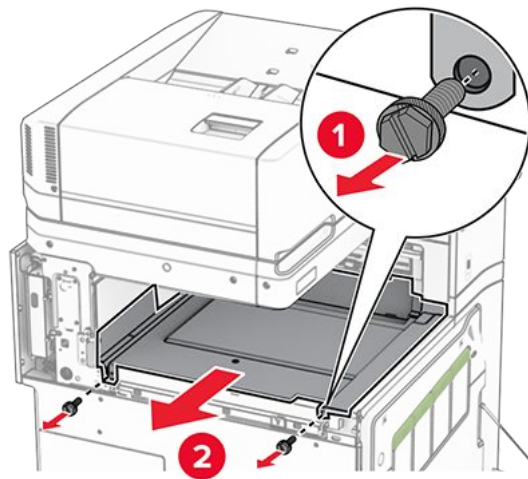


14. Remove the cover and slider from the inner bin cover that came with the staple finisher.

Note: Do not throw away the cover and slider.

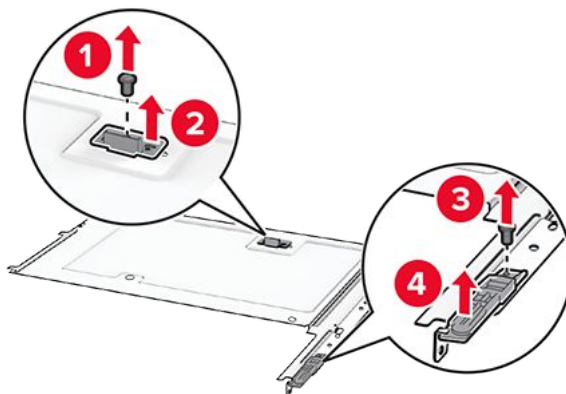


Set up, install, and configure


15. Attach the slider that came with the hole punch kit to the inner bin cover that came with the staple finisher.

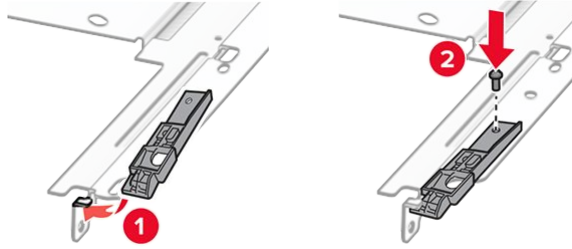


16. Align, and then insert the inner bin cover that came with the staple finisher.

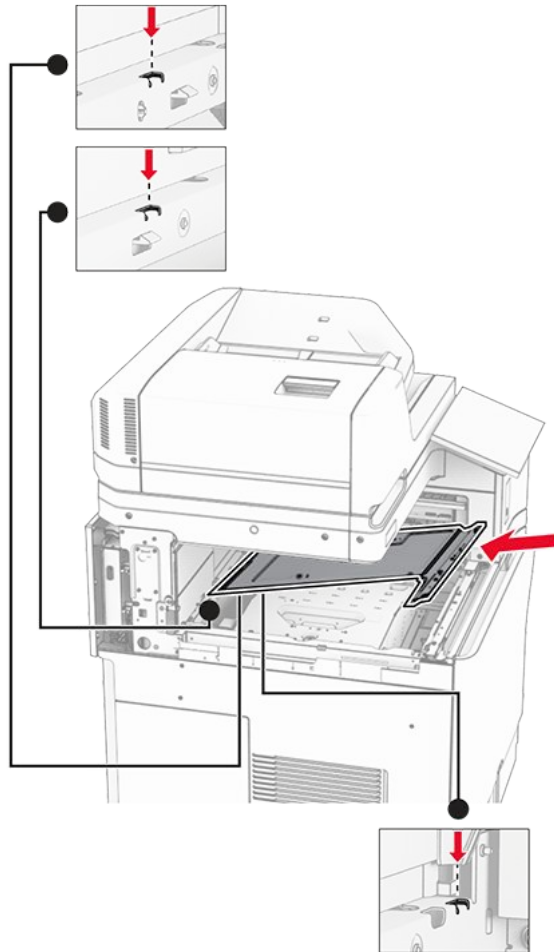


17. Install the screws to the inner bin cover.

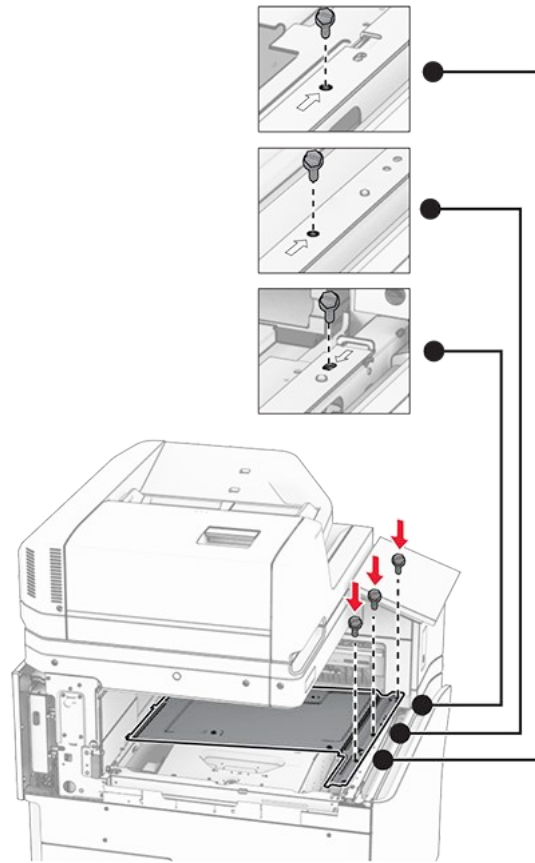


18. Align, and then insert the hole punch kit.

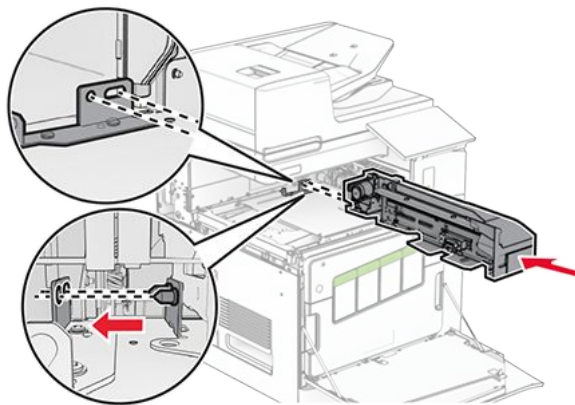


19. Slide the hole punch kit to the left, and then tilt the control panel forward.

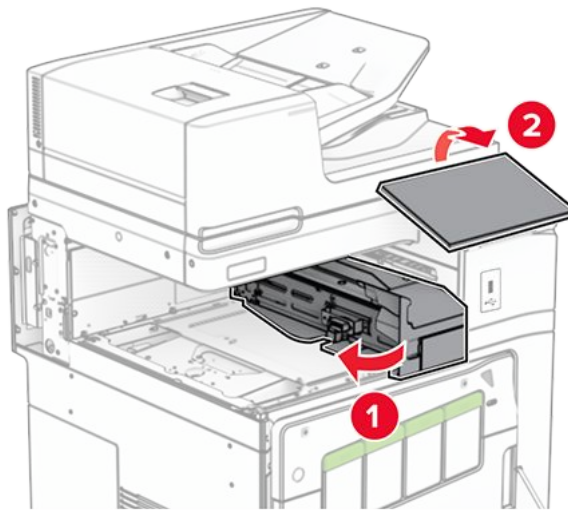


20. Attach the screw to the hole punch kit.

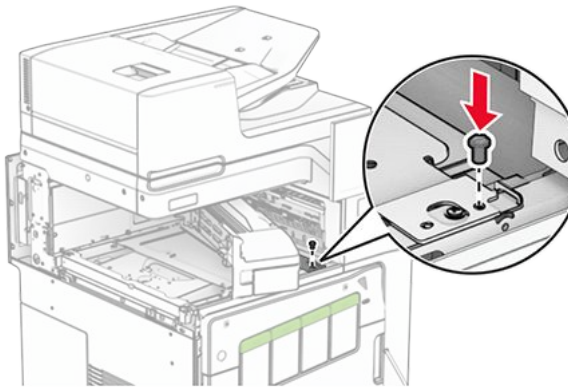


21. Return the control panel to its original position, and then slide the hole punch kit to the right.

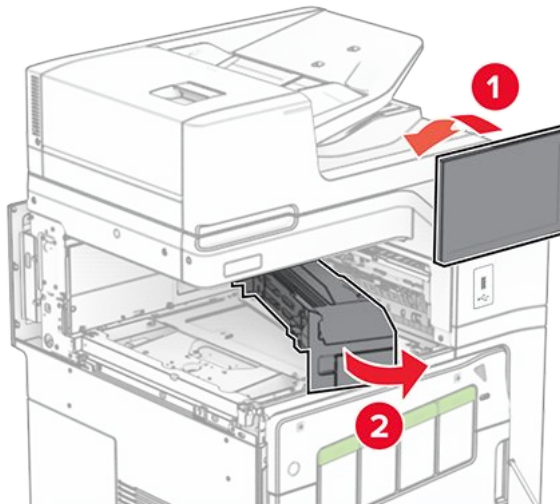


22. Open the hole punch kit.

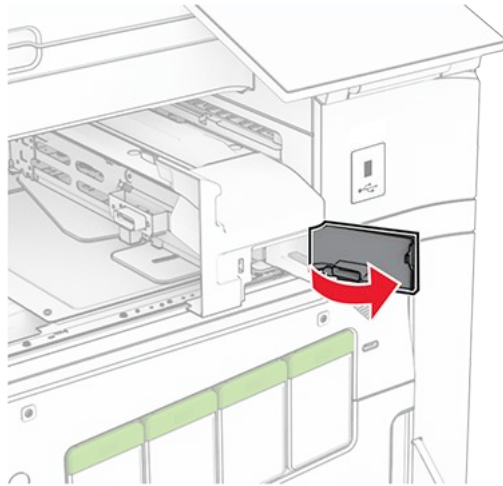


23. Insert the hole punch box.

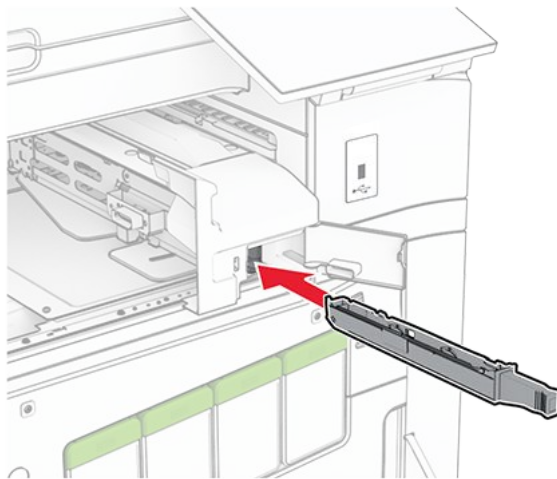


24. Close the hole punch kit.

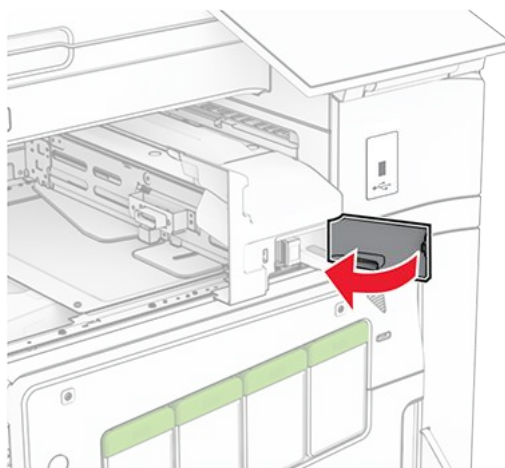

25. Adjust the mounting bracket of the staple finisher.

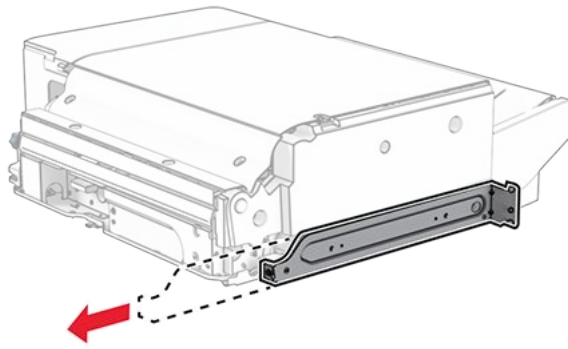


26. Align, and then insert the staple finisher.

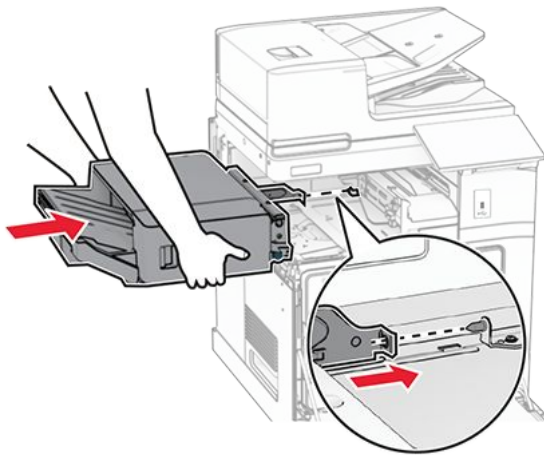


27. Install a screw to the mounting bracket to secure the finisher to the printer.


Note: Use the screw that came with the finisher.

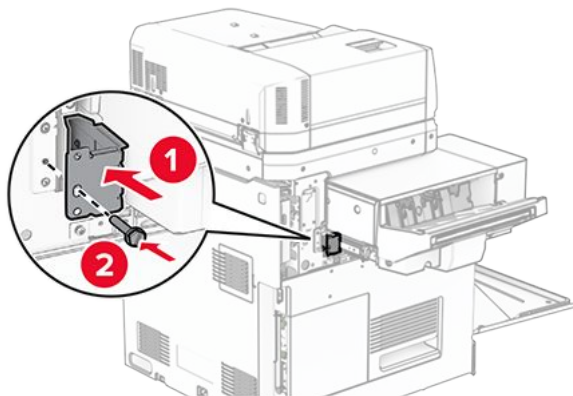


28. Attach a cover into the slider of the staple finisher.

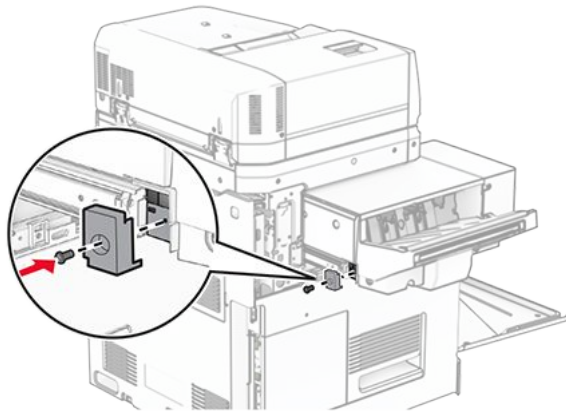


29. Attach a cover under the staple finisher.

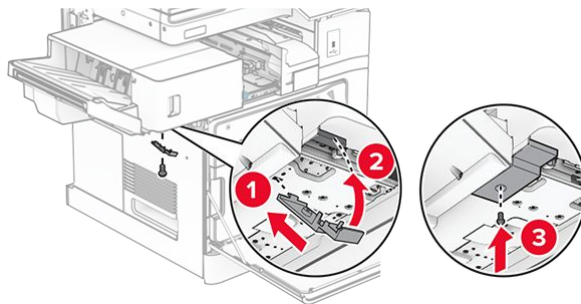


30. Attach the left rear cover.

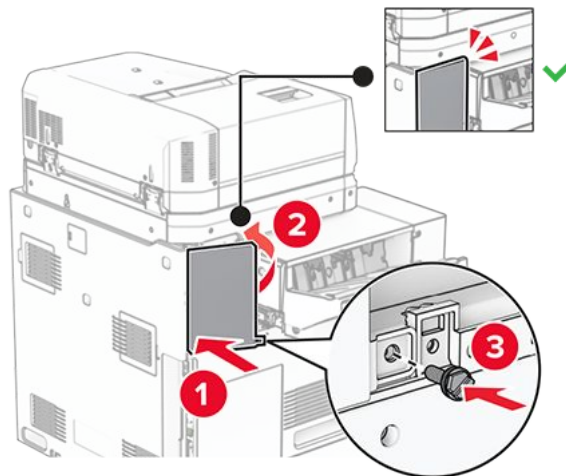

31. Attach the left upper trim cover that came with the finisher.

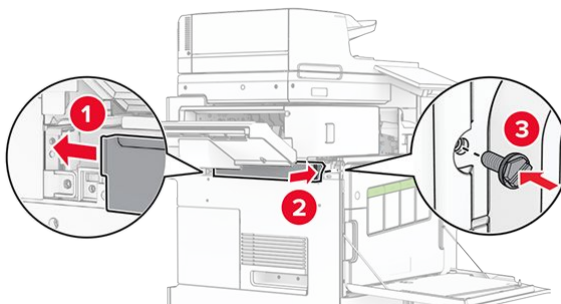

32. Connect the option cable to the printer.

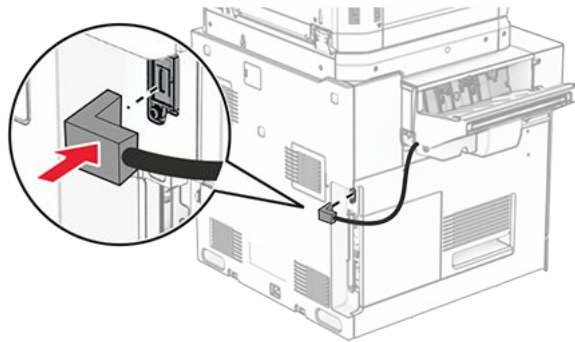


33. Connect one end of the printer power cord to the printer, and then the other end to the electrical outlet.




CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

34. Turn on the printer.
35. Insert the staple cartridge into the finisher until it clicks into place.

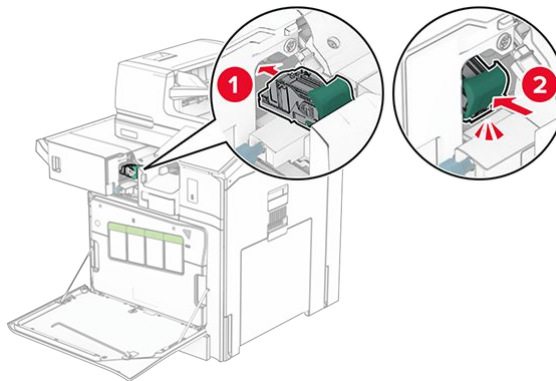

36. Slide the finisher toward the printer, and then close the front door.

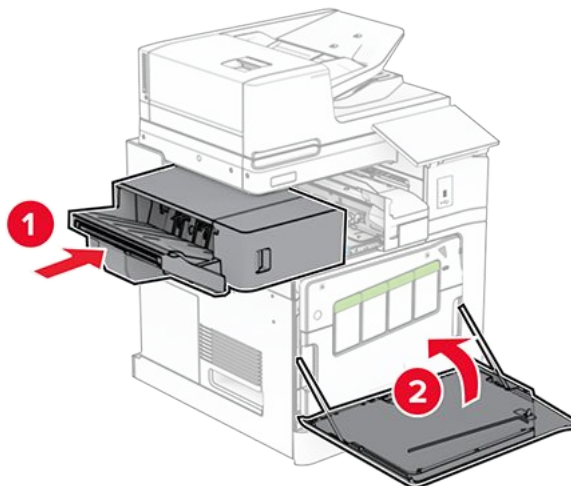

Add the finisher in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).


Installing the offset stacker




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


1. Turn off the printer.

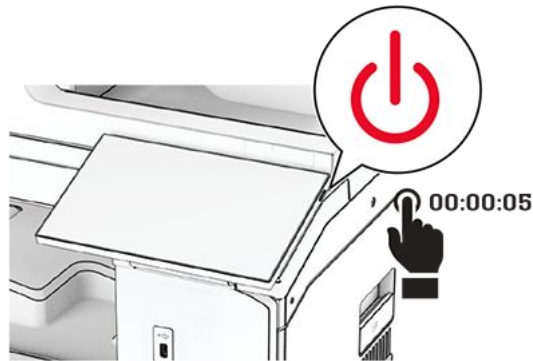

2. Unplug the power cord from the electrical outlet, and then from the printer.

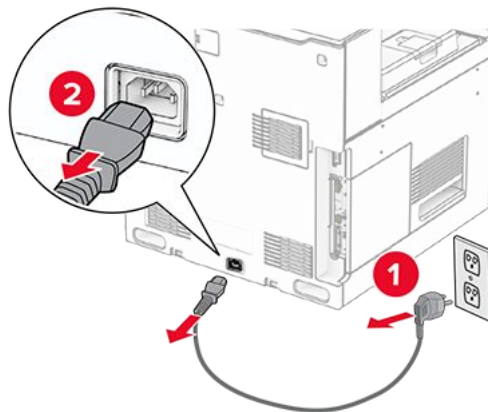


3. Unpack the offset stacker, and then remove all the packing material.
4. Attach the inner rear cover to the offset stacker.

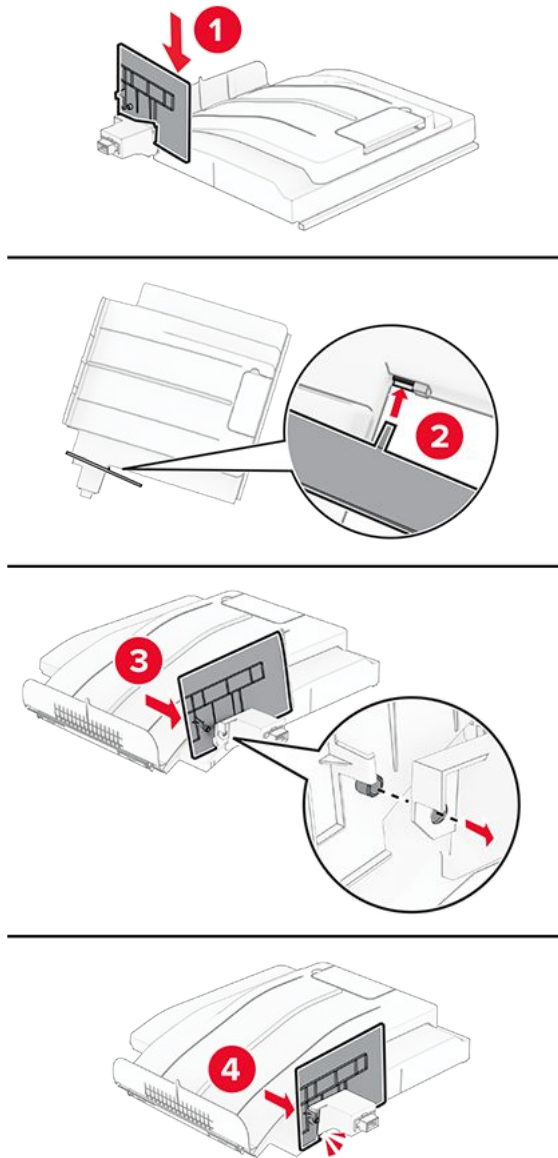


5. Remove the standard bin.

Note: Do not throw away the bin.

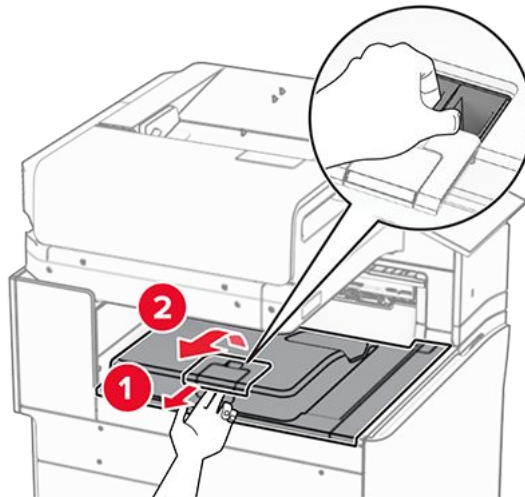


6. Remove the paper transport connector cover.



Note: Do not throw away the cover.

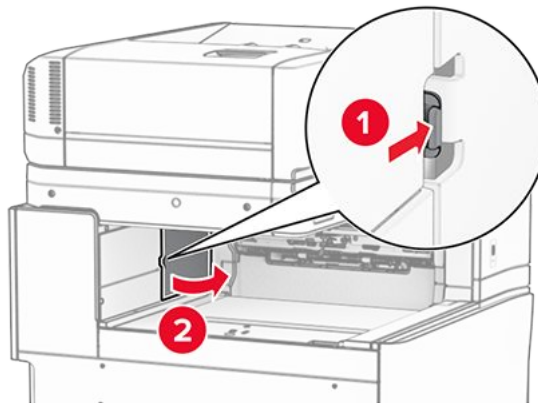


7. Before installing the option, place the exit bin flag into the closed position.

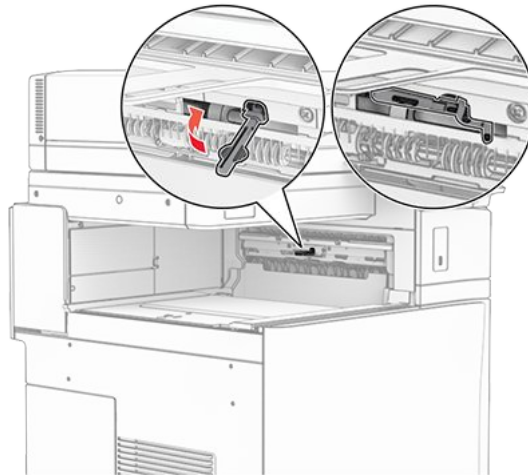


8. Align, and then install the offset stacker to the printer.

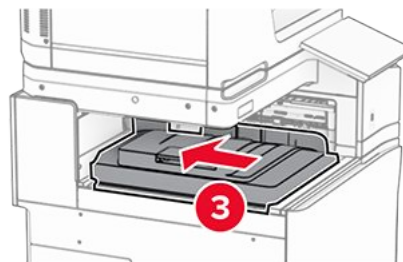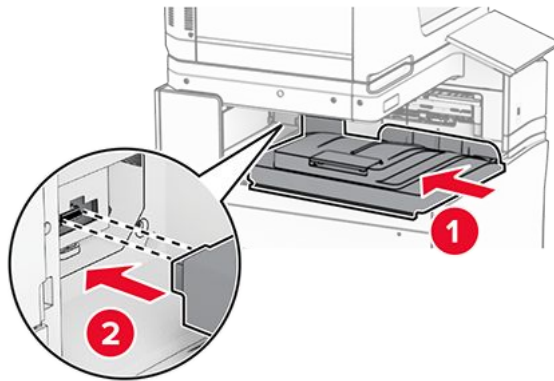


Note: Make sure that the parts are securely attached and aligned to the printer.

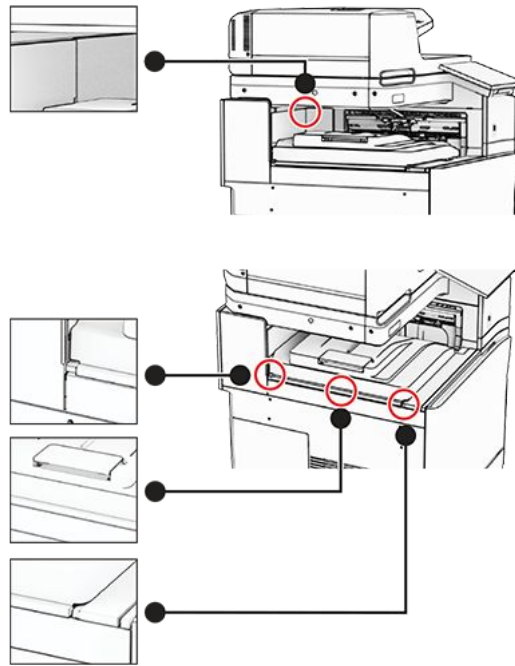


9. Attach the protective strips of the offset stacker to the printer.

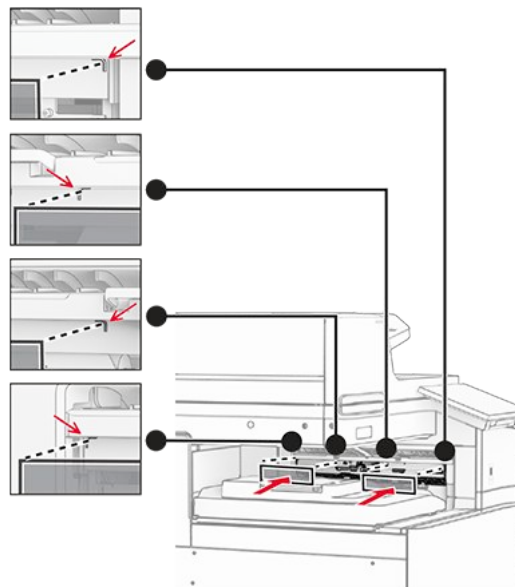

10. Place the exit bin flag into the open position.

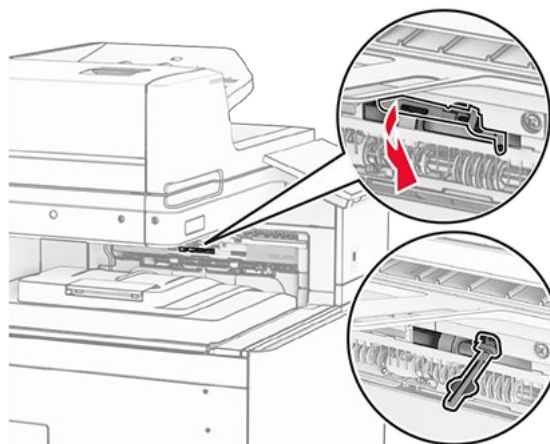

11. Attach the bin flag cover until it clicks into place.

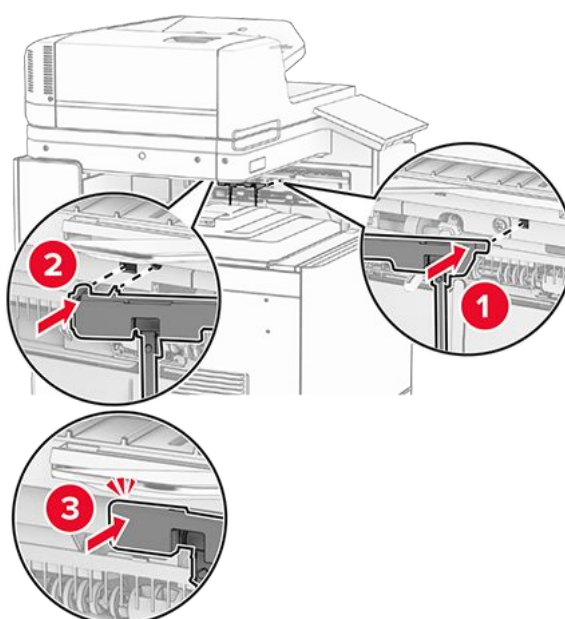

12. Connect one end of the printer power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

13. Turn on the printer.

Add the offset stacker in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

Installing the folding paper transport




CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.


Notes

- This option can also be installed together with a staple, hole punch finisher or booklet finisher.
- This task requires a flat-head screwdriver.

1. Turn off the printer.

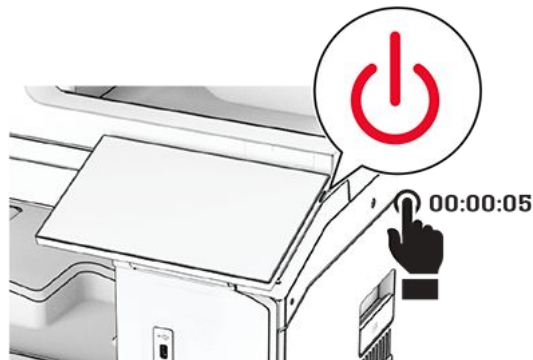


2. Unplug the power cord from the electrical outlet, and then from the printer.

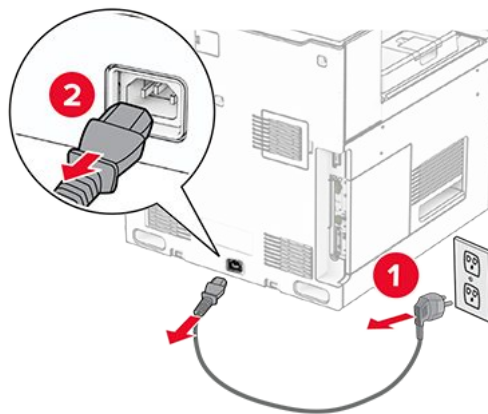


3. Unpack the folding paper transport, and then remove all the packing material.
4. Remove the standard bin.

Note: Do not throw away the bin.

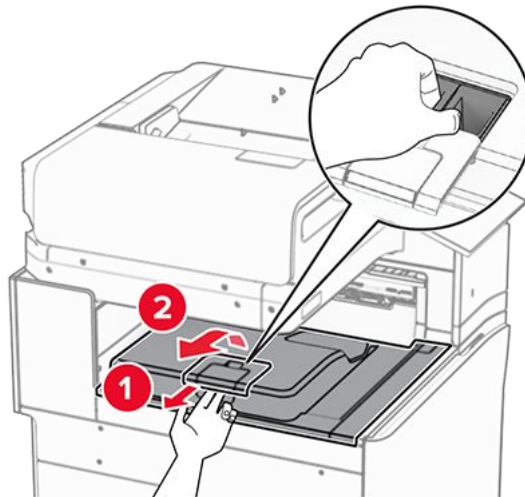


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

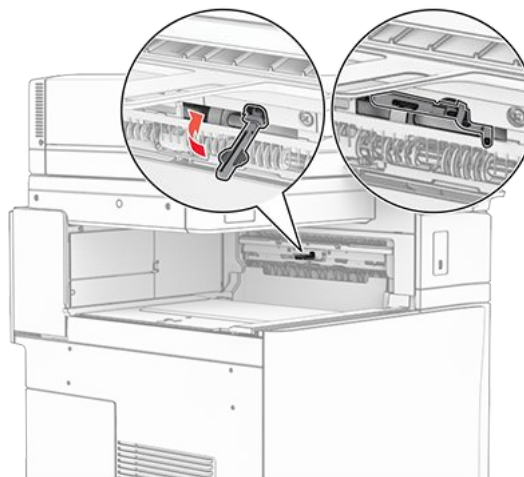


6. Remove the backup roller.


Note: Do not throw away the roller.

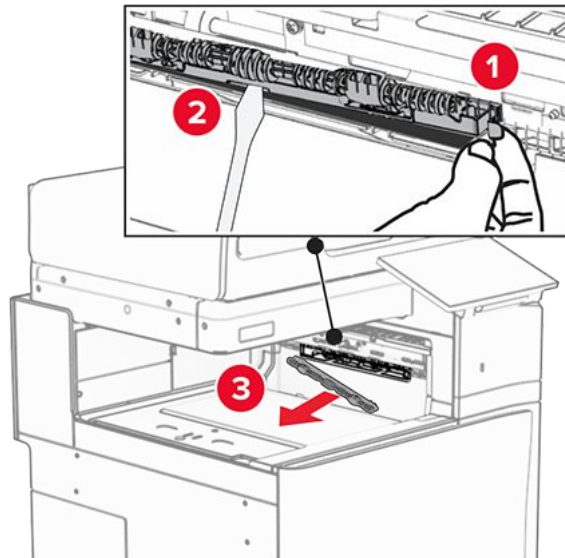


7. Insert the feed roller that came with the option until it clicks into place.

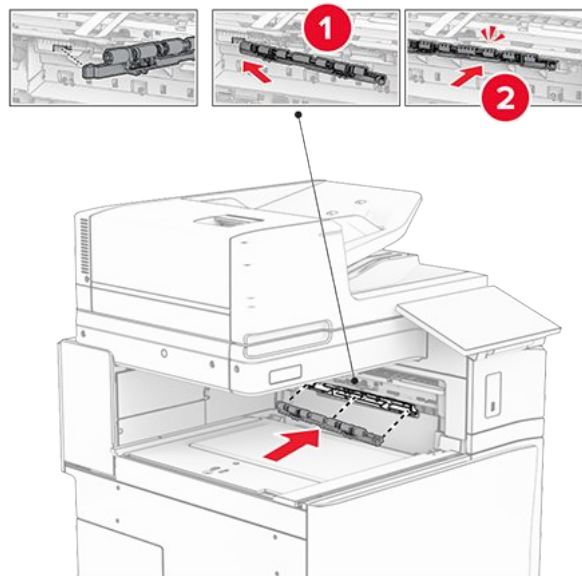

Note: Make sure that the metal spring is in front of the feed roller.

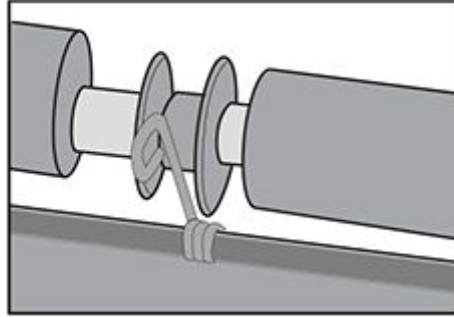


8. Attach the roller cover until it clicks into place.

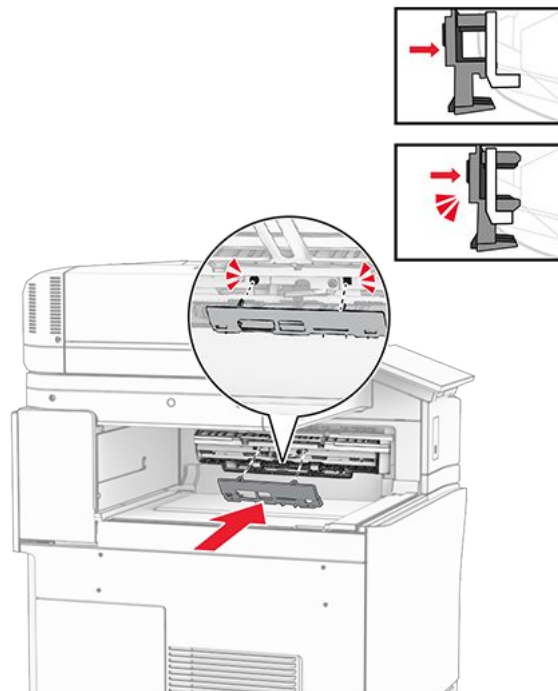


9. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

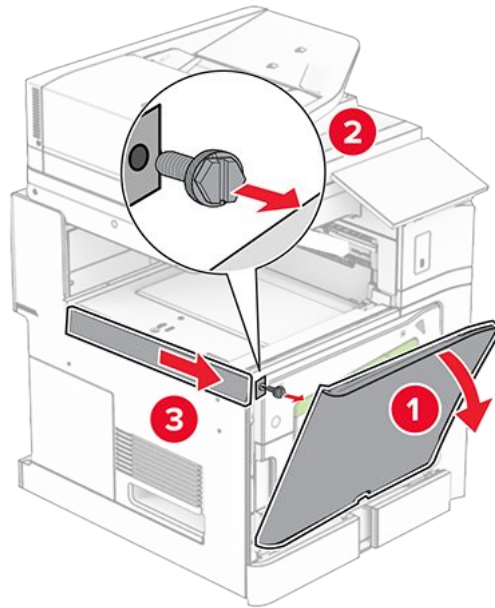


10. Close the front door.
11. Remove the paper transport connector cover.

Note: Do not throw away the cover.

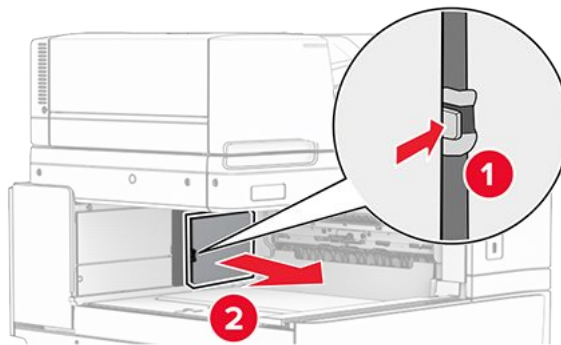


12. Remove the left rear cover.

Note: Do not throw away the screw and cover.

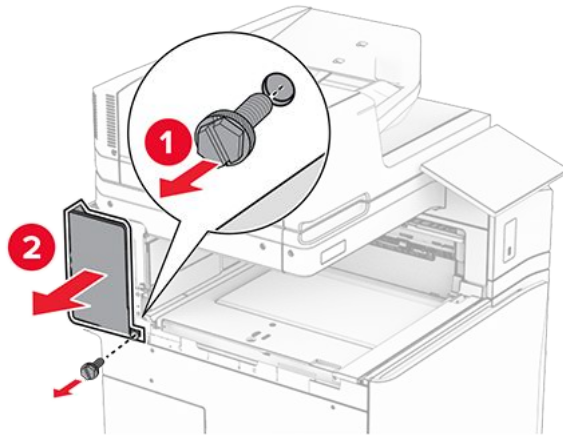


13. Remove the inner bin cover.


Note: Do not throw away the screw and cover.

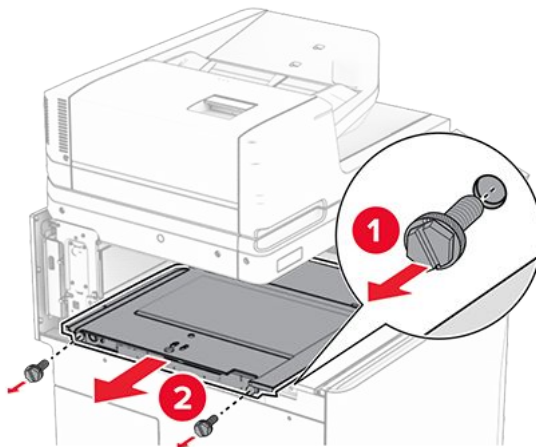



14. Align, and then insert the inner bin cover that came with the option.

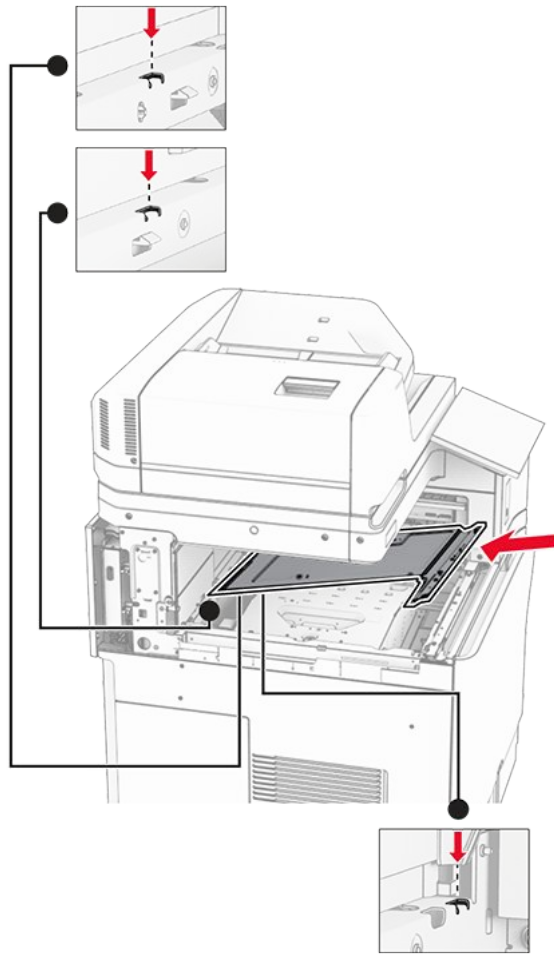



15. Install the screws to the inner bin cover.

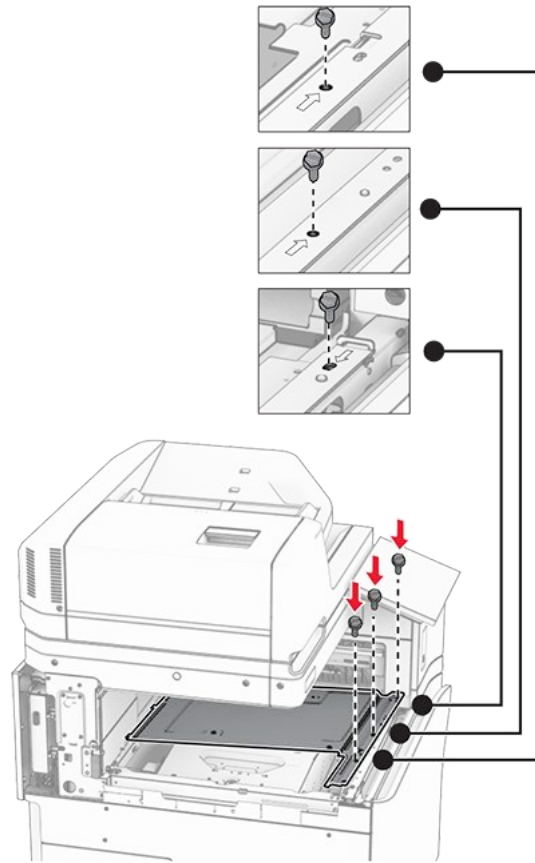

16. Attach the pieces of foam tape to the option.

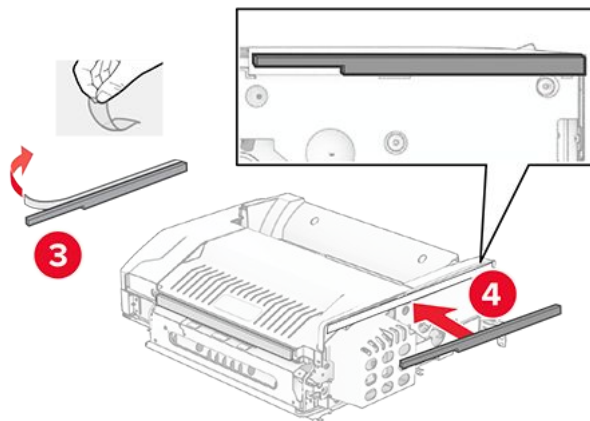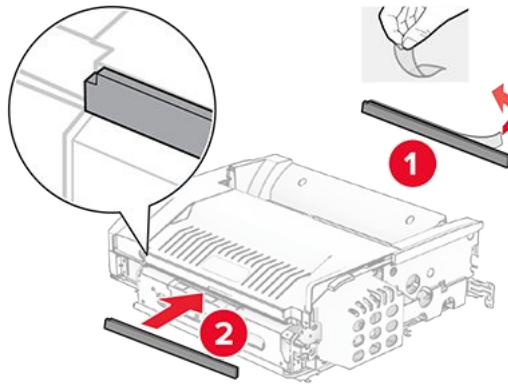


17. Open door F, and then tighten the screws.

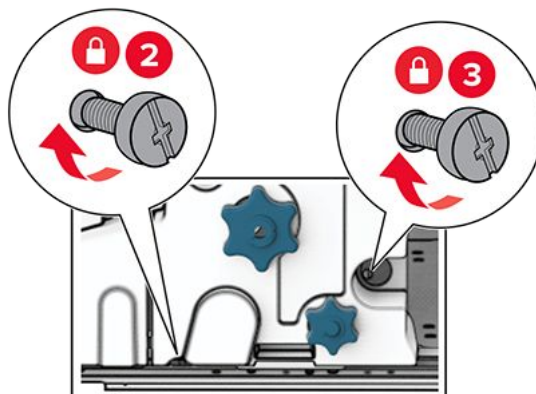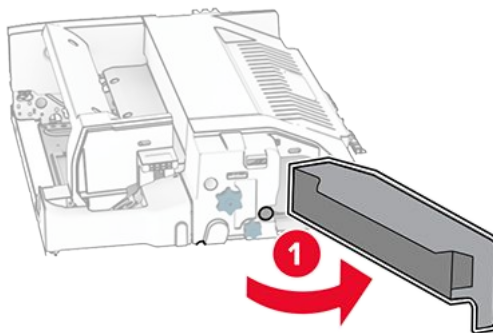


18. Close door F.

19. Attach the metal bracket to the option.

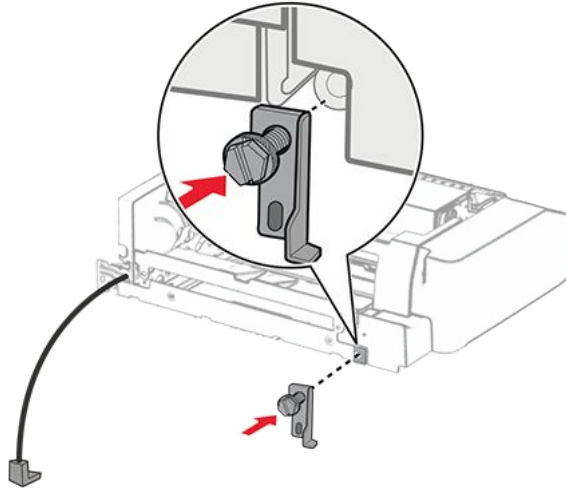


20. Insert the option.


Note: Make sure that the metal bracket is in front of the printer.

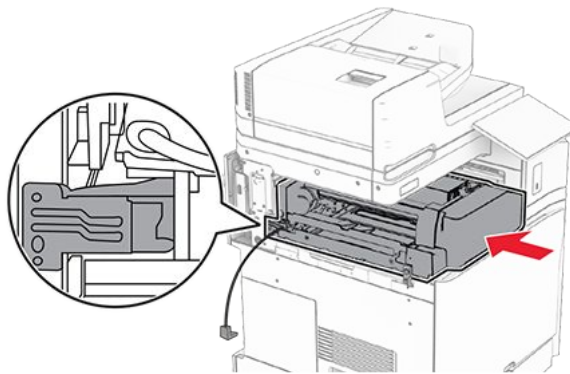


21. Open door F, and then using the screwdriver that came with the option, install the screw.

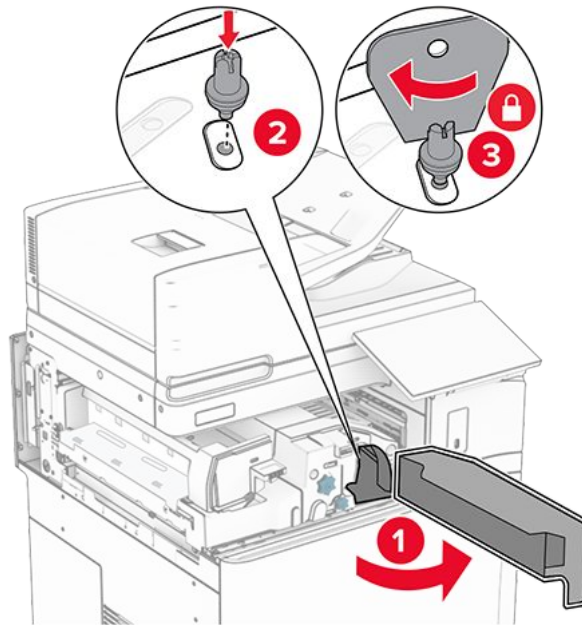


- 22. Close door F.
- 23. Install the screws into the option.

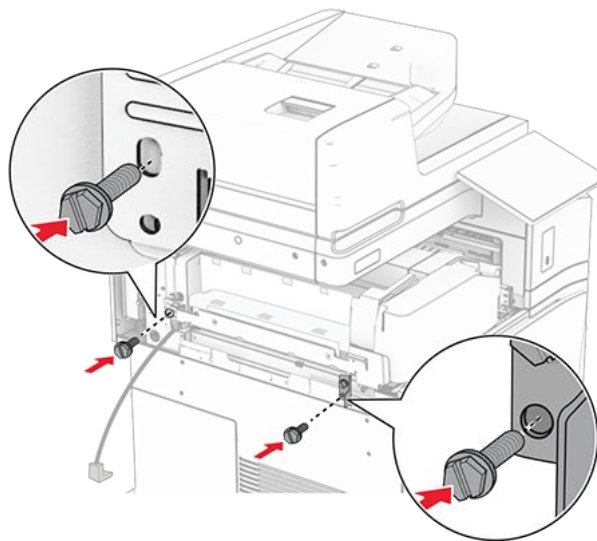


- 24. Attach the left rear cover.

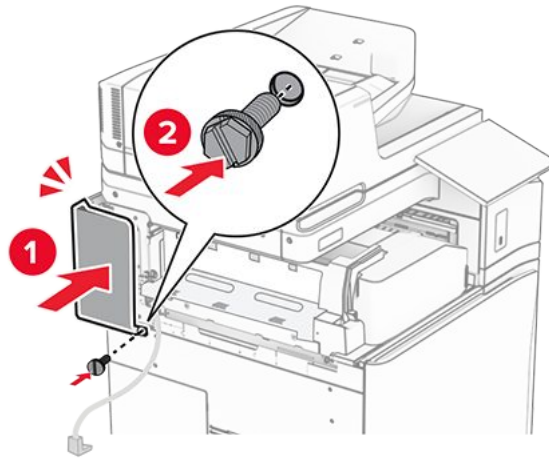


25. Open the front door, and then attach the cover to the left side of the printer.

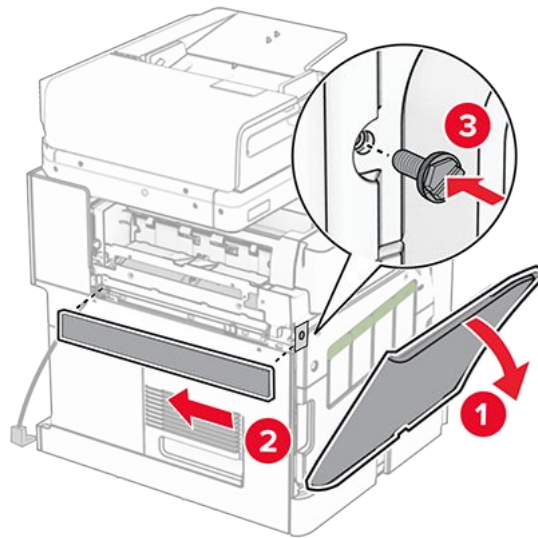


26. Close the front door.
27. Raise the bin flap, and then align and attach the option bin.

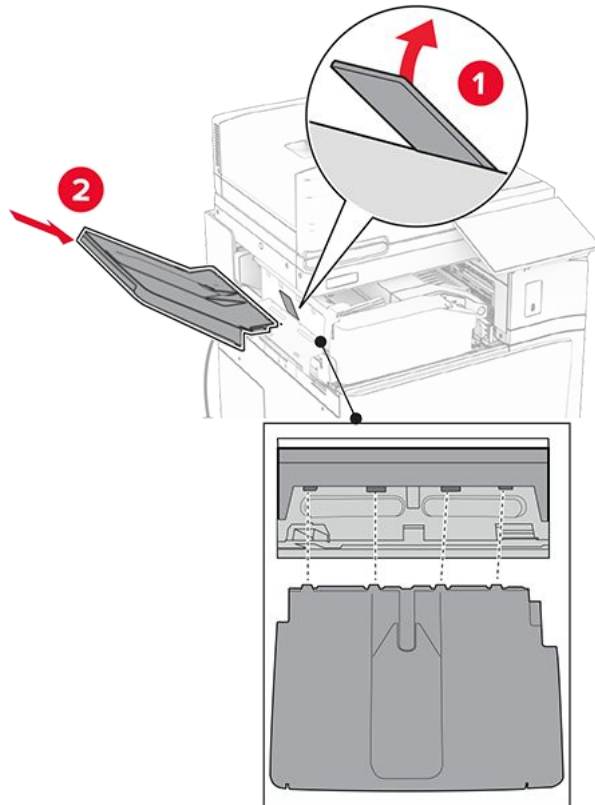


28. Install the screws to the option bin.

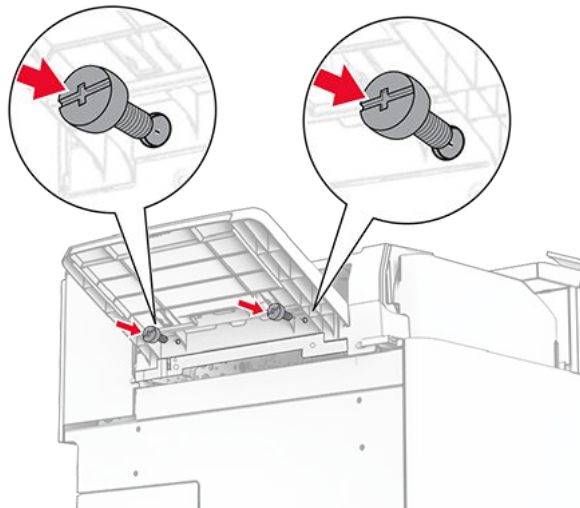

29. Attach the trim cover.

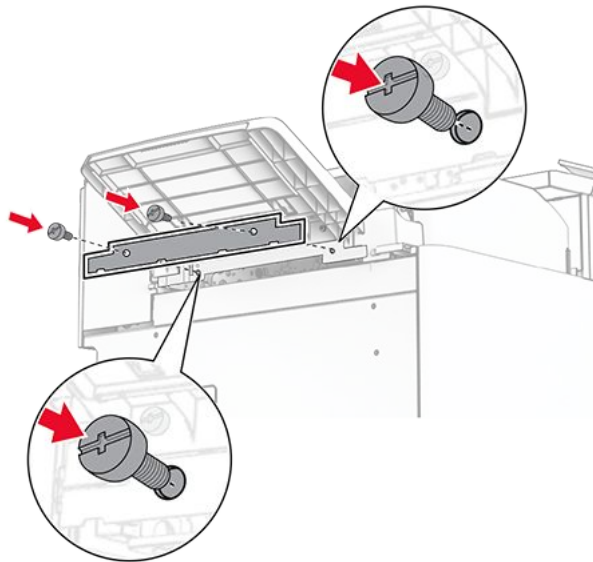

30. Connect the option cable to the printer.

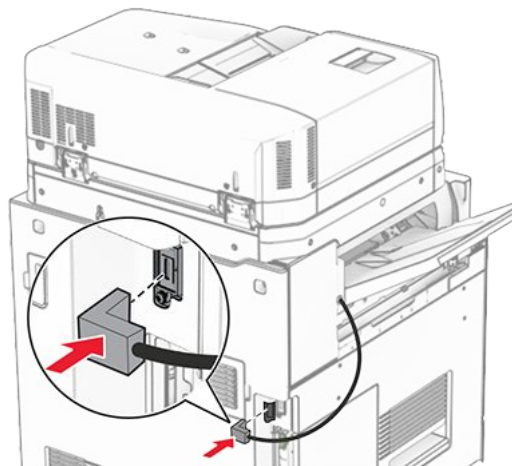

31. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

32. Turn on the printer.

Installing the staple, hole punch finisher and paper transport unit




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

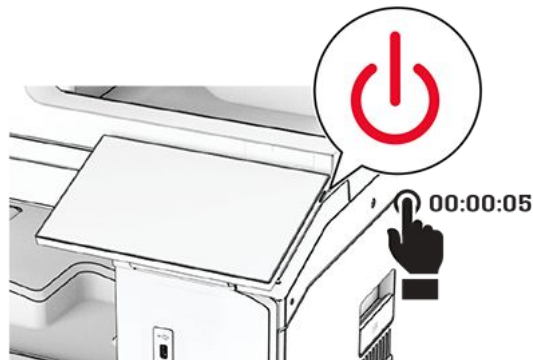


2. Unplug the power cord from the electrical outlet, and then from the printer.

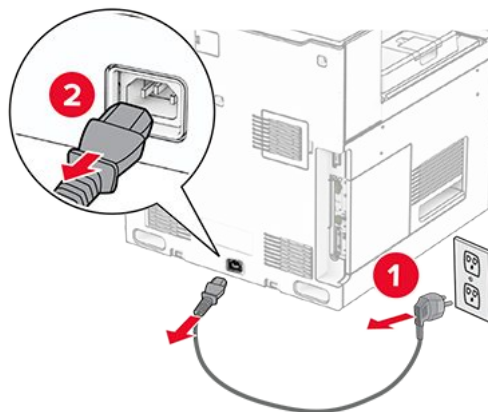


3. Unpack the paper transport unit.
4. Remove the standard bin.

Note: Do not throw away the bin.

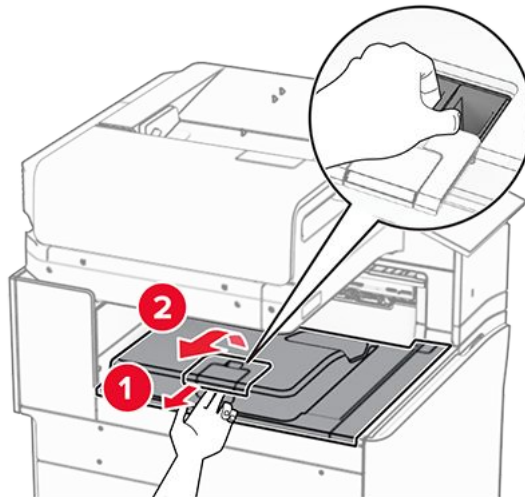


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

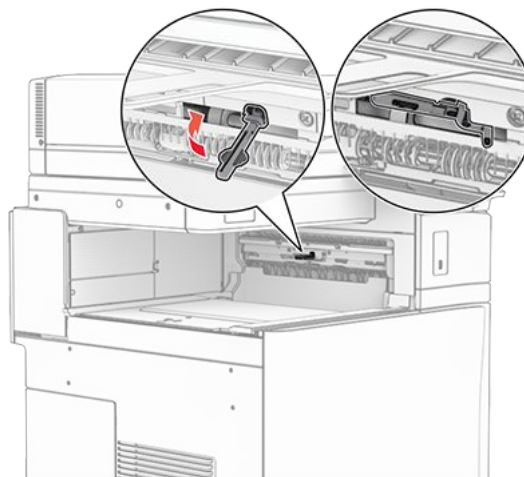


6. Remove the backup roller.


Note: Do not throw away the roller.

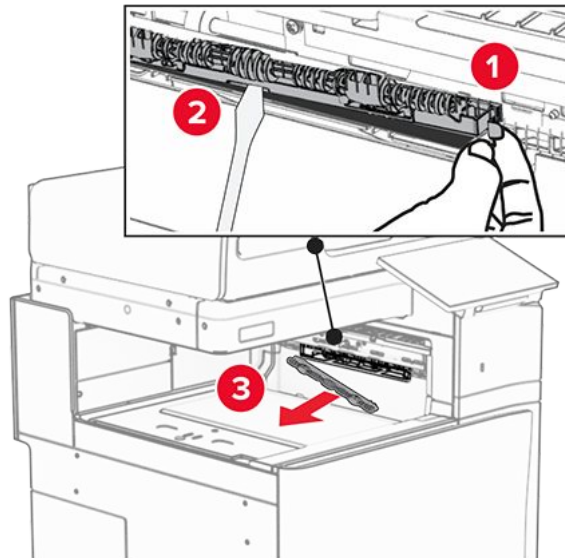


7. Insert the feed roller that came with the paper transport unit until it clicks into place.

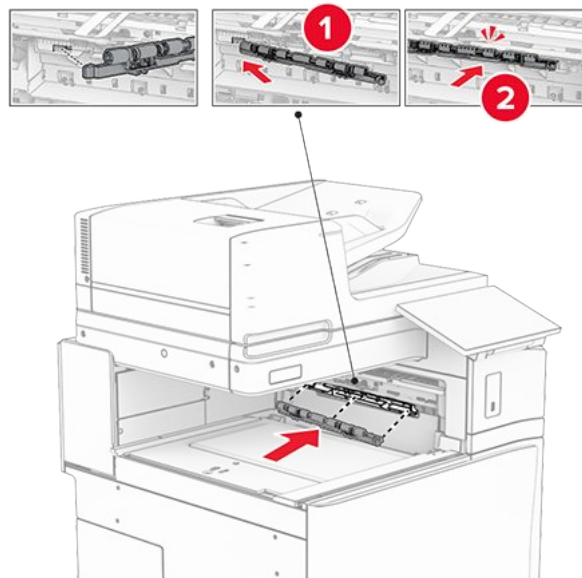

Note: Make sure that the metal spring is in front of the feed roller.

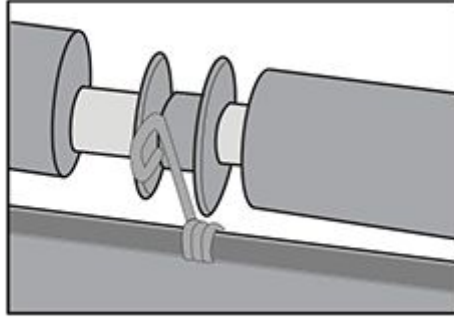


8. Attach the cover until it clicks into place.

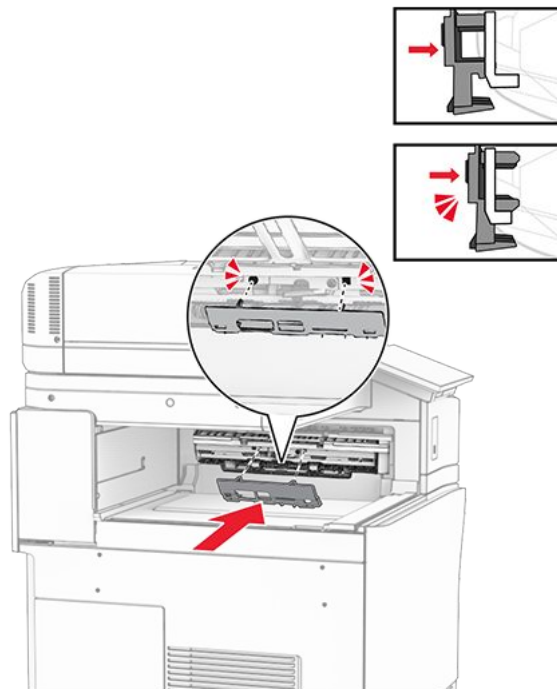


9. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

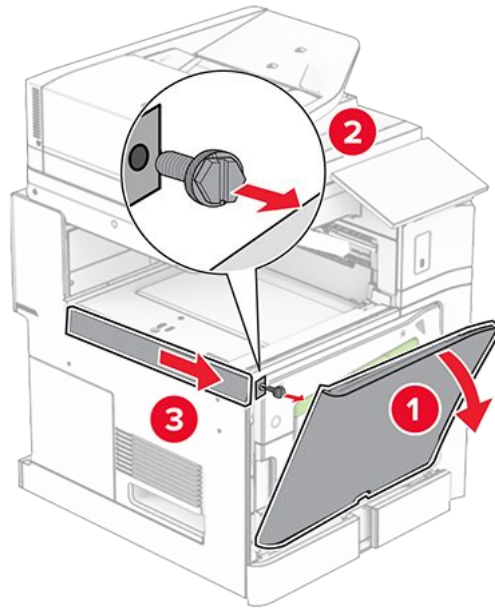


10. Close the front door.
11. Remove the paper transport connector cover.

Note: Do not throw away the cover.

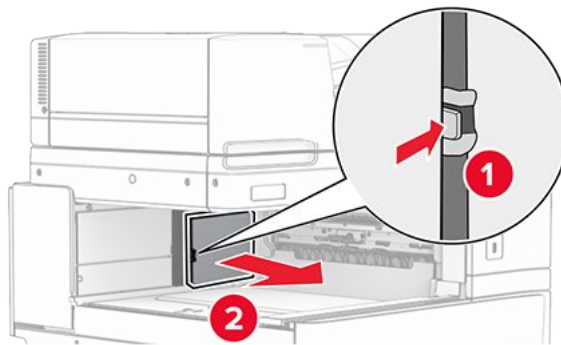


12. Remove the cover.


Note: Do not throw away the cover.

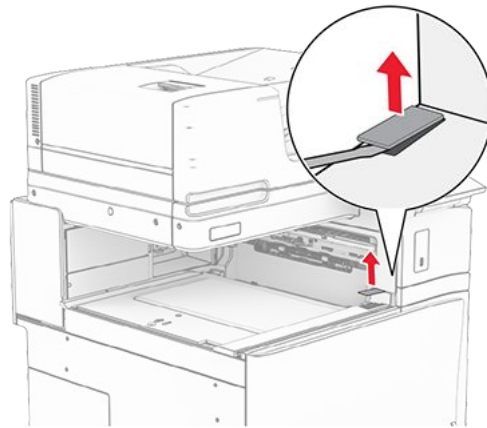


13. Attach the metal bracket.

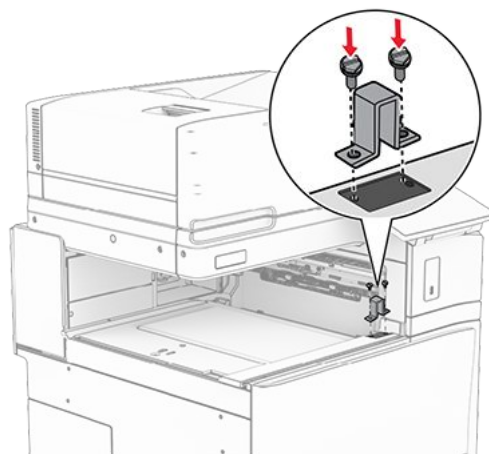


14. Insert the paper transport unit.

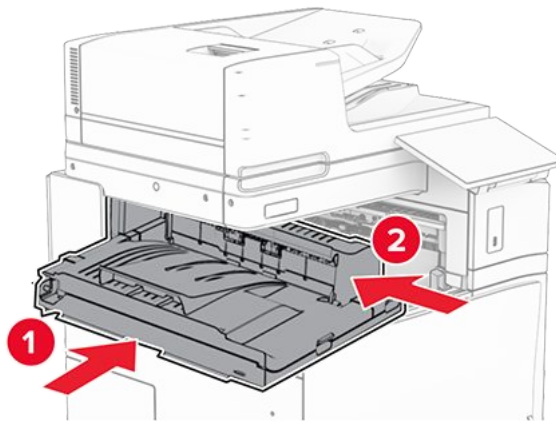


15. Open handle G, and then install the screw into the front of the paper transport unit.

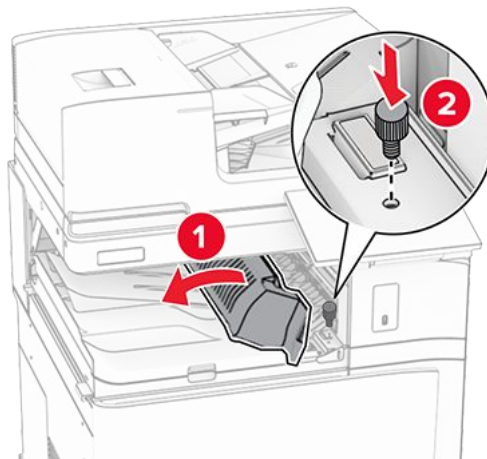


16. Close handle G.
17. Install the screw into the rear of the paper transport unit.

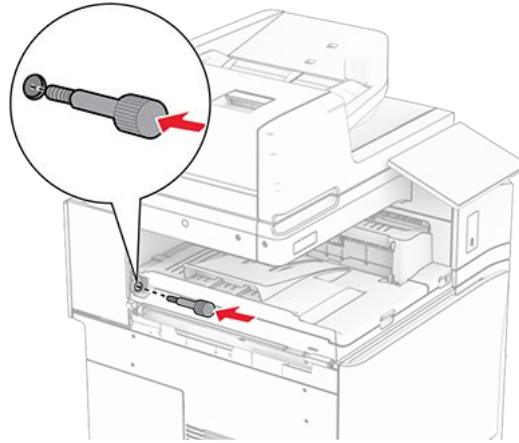


18. Open the front door, and then attach the cover that came with the paper transport unit to the left side of the printer.

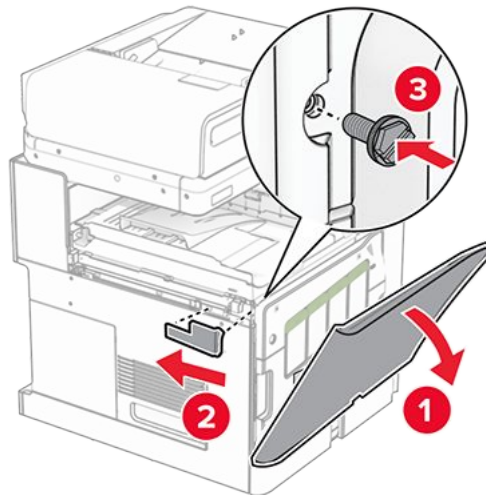


19. Close the front door.
20. Unpack the staple, hole punch finisher.
21. Install the stabilizer.

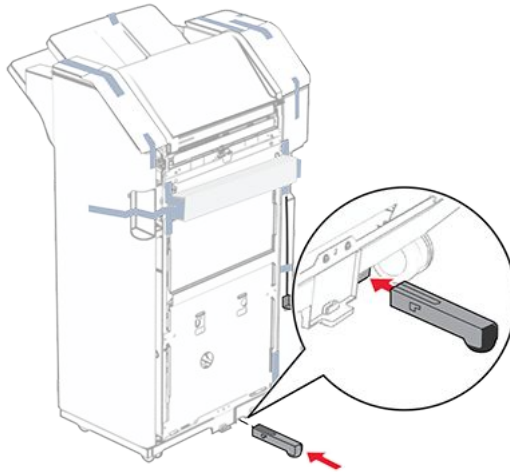




22. Remove the pieces of tape around the finisher.
23. Attach the bracket to the finisher.

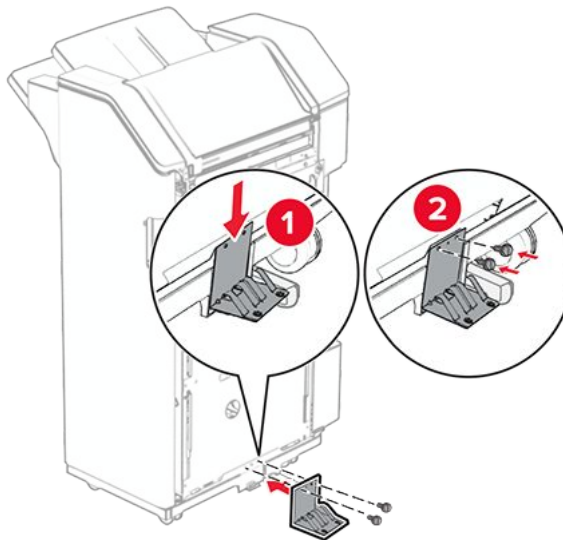


24. Attach the foam tape to the finisher.

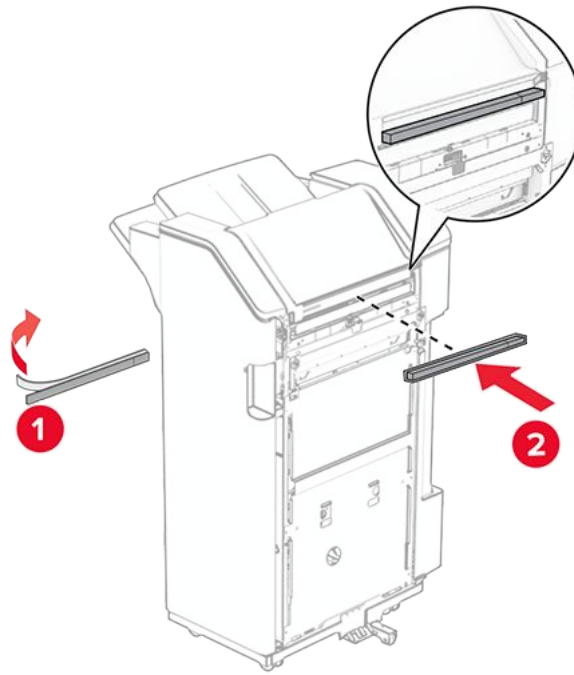


25. Attach the feed guide to the finisher.

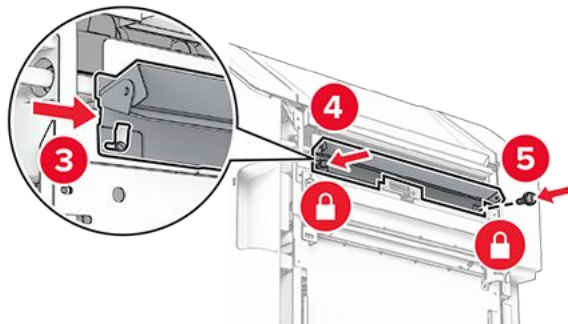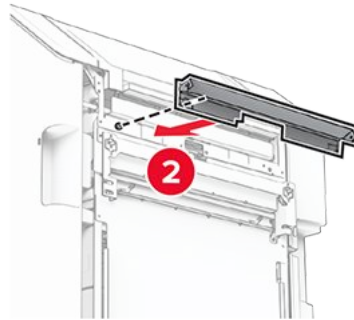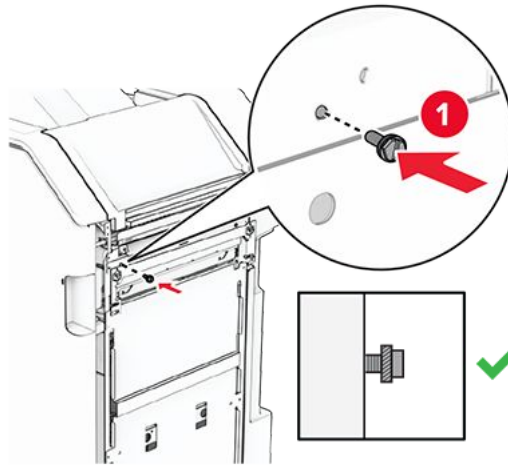

26. Attach the bin to the finisher.

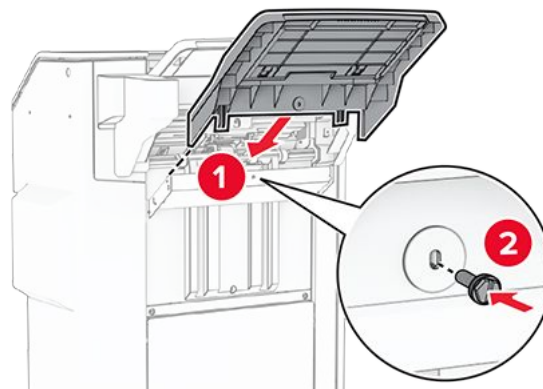


27. Open the finisher door, and then insert the hole punch box.

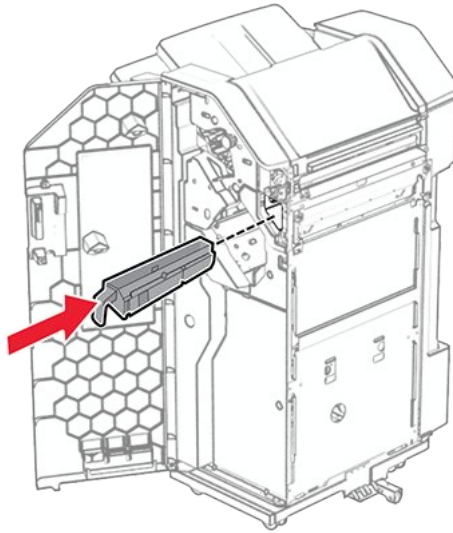


28. Place the bin extender into the finisher bin.

Notes

- The bin extender is used for A3-size paper or longer and in high humidity conditions to help in stacking the paper.
- The bin capacity is reduced when the bin extender is used.

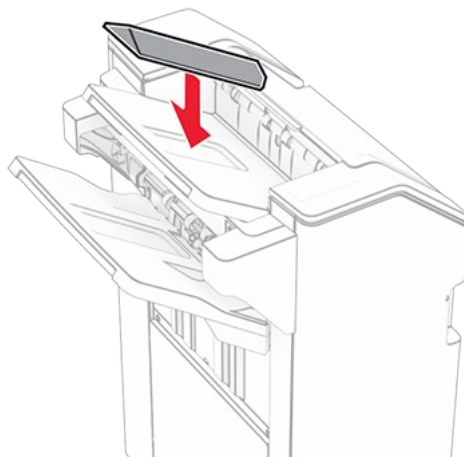


29. Close the finisher door.
30. Attach the holder to the rear of the finisher

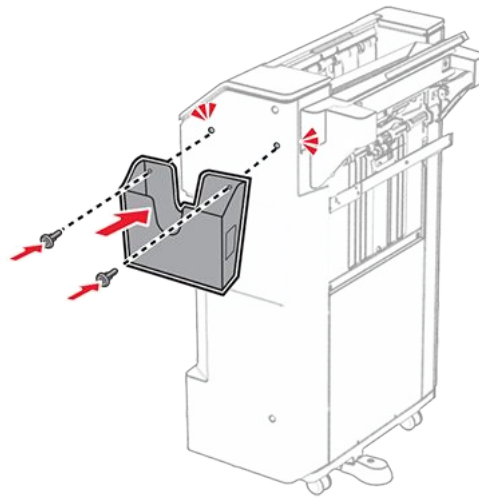


31. Attach the mounting bracket to the printer.


Note: Align the screws to the markers on the mounting bracket.

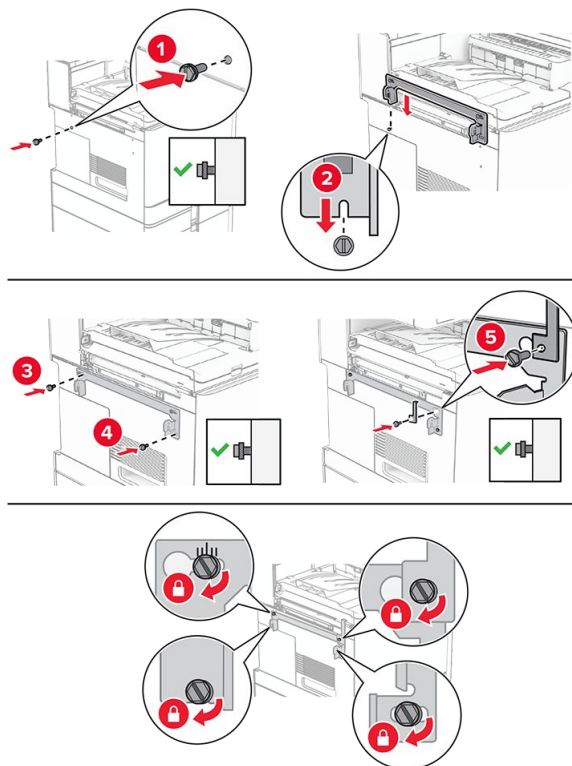


32. Attach the metal bracket that came with the paper transport unit to the printer.

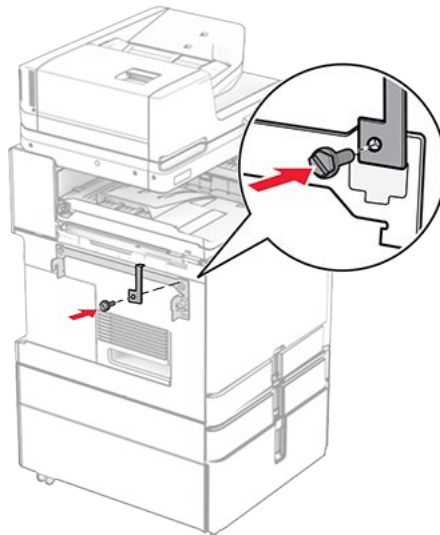


33. Open the finisher door, remove the screw, and then pull the finisher lock.

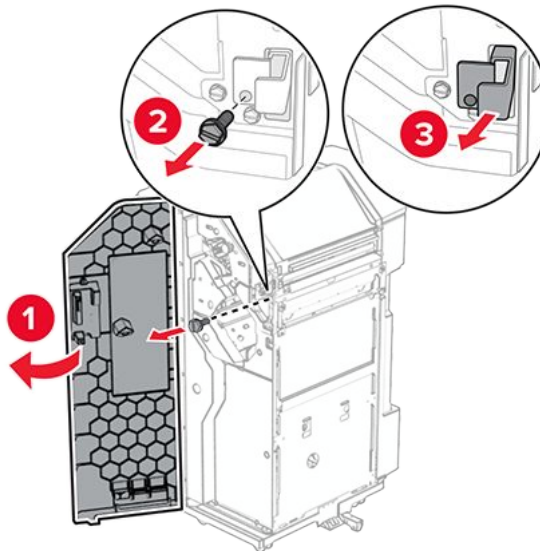


34. Attach the finisher to the printer.

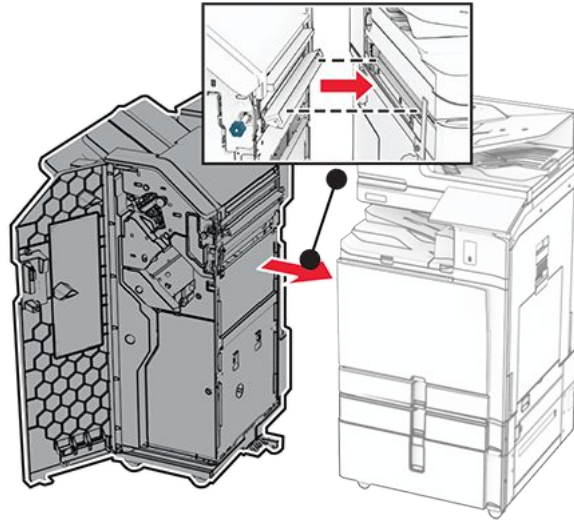

35. Lock the finisher to the printer, and then install the screw.

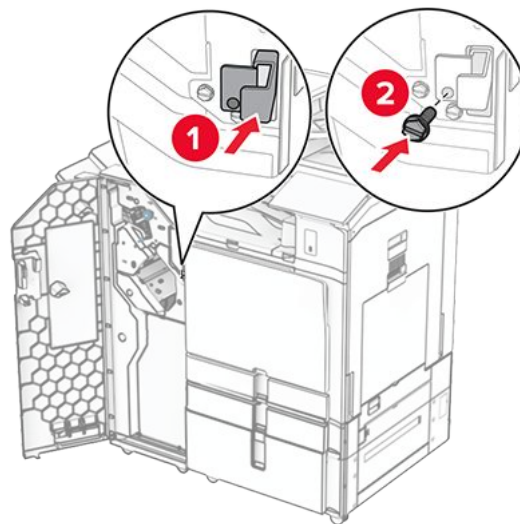

36. Connect the finisher cable to the printer.

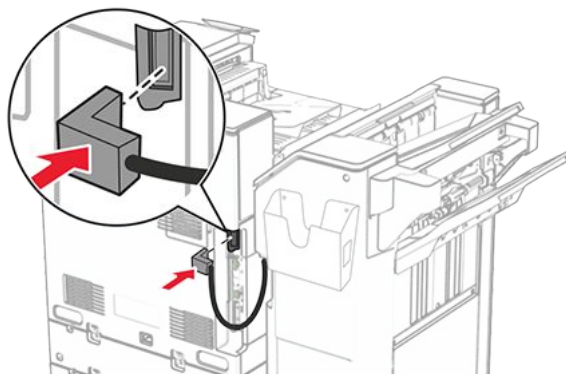

37. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

38. Turn on the printer.

Installing the staple, hole punch finisher and folding paper transport




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

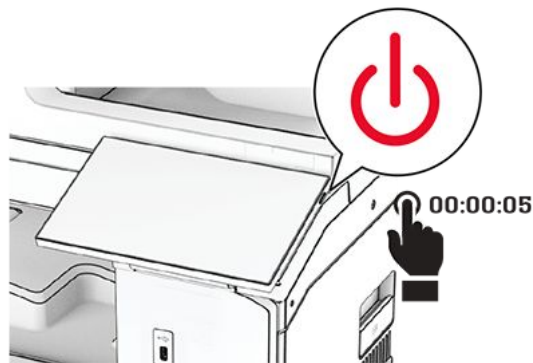


2. Unplug the power cord from the electrical outlet, and then from the printer.

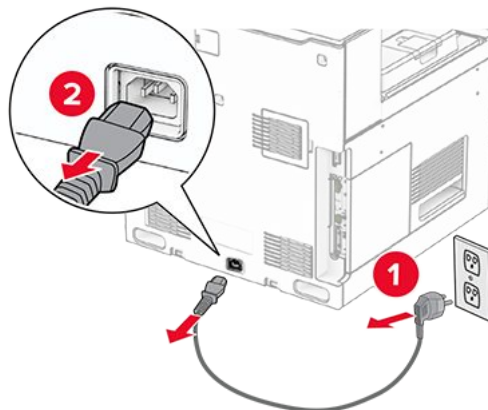

3. Unpack the folding paper transport, and then remove all the packing material.


4. Remove the standard bin.

Note: Do not throw away the bin.

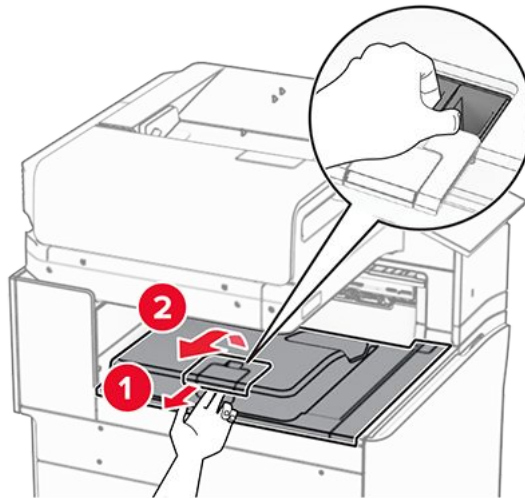


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

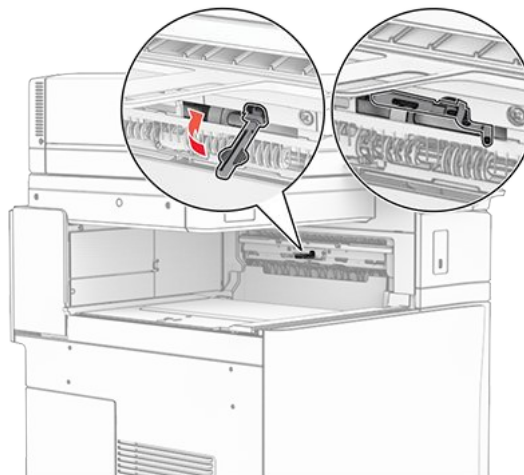


6. Remove the backup roller.


Note: Do not throw away the roller.

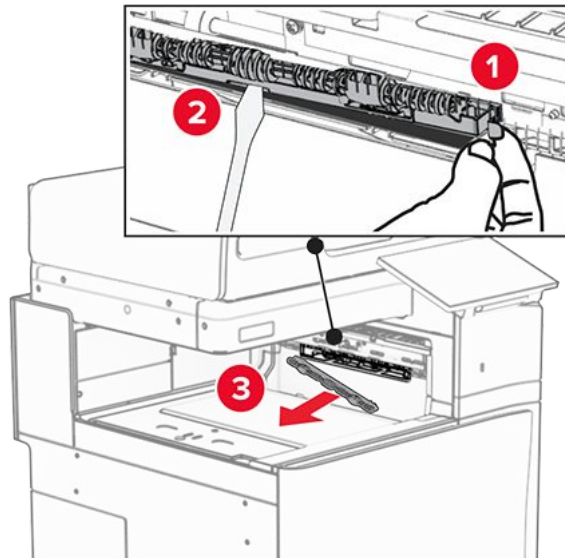


7. Insert the feed roller that came with the option until it clicks into place.

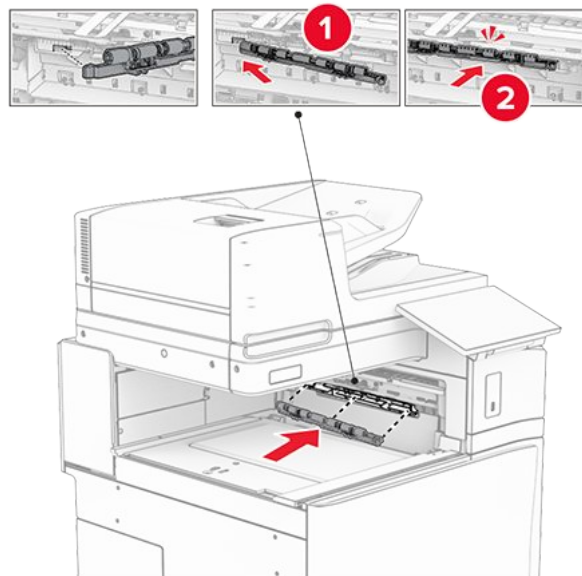

Note: Make sure that the metal spring is in front of the feed roller.

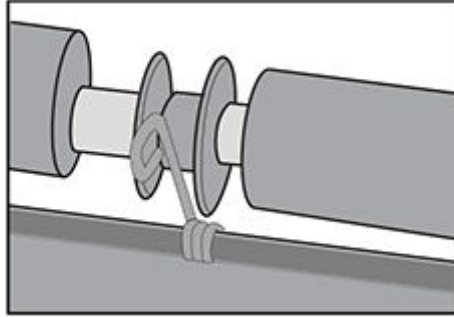


8. Attach the cover until it clicks into place.

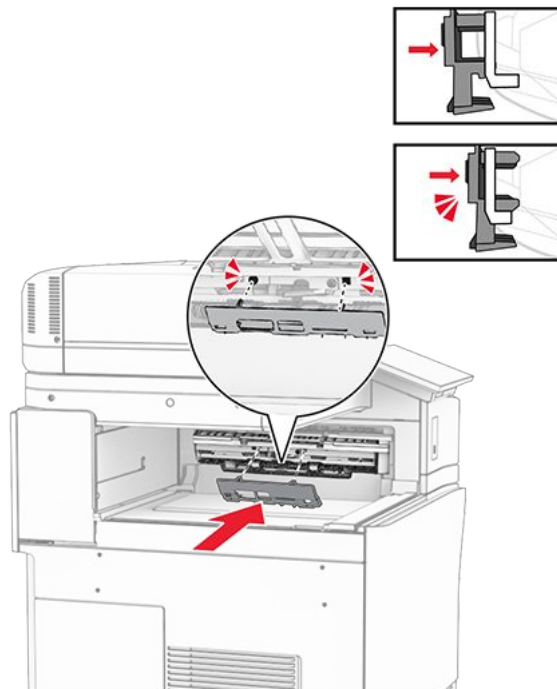


9. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

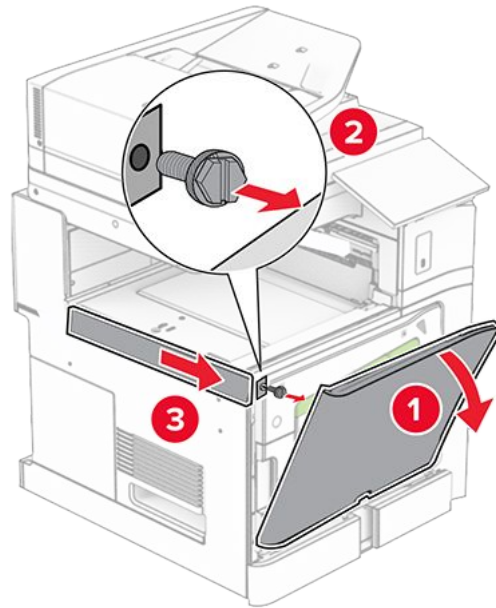


10. Close the front door.
11. Remove the paper transport connector cover.

Note: Do not throw away the cover.

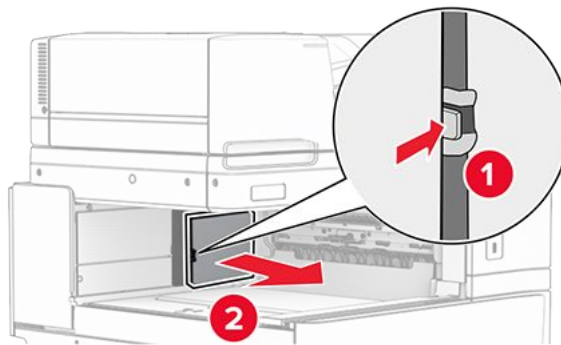


12. Remove the left rear cover.

Note: Do not throw away the screw and cover.

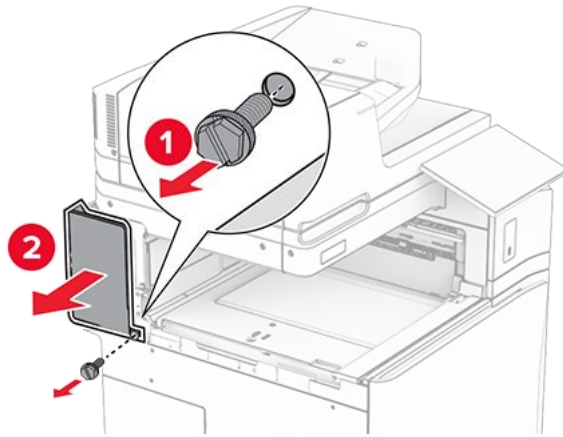


13. Remove the inner bin cover.


Note: Do not throw away the screw and cover.

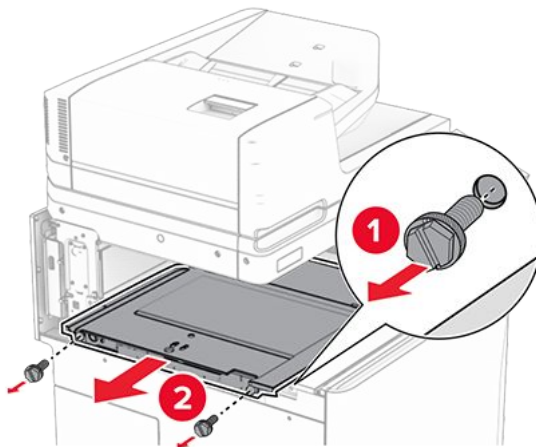



14. Align, and then insert the inner bin cover that came with the folding paper transport.

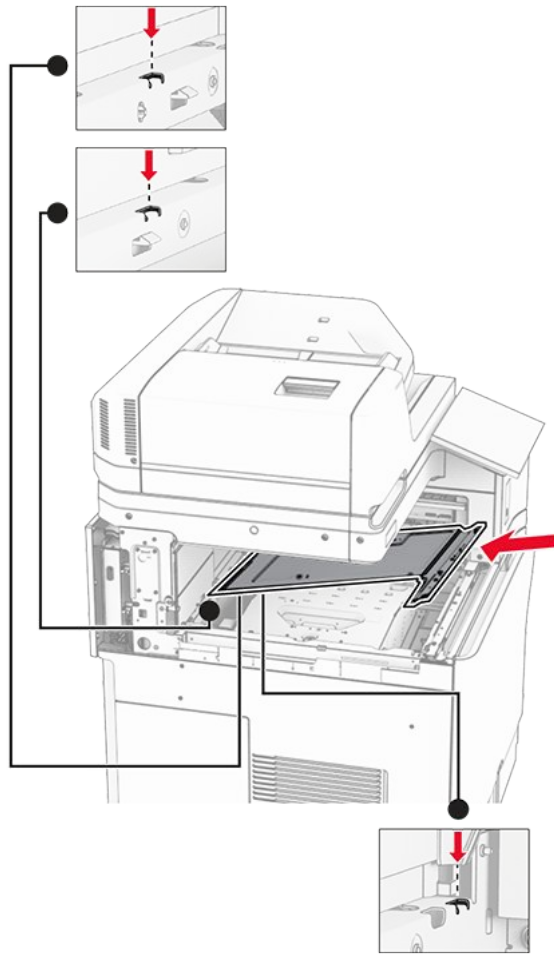



15. Install the screws to the inner bin cover.

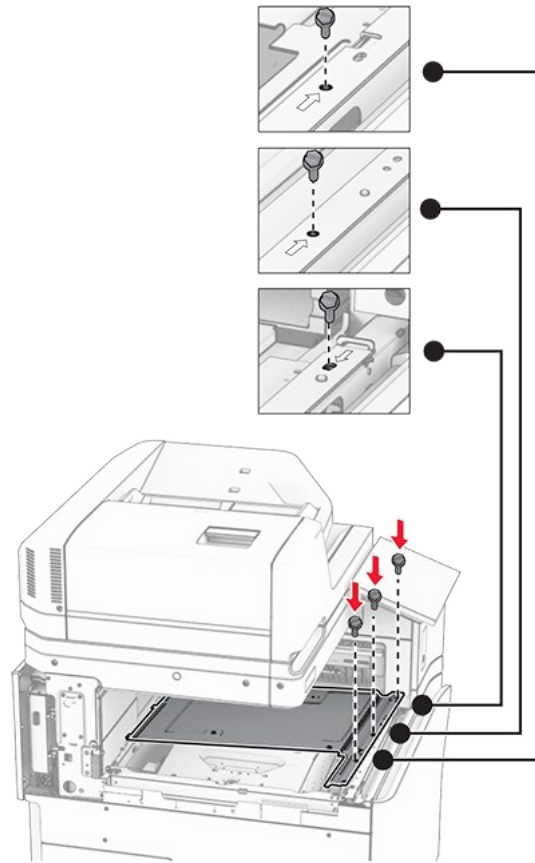

16. Attach the pieces of foam tape to the option.

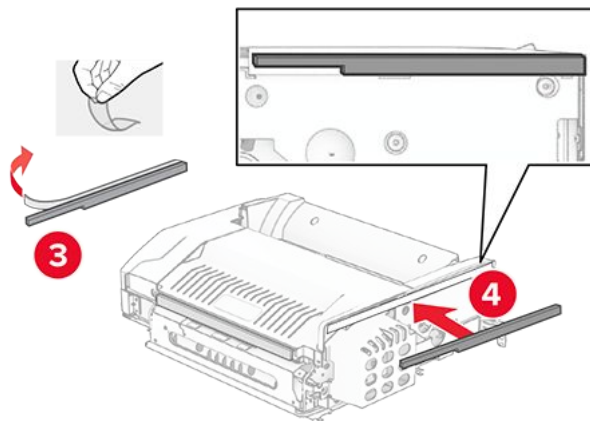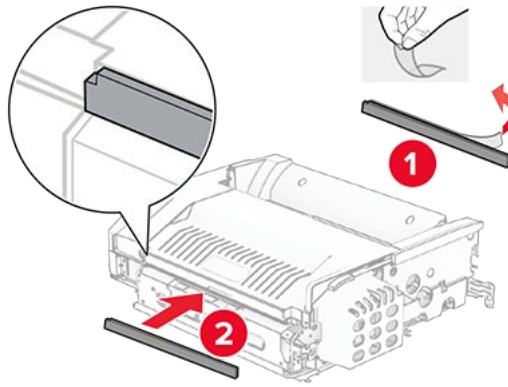


17. Open door F, and then tighten the screws.

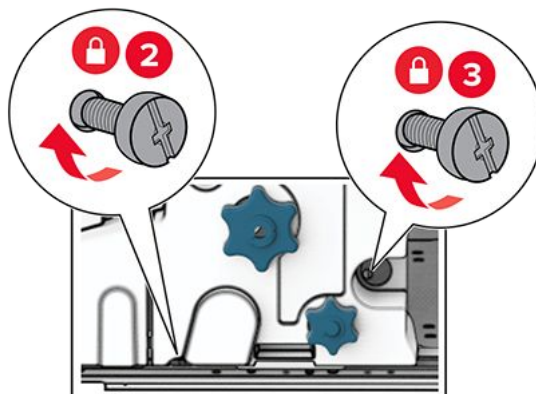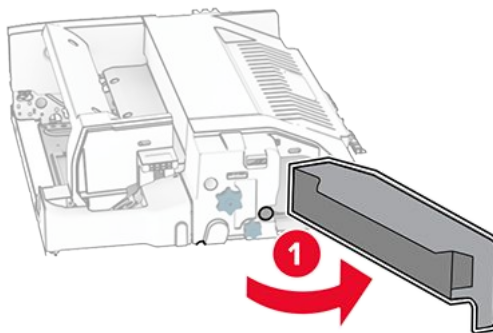


18. Close door F.

19. Attach the bracket to the option.

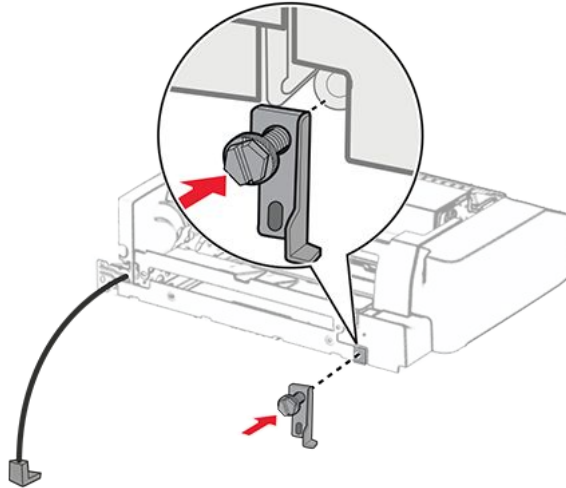


20. Insert the option.


Note: Make sure that the metal bracket is in front of the printer.

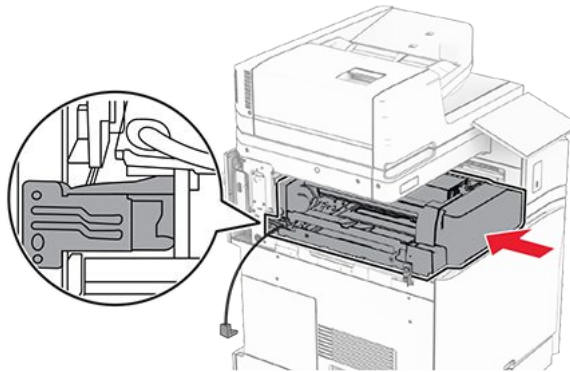


21. Open door F, and then using the screwdriver that came with the option, install the screw.

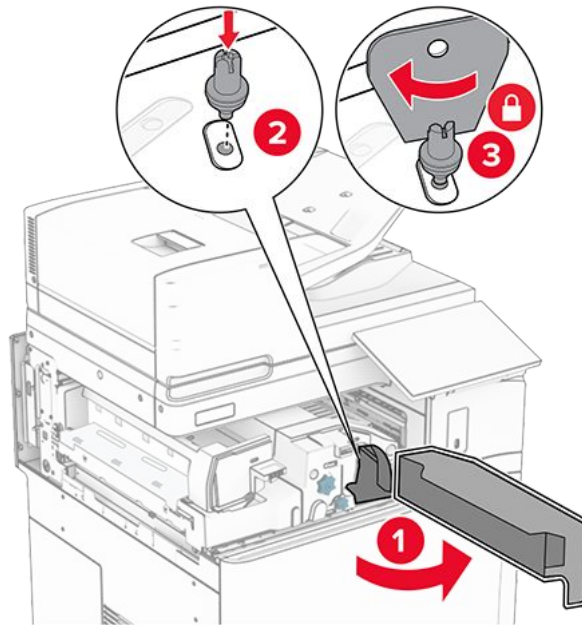


- 22. Close door F.
- 23. Install the screws into the option.

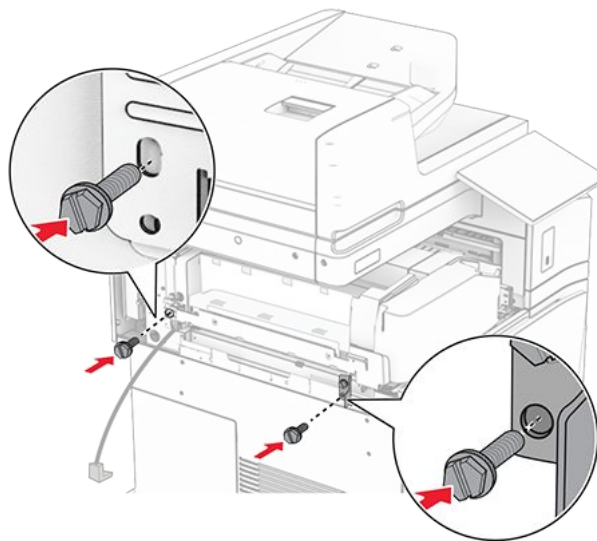


- 24. Attach the left rear cover.

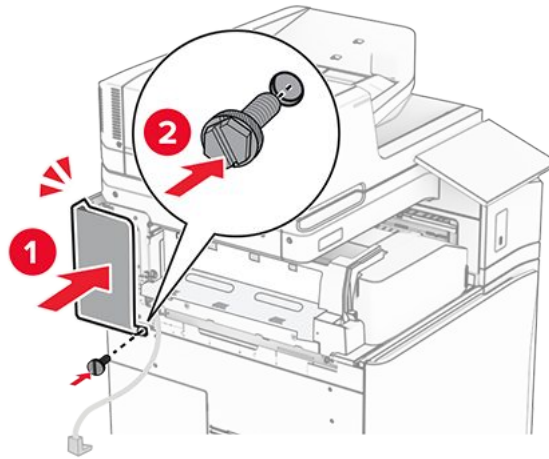


25. Unpack the staple, hole punch finisher.
26. Install the stabilizer.

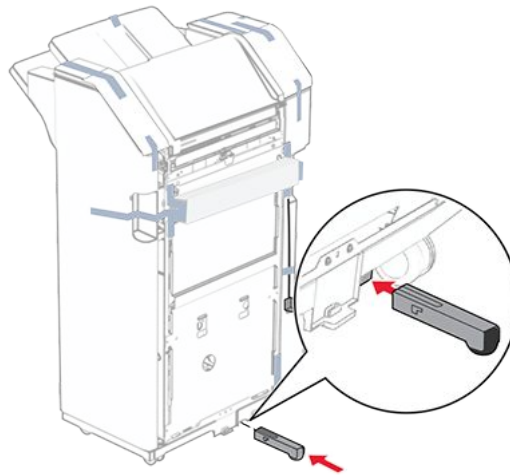


27. Remove the pieces of tape around the finisher.
28. Attach the bracket to the finisher.

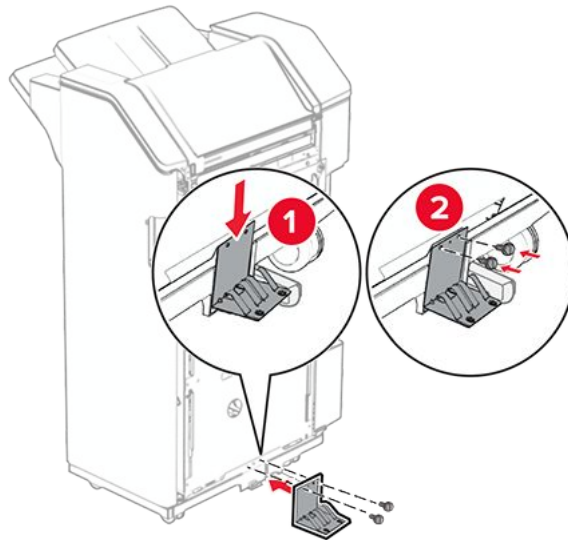




29. Attach the foam tape to the finisher.

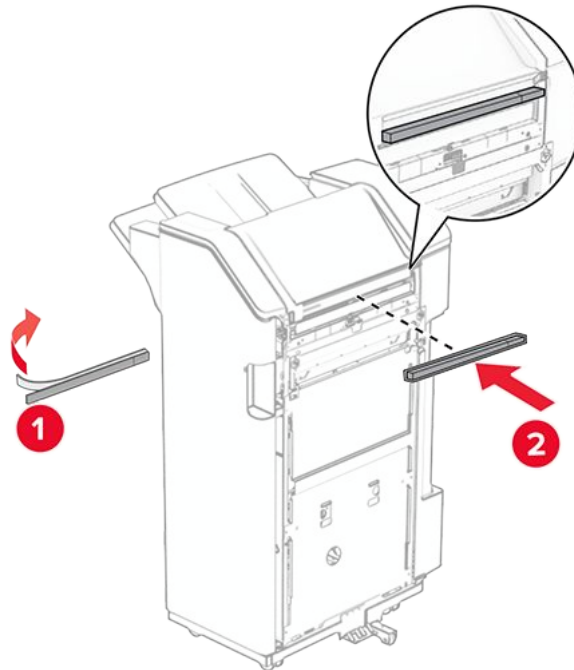


Note: Remove the small portion of foam on the right side of the finisher.

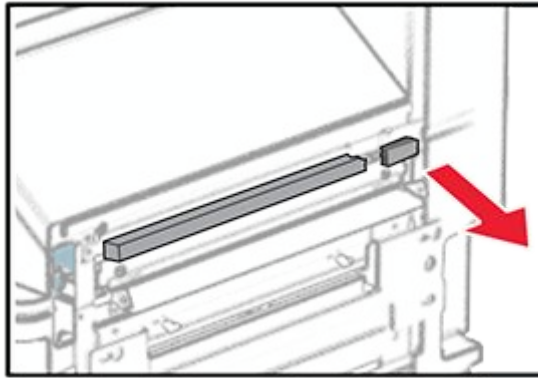


30. Attach the feed guide to the finisher.

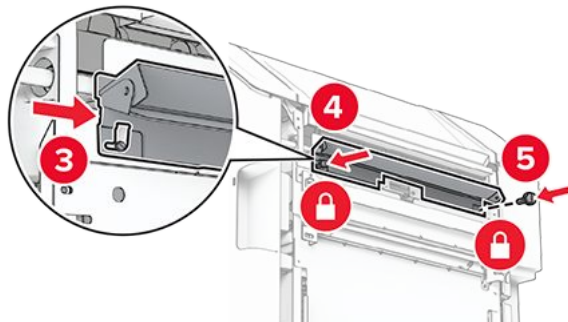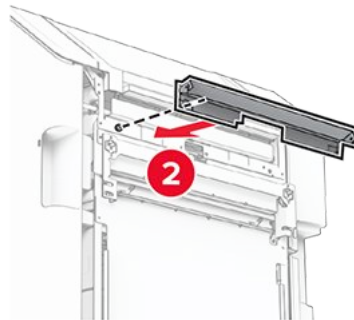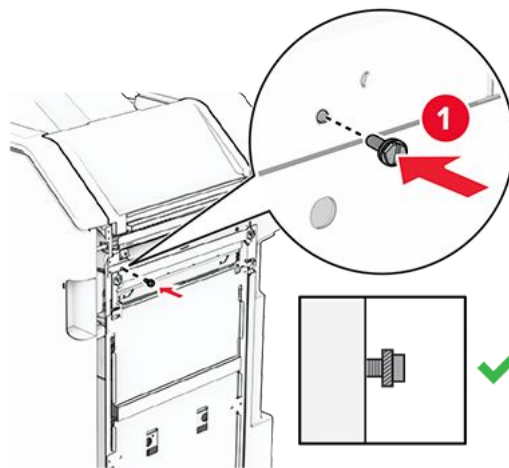

31. Attach the bin to the finisher.

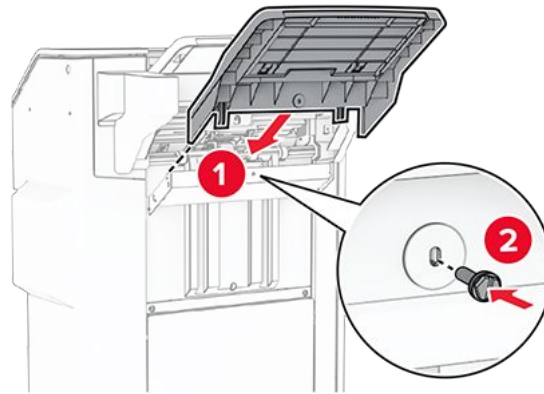


32. Open the finisher door, and then insert the hole punch box.

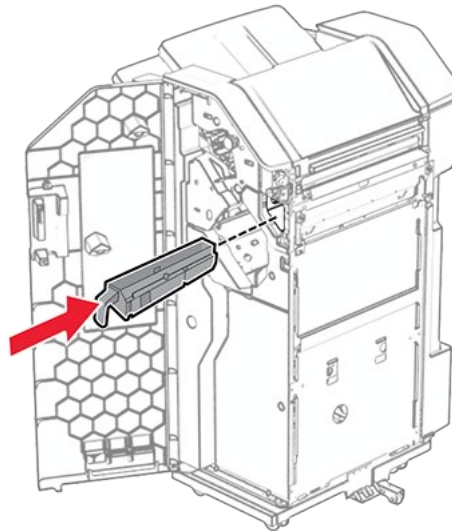


33. Place the bin extender into the finisher bin.

Notes


- The bin extender is used for A3-size paper or longer and in high humidity conditions to help in stacking the paper.
- The bin capacity is reduced when the bin extender is used.

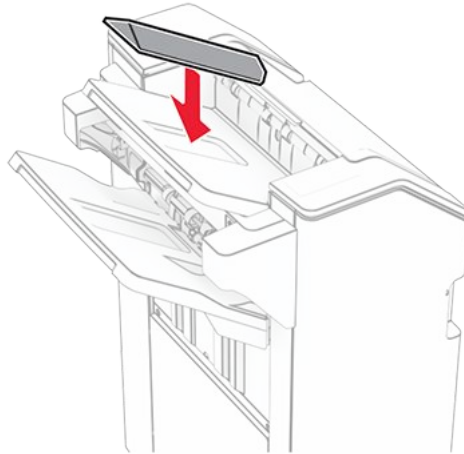


- 34. Close the finisher door.
- 35. Raise the bin flap, and then align and attach the cover to the option.

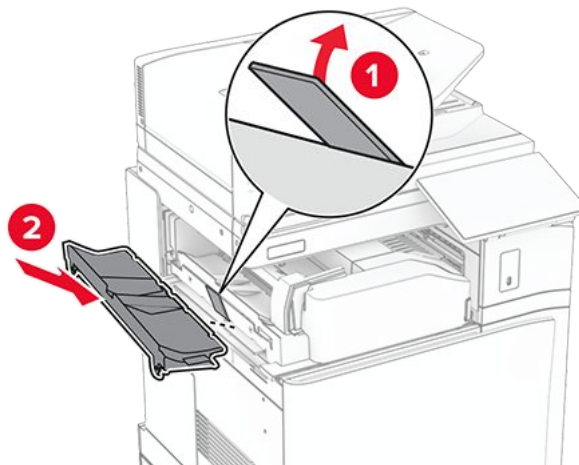


- 36. Install the screws.

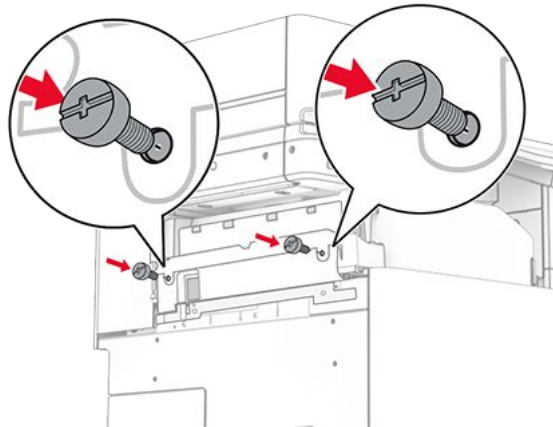


37. Open the front door, and then attach the trim cover that came with the option.

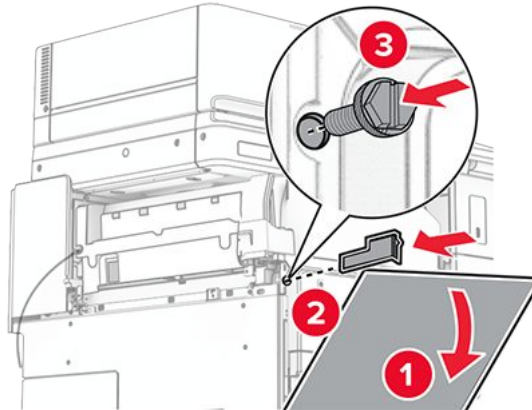


38. Loosely attach a screw to the printer.

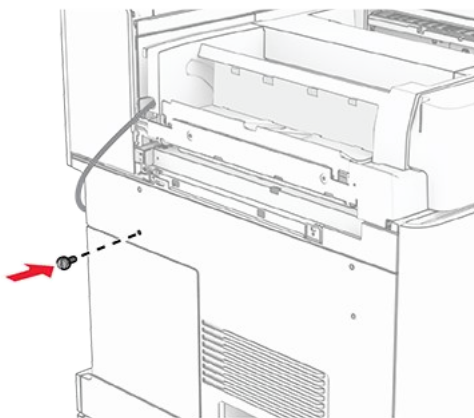

39. Align the mounting bracket to the screw.

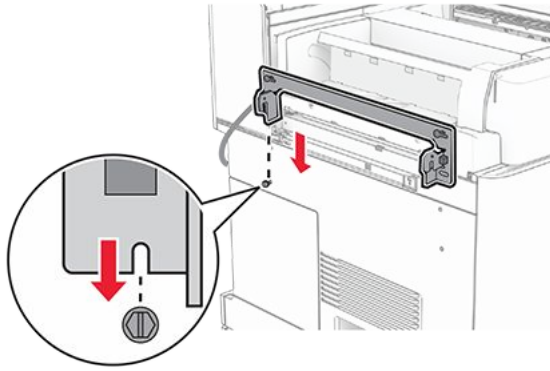


40. Loosely attach screws into the mounting bracket.

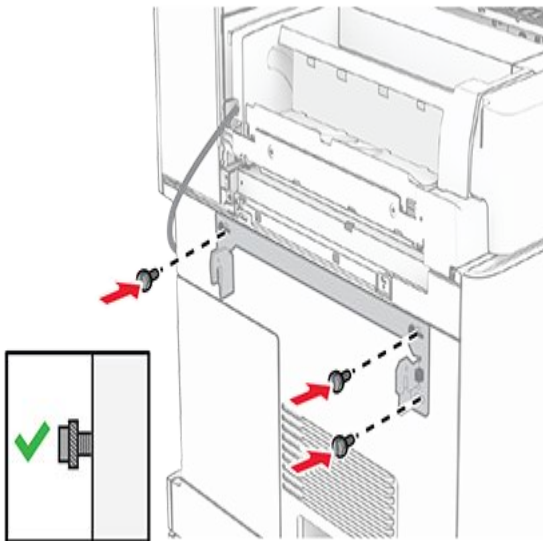


41. Tighten the screws to secure the mounting bracket onto the printer.


Note: Align the screws to the markers on the mounting bracket.

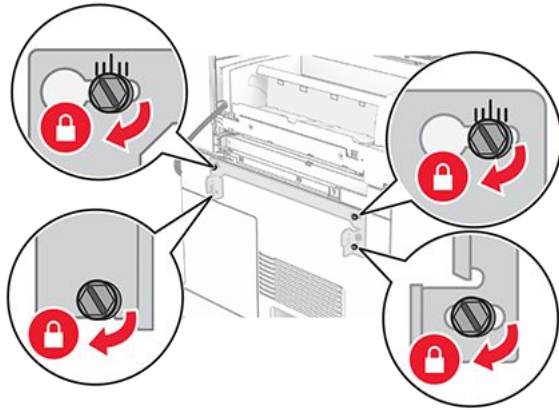


42. Open the finisher door, remove the screw, and then pull the finisher lock.

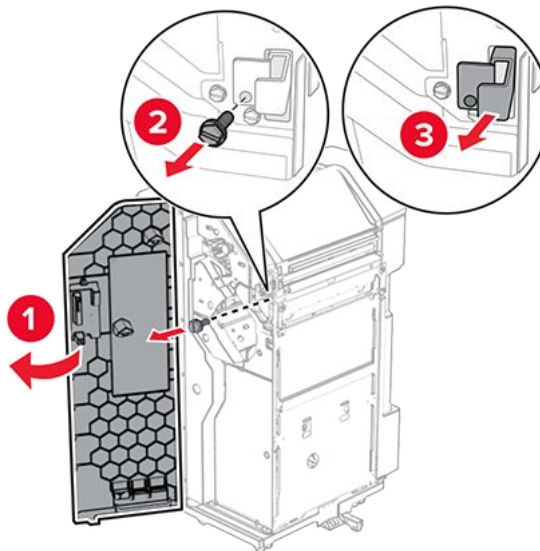


43. Connect the option cable to the printer.

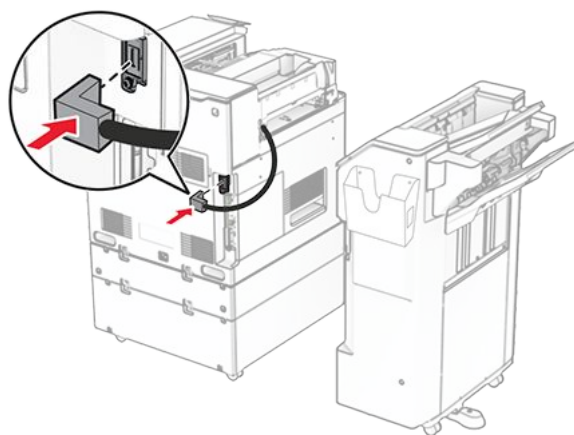


44. Connect the finisher cable to the option.

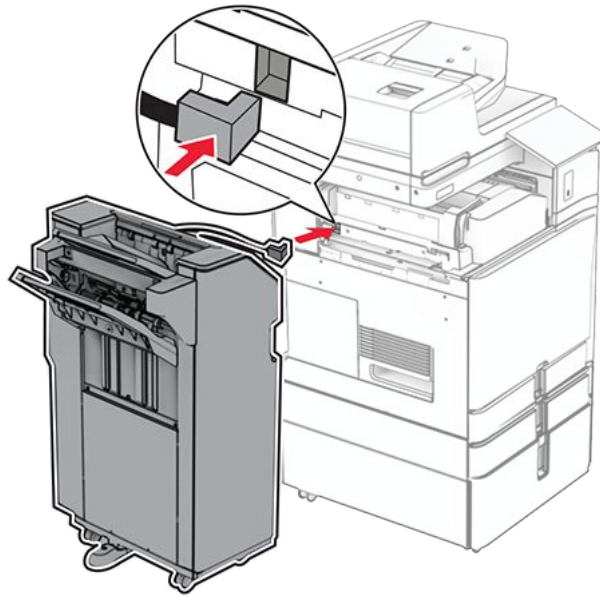

45. Attach the finisher to the printer.

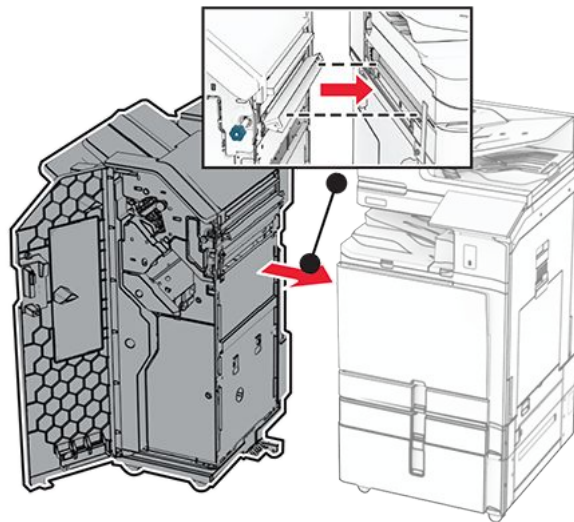

46. Lock the finisher to the printer, and then install the screw.

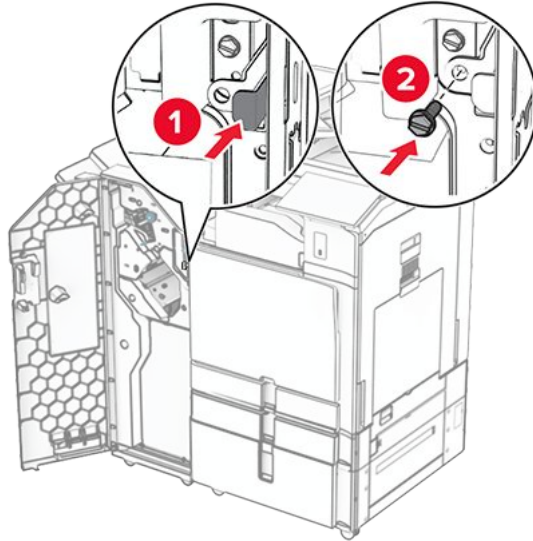

47. Close the finisher door.
48. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

49. Turn on the printer.

Installing the booklet finisher and paper transport unit




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

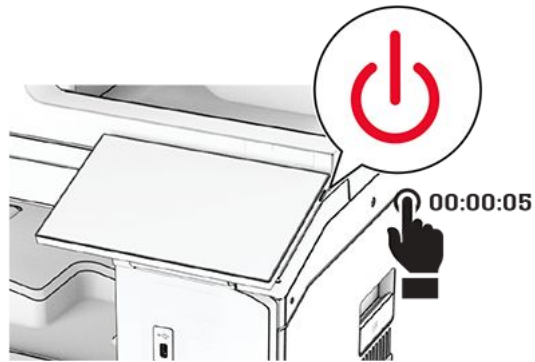


2. Unplug the power cord from the electrical outlet, and then from the printer.

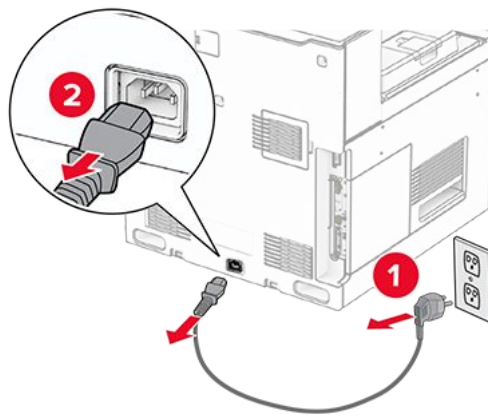

3. Unpack the paper transport unit.
4. Remove the standard bin.


Note: Do not throw away the bin.

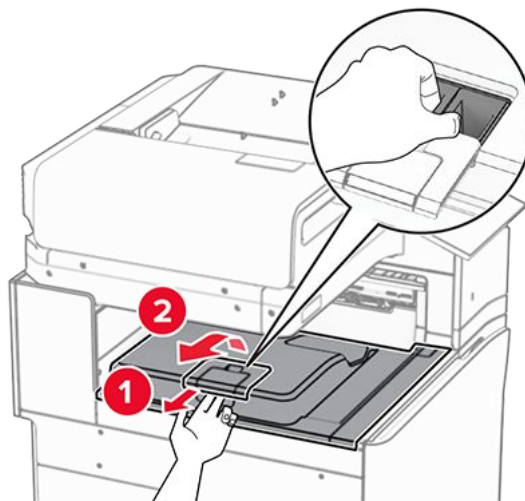

Set up, install, and configure


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

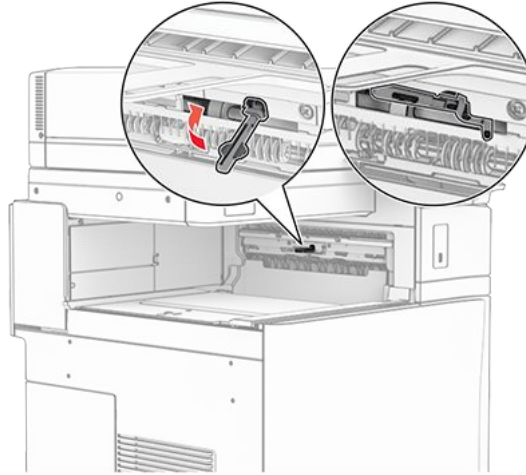


6. Remove the backup roller.


Note: Do not throw away the roller.

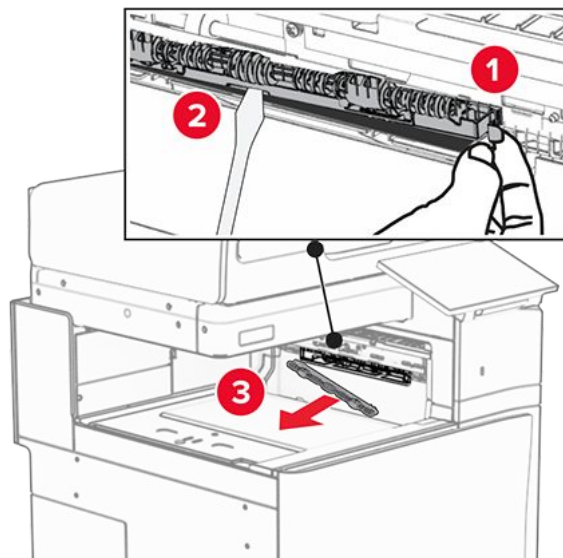


7. Insert the feed roller that came with the paper transport unit until it clicks into place.

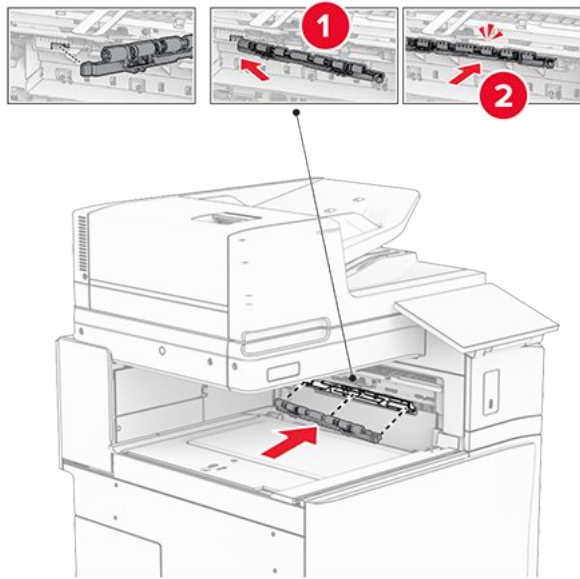

Note: Make sure that the metal spring is in front of the feed roller.

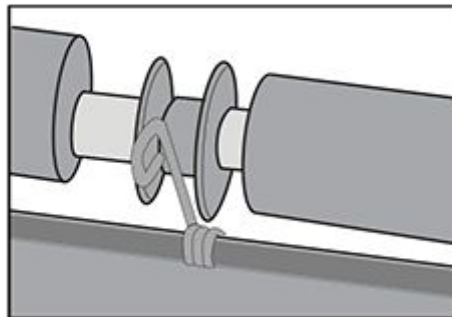


8. Attach the roller cover until it clicks into place.

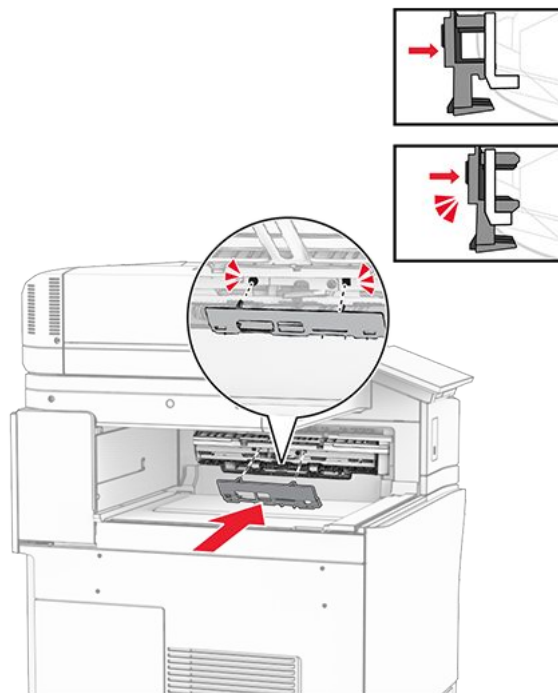


9. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

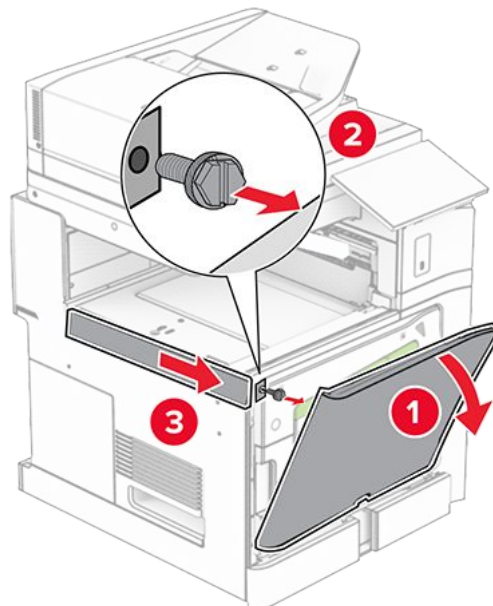


10. Close the front door.
11. Remove the paper transport connector cover.

Note: Do not throw away the cover.

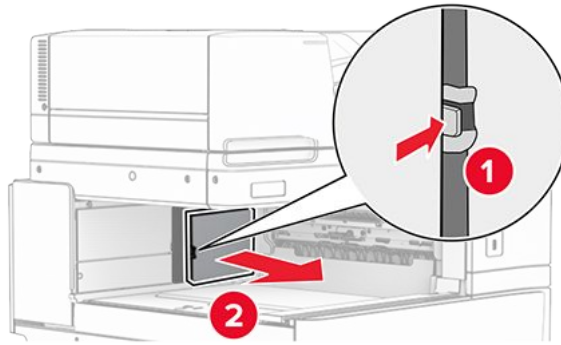


12. Remove the cover.


Note: Do not throw away the cover.

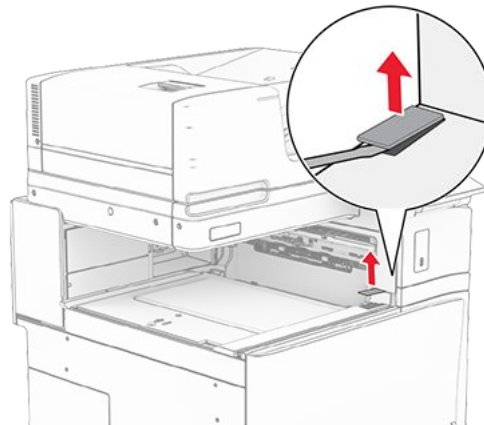


13. Attach the metal bracket.

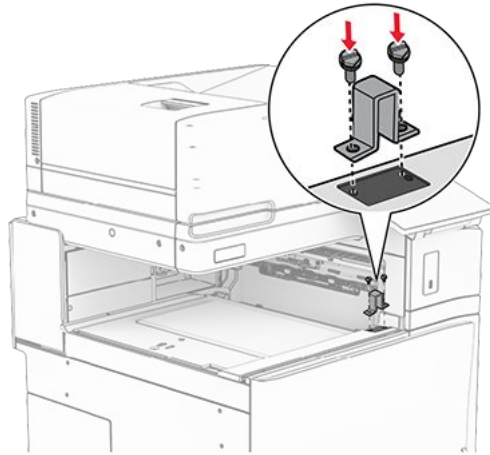

14. Insert the paper transport unit.

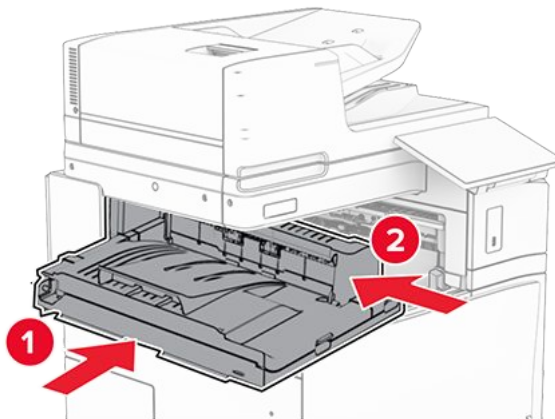


15. Open handle G, and then install the screw into the front of the paper transport unit.

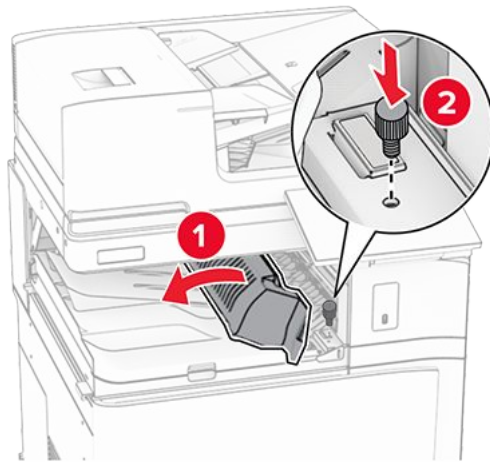


16. Close handle G.


17. Install the screw into the rear of the paper transport unit.

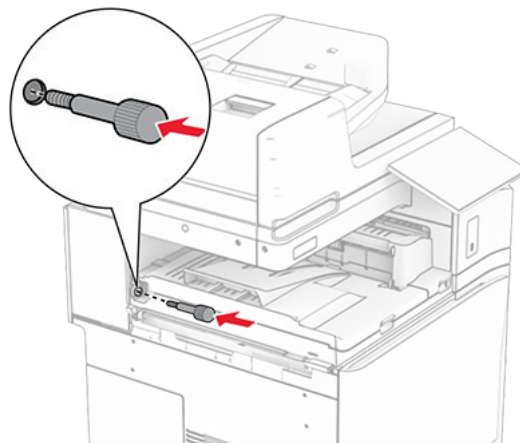


18. Open the front door, and then attach the cover that came with the paper transport unit to the left side of the printer.

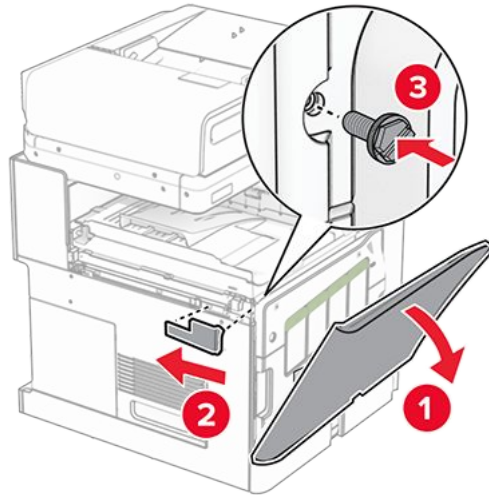



19. Close the front door.
20. Unpack the booklet finisher, and then remove all the packing material.
21. Attach the bracket to the finisher.

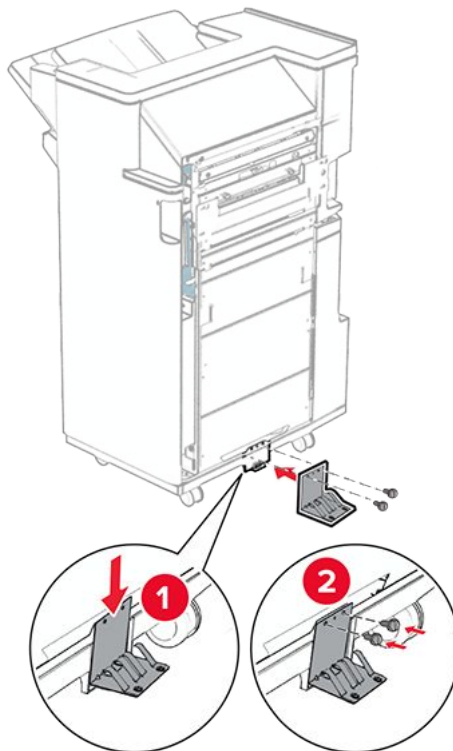


22. Attach the foam tape to the finisher.

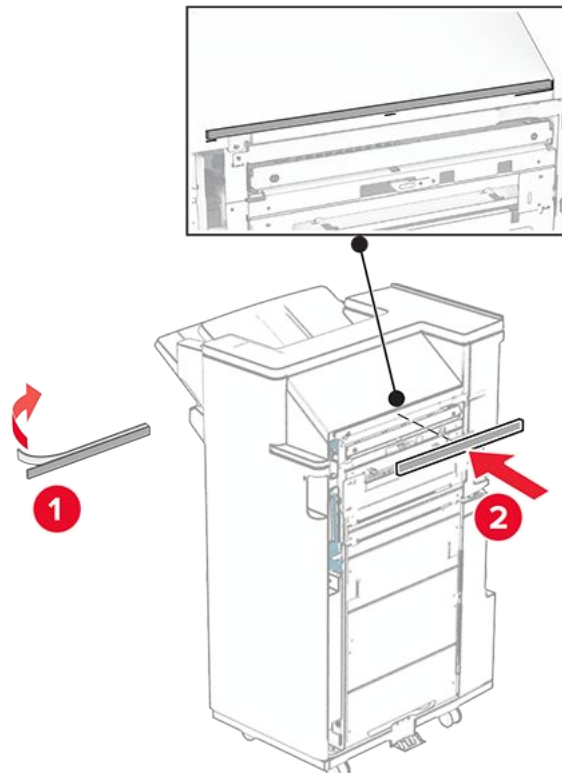


23. Attach the feed guide to the finisher.

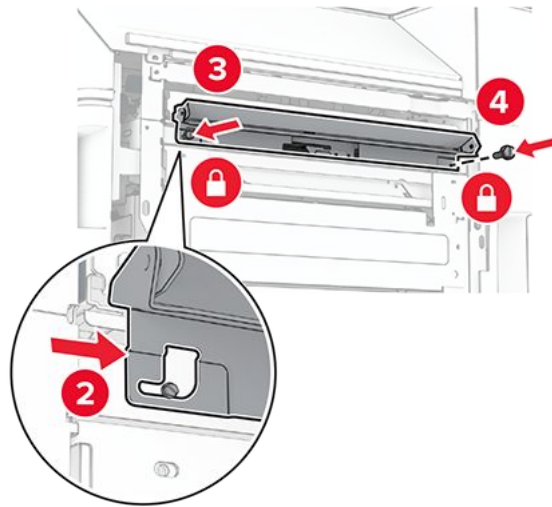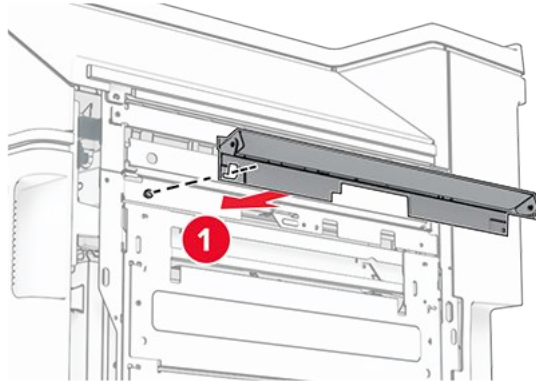

24. Attach the upper bin to the finisher.

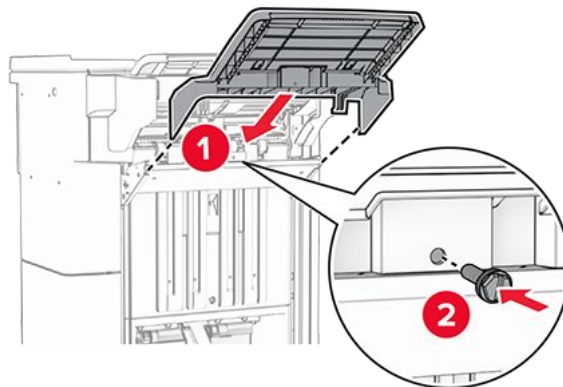


25. Raise the bin flap, and then attach the lower bin to the finisher.

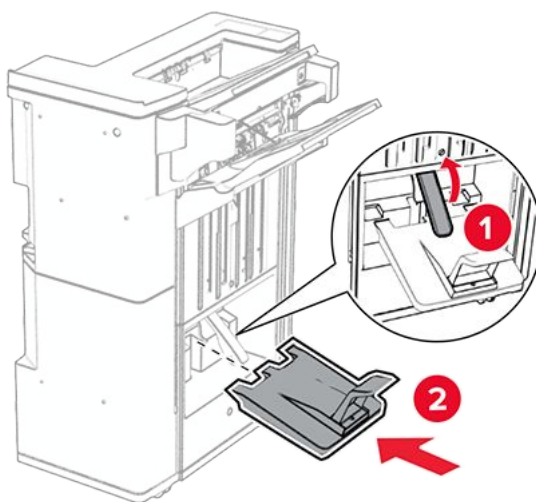

26. Open the finisher door.


27. Remove the packing material from the hole punch box, and then insert it into the finisher.

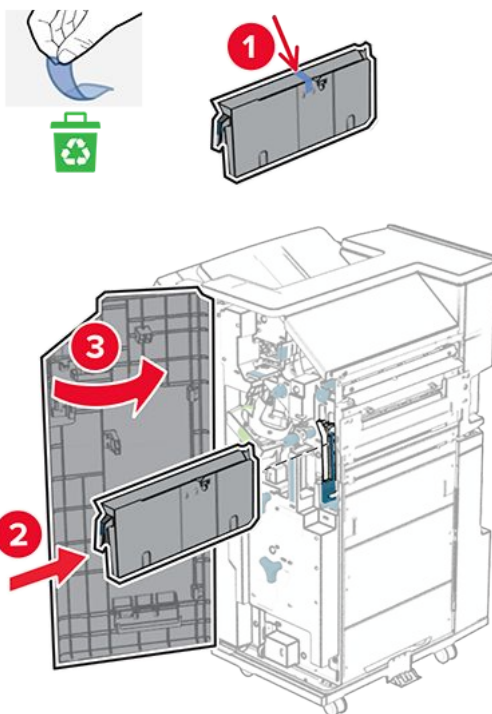


28. Place the bin extender on the finisher bin.

Notes

- The bin extender is used for A3-size paper or longer and in high humidity conditions to help in stacking the paper.
- The bin capacity is reduced when the bin extender is used.

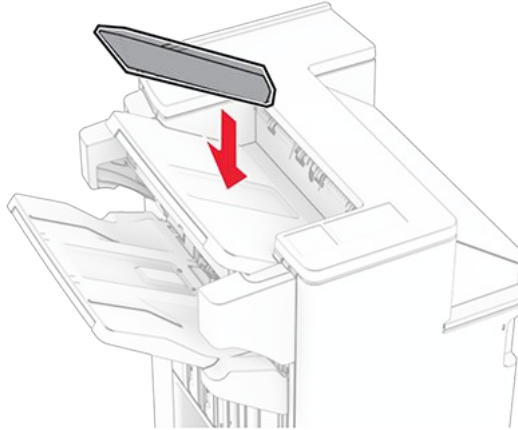


29. Attach the holder to the rear of the finisher.

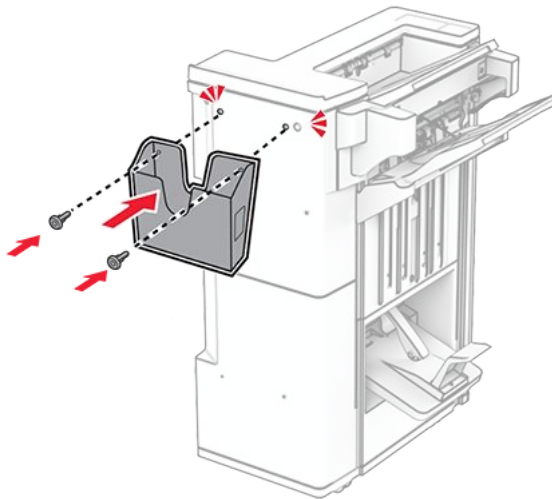


30. Close the finisher door.


31. Loosely attach a screw to the printer.

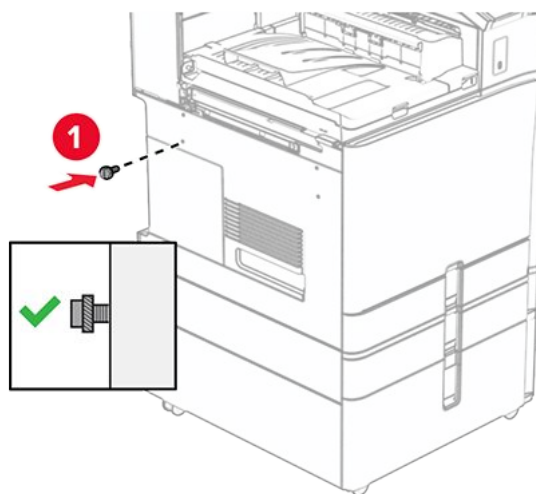


32. Align the mounting bracket to the screw.

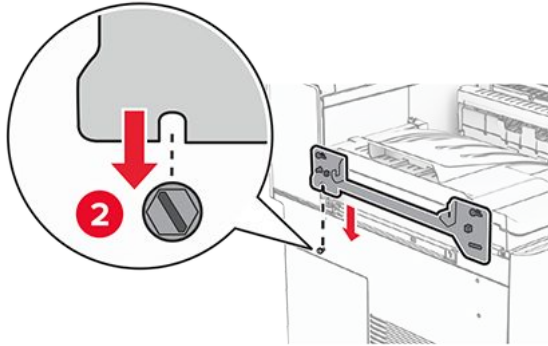

33. Loosely attach screws to the mounting bracket.

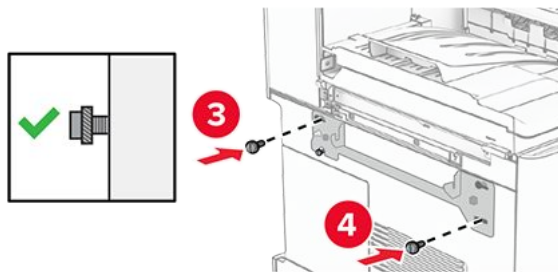


34. Attach the bracket that came with the paper transport unit to the printer.

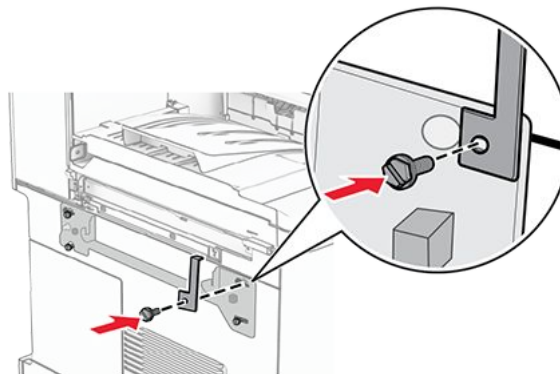


35. Tighten the screws to secure the mounting bracket onto the printer.


Note: Align the screws to the markers on the mounting bracket.

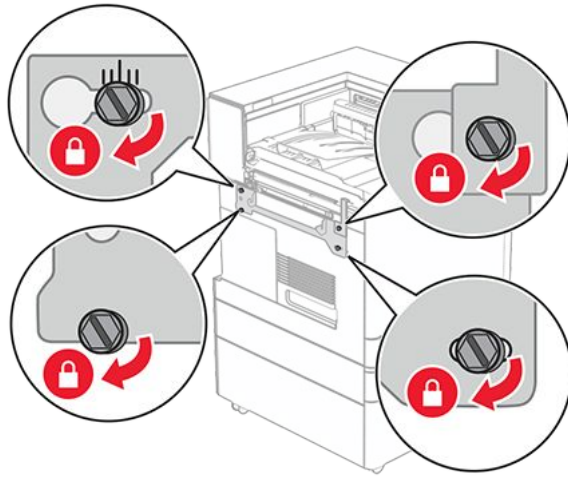


36. Open the finisher door, remove the screw, and then pull the finisher lock.

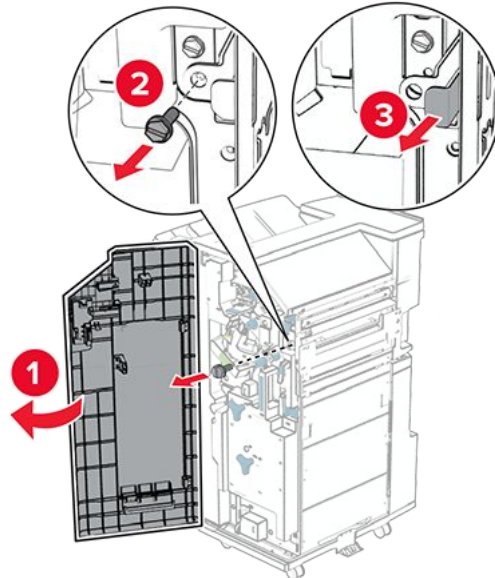

37. Attach the finisher to the printer.

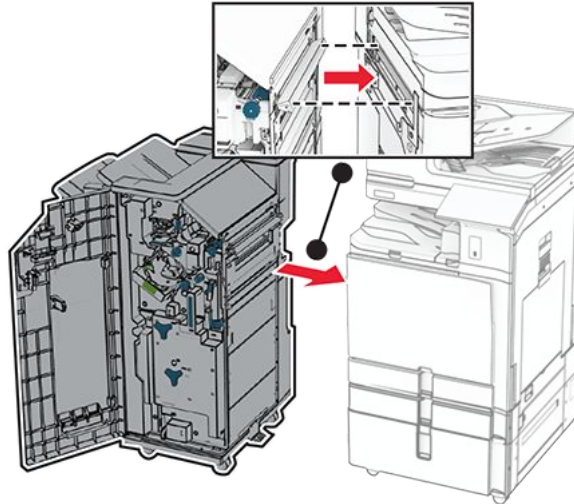


38. Lock the finisher to the printer, and then install the screw.

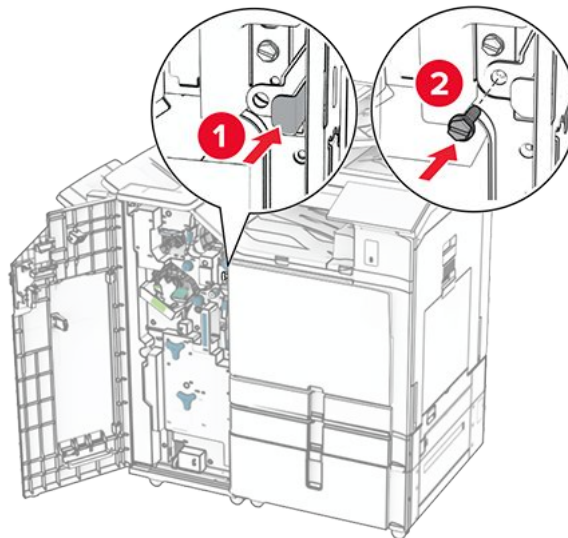

39. Close the finisher door.

40. Connect the finisher cable to the printer.

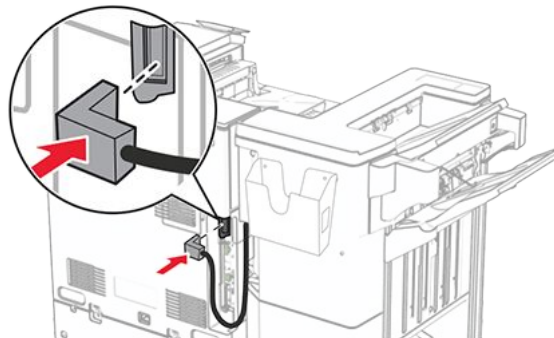

41. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

42. Turn on the printer.

Installing the booklet finisher and folding paper transport




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

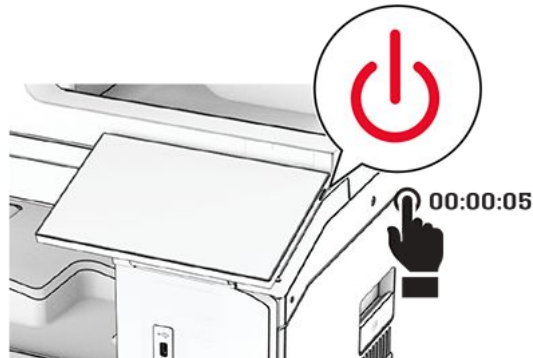


2. Unplug the power cord from the electrical outlet, and then from the printer.

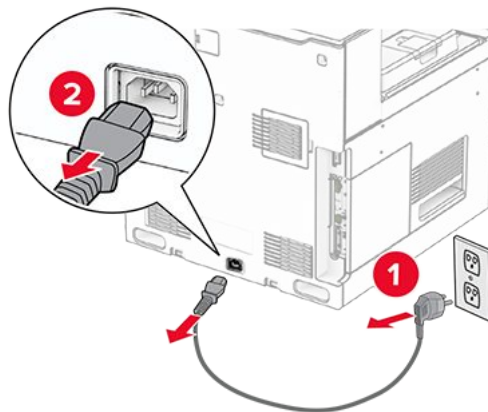

Set up, install, and configure


3. Unpack the folding paper transport.
4. Remove the standard bin.

Note: Do not throw away the bin.

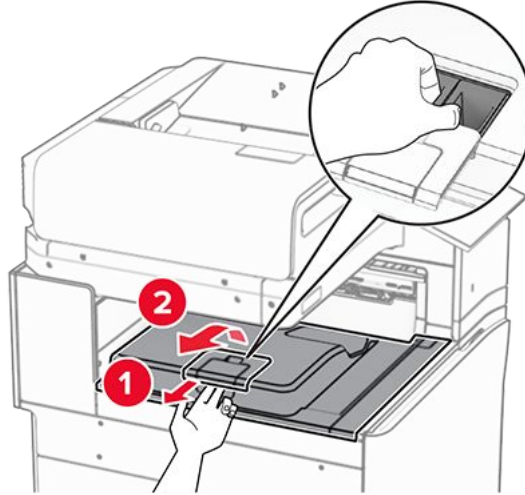


5. Before installing the option, place the exit bin flag into the closed position.

Note: When the option is removed, place the exit bin flag into the open position.

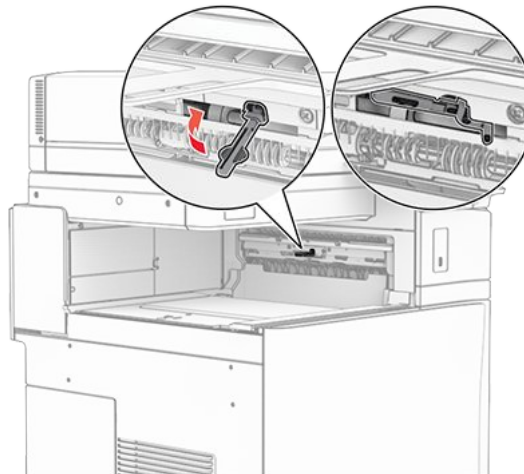


6. Remove the backup roller.


Note: Do not throw away the roller.

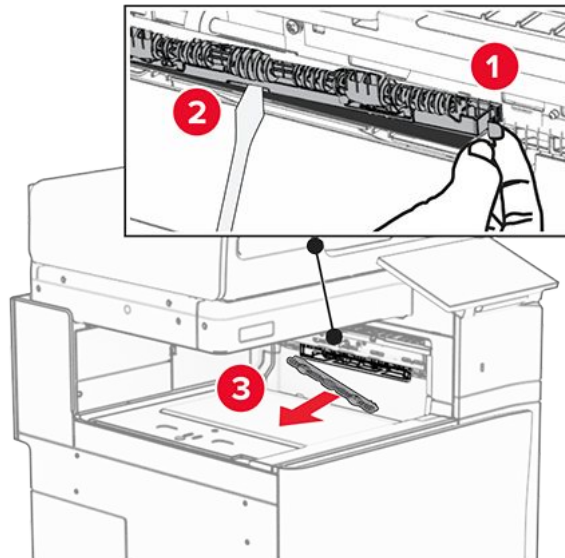


7. Insert the feed roller that came with the option until it clicks into place.

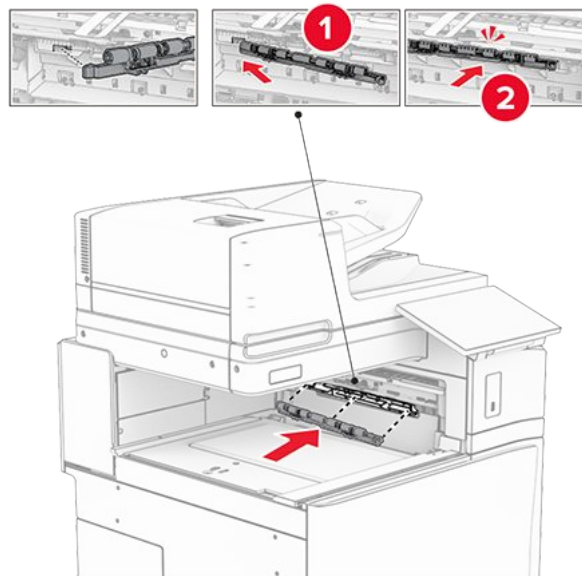

Note: Make sure that the metal spring is in front of the feed roller.

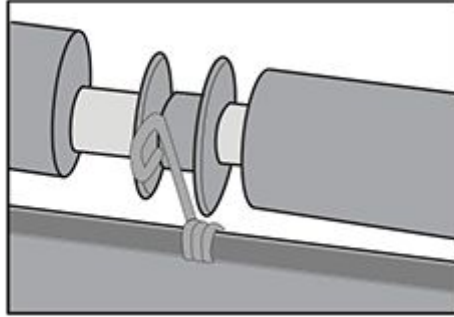


8. Attach the roller cover until it clicks into place.

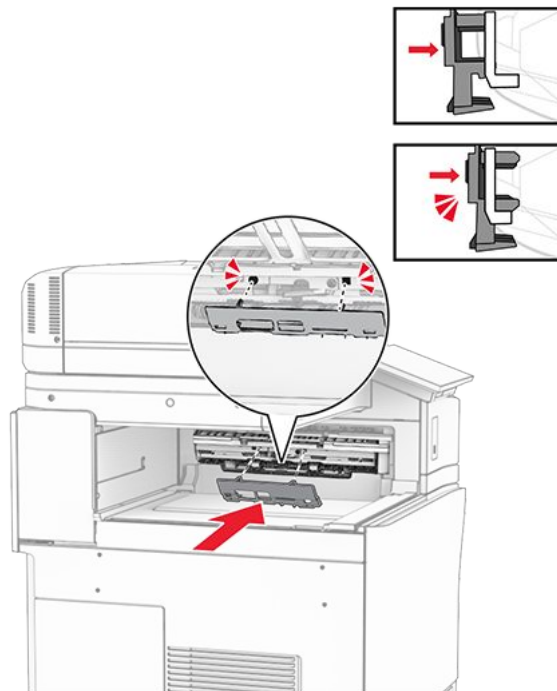


9. Open the front door, and then remove the cover on the left side of the printer.

Note: Do not throw away the screw and cover.

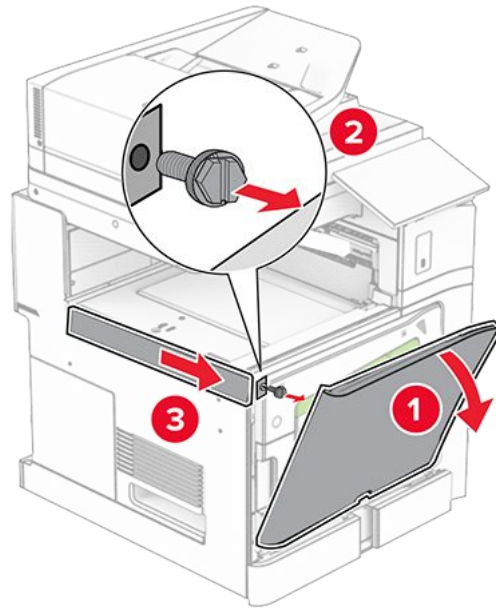


10. Close the front door.
11. Remove the paper transport connector cover.

Note: Do not throw away the cover.

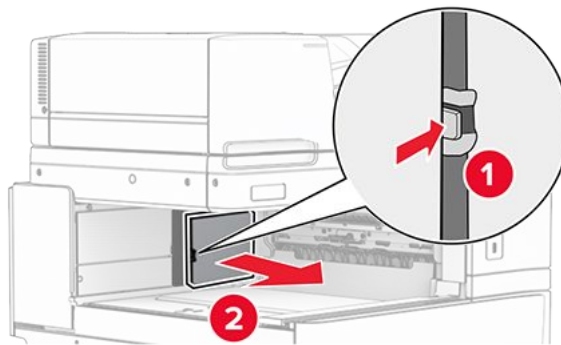


12. Remove the left rear cover.

Note: Do not throw away the screw and cover.

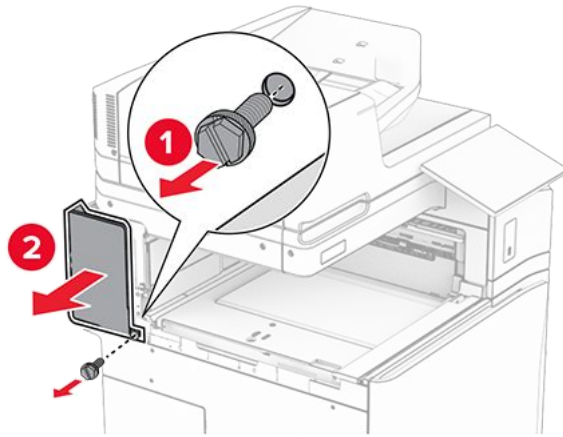


13. Remove the inner bin cover.


Note: Do not throw away the screw and cover.

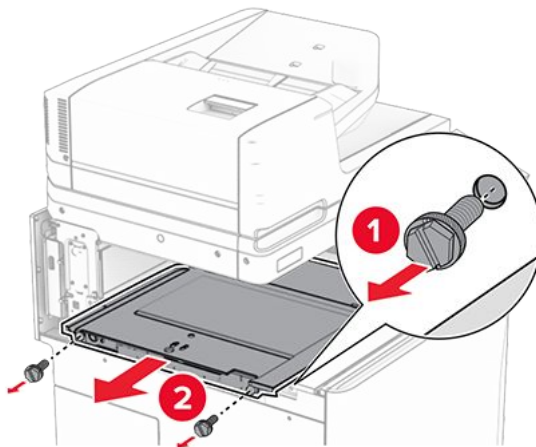



14. Align, and then insert the inner bin cover that came with the option.

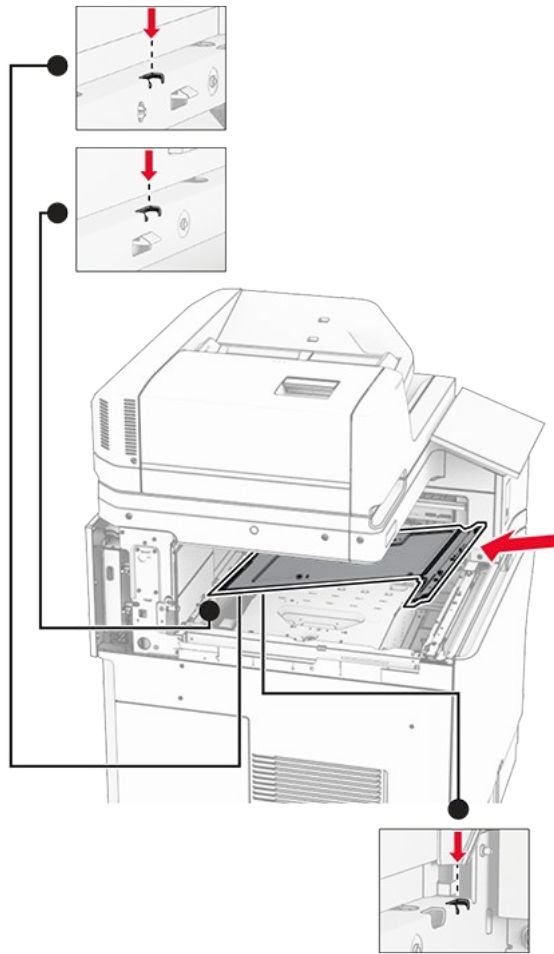



15. Install the screws to the inner bin cover.

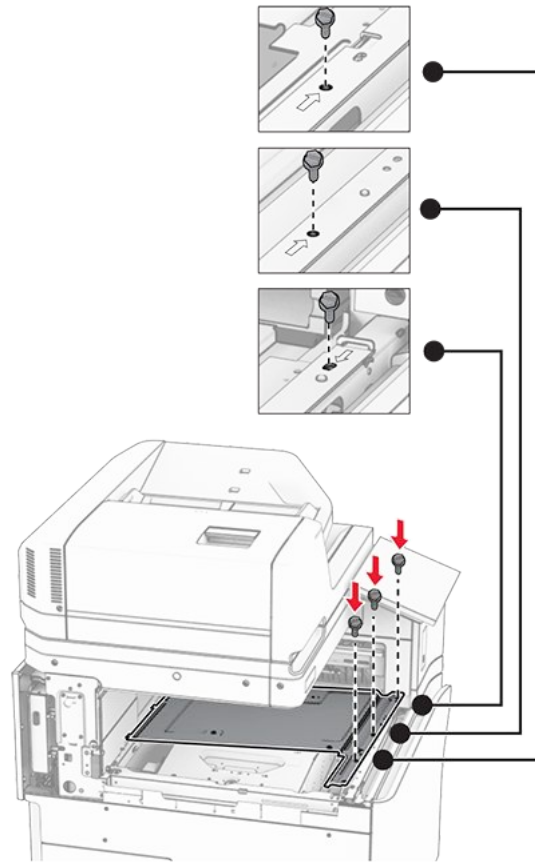

16. Attach the pieces of foam tape to the option.

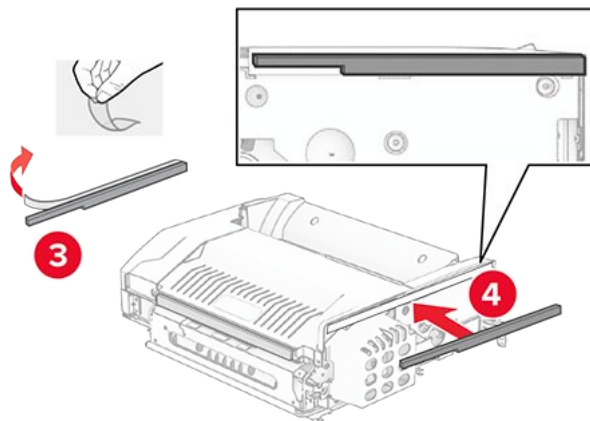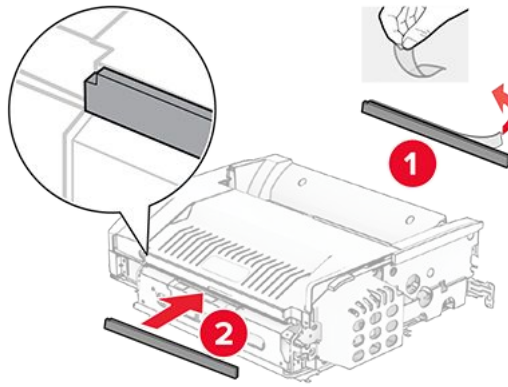


17. Open door F, and then tighten the screws.

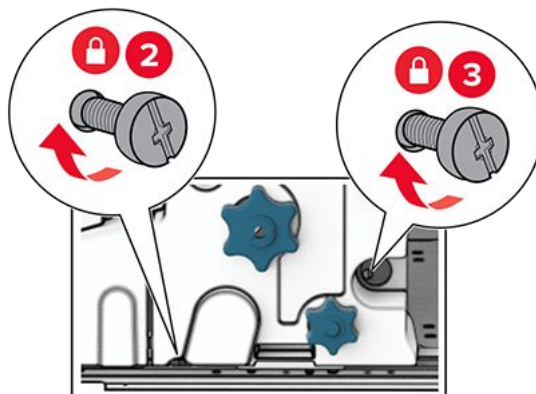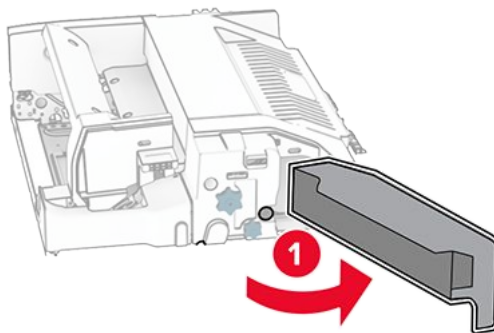


18. Close door F.

19. Attach the bracket to the option.

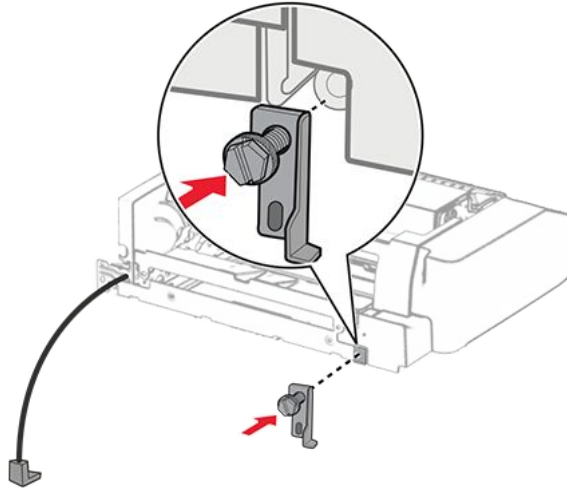


20. Insert the option.

Note: Make sure that the metal bracket is in front of the printer.

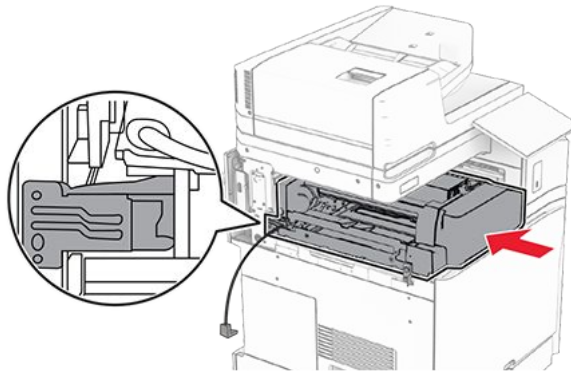


21. Open door F, and then using the screwdriver that came with the option, install the screw.

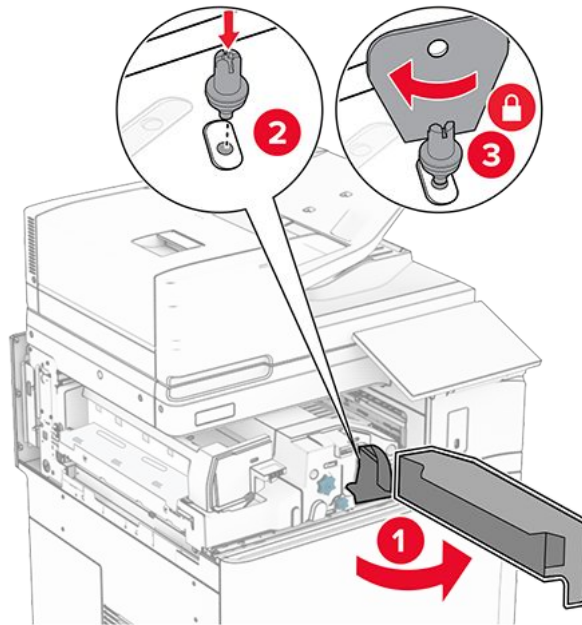


22. Close door F.


23. Install the screws into the option.

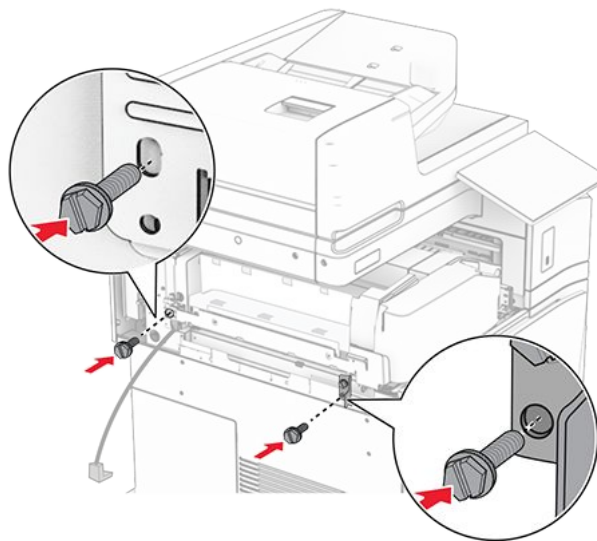


24. Attach the left rear cover.

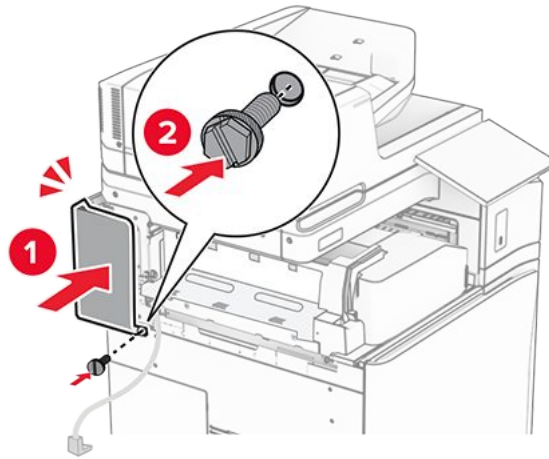



25. Unpack the booklet finisher, and then remove all the packing material.
26. Attach the bracket to the finisher.

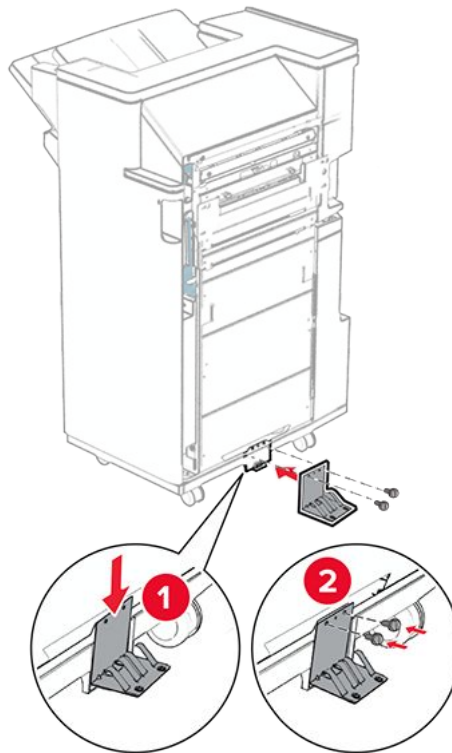


27. Attach the foam tape to the finisher.

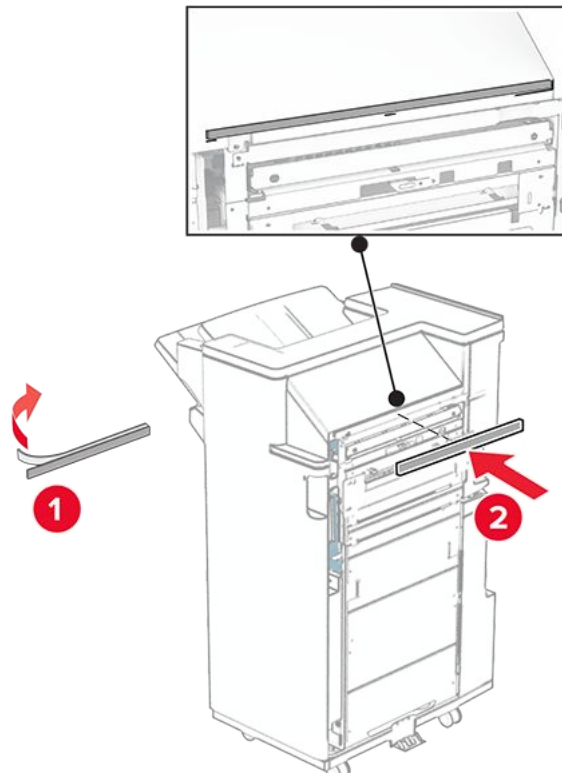


28. Attach the feed guide to the finisher.

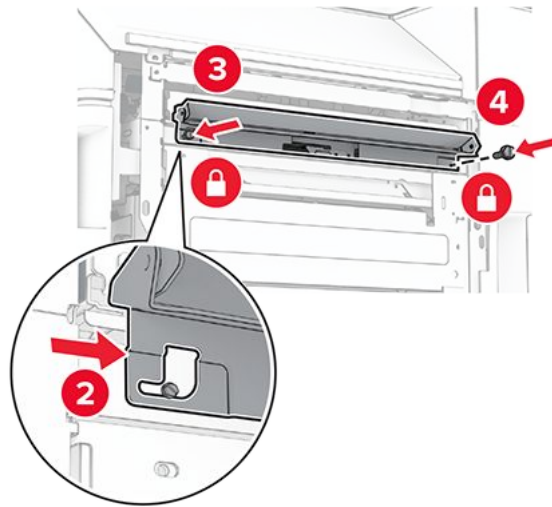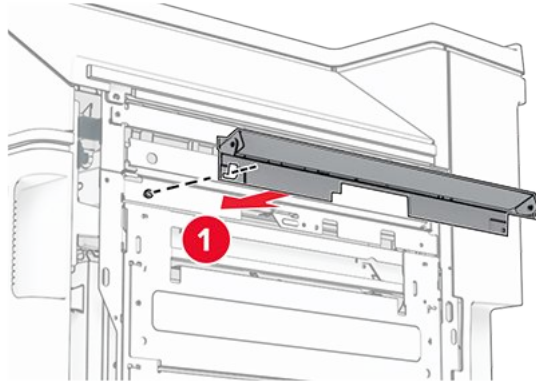


29. Attach the upper bin to the finisher.

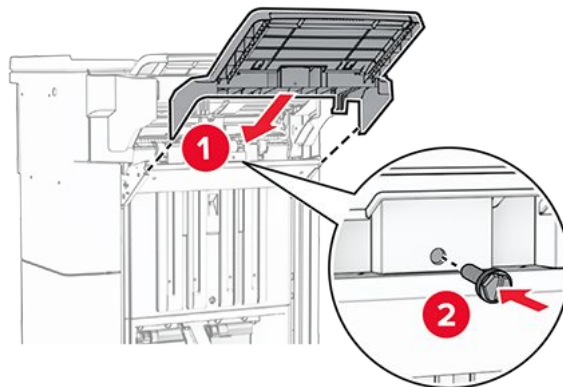

30. Raise the bin flap, and then attach the lower bin to the finisher.

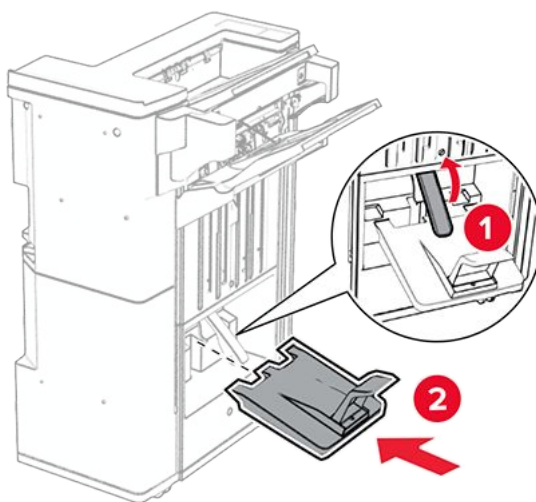


31. Open the finisher door.
32. Remove the packing material from the hole punch box, and then insert it into the finisher.

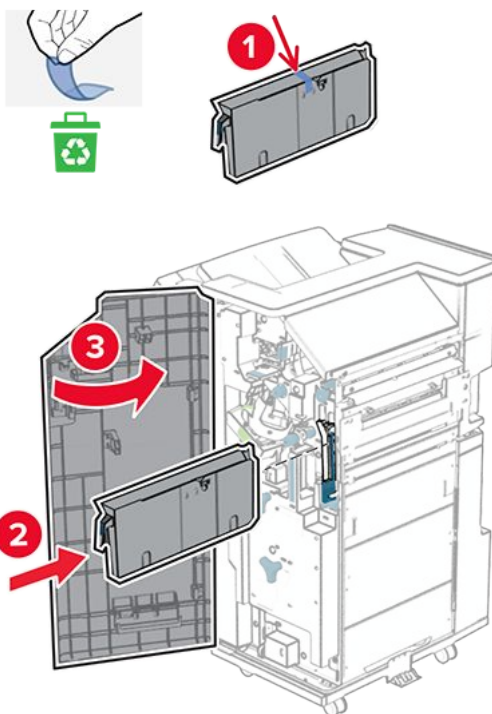


33. Place the bin extender on the finisher bin.

Notes

- The bin extender is used for A3-size paper or longer and in high humidity conditions to help in stacking the paper.
- The bin capacity is reduced when the bin extender is used.

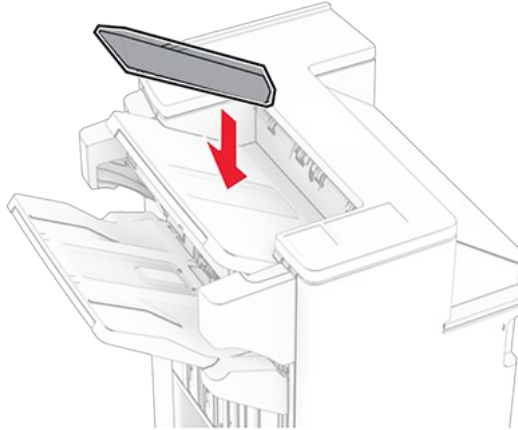


34. Attach the basket to the rear of the finisher.

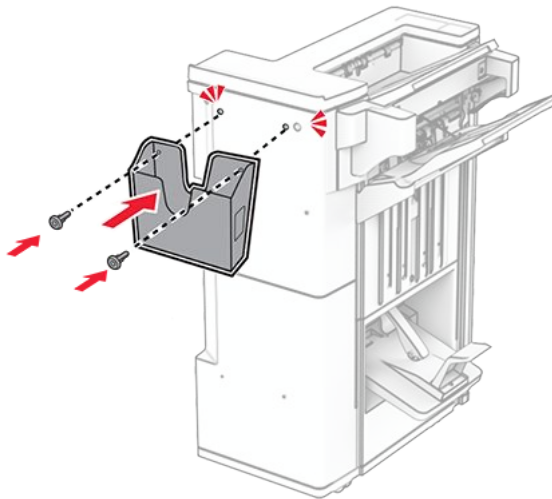


35. Close the finisher door.


36. Raise the bin flap, and then align and attach the cover to the option.

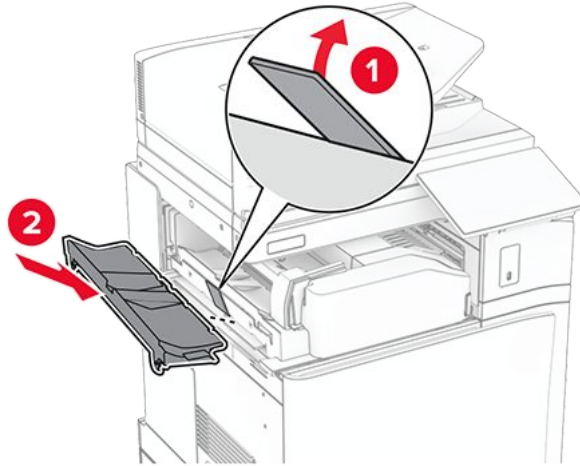


37. Install the screws.

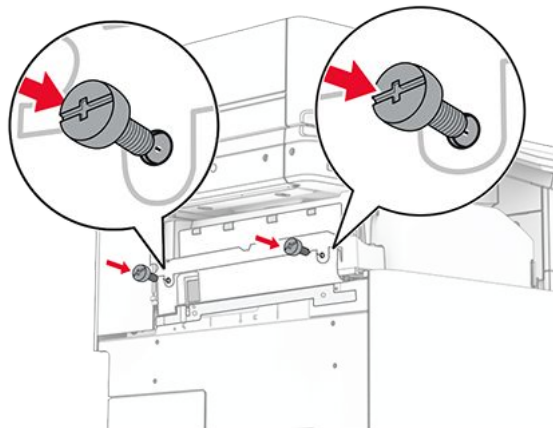


38. Open the front door, and then attach the trim cover that came with the option.

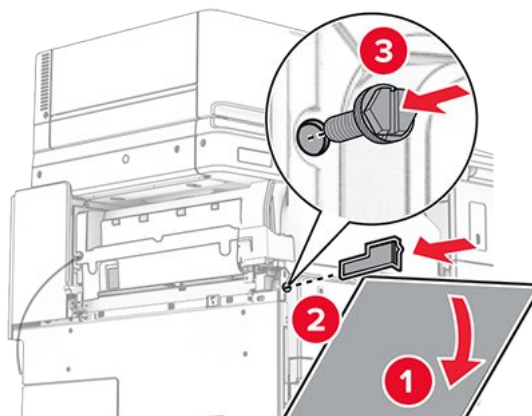


39. Loosely attach a screw to the printer.

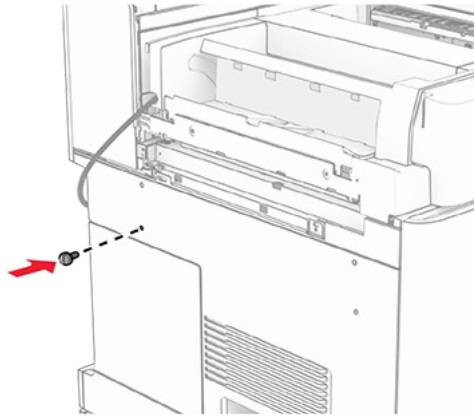

40. Align the mounting bracket to the screw.

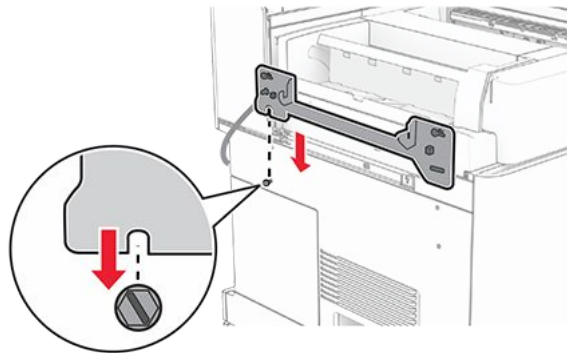


41. Loosely attach screws into the mounting bracket.

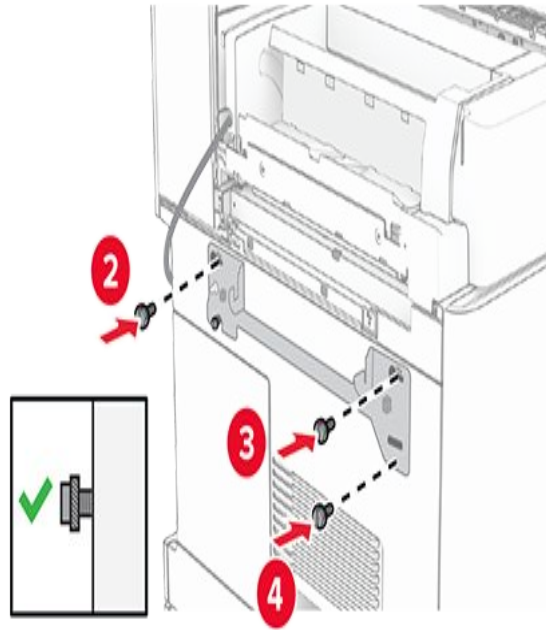


42. Tighten the screws to secure the mounting bracket onto the printer.


Note: Align the screws to the markers on the mounting bracket.

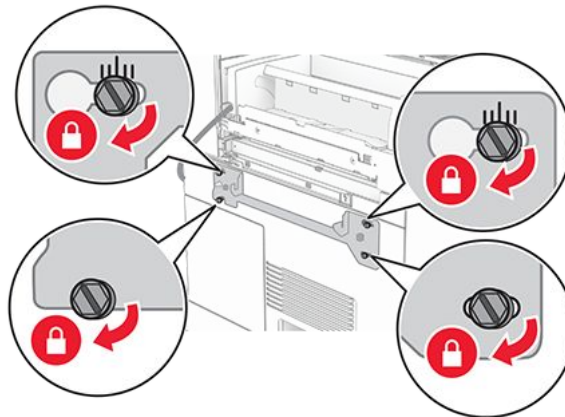


43. Open the finisher door, remove the screw, and then pull the finisher lock.

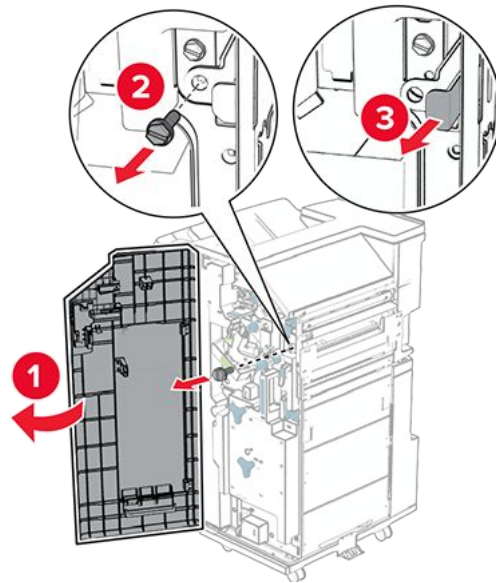


44. Connect the option cable to the printer.

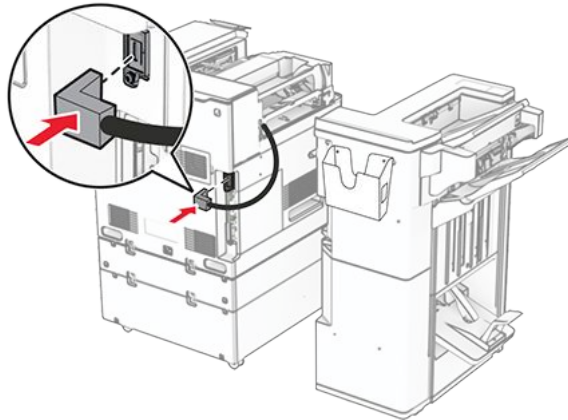


45. Connect the finisher cable to the option.

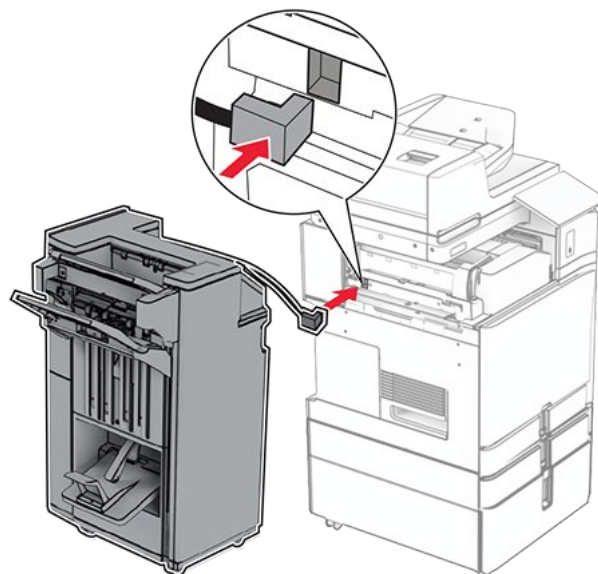

46. Attach the finisher to the printer.

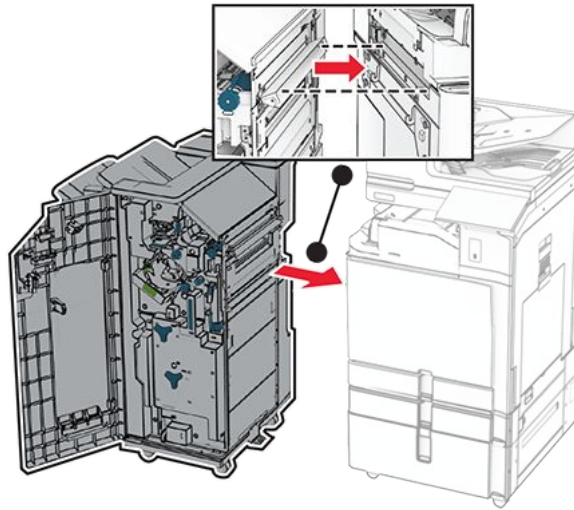

47. Lock the finisher to the printer, and then install the screw.

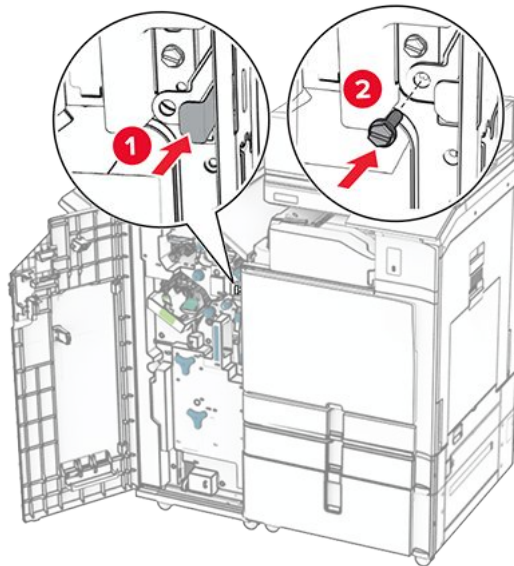

48. Close the finisher door.
49. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.




CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.


50. Turn on the printer.

Installing the keyboard shelf


1. Turn off the printer.

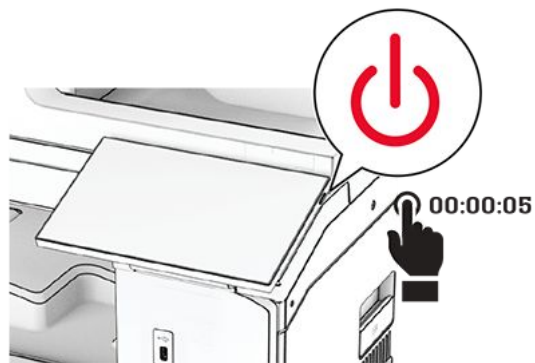

2. Open door B.

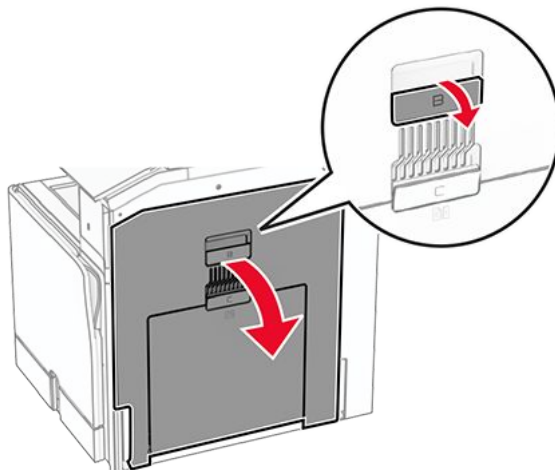


3. Remove the front cover, and then close door B.

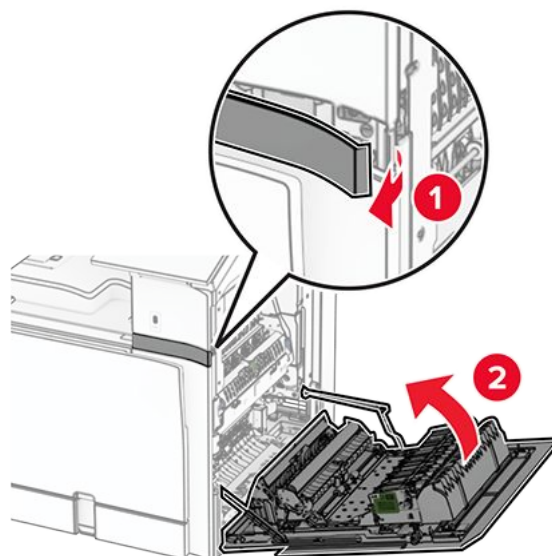


Set up, install, and configure


4. Unpack the keyboard shelf.
5. Insert the keyboard cable into the shelf.

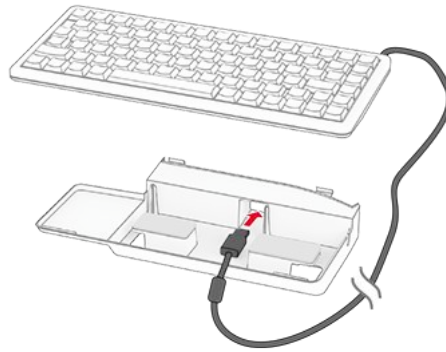


6. Loop the cable inside the shelf.

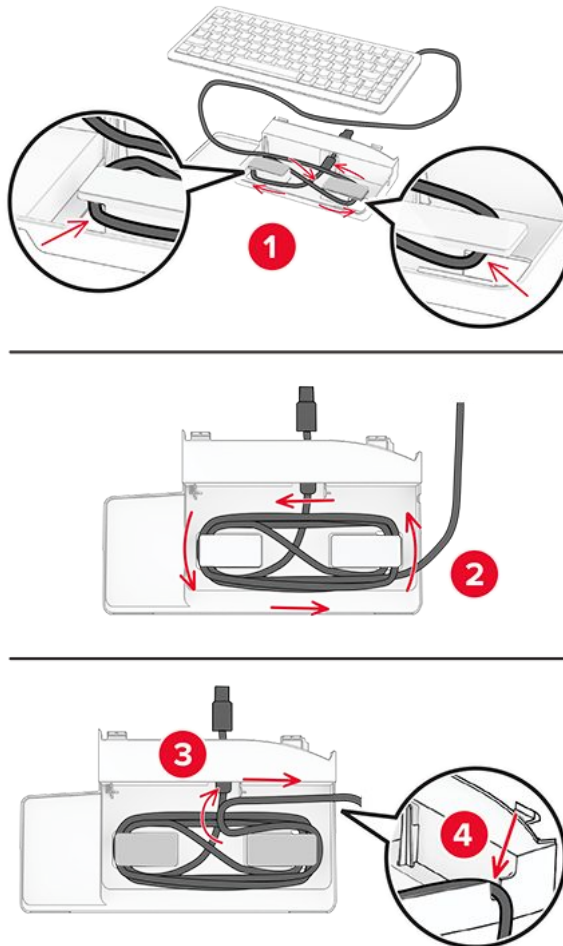



7. Remove the adhesive cover.

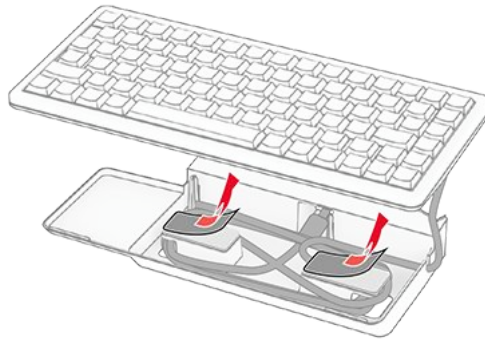

8. Align, and then attach the keyboard to the base.

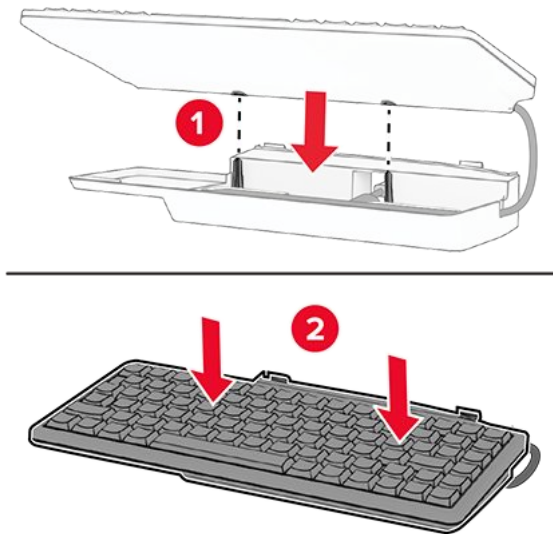

9. Align the shelf, connect the keyboard cable to the printer, insert the shelf, and then attach it to the printer.

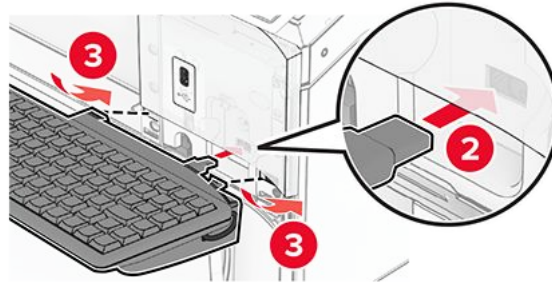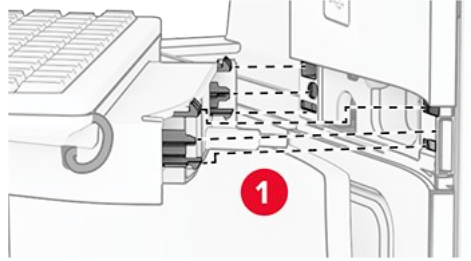

10. Turn on the printer.

Installing a fax card




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

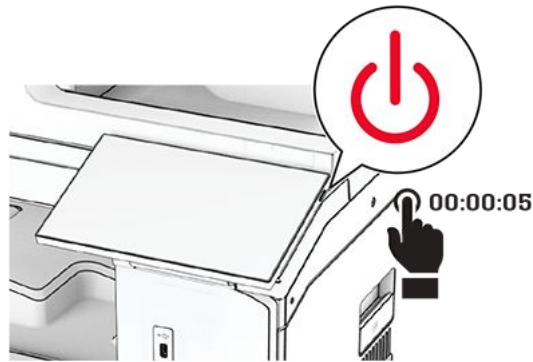



2. Unplug the power cord from the electrical outlet, and then from the printer.

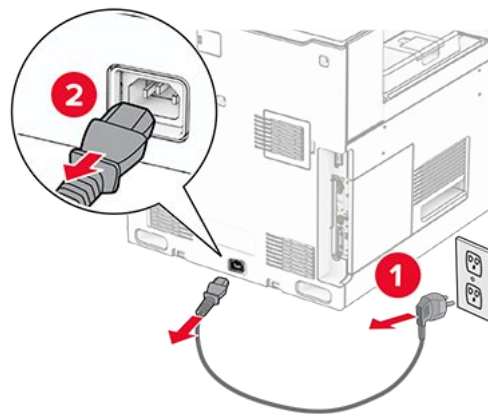

3. Open the controller board access cover.


Warning—Potential Damage

Controller board electronic components are easily damaged by static electricity. Touch a metal surface on the printer before touching any controller board electronic components or connectors.

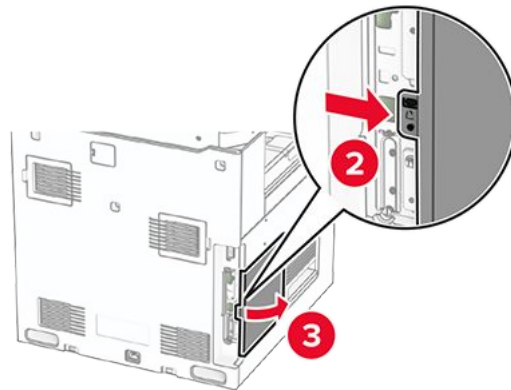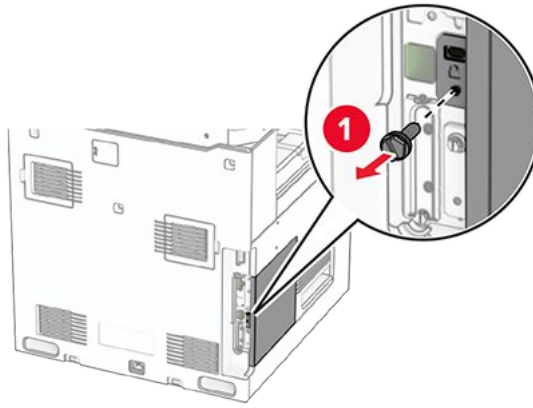


4. Remove the fax port cover.



Note: Do not throw away the screw and cover.

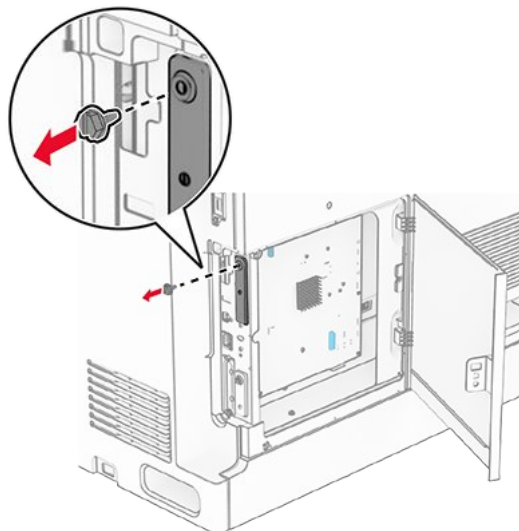


5. Unpack the fax card.
6. Connect the fax cable to the controller board.

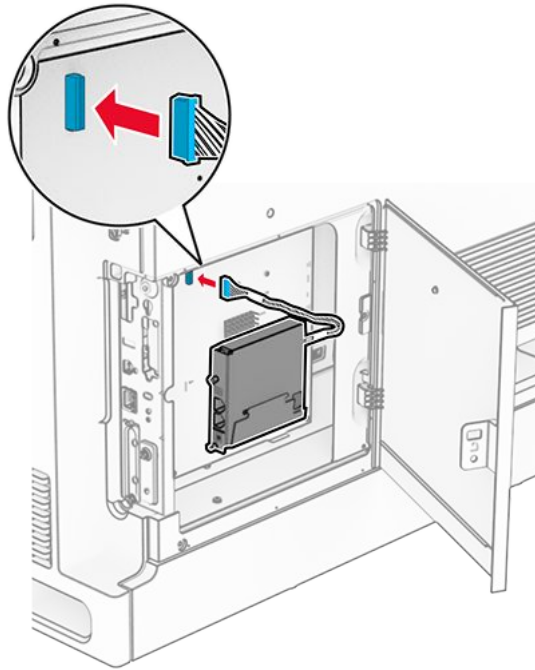

7. Align, and then install the fax card to the printer.

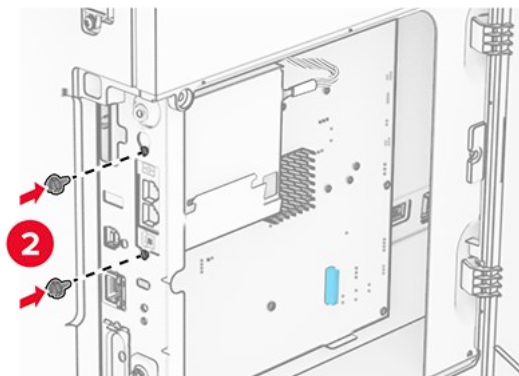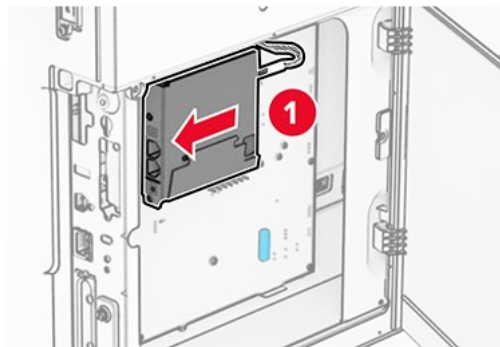

8. Close the controller board access cover until it clicks into place, and then install the screw.

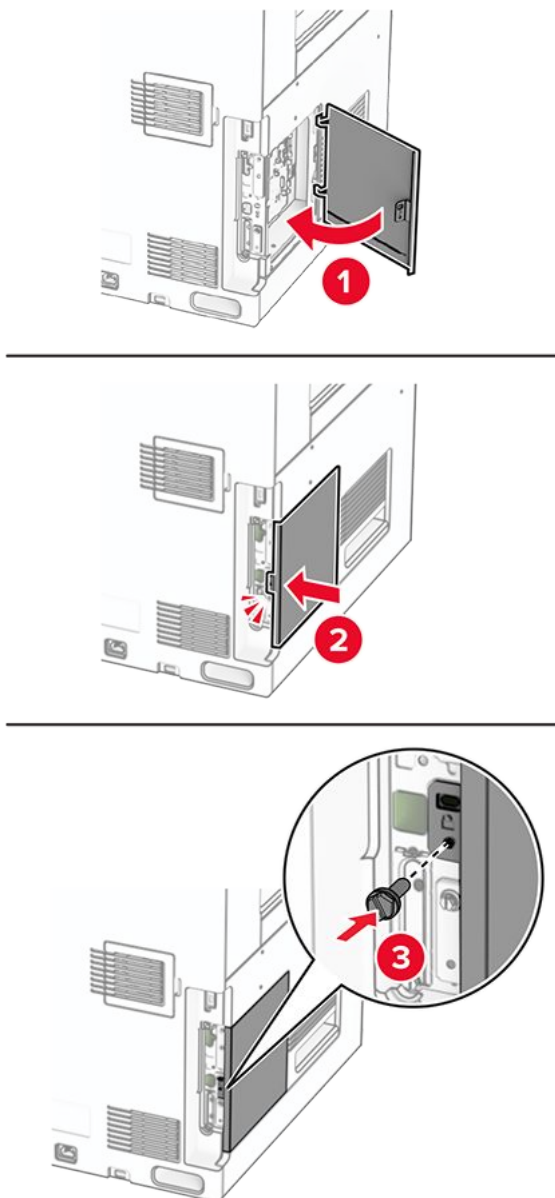

9. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.




CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.


10. Turn on the printer.

Installing the card reader


1. Turn off the printer.

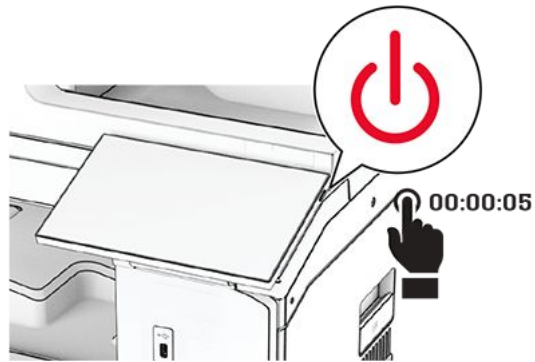

2. Open door B.

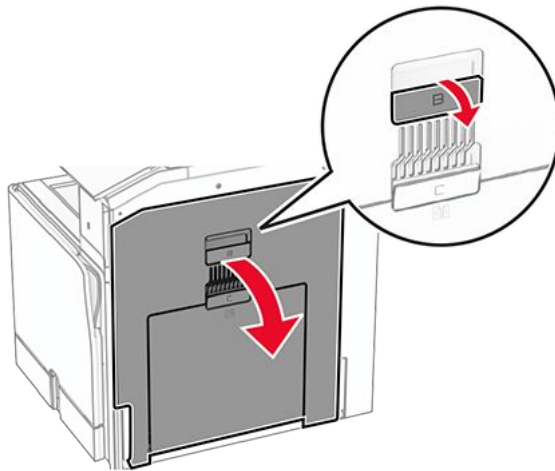


3. Open the front USB port cover.

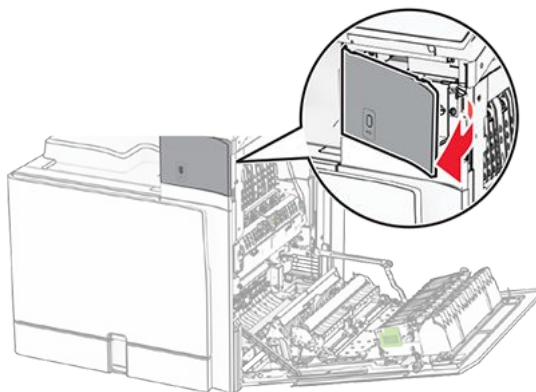


4. Remove the lower cover of the front USB port.


Note: If your printer does not have this part, then proceed to the next step.

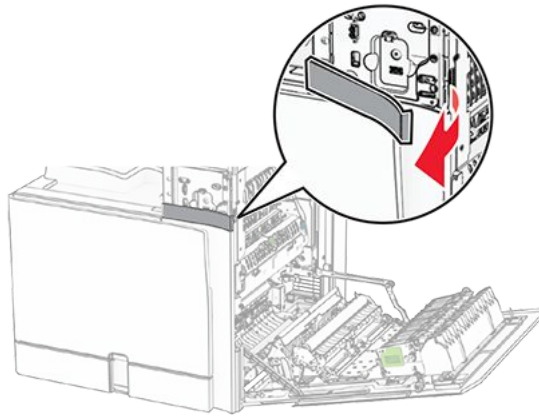



5. Remove the protective cover from the card reader.

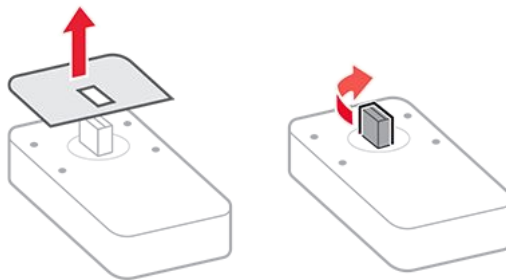



6. Insert the card reader.

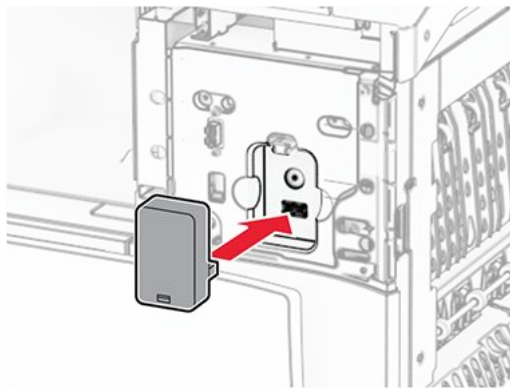


7. Attach the lower cover until it clicks into place.

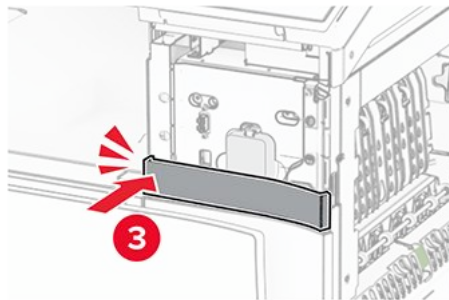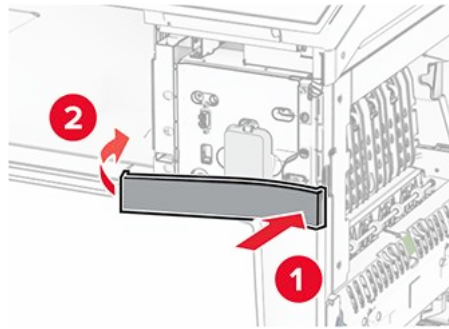



8. Attach the sticker guide to the front USB port cover.

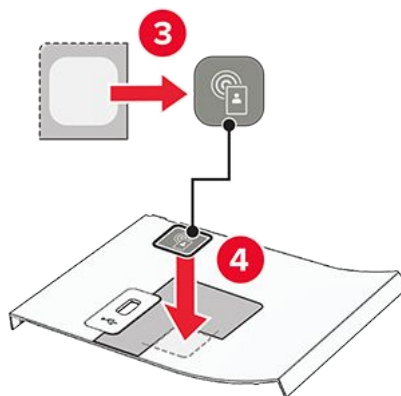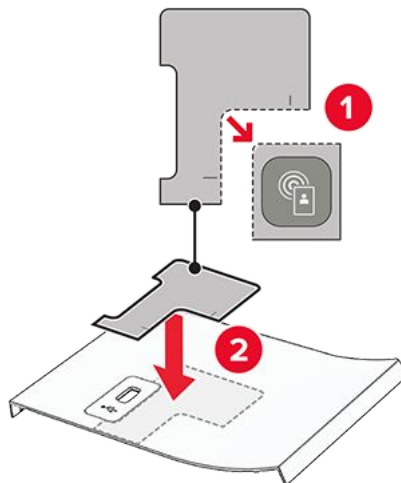

9. Attach the front USB port cover until it clicks into place.

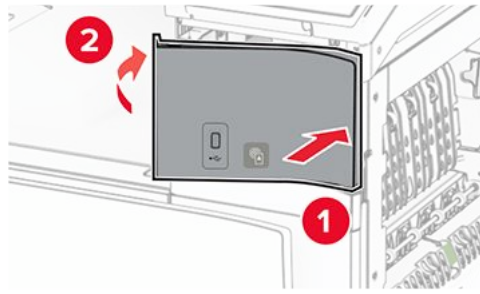

10. Close door B until it clicks into place.

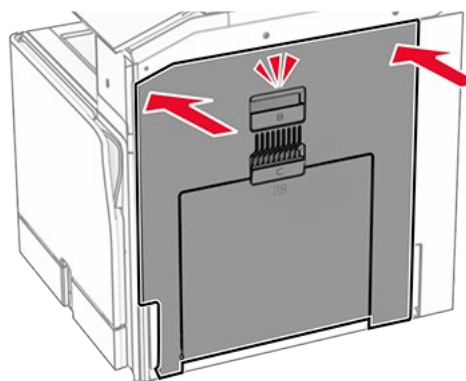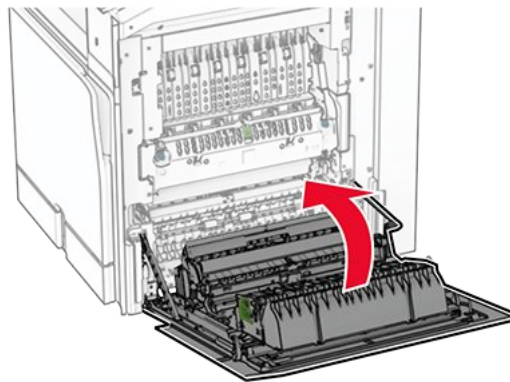

11. Turn on the printer.

Installing an internal solutions port




CAUTION—SHOCK HAZARD


To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices sometime after setting up the printer, then turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going into the printer.

Note: This task requires a flat-head screwdriver.

1. Turn off the printer.

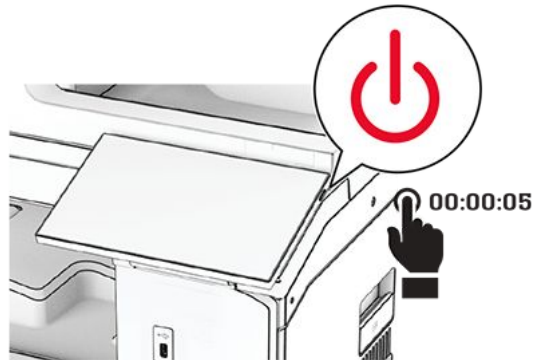



2. Unplug the power cord from the electrical outlet, and then from the printer.

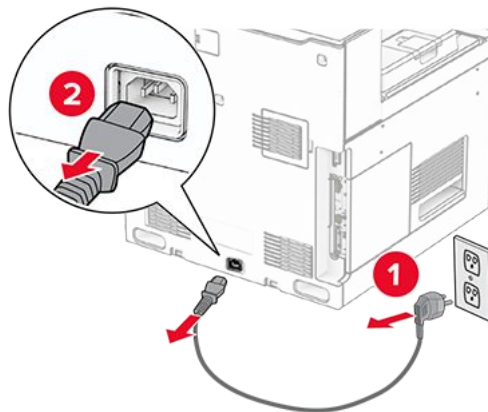

3. Open the controller board access cover.


Warning—Potential Damage

Controller board electronic components are easily damaged by static electricity. Touch a metal surface on the printer before touching any controller board electronic components or connectors.

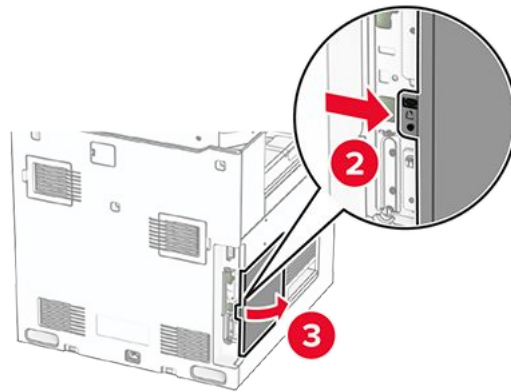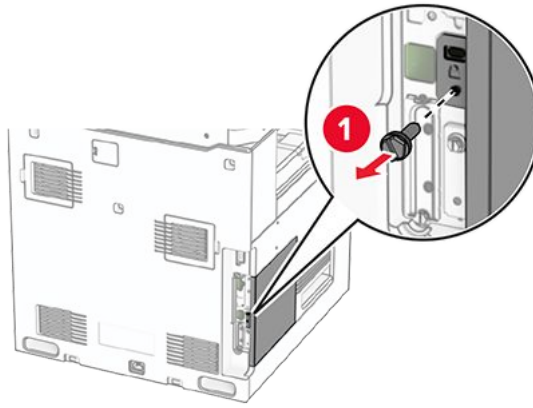


4. Remove the internal solutions port (ISP) cover.

Note: Do not throw away the screw and cover.


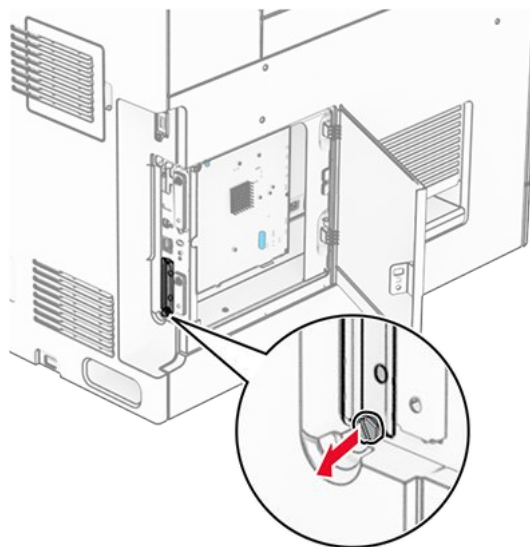


5. Unpack the ISP kit.



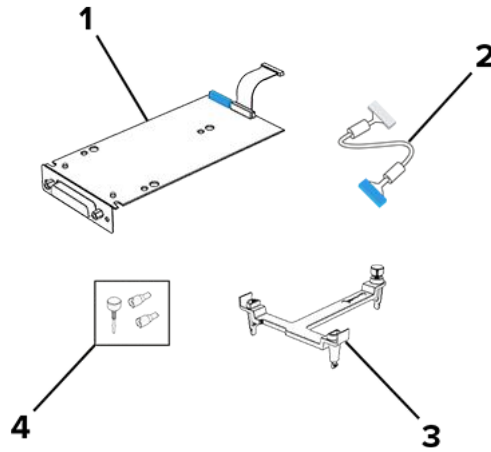


1	ISP
2	ISP extended cable
3	Mounting bracket
4	Thumbscrews


6. Attach the mounting bracket to the controller board until it clicks into place.

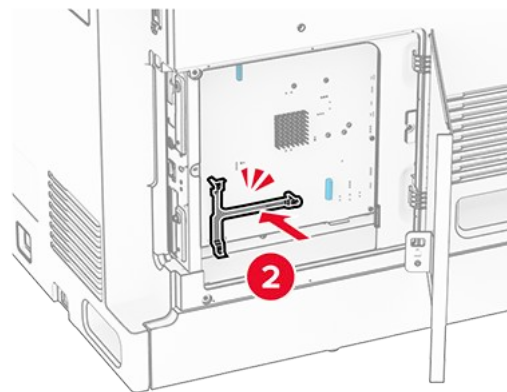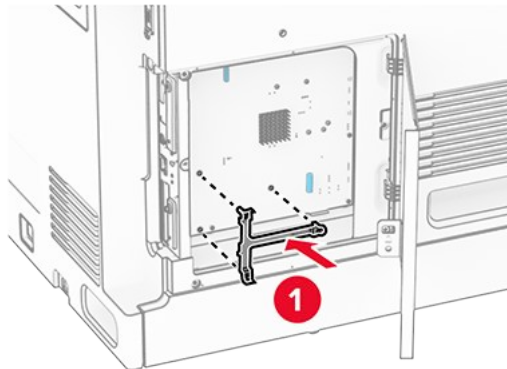

7. Attach the ISP to the mounting bracket, and then connect the ISP extended cable to its connector on the controller board.

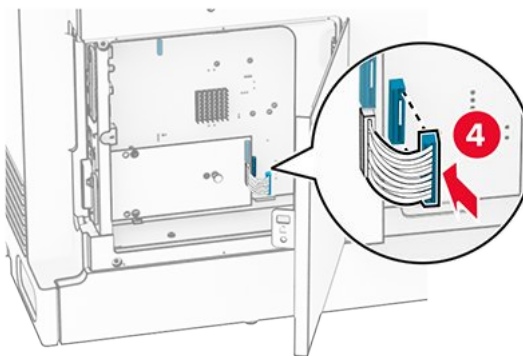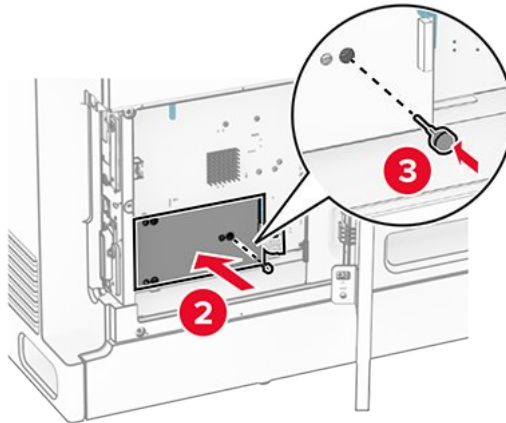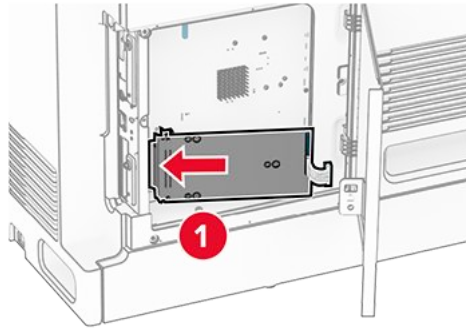


8. Secure the ISP to the printer.

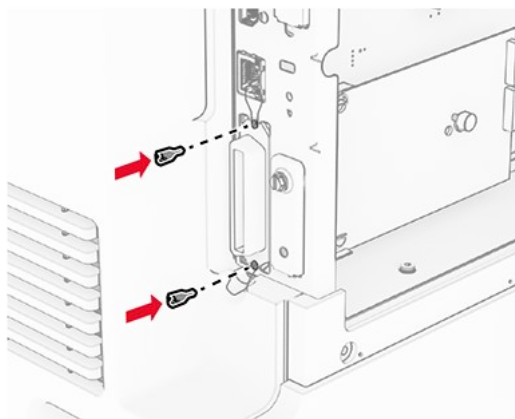

Set up, install, and configure

9. Close the controller board access cover.

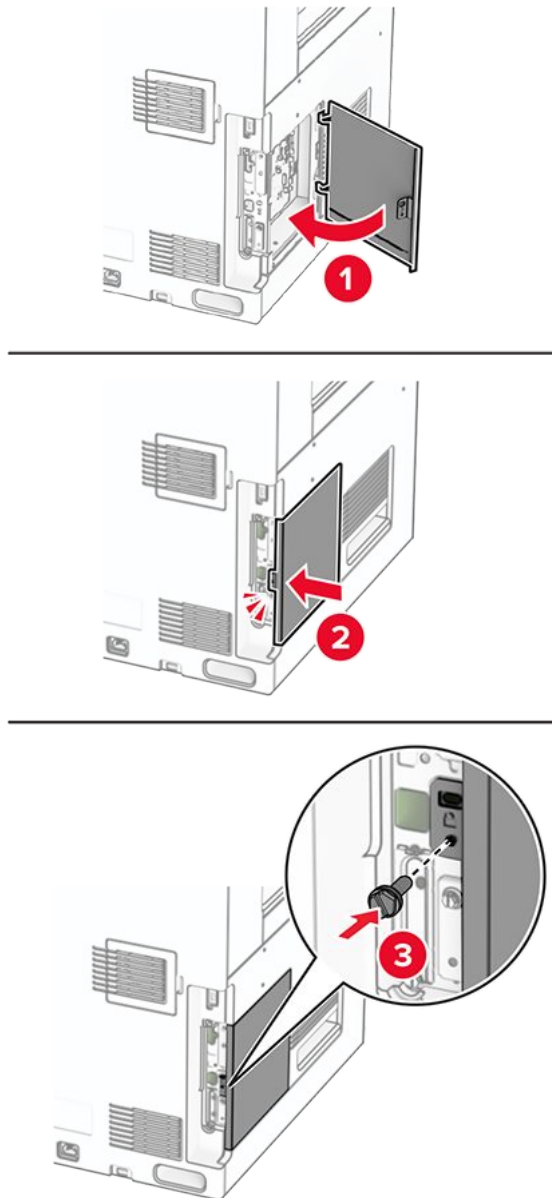

10. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

11. Turn on the printer.

Changing the printer port settings after installing an internal solutions port

Notes

- If the printer has a static IP address, then do not change the configuration.
- If the computers are configured to use the network name instead of an IP address, then do not change the configuration.
- If you are adding a wireless internal solutions port (ISP) to a printer previously configured for an Ethernet connection, then disconnect the printer from the Ethernet network.

For Windows users

1. Open the printers folder.
2. From the shortcut menu of the printer with the new ISP, open the printer properties.
3. Configure the port from the list.
4. Update the IP address.
5. Apply the changes.

For Macintosh users

1. From **System Preferences** in the **Apple** menu, navigate to the list of printers, and then select **+ > IP**.
2. Type the IP address in the address field.
3. Apply the changes.

Networking

Connecting the printer to a Wi-Fi network

Before you begin, make sure that:

- **Active Adapter** is set to **Auto**. From the control panel, navigate to **Settings > Network/Ports > Network Overview > Active Adapter**.
- The Ethernet cable is not connected to the printer.

Using the control panel

1. From the control panel, navigate to **Settings > Network/Ports > Wireless > Setup On Printer Panel > Choose Network**.
2. Select a Wi-Fi network, and then type the network password.

Note: For printers with built-in Wi-Fi capability, a prompt for setting up the Wi-Fi network appears during initial setup.

Connecting the printer to a wireless network using Wi-Fi Protected Setup™ (WPS)

Before you begin, make sure that:

- The access point (wireless router) is WPS-certified or WPS-compatible. For more information, see the documentation that came with your access point.
- A wireless network adapter is installed in your printer. For more information, see the instructions that came with the adapter.
- **Active Adapter** is set to **Auto**. From the control panel, navigate to **Settings** › **Network/Ports** › **Network Overview** › **Active Adapter**.

Using the Push Button method

1. From the control panel, navigate to **Settings** › **Network/Ports** › **Wireless** › **Wi-Fi Protected Setup** › **Start Push Button Method**.
2. Follow the instructions on the display.

Using the personal identification number (PIN) method

1. From the control panel, navigate to **Settings** › **Network/Ports** › **Wireless** › **Wi-Fi Protected Setup** › **Start PIN Method**.
2. Copy the eight-digit WPS PIN.
3. Open a web browser, and then type the IP address of your access point in the address field.

Note: To know the IP address, see the documentation that came with your access point.

4. Access the WPS settings. For more information, see the documentation that came with your access point.
5. Enter the eight-digit PIN, and then save the changes.

Configuring Wi-Fi Direct

Wi-Fi Direct® enables Wi-Fi devices to connect directly to each other without using an access point (wireless router).

1. From the control panel, navigate to **Settings** › **Network/Ports** › **Wi-Fi Direct**.
2. Configure the settings.
 - **Enable Wi-Fi Direct**—Enable the printer to broadcast its own Wi-Fi Direct network.
 - **Wi-Fi Direct Name**—Assign a name for the Wi-Fi Direct network.
 - **Wi-Fi Direct Password**—Assign the password for negotiating the wireless security when using the peer-to-peer connection.
 - **Show Password on Setup Page**—Show the password on the Network Setup Page.
 - **Preferred Channel Number**—Assign the preferred channel of the Wi-Fi Direct network.
 - **Group Owner IP Address**—Assign the IP address of the group owner.
 - **Auto-Accept Push Button Requests**—Let the printer accept connection requests automatically.

Note: Accepting push-button requests automatically is not secured.

Note: To know the password of the Wi-Fi Direct network without showing it on the printer display, print the **Network Setup Page**. From the control panel, navigate to **Settings > Reports > Network > Network Setup Page**.


Connecting a mobile device to the printer

Before connecting your mobile device, make sure that:

- Wi-Fi Direct has been configured. For more information, see [Configuring Wi-Fi Direct on page 306](#).
- The printer and your mobile device are connected to the same network.

Using Wi-Fi Direct

Note: These instructions apply only to mobile devices running on the Android™ platform.

1. From the mobile device, go to the **Wi-Fi** menu.
2. Enable **Wi-Fi**, and then tap .
3. Select **Wi-Fi Direct**.
4. Select the printer Wi-Fi Direct name.
5. Confirm the connection on the printer control panel.

Using Wi-Fi

1. From the mobile device, go to the **Wi-Fi** menu.
2. Enable **Wi-Fi**, and then select the printer Wi-Fi Direct name.

Note: The string DIRECT-xy (where x and y are two random characters) is added before the Wi-Fi Direct name.

3. Enter the Wi-Fi Direct password.

Deactivating the Wi-Fi network

1. From the control panel, navigate to **Settings > Network/Ports > Network Overview > Active Adapter > Standard Network**.
2. Select **Yes** to restart the printer.

Checking the printer connectivity

1. Print the **Network Setup Page** report. From the control panel, navigate to **Settings > Reports > Network > Network Setup Page**.
2. In the **Network Overview** section, check if **Card Status** is connected.

If the status is not connected, then the LAN drop may be inactive or the network cable may be malfunctioning. Contact your administrator for assistance.

Secure the printer

Erasing printer memory

To erase volatile memory or buffered data in your printer, turn off the printer. To erase nonvolatile memory, device and network settings, security settings, and embedded solutions, do the following:

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Out of Service Erase**.
2. Select **Sanitize all information on nonvolatile memory**, and then select **Erase**.
3. Select **Start initial setup wizard** or **Leave printer offline**, and then select **Next**.
4. Start the process.

Note: This process also destroys the encryption key that is used to protect user data. Destroying the encryption key makes the data irrecoverable.

Erasing printer storage drive

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Out of Service Erase**.
2. Depending on the storage drive that is installed on your printer, do either of the following:
 - For hard disk, select **Sanitize all information on hard disk**, select **Erase**, and then select a method to erase data.

Note: The process to sanitize the hard disk can take from several minutes to more than an hour, making the printer unavailable for other tasks.

- For intelligent storage drive, select **Erase Intelligent Storage Drive**, and then select **Erase**.

Restoring factory default settings

Restoring the printer to its factory default settings resets all customized configurations and settings to their original state.

Using the control panel

1. Select the settings that you want to restore.
 - **Restore printer settings**
 - **Restore network settings**
 - **Restore fax settings**
 - **Restore app settings**

Note: When this setting is selected, all apps that are not preinstalled on the printer are removed.

3. Select **Restore**.
4. Select **Start**.

The printer restarts automatically after the reset is completed.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Note:

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings > Device > Restore Factory Defaults**.
3. Select the settings that you want to restore.
 - **Restore printer settings**
 - **Restore network settings**
 - **Restore fax settings**
 - **Restore app settings**

Note: When this setting is selected, all apps that are not preinstalled on the printer are removed.

4. Click **Start**.

The printer restarts automatically after the reset is completed.

Statement of Volatility

Type of memory	Description
Volatile memory	The printer uses standard random access memory (RAM) to buffer temporarily user data during simple print and copy jobs.
Nonvolatile memory	The printer may use two forms of nonvolatile memory: EEPROM and NAND (flash memory). Both types store the operating system, printer settings, and network information. They also store scanner and bookmark settings and embedded solutions.
Hard disk storage drive	Some printers may have a hard disk drive installed. The printer hard disk is designed for printer-specific functionality. The hard disk lets the printer retain buffered user data from complex print jobs, form data, and font data.
Intelligent storage drive (ISD)	Some printers may have an ISD installed. ISD uses nonvolatile flash memory to store user data from complex print jobs, form data, and font data.

Erase the content of any installed printer memory in the following circumstances:

Secure the printer

- The printer is decommissioned.
- The printer hard disk or ISD is replaced.
- The printer is moved to a different department or location.
- The printer is serviced by someone from outside your organization.
- The printer is removed from your premises for service.
- The printer is sold to another organization.

Note: To dispose a storage drive, follow the policies and procedures of your organization.

Print

Printing from a computer

For Windows users

If you are printing from Word, PowerPoint, or Adobe Acrobat™, then do the following:

1. Click **File** or **Menu** > **Print** or press **Ctrl + P**.
2. In the Print dialog that appears, select a printer, and then click **Printer Properties** or **Properties**.
3. In the Printing Preferences dialog that appears, configure the print settings, and then click **OK**.
4. Click **Print**.

If you are printing from a web browser, then do the following:

1. Click the **Settings** menu (the three dots at the upper-right corner) or press **Ctrl + P**.
2. In the Print dialog that appears, depending on your browser, do either of the following:
 - Select a printer, and then click **Print using system dialog**.
 - Select a printer, click **More settings**, and then click **Print using system dialog**.
3. In the system dialog that appears, click **More settings**.
4. In the Printing Preferences dialog that appears, configure the print settings, and then click **OK**.
5. Click **Print**.

For Macintosh users

If you are printing from Preview, Safari, Word, or PowerPoint, then do the following:

1. Click **File** > **Print** or press **command + P**.
2. In the Print dialog that appears, select a printer, and then configure the print settings.
3. Click **Print**.

If you are printing from Adobe Acrobat, then do the following:

1. Click **File** > **Print** or press **command + P**.
2. In the Adobe Print dialog that appears, at the lower-left corner, click **Printer**.
3. In the Print dialog that appears, select a printer, and then configure the print settings.
4. Click **Print** to return to the Adobe Print dialog, and then click **Print** to send the print job.

If you are printing from a browser other than Safari, then do the following:

1. Click **File** > **Print** or press **command + P**.
2. In the Print dialog that appears, depending on your browser, do either of the following:

- Click **Print using system dialog**.
 - Click **More settings**, and then click **Print using system dialog**.
3. In the system dialog that appears, select a printer, and then configure the print settings.
 4. Click **Print**.

Printing from a mobile device

Printing from a mobile device using Lexmark Print

Lexmark™ Print is a mobile printing solution for mobile devices that run the iOS operating system version 13.0 or later or the Android™ platform version 6.0 or later. It lets you send documents and images to network-connected printers and print management servers.

Notes

- Make sure that you download the Lexmark Print app from the Apple App Store or Google Play™ store and enable it in the mobile device.
- Make sure that the printer and mobile device are connected to the same network.

1. From your mobile device, select a document from the file manager.
2. Send or share the document to Lexmark Print.

Note: Some third-party apps may not support the send or share feature. For more information, see the documentation that came with the app.

3. Select a printer.
If necessary, adjust the settings.
4. Print the document.



Printing from a mobile device using Mopria™ Print Service

Mopria Print Service is a mobile printing solution for mobile devices running on the Android™ platform version 5.0 or later. It lets you print directly to any Mopria™ certified printer.

Note: Make sure that you download Mopria Print Service from the Google Play™ store and enable it on your mobile device.

Note: Printing using Mopria Print Service requires either of the following:

- The mobile device and the printer are connected to the same network.
- Wi-Fi Direct is enabled in both the mobile device and the printer.


1. From your mobile device, launch a compatible application or select a document from the file manager.
2. Tap  > **Print**.
3. Select a printer, and then adjust the settings, if necessary.
4. Tap .

Printing from a mobile device using AirPrint

The AirPrint software feature is a mobile printing solution that lets you print directly from Apple devices to an AirPrint-certified printer.

Notes




- Make sure that the Apple device and the printer are connected to the same network. If the network has multiple wireless hubs, then make sure that both devices are connected to the same subnet.

1. From your mobile device, select a document from your file manager or launch a compatible application.
2. Tap  > **Print**.
3. Select a printer, and then adjust the settings, if necessary.
4. Print the document.

Printing from a mobile device using Wi-Fi Direct®

Wi-Fi Direct® is a printing service that lets you print to any Wi-Fi Direct-ready printer.


Note: Make sure that the mobile device is connected to the printer wireless network. For more information, see [Connecting a mobile device to the printer on page 307](#).

1. From your mobile device, launch a compatible application or select a document from your file manager.
2. Depending on your mobile device, do one of the following:
 - Tap  > **Print**.
 - Tap  > **Print**.
 - Tap  > **Print**.
3. Select a printer, and then adjust the settings, if necessary.
4. Print the document.

Printing from a flash drive

1. Insert the flash drive.

For more information on supported flash drives, see [Supported flash drives and file types on page 88](#).

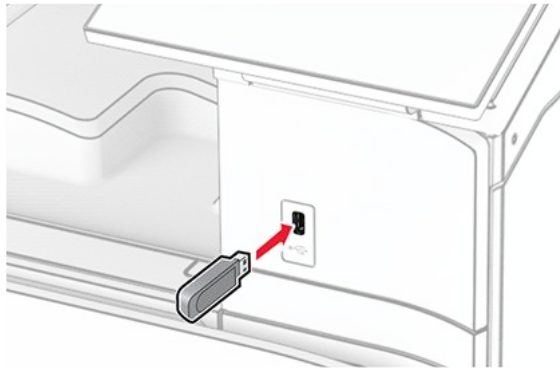

Notes


- If you insert the flash drive when an error message appears, then the printer ignores the flash drive.
- If you insert the flash drive while the printer is processing other print jobs, then Busy appears on the display.

2. From the control panel, select **Print**.
3. Select the document that you want to print.
If necessary, configure the settings.
4. Print the document.

To print another document, navigate to **Print > USB Drive**.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the flash drive or the printer in the area shown while actively printing, reading, or writing from the memory device.

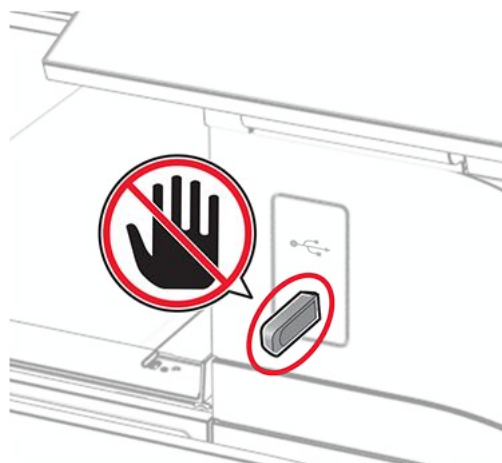

Configuring confidential jobs

1. From the control panel, navigate to **Settings > Security > Confidential Print Setup**.
2. Configure the settings.

Setting	Description
Max Invalid PIN	Set the limit for entering an invalid PIN. Note: When the limit is reached, the print jobs for that username are deleted.
Confidential Job Expiration	Set an individual expiration time for each held job before it is automatically deleted from the printer memory, hard disk, or intelligent storage drive. Note: A held job is either Confidential , Repeat , Reserve , or Verify .
Repeat Job Expiration	Set the expiration time for print jobs that you want to repeat.
Verify Job Expiration	Set the expiration time for printing a copy of a job for you to check its quality before printing the remaining copies.
Reserve Job Expiration	Set the expiration time for jobs that you want to store in the printer for printing later.
Require All Jobs to be Held	Set the printer to hold all print jobs.
Keep duplicate documents	Set the printer to keep all documents with the same file name.

Printing confidential and other held jobs

Note: Held jobs may get deleted before they expire or without any intervention if memory resources become low. If your printer supports a storage drive, then install a hard disk or an intelligent storage drive to increase its storage for held jobs.

For Windows users

1. With a document open, click **File > Print**.
2. Select a printer, and then click **Properties, Preferences, Options, or Setup**.
3. Click **Print and Hold**.
4. Click **Use Print and Hold**, and then assign a username.
5. Select from any of the following print job types:
 - **Confidential print**—The printer asks for a personal identification number before letting you print the job.

- **Verify print**—The printer prints one copy and holds the remaining copies that you requested from the driver in printer memory.
 - **Reserve print**—The printer stores the job in memory so that you can print the job later.
 - **Repeat print**—The printer prints all requested copies of the job and stores the job in memory so you can print additional copies later.
6. Click **OK**.
 7. Click **Print**.
 8. From the printer control panel, release the print job.
 - a. Select **Print**.
 - b. Select **Held jobs**, and then select your username.

Note: For confidential print jobs, select **Confidential**, enter the PIN, and then select **OK**.

- c. Select the print job, and then select **Print**.

For Macintosh users

1. With a document open, choose **File > Print**.
2. Select a printer.
3. From the **Print Job Security** drop-down menu, enable **Print with PIN**, and then enter a four-digit PIN.
4. Click **Print**.
5. From the printer control panel, release the print job.
 - a. Select **Held jobs**, and then select the computer name.
 - b. Select **Confidential**, and then enter the PIN.
 - c. Select the print job, and then select **Print**.

Printing a font sample list

1. From the control panel, navigate to **Settings > Reports > Print > Print Fonts**.
2. Select the type of font.

Printing a directory list

1. From the control panel, navigate to **Settings > Reports > Print**.
2. Select **Print Directory**.

Placing separator sheets in print jobs

1. With a document open, click **File > Print**.

2. Select a printer, and then click **Properties, Preferences, Options, or Setup**.
3. Click **Paper/Finishing**.
4. In the **Separator sheets** menu, select a setting.
5. Click **OK**, and then click **Print**.

Canceling a print job

1. From the control panel, select **Job Queue**.
2. Select **Print**, and then select a job to cancel.

Note: If a document is already printing, then select **Cancel job** in the lower-right corner of the display to stop printing.

Adjusting toner darkness

1. From the control panel, navigate to **Settings > Print > Quality**.
2. Adjust the setting for **Toner Darkness**.

Copy

Making copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).

Note: To avoid a resized image, make sure that the original document and output have the same paper size.

2. From the control panel, select **Copy**, and then specify the number of copies.
If necessary, adjust the copy settings.
3. Copy the document.

Copying photos

1. Place a photo on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy > More Settings > Content > Content Type > Photo**.
3. Select **Content Source**, and then select the setting that best matches the original photo.
4. Copy the photo.

Copying on letterhead

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy > Copy From**.
3. Select the size of the original document.
4. Select **Copy To**, and then select the paper source that contains the letterhead.
If you loaded the letterhead into the multipurpose feeder, select **Multipurpose Feeder**, select a paper size, and then select **Letterhead**.
5. Copy the document.

Copying on both sides of the paper

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy > Sides**.
3. Select a setting.


4. Copy the document.

Reducing or enlarging copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, depending on your printer model, do any of the following:
 - Navigate to **Copy** › **Scale**.
 - Navigate to **Copy** › **Settings** › **Scale**.
 - Navigate to **Copy** › **More Settings** › **Scale**.
3. Select - or + to decrease or increase the value by 1%.

Note:

- In some printer models, select **Custom** to adjust the size manually.
- You can also select a size from the preset values, between 25% and 400%.
- Changing the size of the original document or output after setting **Scale** restores the scale value to **Auto**.

4. From the control panel, depending on your printer model, do either of the following:
 - Select **Copy**.
 - Select , and then select **Finish the job**.

Collating copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy** › **More Settings** › **Finishing Options** › **Collate** › **On [1,2,1,2,1,2]**.
3. Copy the document.

Placing separator sheets between copies

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy** › **More Settings** › **Finishing Options** › **Separator Sheets**.
3. Enable the menu, and then select a setting and source.
4. Copy the document.

Copying multiple pages onto a single sheet


1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy** › **More Settings** › **Pages per Side**.
3. Enable the menu, and then select a setting.
4. Copy the document.

Copying cards

1. Load a card on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Copy** › **Copy From** › **ID Card**.
3. Copy the card.

Creating a copy shortcut

Using the control panel

1. From the control panel, select **Copy**.
2. Configure the settings, and then select  .
3. Create a shortcut.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts** › **Add Shortcut**.
3. From the **Shortcut Type** menu, select **Copy**.
4. Configure the settings.
5. Click **Save**.

Email

Configuring the email SMTP settings

Configure the Simple Mail Transfer Protocol (SMTP) settings to send a scanned document through email. The settings vary with each service provider. For more information, see [Email service providers](#).

Before you begin, make sure that the printer is connected to a network and the network is connected to the Internet.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Email**.
3. Configure the email settings. For more information, see [Email service providers](#).

Notes

- For email service providers that are not on the list, contact your provider and ask for the settings.
- For video instructions on configuring the SMTP settings for Gmail™ email service, go to <https://infoserve.lexmark.com/ref/common/configuring-email-video.html>.
- For Microsoft 365 OAuth 2.0 Authentication, you must register your printer to OAuth 2.0 Authentication. For more information, see [Setting up OAuth 2.0 Authentication for Email Server using the Embedded Web Server](#).

4. Click **Save**.

Setting up OAuth 2.0 Authentication for Email Server using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Email**.
3. Click **Set Up OAuth 2 for Email Server**, and then click **Register**.
4. Go to <https://microsoft.com/devicelogin>.

5. Enter the code that was generated in the Embedded Web Server.
6. Log in to your Outlook account.
7. Follow the on-screen instructions.

Using the email setup wizard in the printer

Before using the wizard, make sure that the printer firmware is updated. For more information, see the **Printer firmware instructions** section.

Notes

- These instructions apply only to some printer models.
- Setting up the SMTP settings using the email setup wizard is not applicable for OAuth 2.0 Authentication.

1. From the home screen, select **Email**.
2. Select **Set up Now**, type your email address and then select **Next**.
3. Type the password, and then select **Done**.

Notes

- Depending on your email service provider, type your account password, app password, or authentication password. For more information on the password, see [Email service providers](#), and then look for Device Password.
- If your provider is not listed, then contact your provider and ask for the **Primary SMTP Gateway**, **Primary SMTP Gateway Port**, **Use SSL/TLS**, and **SMTP Server Authentication** settings. Proceed with the setup after getting the settings.

4. Select **Next**.
5. Configure the settings, and then select **Next**.
6. Select **Test Setup**.

Using the Settings menu in the printer

1. From the control panel, navigate to **Settings** > **Email** > **Email Setup**.
2. Configure the email settings. For more information, see [Email service providers](#).

Note: If your service provider is not listed, then contact your provider.

Email service providers

Use the following table to determine the SMTP settings of your service provider.

Notes

- If you encounter errors using the settings provided, then contact your service provider.
- If your service provider is not listed, then contact your provider.

- [AOL Mail](#)
- [Comcast Mail](#)
- [Gmail](#)
- [iCloud Mail](#)
- [Mail.com](#)
- [NetEase Mail \(mail.126.com\)](#)
- [NetEase Mail \(mail.163.com\)](#)
- [NetEase Mail \(mail.yeah.net\)](#)
- [Outlook Live or Microsoft 365](#)
- [QQ Mail](#)
- [Sina Mail](#)
- [Sohu Mail](#)
- [Yahoo! Mail](#)
- [Zoho Mail](#)

AOL Mail

Setting	Value
Primary SMTP Gateway	smtp.aol.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Note: To create an app password, go to the [AOL Account Security](#) page, log in to your account, and then click **Generate app password**.

Comcast Mail

Setting	Value
Primary SMTP Gateway	smtp.comcast.net
Primary SMTP Gateway Port	587

Email

Setting	Value
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password

Gmail™

Note: Make sure that two-step verification is enabled on your Google account. To enable two-step verification, go to the [Google Account Security](#) page, log in to your account, and then from the “Signing in to Google” section, click **2-Step Verification**.

Setting	Value
Primary SMTP Gateway	smtp.gmail.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Notes

- To create an app password, go to the [Google Account Security](#) page, log in to your account, and then from the “Signing in to Google” section, click **App passwords**.
- “App passwords” shows only if two-step verification is enabled.

iCloud Mail

Note: Make sure that two-step verification is enabled on your account.

Setting	Value
Primary SMTP Gateway	smtp.mail.me.com
Primary SMTP Gateway Port	587

Email

Setting	Value
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Note: To create an app password, go to the [iCloud Account Management](#) page, log in to your account, and then from the Security section, click **Generate Password**.

Mail.com

Setting	Value
Primary SMTP Gateway	smtp.mail.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password

NetEase Mail (mail.126.com)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** > **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.126.com
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials

Email

Setting	Value
Device UserID	Your email address
Device Password	Authorization password

Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

NetEase Mail (mail.163.com)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.163.com
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization password

Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

NetEase Mail (mail.yeah.net)

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the NetEase Mail home page, click **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.yeah.net
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address

Email

Setting	Value
Device Password	Authorization password Note: The authorization password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

Outlook Live or Microsoft 365

These settings apply to outlook.com and hotmail.com email domains, and Microsoft 365 accounts.

Setting	Value (Simple Authentication)	Value (OAuth2.0 Authentication)
Primary SMTP Gateway	smtp.office365.com	smtp.office365.com
Primary SMTP Gateway Port	587	587
Use SSL/TLS	Required	Required
Require Trusted Certificate	Disabled	Disabled
Reply Address	Your email address	The email address used to register OAuth 2.0 Authentication
SMTP Server Authentication	Login / Plain	OAuth2.0
User-Initiated Email	N/A	Use Device SMTP Credentials
Device-Initiated Email	Use Device SMTP Credentials	Use Device SMTP Credentials
Device UserID	Your email address	N/A
Device Password	Account password or app password Notes <ul style="list-style-type: none"> For accounts with two-step verification disabled, use your account password. For outlook.com or hotmail.com accounts with two-step verification enabled, use an app password. To create an app password, go to the Outlook Live Account Management page, and then log in to your account. 	N/A

Note: For more setup options for business using Microsoft 365, go to the [Microsoft 365 help page](#).

QQ Mail

Email

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the QQ Mail home page, click **Settings > Account**, and then from the POP3/IMAP/SMTP/Exchange/CardDAV/CalDAV Service section, enable either **POP3/SMTP service** or **IMAP/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.qq.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization code

Note: To generate an authorization code, from the QQ Mail home page, click **Settings > Account**. From the POP3/IMAP/SMTP/Exchange/CardDAV/CalDAV Service section, click **Generate authorization code**.

Sina Mail

Note: Make sure that the POP3/SMTP service is enabled on your account. To enable the service, from the Sina Mail home page, click **Settings > More settings > User-end POP/IMAP/SMTP**, and then enable **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.sina.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Authorization code

Note: To create an authorization code, from the email home page, click **Settings > More settings > User-end POP/IMAP/SMTP**, and then enable **Authorization code status**.

Sohu Mail

Email

Note: Make sure that the SMTP service is enabled on your account. To enable the service, from the Sohu Mail home page, click **Options** › **Settings** › **POP3/SMTP/IMAP**, and then enable either **IMAP/SMTP service** or **POP3/SMTP service**.

Setting	Value
Primary SMTP Gateway	smtp.sohu.com
Primary SMTP Gateway Port	465
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Independent password

Note: The independent password is provided when IMAP/SMTP service or POP3/SMTP service is enabled.

Yahoo! Mail

Setting	Value
Primary SMTP Gateway	smtp.mail.yahoo.com
Primary SMTP Gateway Port	587
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	App password

Note: To create an app password, go to the [Yahoo Account Security](#) page, log in to your account, and then click **Generate app password**.

Zoho Mail

Setting	Value
Primary SMTP Gateway	smtp.zoho.com
Primary SMTP Gateway Port	587

Setting	Value
Use SSL/TLS	Required
Require Trusted Certificate	Disabled
Reply Address	Your email address
SMTP Server Authentication	Login / Plain
Device-Initiated Email	Use Device SMTP Credentials
Device UserID	Your email address
Device Password	Account password or app password

Notes

- For accounts with two-step verification disabled, use your account password.
- For accounts with two-step verification enabled, use an app password. To create an app password, go to the [Zoho Mail Account Security](#) page, log in to your account, and then from the Application-Specific Passwords section, click **Generate New Password**.

Scanning to email

Before you begin, make sure that the SMTP settings are configured. For more information, see [Configuring the email SMTP settings on page 322](#).

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Scan > Email**.
3. Enter the needed information, and then select **Next**.


If necessary, configure the settings.

4. Select **Scan**.

Creating an email shortcut

Using the control panel

1. From the control panel, navigate to **Scan > Email**.
2. Type the email address, and then select **Next**.

3. Select  .
4. Create a shortcut.

Using the Embedded Web Server

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts** › **Add Shortcut**.
3. From the **Shortcut Type** menu, select **Email**.
4. Configure the settings.
5. Click **Save**.

Fax

Sending a fax

Using the control panel

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, select **Fax**.
3. Select **Add Recipient** or **Address Book**.
If necessary, adjust the settings.
4. Send the fax.

Using the computer

For Windows users

1. With a document open, click **File** > **Print**.
2. Select a printer, and then click **Properties**, **Preferences**, **Options**, or **Setup**.
3. Click **Fax** > **Enable fax** > **Always display settings prior to faxing**, enter the recipient number, and then click **OK**.
4. Click **Print**, and then click **OK**.

For Macintosh users

1. With a document open, choose **File** > **Print**.
2. Select the printer that has **- Fax** added after its name.
3. In the **To** field, enter the recipient number.
If necessary, configure the settings.
4. Send the fax.


Scheduling a fax

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, select **Fax**.
3. Select **Add Recipient** or **Address Book**, and then enter the needed information.
4. Select **Send Time**, configure the date and time, and then select **Done**.
If necessary, configure other fax settings.
5. Send the fax.

Creating a fax destination shortcut

1. From the control panel, select **Fax**.
2. Select **Add Recipient** or **Address Book**, and then enter the needed information.

If necessary, adjust the settings.

3. Select .
4. Create a shortcut.

Changing the fax resolution

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, select **Fax**.
3. Select **Add Recipient** or **Address Book**, and then enter the needed information.
4. Select **Resolution**, and then select a setting.
5. Send the fax.

Adjusting the fax darkness

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, select **Fax**.
3. Select **Add Recipient** or **Address Book**, and then enter the needed information.
4. Select **More Settings** › **Darkness**, and then adjust the setting.
5. Send the fax.

Printing a fax log

1. From the control panel, navigate to **Settings** › **Reports** › **Fax**.
2. Select a fax log.

Blocking junk faxes

1. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **Fax Receive Settings** › **Admin Controls**.
2. Enable the **Block No Name Fax** menu.

Holding faxes

1. From the control panel, navigate to **Settings › Fax › Fax Setup › Fax Receive Settings › Holding Faxes**.
2. Select a setting.

Forwarding a fax

1. From the control panel, navigate to **Settings › Fax › Fax Setup › Fax Receive Settings › Admin Controls**.
2. Select **Fax Forwarding**, and then select **Print and Forward** or **Forward**.
3. In the **Forward to** menu, select a destination and then configure the settings.

Scan

Scanning to a computer

For Windows users

Using Lexmark Scanback Utility

1. Go to <https://support.lexmark.com>, and then click **Drivers & downloads**.
2. In the **Search by Device Model** field, type the printer model, and then click **Find Drivers & Downloads**.
3. Click **Additional downloads compatible with [printer model]**, and then download and install Lexmark Scanback Utility.
4. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
5. From the computer, run **Lexmark Scanback Utility**, and then click **Create profile**.

Note: If you prefer to use an existing scanning profile, then click **Existing profile**.

6. Click **Setup**, and then from the menu that appears, click **Add** to add the IP address.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

7. From the **Select document format to be scanned** section, select the original document size.
8. From the **Select file format for scan output** section, select an output file resolution and format, and then click **Next**.
9. Type a scan profile name.
10. Click **Browse**, select the destination folder where you want to save the scanned document, and then type a file name.

Note: To reuse the scan profile, from the **Name your shortcut** field, type a shortcut name, and then click **Save Profile**.

11. Click **Finish**.
12. From the control panel, navigate to **Scan Profiles**, and then select the scan profile that you created in step 6.

Note: Make sure that the **Scan Profiles** app is enabled. From the control panel, navigate to **Settings > Device > Home Screen Customization**. From the **Page 1** column, add **Scan Profiles**, and then click **Save**.

13. From the computer, click **Scan Complete**.

Using Windows Fax and Scan

Note: Make sure that the printer is added to the computer. For more information, see [Adding printers to a computer on page 128](#).

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the computer, open **Windows Fax and Scan**.
3. Click **New Scan**, and then select a scanner source.
If necessary, change the scan settings.
4. Scan the document.
5. Click **Save as**, type a file name, and then click **Save**.

For Macintosh users

Note: Make sure that the printer is added to the computer. For more information, see [Adding printers to a computer on page 128](#).


1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the computer, do either of the following:
 - Open **Image Capture**.
 - Open **Printers & Scanners**, select a printer, and then click **Scan > Open Scanner**.
3. From the Scanner dialog, do one or more of the following:
 - Select the location that you want to save the scanned document to.
 - Select the size of the original document.
 - To scan from the ADF, from the **Scan Menu**, select **Document Feeder** or enable **Use Document Feeder**.
If necessary, configure the scan settings.
4. Click **Scan**.

Scanning to an FTP server

Before you begin, make sure that the printer is connected to an FTP server.

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. From the control panel, navigate to **Scan > FTP**.
3. Enter the needed information, and then select **Next**.
If necessary, configure the FTP settings.
4. Scan the document.

Creating an FTP shortcut

1. From the control panel, navigate to **Scan** > **FTP**.
2. Enter the FTP server address, and then select **Next**.
3. Configure the settings, and then select  .
4. Create a shortcut.

Scanning to a network folder

Before you begin, make sure that the network folder that you want to scan the document to is already configured.

1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).

Note: If you are loading a document into the ADF tray, then adjust the paper guides.

2. From the control panel, navigate to **Scan Center** > **Network Folder**.
3. Select the applicable network folder.

Note: To add a network folder, see [Configuring a network folder destination on page 338](#).

4. Scan the document.

Configuring a network folder destination

1. From the control panel, navigate to **Scan Center** > **Network Folder** > **Create Network Folder**.
2. Configure the necessary settings.
3. Log in to the network, and then select **Next**.
4. Configure the network folder settings, and then select **Done**.

Note: To scan a document to a network folder, see [Scanning to a network folder on page 338](#).

Creating a network folder shortcut

1. Open a web browser, and then type the printer IP address in the address field.

Notes


- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts** > **Add Shortcut**.

3. From the **Shortcut Type** menu, select **Network Folder**, and then configure the settings.
4. Apply the changes.

Scanning to a flash drive


1. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
2. Insert the flash drive.

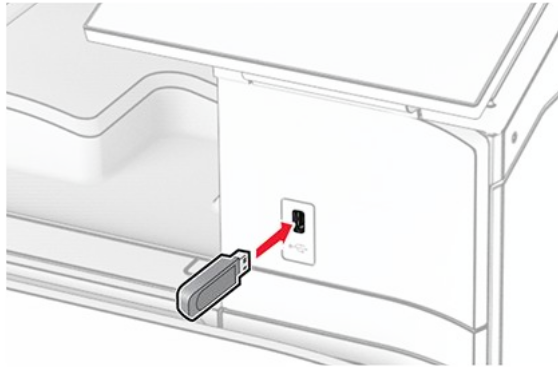

3. From the control panel, select **Scan**.
4. Select a location to save the file, create a file name, and then select **Next**.
5. Configure the scan settings.
6. Scan the document.

Warning—Potential Damage

To avoid loss of data or printer malfunction, do not touch the flash drive or the printer in the area shown while actively printing, reading, or writing from the memory device.

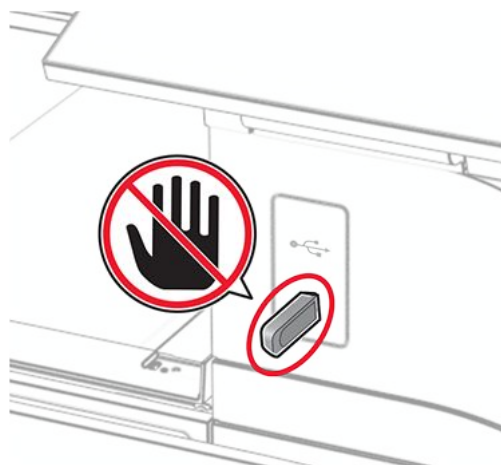

Printer menus

Menu map

Device	<ul style="list-style-type: none"> • Preferences • Eco-Mode • Remote Control Panel • Notifications • Power Management • Share Data with Lexmark 	<ul style="list-style-type: none"> • Accessibility • Restore Factory Defaults • Maintenance • Firmware Update • About this Printer
Print	<ul style="list-style-type: none"> • Layout • Finishing¹ • Setup • Quality • Job Accounting 	<ul style="list-style-type: none"> • PDF • PostScript • PCL • Image
Paper	<ul style="list-style-type: none"> • Tray Configuration • Media Configuration 	<ul style="list-style-type: none"> • Bin Configuration¹
Copy	Copy Defaults	
Fax	Fax Defaults	
Email	<ul style="list-style-type: none"> • Email Setup • Email Defaults 	<ul style="list-style-type: none"> • Web Link Setup
FTP	FTP Defaults	
USB Drive	<ul style="list-style-type: none"> • Flash Drive Scan 	<ul style="list-style-type: none"> • Flash Drive Print
Network/Ports	<ul style="list-style-type: none"> • Network Overview • Wireless • Wi-Fi Direct • Mobile Services Management 	<ul style="list-style-type: none"> • IPSec • 802.1x • LPD Configuration • HTTP/FTP Settings

Printer menus

Network/Ports	<ul style="list-style-type: none">• Ethernet• TCP/IP• SNMP	<ul style="list-style-type: none">• ThinPrint• USB• Restrict external network access
Security	<ul style="list-style-type: none">• Login Methods• Schedule USB Devices• Security Audit Log• Login Restrictions• Confidential Print Setup	<ul style="list-style-type: none">• Encryption• Erase Temporary Data Files• Solutions LDAP Settings• Miscellaneous
Cloud Services	Cloud Services Enrollment	
Reports	<ul style="list-style-type: none">• Menu Settings Page• Device• Print	<ul style="list-style-type: none">• Shortcuts• Fax• Network
Troubleshooting	Print Quality Test Pages	Cleaning the Scanner
Forms Merge ²	Forms Merge	

¹ Appears only when a finisher is installed.

² Appears only when a storage drive is installed.

Device

Preferences

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Display Language	N/A	[List of languages]	Set the language of the text that appears on the display.
Country/Region	N/A	[List of countries or regions]	Identify the country or region where the printer is configured to operate.
Run initial setup	N/A	Off* On	Run the setup wizard.

Printer menus

Menu item	Submenu item	Settings	Description
Keyboard	Keyboard Type	[List of languages]	Select a language as a keyboard type. Note: All the Keyboard Type values may not appear or may require special hardware to appear.
Date and Time	Configure	Current Date and Time Manually Set Date and Time Date Format (MM-DD-YYYY*) Time Format (12 hour A.M./P.M.*) Time Zone DST (GMT) Offset DST Start DST End DST Offset	Configure the printer date and time and network time protocol. Notes <ul style="list-style-type: none"> • MM-DD-YYYY is the U.S. factory default setting. DD-MM-YYYY is the international factory default setting. • UTC (GMT) Offset, DST Start, DST End, and DST Offset appear only when Time Zone is set to (UTC+user) Custom. • Key ID and Password appear only when Enable Authentication is set to MD5 key.
	Network Time Protocol	Enable NTP (On*) NTP Server Enable Authentication (None*) Key ID Password	
Paper Sizes	N/A	U.S.* Metric	Specify the unit of measurement for paper sizes. Note: The country or region selected in the initial setup wizard determines the initial paper size setting.
Screen Brightness	N/A	20% to 100% (100*)	Adjust the brightness of the display.
Flash Drive Access	N/A	Disabled Enabled*	Enable access to the flash drive function of the printer.
Allow Background Removal	N/A	Off On*	Specify whether background removal is allowed.

Printer menus

Menu item	Submenu item	Settings	Description
Allow Custom Job scans	N/A	Off On*	Specify whether the Custom Job Scanning setting appears for copy, scan, and fax. Note: This menu item appears only when a storage drive is installed.
One Page Flatbed Scanning	N/A	Off* On	Set the printer to scan any type of job involving the scanner glass as a single page. Note: The printer returns to the home screen after performing a single flatbed scan instead of displaying prompts.
Device Sounds	Mute All Sounds	Off* On	Configure the sound settings of the printer.
	Button Feedback	Off On*	
	Volume	0 to 10 (5*)	
	ADF Loaded Beep	Off On*	
	Alarm Control	Off Single* Continuous	
	Cartridge Alarm	Off Single* Continuous	
	Speaker Mode	Always Off* Always On On until Connected	
	Ringer Volume	Off* On	
Screen Timeout	N/A	5 to 300 seconds (60*)	Set the idle time in seconds before the display shows the home screen, or before the printer logs out a user account automatically.

Eco-Mode

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Print	Sides	1-Sided 2-Sided*	Specify whether to print on one side or both sides of the paper.
	Pages per Side	Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Specify the number of pages to print on one side of a sheet of paper.
	Toner Darkness	1 to 5 (4*)	Determine the lightness or darkness of text images.
	Color Saver	Off* On	Set the printer to reduce the amount of toner that it uses when printing graphics and images.
Copy	Sides	1 sided to 1 sided* 1 sided to 2 sided 2 sided to 1 sided 2 sided to 2 sided	Specify the scanning behavior based on the original document.
	Pages per Side	Off* 2 Portrait pages 4 Portrait pages 2 Landscape pages 4 Landscape pages	Specify the number of pages to copy on one side of a sheet of paper.

Printer menus

Menu item	Submenu item	Settings	Description
	Darkness	1 to 9 (5*)	Determine the darkness of the scanned text images.

Remote Control Panel

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
External VNC Connection	Don't Allow* Allow	Connect an external Virtual Network Computing (VNC) client to the remote control panel.
Authentication Type	None* Standard Authentication	Set the authentication type when accessing the VNC client server.
VNC Password	The setting is user-defined.	Specify the password to connect to the VNC client server. Note: This menu item appears only if Authentication Type is set to Standard Authentication .

Notifications

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
ADF Loaded Beep	N/A	Off On*	Specify whether the printer emits a custom beep when an original document is loaded into the ADF.
Alarm Control	N/A	Off Single* Continuous	Set the number of times that the alarm sounds when the printer requires user intervention.
Supplies	Show Supply Estimates	Show estimates* Do not show estimates	Show the estimated status of the supplies.
	Cartridge Alarm	Off Single* Continuous	Set the number of times that the alarm sounds when the toner cartridge is low.

Printer menus

Menu item	Submenu item	Settings	Description
	Staple Alarm	Off* Single Continuous	Set the number of times that the alarm sounds when the staple cartridge is empty. Note: This menu item appears only when a staple finisher is installed.
	Hole Punch Alarm	Off* Single Continuous	Set the number of times that the alarm sounds when the hole punch container is full or missing. Note: This menu item appears only when a staple, hole punch finisher is installed.
Email Alerts Setup	Primary SMTP Gateway	The setting is user-defined.	Type the IP address or host name of the primary SMTP server.
	Primary SMTP Gateway Port	1 to 65535 (25*)	Enter the port number of the primary SMTP server.
	Secondary SMTP Gateway	The setting is user-defined.	Type the IP address or host name of the secondary SMTP server.
	Secondary SMTP Gateway Port	1 to 65535 (25*)	Enter the server port number of your secondary SMTP server.
	SMTP Timeout	5 to 30 seconds (30*)	Specify the time that the SMTP server waits before it stops trying to send an email.
	Reply Address	The setting is user-defined.	Specify a reply address in the email.
	Always use SMTP default Reply Address	On Off*	Always use the default reply address in the SMTP server.
	Use SSL/TLS	Disabled* Negotiate Required	Send an email using an encrypted link.
	Require Trusted Certificate	On* Off	Require a trusted certificate when accessing the SMTP server.
SMTP Server Authentication	No authentication required* Login/Plain NTLM CRAM-MD5 Digest-MD5 Kerberos 5 OAuth 2	Set the authentication type for the SMTP server.	

Printer menus

Menu item	Submenu item	Settings	Description
	Device-Initiated Email	None* Use Device SMTP Credentials	Set whether credentials are required for device-initiated emails.
	User-Initiated Email	None* Use Device SMTP Credentials Use Session User ID & Password Use Session Email address and Password Prompt user	Set whether credentials are required for user-initiated emails.
	Use Active Directory Device Credentials	On Off*	Enable user credentials and group designations to connect to the SMTP server.
	Device Userid	The setting is user-defined.	Specify the user ID to log in to the SMTP server.
	Device Password	The setting is user-defined.	Specify the password to log in to the SMTP server.
	Kerberos 5 REALM	The setting is user-defined.	Specify the realm for the Kerberos 5 authentication protocol.
	NTLM Domain	The setting is user-defined.	Specify the domain name for the NTLM security protocol.
	Disable "SMTP server not set up" error	On Off*	Disable an error message about the SMTP server setup.
	Setup Email Lists and Alerts	The setting is user-defined.	Specify the email addresses and enable the email alert. Note: This menu item appears only in the Embedded Web Server.
Toner Cartridge Replacement Lock	Override Toner Cartridge Replacement Lock	Start	This setting lets the printer override an error message about replacing a still-not-empty toner cartridge and lets you install a new one. Note: This menu item appears only in some printer models.
	Disable Toner Cartridge Replacement Lock	Start	This setting prevents an error message about replacing a still-not-empty toner cartridge from appearing on the display. Note: This menu item appears only in some printer models.

Printer menus

Menu item	Submenu item	Settings	Description
Error Prevention	ADF Multifeed Sensor	Off On*	Set the printer to detect when the ADF picks more than one sheet of paper at once.
	Auto Continue	Off On*	Let the printer continue processing or printing a job automatically after clearing certain attendance conditions. Note: When set to On , the default setting is 5 seconds.
	Auto Reboot	Reboot when idle Reboot always* Reboot never	Set the printer to restart when an error occurs.
	Max Auto Reboots	1 to 20 (2*)	Set the number of automatic reboots that the printer can perform.
	Auto Reboot Window	1 to 525600 (720*)	Specify the average uptime (in minutes) of the printer. Notes <ul style="list-style-type: none"> • If the average uptime is greater than this number, then a reboot is allowed. • If the average uptime is less than this number, then the printer stops and shows the service error screen.
	Auto Reboot Counter	The setting is a read-only information.	Show the number of automatic reboots that the printer has performed.
	Reset Auto Reboot Counter	Reset	Resets the Auto Reboot Counter back to 0.
	Display Short Paper Error	On Auto-clear*	Set the printer to show a message when a short paper error occurs. Note: Short paper refers to the size of the paper loaded.
	Page Protect	Off* On	Set the printer to process the entire page into the memory before printing it.
Jam Content Recovery	Jam Recovery	Off On Auto*	Set the printer to reprint jammed pages.

Menu item	Submenu item	Settings	Description
	Scanner Jam Recovery	Job level Page level*	Specify how to restart a scan job after resolving a paper jam.

Power Management

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Sleep Mode Profile	Print from Sleep Mode	Stay awake after printing Enter Sleep Mode after printing*	Set the printer to stay awake or enter Sleep Mode after printing.
	Touch to Wake from Deep Sleep	Off On*	Wake the printer from Deep Sleep Mode .
Timeouts	Proximity Sensor	Disabled Short Range Long Range*	Sets the sensitivity of the proximity sensor.
	Sleep Mode	1 to 114 minutes (15*)	Set the idle time before the printer begins operating in Sleep Mode .
	Hibernate Timeout	Disabled 1 hour 2 hours 3 hours 6 hours 1 day 2 days 3 days* 1 week 2 weeks 1 month	Set the time before the printer turns off.
	Hibernate Timeout on Connection	Hibernate Do Not Hibernate*	Set Hibernate Timeout to turn off the printer while an active Ethernet connection exists.
Schedule Power Modes	Schedules	Add New Schedule	Schedule the printer when to enter Sleep Mode or Hibernate mode .

Share Data with Lexmark

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Share Data with Lexmark	Yes No*	Send printer usage and performance information to Lexmark.
Share Data Send Time	Start Time Stop Time	Select the time window for data collection and transmission. Note: Share Data Send Time appears only when you select Yes in Share Data with Lexmark .

Accessibility

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Duplicate Key Strike Interval	0.00 to 5.00 (0.00*)	Set the interval in seconds during which the printer ignores duplicate key presses on an attached keyboard.
Key Repeat Initial Delay	0.25 to 5.00 (1.00*)	Set the initial length of delay in seconds before a repeating key starts repeating.
Key Repeat Rate	0.5 to 30.0 (30.0*)	Set the number of presses per second for a repeating key.
Prolong Screen Timeout	Off* On	Let the user remain in the same location and reset the Screen Timeout timer when it expires instead of returning to the home screen.
Headphone Volume	1 to 10 (5*)	Adjust the headphone volume.
Enable Voice Guidance When Headphone is Attached	Off* On	Enable Voice Guidance when headphones are inserted into the headphone jack.
Speak Passwords/PINs	Off* On	Set the printer to read out loud passwords or personal identification numbers.

Printer menus

Menu item	Settings	Description
Speech Rate	Very Slow Slow Normal* Fast Faster Very Fast Rapid Very Rapid Fastest	Set the Voice Guidance speech rate.

Restore Factory Defaults

Menu item	Settings	Description
Restore Settings	Restore all settings Restore printer settings Restore network settings Restore fax settings Restore app settings	Restore the printer factory default settings.

Maintenance

Configuration Menu

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
USB Configuration	USB PnP	1* 2	Change the USB driver mode of the printer to improve its compatibility with a personal computer.
	USB Scan to Local	On* Off	Set whether the USB device driver enumerates as a USB Simple device (single interface) or as a USB Composite device (multiple interfaces).
	USB Speed	Full Auto*	Set the USB port to run at full speed and disable its high-speed capabilities.

Printer menus

Menu item	Submenu item	Settings	Description
Tray Configuration	Size Sensing	Tray [x] Sensing (On*)	Set the tray to sense automatically the paper size loaded into it.
	Tray Linking	Automatic* Off	Set the printer to link the trays that have the same paper type and paper size settings.
	Show Tray Insert Message	Off Only for unknown sizes* Always	Display a message that lets the user change the paper size and paper type settings after inserting the tray.
	Paper Prompts	Auto* Multipurpose Feeder Manual Paper	Set the paper source that the user fills when a prompt to load paper appears. Note: For Multipurpose Feeder to appear, in the Paper menu set Configure MP to Cassette .
	Envelope Prompts	Auto* Multipurpose Feeder Manual Envelope	Set the paper source that the user fills when a prompt to load envelope appears. Note: For Multipurpose Feeder to appear, in the Paper menu set Configure MP to Cassette .
	Action for Prompts	Prompt user* Continue Use current	Set the printer to resolve paper- or envelope-related change prompts.
	Multiple Universal Sizes	Off* On	Set the tray to support multiple universal paper sizes.
Reports	N/A	Menu Settings Page Event Log Event Log Summary	Print reports about printer menu settings, status, and event logs.
Supply Usage And Counters	Clear Supply Usage History	Start	Reset the supply usage history to the factory shipped level.
	Reset Black Cartridge Counter	Start	Reset the counter after installing a new supply item or maintenance kit.
	Reset Cyan Cartridge Counter	Start	
	Reset Magenta Cartridge Counter	Start	
	Reset Yellow Cartridge Counter	Start	

Printer menus

Menu item	Submenu item	Settings	Description	
	Reset Black Imaging Unit Counter	Start		
	Reset Color Imaging Kit Counter	Start		
	Reset MPF Roller Kit Counter	Start		
	Reset 1500 Sheet Roller Kit Counter	Start		
	Reset Roller Kit Counter	Start		
	Tiered Coverage Ranges	Tiered Coverage Metrics (Show*)	Tiered Coverage Ranges	Show the Tiered Coverage Billing section on the Device Statistics report.
Large Media Adjustments	Off* On	Enable two-click page accounting for large paper.		
Printer Emulations	PPDS Emulation	Off* On	Set the printer to recognize and use the PPDS data stream.	
	PS Emulation	Off On*	Set the printer to recognize and use the PostScript® emulation data stream.	
	Enable Formsmerge	Off* On	Activate Forms Merge.	
	Enable Prescribe	Off* On	Activate the PRESCRIBE printer language.	
	Emulator Security	Page Timeout (60*)		Set the page timeout during emulation.
Reset Emulator After Job (Off*)			Reset the emulator after a print job.	
Disable Printer Message Access (On*)			Determine whether the emulator can access the initial printer setup or not.	
Fax Configuration	Fax Low Power Support	Disable Sleep Permit Sleep Auto*	Determine if the printer supports the fax portion of the low power architecture.	

Printer menus

Menu item	Submenu item	Settings	Description
	Fax Storage Location	Disk* NAND	Set the storage location for all faxes. Note: This menu item appears only when a storage drive is installed.
Print Configuration	Black Only Mode	Off* On	Print non-copy jobs in grayscale.
	Color Trapping	Off 1 2* 3 4 5	Enhance the printed output to compensate for misregistration in the printer.
	Font Sharpening	0 to 150 (24*)	Set a text point-size value below which the high-frequency screens are used when printing font data. For example, if the value is 24, then all fonts sized 24 points or less use the high-frequency screens.
	Use Native ISD Fonts	On* Off	Let the user choose whether to use the free fonts that are in the intelligent storage drive (ISD). Note: This menu item appears only when an ISD is installed.
Device Operations	Quiet Mode	Off* On	Adjust the amount of noise that the printer produces. Note: Enabling this setting slows down the overall performance of the printer.
	Enable Burst Mode	On* Off	Set the printer to speed up one page and possibly the first page of a multiple-page job to get the job done more quickly. Note: This menu item appears only in some printer models.

Printer menus

Menu item	Submenu item	Settings	Description
	Safe Mode	Off* On	<p>Set the printer to operate in a special mode where it offers as much functionality as possible despite known issues.</p> <p>For example, when set to On and the duplex motor is nonfunctional, one-sided printing is performed even if a job is set to two-sided printing.</p> <p>Note: Enabling this setting allows printing only from the multipurpose feeder.</p>
	Minimum Copy Memory	80 MB* 100 MB	Set the minimum memory allocation for storing copy jobs.
	Clear Custom Status	Start	Erase user-defined strings for the Default or Alternate custom messages.
	Clear all remotely installed messages	Start	Erase messages that were remotely installed.
	Automatically Display Error Screens	Off On*	Show existing error messages on the display after the printer remains inactive on the home screen for a length of time.
	Honor orientation on fast path copy	Off* On	Enable the printer to use the orientation setting under the Copy menu when sending quick copy jobs.
	Service Nonvolatile Memory	Encryption Status	Show the encryption status of the storage drive.
		Encrypt Service Nonvolatile Memory	Enable mirror encryption manually.
Toner Patch Sensor Setup	Calibration frequency preference	Disabled Fewest adjustments Fewer adjustments Normal* Better accuracy Best accuracy	Set the printer to put down the correct amount of toner to maintain color consistency.
	Full calibration	Start	Run the full color calibration.
	TPS information Page	Print TPS Information Page	Print a diagnostic page that contains information on toner patch sensor calibration.

Printer menus

Menu item	Submenu item	Settings	Description
App Configuration	LES Applications	Off On*	Enable Lexmark Embedded Solutions (LES) applications.
Scanner Configuration	Scanner Manual Registration	Print Quick Test Front ADF Registration Rear ADF Registration Flatbed Registration	Print a Quick Test target page, or manually register the flatbed and automatic document feeder (ADF) after replacing the ADF, scanner glass, or controller board. Note: When printing a Quick Test target page, make sure that the margin spacing on the target page is uniform all the way around the target. If it is not, then the printer margins must be reset.
	Reset Maintenance Counter	Resetting ADF Maintenance Counter (Start)	Reset the counter after replacing the ADF maintenance kit.
	Edge Erase	Flatbed Edge Erase (3*) ADF Edge Erase (3*)	Set the size, in millimeters, of the no-print area around an ADF or flatbed scan job.
	ADF Deskew	ADF Electronic Deskew (On*)	Reduce skewing of documents that are scanned from the ADF.
	Disable Scanner	No* Yes ADF Only	Disable the scanner when it is not working properly.
	Tiff Byte Order	CPU Endianness* Little Endian Big Endian	Set the byte order of a TIFF-formatted scan output.
	Exact Tiff Rows Per Strip	On* Off	Set the RowsPerStrip tag value of a TIFF-formatted scan output.
	Scanner Glass Cleaning Threshold	1000 to 30000 (10000*)	Set the number of scans before the user receives a prompt to clean the scanner glass.

Out of Service Erase

Menu item	Submenu item	Settings	Description
Out of Service Erase	Memory Last Sanitized	The setting is a read-only information.	Show when the printer memory was last erased.

Printer menus

Menu item	Submenu item	Settings	Description
	Hard Disk Last Sanitized	The setting is a read-only information.	Show when hard disk was last erased. Note: This menu item appears only when a hard disk is installed.
	ISD last erased	The setting is a read-only information.	Show when the intelligent storage drive (ISD) was last erased. Note: This menu item appears only when an ISD is installed.
	Sanitize all information on nonvolatile memory	Erase all printer and network settings Erase all apps and app settings Erase all shortcuts and shortcut settings	Clear all information on nonvolatile memory.
	Sanitize all information on hard disk	Erase downloads (Erases all macros, fonts, PFOs, etc.) Erase buffered jobs Erase Held Jobs	Clear all information on the hard disk. Note: This menu item appears only when a hard disk is installed.
	Erase Intelligent Storage Drive	Erase	Clear all information on the ISD. Note: This menu item appears only when an ISD is installed.

Firmware Update

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu Item	Settings	Description
Installed Version	N/A	The setting is a read-only information.	Show the current firmware version installed on the printer.
Date Installed	N/A	The setting is a read-only information.	Shows the date when the firmware was installed on the printer.

Printer menus

Menu item	Submenu Item	Settings	Description
Check for updates	N/A	The setting is a read-only information.	Check for firmware updates.
Update Firmware from Server	Auto Update	Disabled* Check Only Check and Install	Configure when firmware is updated and limits the download speed of the update.
	Scheduled Day	The setting is a user-defined setting.	
	Scheduled Time	The setting is a user-defined setting.	
	Download Settings	Background Download (Off*) Limit Download Speed (Off*)	

About this Printer

Menu item	Description
Asset Tag	Specify the identity of the printer.
Printer's Location	Specify the printer location.
Contact	Specify the contact information for the printer.
Firmware Version	Show the firmware version installed on the printer.
Engine	Show the engine number of the printer.
Serial Number	Show the serial number of the printer.
Export Configuration File to USB	Export the configuration file to a flash drive.
Export Compressed Logs to USB	Export the compressed log files to a flash drive.
Send Logs	Send printer log information to Lexmark.

Print

Layout

Note: An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Sides	1-Sided 2-Sided*	Specify whether to print on one side or both sides of the paper.
Flip Style	Long Edge* Short Edge	Determine which side of the paper is bound when performing two-sided printing.
Blank Pages	Print Do Not Print*	Print blank pages that are included in a print job.
Collate	Off (1,1,1,2,2,2) On (1,2,1,2,1,2)*	Keep the pages of a print job stacked in sequence, particularly when printing multiple copies of the job.
Separator Sheets	None* Between Copies Between Jobs Between Pages	Insert blank separator sheets when printing.
Separator Sheet Source	Tray [x] (1*) Multipurpose Feeder	Specify the paper source for the separator sheet.
Pages per Side	Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Print multiple page images on one side of a sheet of paper.
Pages per Side Ordering	Horizontal* Reverse Horizontal Vertical Reverse Vertical	Specify the positioning of multiple page images when using the Pages per Side menu.
Pages per Side Orientation	Auto* Landscape Portrait	Specify the orientation of multiple page images when using the Pages per Side menu.
Pages per Side Border	None* Solid	Print a border around each page image when using the Pages per Side menu.
Copies	1 to 9999 (1*)	Specify the number of copies for each print job.

Menu item	Settings	Description
Print Area	Normal*	Set the printable area on a sheet of paper.
	Fit to page	
	Whole Page	

Finishing

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Staple Job	Off*	Specify the staple position for all print jobs. Note: This menu item appears only when a staple finisher is installed.
	1 staple, top left corner	
	2 staples, left	
	1 staple, top right corner	
	2 staples, top	
	1 staple, bottom left corner	
	2 staples, bottom	
	1 staple, bottom right corner	
	2 staples, right	
Staple Test	Start	Determine whether the staple finisher is functioning properly. Note: This menu item appears only when a staple finisher is installed.
Hole Punch	Off*	Punch holes along the edge of the printed output. Note: This menu item appears only when a staple, hole punch finisher is installed.
	On	
Hole Punch Mode	2 holes	Set the hole punch mode for the printed output. Notes <ul style="list-style-type: none"> 3 holes is the U.S. factory default setting. 4 holes is the international factory default setting. This menu item appears only when a staple, hole punch finisher or booklet finisher is installed.
	3 holes	
	4 holes	

Printer menus

Menu item	Settings	Description
Offset Pages	None* Between Copies Between Jobs	Offset the output of each print job or each copy of a print job. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Between Copies offsets each copy of a print job if Collate is set to On [1,2,1,2,1,2]. If Collate is set to Off [1,1,1,2,2,2], then each set of printed pages is offset, such as all pages designated as 1 and all pages designated as 2. • Between Jobs sets the same offset position for the entire print job regardless of the number of copies printed. </div>

Setup

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Printer Language	PCL Emulation PS Emulation*	Set the printer language. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: Setting a printer language default does not prevent a software program from sending print jobs that use another printer language.</p> </div>
Job Waiting	Off* On	Preserve print jobs requiring supplies so that jobs not requiring the missing supplies can print. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: This menu item appears only when a storage drive is installed.</p> </div>
Job Hold Timeout	0 to 255 (30*)	Set the time in seconds that the printer waits for user intervention before it holds jobs that require unavailable resources. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: This menu item appears only when a storage drive is installed.</p> </div>

Printer menus

Menu item	Settings	Description
Printer Usage	Max Speed Max Yield*	<p>Determine if the retraction hardware disengages or engages the color developer units during printing.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • When set to Max Yield, the color developer units are disengaged when not needed. This setting increases component life but can create pauses. • When set to Max Speed, the color developer units remain engaged regardless of whether a job contains mono or color content. This setting can shorten color component life. </div>
Low-Speed Printer Usage	Max Yield* Max Speed	<p>Determine if the retraction hardware disengages or engages the color developer units during printing at low speed.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: This setting only changes printer behavior when the print engine is running at a 25 pages-per-minute process speed. It has no effect when the print engine is running at faster process speeds.</p> </div>
Download Target	RAM* Flash Disk	<p>Specify where to save all permanent resources that have been downloaded to the printer.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: This menu item appears only when a storage drive is installed.</p> </div>
Resource Save	Off* On	<p>Determine what the printer does with downloaded resources when it receives a job that requires more than the available memory.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • When set to Off, the printer retains downloaded resources only until memory is needed. Resources associated with the inactive printer language are deleted. • When set to On, the printer preserves all the permanent downloaded resources across all language switches. When necessary, the printer shows memory full messages instead of deleting permanent resources. </div>
Print All Order	Alphabetical* Newest First Oldest First	<p>Specify the order when you choose to print all held and confidential jobs.</p>

Menu item	Settings	Description
Automatic Deletion of Suspended Print Jobs	Off* On	Set the printer to cancel automatically the queued print jobs that are interrupted by errors such as paper jams and missing supplies.

Quality

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Print Mode	N/A	Black and White Color*	Set how the printer generates color content.
Print Resolution	N/A	4800 CQ* 1200 dpi	Set the resolution for the printed output. Note: 4800 CQ provides high-quality output at maximum speed.
Toner Darkness	N/A	1 to 5 (4*)	Determine the lightness or darkness of text images.
Halftone	N/A	Normal* Detail	Enhance the printed output to have smoother lines with sharper edges.
Color Saver	N/A	Off* On	Reduce the amount of toner used to print graphics and images. Note: When set to On , this setting overrides the value of the Toner Darkness setting.
RGB Brightness	N/A	-6 to 6 (0*)	Adjust the brightness of every RGB and gray object on the page. Note: This setting does not affect files where CMYK color specifications are used.
RGB Contrast	N/A	0 to 5 (0*)	Adjust the contrast of every RGB and gray object on the page. Note: This setting does not affect files where CMYK color specifications are used.
RGB Saturation	N/A	0 to 5 (0*)	Preserve the black and white values while adjusting the color values of every object on the page. Note: This setting does not affect files where CMYK color specifications are used.

Menu item	Submenu item	Settings	Description
Advanced Imaging	Color Balance	Cyan (0*) Magenta (0*) Yellow (0*) Black (0*)	Adjust the amount of toner that is used for each color.
		Reset Defaults	Reset all color settings to their default values.
	Color Correction	Off Auto* Manual	Modify the color settings that are used to print documents.
		<p>Notes</p> <ul style="list-style-type: none"> • Off—Sets the printer to receive the color correction from the software. • Auto—Sets the printer to apply different color profiles to each object on the printed page. • Manual—Allows the customization of the RGB or CMYK color conversions applied to each object on the printed page. 	
	Color Samples	Print Color Samples	Print sample pages for each of the RGB and CMYK color conversion tables that are used in the printer.
Color Adjust	Color Adjust	Calibrate the printer to adjust color variations in the printed output.	
Spot Color Replacement	Set Custom CMYK	Assign specific CMYK values to 20 named spot colors.	

Job Accounting

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Job Accounting	Off* On	Set the printer to create a log of the print jobs that it receives.
Accounting Log Frequency	Daily Weekly Monthly*	Specify how often the printer creates a log file.

Printer menus

Menu item	Settings	Description
Log Action at End of Frequency	None* Email Current Log Email & Delete Current Log Post Current Log Post & Delete Current Log	Specify how the printer responds when the frequency threshold expires. Note: The value defined in Accounting Log Frequency determines when this action is triggered.
Log Near Full Level	On* (5MB) Off	Specify the maximum size of the log file before the printer executes the Log Action at Near Full . Note: This menu item appears only when a storage drive is installed.
URL to Post Log	The setting is user-defined.	Specify where the printer posts job accounting logs.
Email Address to Send Logs	The setting is user-defined.	Specify the email address to which the printer sends job accounting logs.
Log File Prefix	The setting is user-defined.	Specify the prefix for the log files. Note: The current host name defined in the TCP/IP menu is used as the default log file prefix.

PDF

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Scale To Fit	Off* On	Scale the page content to fit the selected paper size.
Annotations	Print Do Not Print*	Specify whether to print annotations in the PDF.
Print PDF Error	Off On*	Enable the printing of PDF error.

PostScript

Note: An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Print PS Error	Off* On	Print a page that describes the PostScript® emulation error. Note: When an error occurs, processing of the job stops, the printer prints an error message, and the rest of the print job is flushed.
Minimum Line Width	1 to 30 (2*)	Set the minimum stroke width. Note: Jobs printed in 1200 dpi use the value directly.
Lock PS Startup Mode	Off On*	Disable the SysStart file. Note: Enabling the SysStart file exposes your printer or network to a security risk.
Image Smoothing	Off* On	Enhance the contrast and sharpness of low-resolution images. Note: This setting has no effect on images with a resolution of 300 dpi or higher.
Font Priority	Resident* Flash/Disk	Establish the font search order. Notes <ul style="list-style-type: none"> • Resident—Sets the printer to search its memory for the requested font before searching the storage drive. • Flash/Disk—Sets the printer to search the storage drive for the requested font before searching the printer memory. • This menu item appears only when a storage drive is installed.
Wait Timeout	Off On*	Enable the printer to wait for more data before canceling a print job. Note: When set to On , 40 seconds is the factory default setting.

PCL

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Scale To Fit	Off* On	Scale the page content to fit the selected paper size.

Menu item	Settings	Description
Font Source	Resident* Disk Download Flash Font Card All	<p>Select the source which contains the default font selection.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Disk—Appears only and if a non-defective, non-read/write protected hard disk that contains fonts is installed. • Download—Appears only if downloaded fonts exist in the printer memory. • Flash—Appears only if a non-defective, non-read/write protected flash memory that contains fonts is installed. • Font Card—Appears only if a valid font card is installed or an intelligent storage drive is configured. </div>
Font Name	[List of available fonts] (Courier*)	Select a font from the specified font source.
Symbol Set	[List of available symbol sets] (10U PC-8*)	<p>Specify the symbol set for each font name.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: A symbol set is a set of alphabetic and numeric characters, punctuation, and special symbols. Symbol sets support the different languages or specific programs such as math symbols for scientific text.</p> </div>
Pitch	0.08 to 100.00 (10.00*)	<p>Specify the pitch for fixed or monospaced fonts.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: This menu item refers to the number of fixed-space characters in a horizontal inch of type.</p> </div>
Orientation	Portrait* Landscape Reverse Portrait Reverse Landscape	Specify the orientation of text and graphics on the page.
Lines per Page	1 to 255	<p>Specify the number of lines of text for each page printed through the PCL® emulation data stream.</p> <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • This menu item activates vertical escapement that causes the selected number of requested lines to print between the default margins of the page. • 60 is the U.S. factory default setting. 64 is the international factory default setting. </div>

Printer menus

Menu item	Settings	Description
PCL5 Minimum Line Width	1 to 30 (2*)	Set the initial minimum stroke width value of any job printed in 1200 dpi through the applicable emulator.
PCLXL Minimum Line Width	1 to 30 (2*)	
A4 Width	198 mm* 203 mm	Set the width of the logical page on A4-size paper. Note: Logical page is the space on the physical page where data is printed.
Auto CR after LF	On Off*	Set the printer to perform a carriage return after a line feed control command. Note: Carriage return is a mechanism that commands the printer to move the position of the cursor to the first position on the same line.
Auto LF after CR	On Off*	Set the printer to perform a line feed after a carriage return control command.
Tray Renumber	Assign MP Feeder Assign Tray [x] Assign Manual Paper Assign Manual Envelope	Configure the printer to work with a different print driver or custom application that uses a different set of source assignments to request a given paper source. Choose from the following options: Off* —The printer uses the factory default paper source assignments. None —The paper source ignores the Select Paper Feed command. 0 to 199 —Select a numeric value to assign a custom value to a paper source.
	View Factory Defaults	Show the factory default value assigned for each paper source.
	Restore Defaults	Restore the tray renumber values to their factory defaults.
Print Timeout	Off On* (90)	Set the printer to end a print job after it has been idle for the specified amount of time.

Image

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Auto Fit	On Off*	Select the best available paper size and orientation setting for an image. Note: When set to On , this menu item overrides the scaling and orientation settings for the image.

Printer menus

Menu item	Settings	Description
Invert	Off* On	Invert bitonal monochrome images. Note: This menu item does not apply to GIF or JPEG image formats.
Scaling	Best Fit* Anchor Top Left Anchor Center Fit Height/Width Fit Height Fit Width	Adjust the image to fit the printable area. Note: When Auto Fit is set to On , Scaling is automatically set to Best Fit .
Orientation	Portrait* Landscape Reverse Portrait Reverse Landscape	Specify the orientation of text and graphics on the page.

Paper

Tray Configuration

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Default Source	N/A	Tray [x] (1*) Multipurpose Feeder Manual Paper Manual Envelope	Set the default paper source for all print jobs.
Paper Size/ Type	Tray [x] Multipurpose Feeder Manual Paper Manual Envelope	Size Type	Specify the paper size or paper type loaded in each paper source.

Printer menus

Menu item	Submenu item	Settings	Description
Substitute Size	N/A	Off Statement/A5 Letter/A4 11 x 17/A3 All Listed*	Set the printer to substitute a specified paper size if the requested size is not loaded in any paper source. Notes <ul style="list-style-type: none"> • Off—Prompts the user to load the required paper size. • All Listed—Allows all available substitutions.
Configure MP	N/A	Cassette* Manual First	Determine the behavior of the multipurpose feeder. Notes <ul style="list-style-type: none"> • Cassette—Configures the multipurpose feeder as the automatic paper source. • Manual—Sets the multipurpose feeder only for manual-feed print jobs. • First—Configures the multipurpose feeder as the primary paper source.

Media Configuration

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Units of Measure	N/A	Inches Millimeters	Specify the unit of measurement for the universal paper. Note: Inches is the U.S. factory default setting. Millimeters is the international factory default setting.
Universal Setup	All Input Trays	Portrait Width	Set the portrait width of the universal paper.
		Portrait Height	Set the portrait height of the universal paper.
		Feed Direction (Short Edge*)	Set the printer to pick paper from the short edge or long edge direction. Note: Long Edge appears only when the longest edge is shorter than the maximum width supported.

Menu item	Submenu item	Settings	Description
Custom Scan Sizes	Scan Size Name	The setting is user-defined.	Assign a name for the custom scan.
	Width	1 to 8.5 inches (8.5*) 25 to 215.9 mm (215.9*)	Specify the width of the original document.
	Height	1 to 25 inches (11*) 25 to 635 mm (279.4*)	Specify the height of the original document.
	Orientation	Portrait* Landscape	Specify the orientation of the content on the original document.
	2 scans per side	Off* On	Set the default number of scans on each side of the printer.
Media Type Setup	[List of paper types]	Texture Weight Loading Orientation Send to Bin	Specify the texture, weight, and orientation of the paper.

Bin Configuration

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Output Bin	Standard Bin* Bin [x]	Specify the output bin for the print jobs.
Configure Bins	Mailbox* Link Link Optional Type Assignment	Configure the mode of operation for the output bins. <div style="border: 1px solid gray; padding: 10px; margin-top: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Mailbox—Allows the standard bin and any optional bin to be selected individually. • Link—Allows all output bins to be linked together as though they were one large bin. • Link Optional—Treats all optional bins as one large output bin. • Type Assignment—Assigns each paper type a bin or a linked bin set. </div>

Menu item	Settings	Description
Custom Bin Names	Standard Bin Bin [x]	Assign a name for each bin.

Copy

Copy Defaults

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu items	Settings	Description
Content Type	N/A	Text Text/Photo* Photo Graphics	Improve the output result based on the content of the original document.
Content Source	N/A	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the source of the original document.
Sides	N/A	1 sided to 1 sided* 1 sided to 2 sided 2 sided to 1 sided 2 sided to 2 sided	Specify the scanning behavior based on the original document.
Separator Sheets	N/A	None* Between Copies Between Jobs Between Pages	Specify whether to insert blank separator sheets when printing.
Separator Sheet Source	N/A	Tray [x] (1*) Multipurpose Feeder	Specify the paper source for the separator sheet.

Printer menus

Menu item	Submenu items	Settings	Description
Color	N/A	Off On* Auto	Set the printer to generate color output from a scan job.
Pages per Side	N/A	Off* 2 Portrait pages 4 Portrait pages 2 Landscape pages 4 Landscape pages	Specify the number of page images to print on one side of a sheet of paper.
Print Page Borders	N/A	Off* On	Place a border around each image when printing multiple pages on a single page.
Collate	N/A	Off [1,1,1,2,2,2] On [1,2,1,2,1,2]*	Print multiple copies in sequence.
Offset Pages	N/A	None* Between Copies Between Jobs	Offset the output of each print job or each copy of a print job. <div data-bbox="1007 1032 1415 1767" style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Between Copies—Offsets each copy of a print job if Collate is set to On [1,2,1,2,1,2]. If Collate is set to Off [1,1,1,2,2,2], then each set of printed pages is offset, such as all page 1s and all page 2s. • Between Jobs—Sets the same offset position for the entire print job regardless of the number of copies printed. • This menu item appears only when an offset stacker or a staple, hole punch finisher is installed. </div>

Printer menus

Menu item	Submenu items	Settings	Description
Staple	N/A	Off* 1 staple, top left corner 2 staples, left 1 staple, top right corner 2 staples, top 1 staple, bottom left corner 2 staples, bottom 1 staple, bottom right corner 2 staples, right 4 staples	Specify the staple position for all print jobs. Note: This menu item appears only when a staple finisher is installed.
Punch	N/A	Off* 2 holes 3 holes 4 holes	Punch holes on the printed output. Note: This menu item appears only when a staple, hole punch finisher or booklet finisher is installed.
“Copy from” Size		[List of paper sizes]	Set the paper size of the original document. Note: Letter is the U.S. factory default setting. A4 is the international factory default setting.
“Copy to” Source	N/A	Tray [x] (1*) Multipurpose Feeder Auto Size Match	Specify the paper source for the copy job.
Temperature	N/A	-4 to 4 (0*)	Specify whether to generate a cooler or warmer output.
Darkness	N/A	1 to 9 (5*)	Adjust the darkness of the scanned image.
Number of Copies	N/A	1 to 9999 (1*)	Specify the number of copies.

Printer menus

Menu item	Submenu items	Settings	Description
Header/Footer	N/A	Left Header Middle Header Right Header Left Footer Middle Footer Right Footer	Specify the header or footer information on the scanned image.
Overlay	N/A	Confidential Copy Draft Urgent Custom Off*	Specify the overlay text to print on each copy.
Custom overlay	N/A	The setting is user-defined.	Type the text for the Custom choice in the Overlay menu.
Advanced Imaging	Color Balance	Cyan to Red (0*) Magenta to Green (0*) Yellow to Blue (0*)	Adjust the color intensity for cyan, magenta, and yellow.
	Color Dropout	Color Dropout (None*) Default Red Threshold (128*) Default Green Threshold (128*) Default Blue Threshold (128*)	Specify which color to drop during scanning, and adjust the dropout setting for that color.
	Auto Color Detect	Color Sensitivity (5*) Area Sensitivity (5*)	Configure the auto color detection setting.
	Contrast	Best for content* 0 to 5	Specify the contrast for the scanned image.

Printer menus

Menu item	Submenu items	Settings	Description
	Background Removal	Background Detection (Content-based*) Level (0*)	Remove the background color or image noise from the original document. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Content-based— Removes the background color from the original document. • Fixed—Removes image noise from a photo. </div>
	Auto Center	Off* On	Align the content at the center of the page.
	Mirror Image	Off* On	Create a mirror image of the original document.
	Negative Image	Off* On	Create a negative image of the original document.
	Shadow Detail	-4 to 4 (0*)	Adjust the shadow detail in the original document.
	Scan Edge to Edge	Off* On	Scan the original document from edge to edge.
	Sharpness	1 to 5 (3*)	Adjust the sharpness of the scanned image.
	Saturation	1 to 5 (3*)	Adjust the color saturation of the scanned image.
Admin Controls	Allow Color Copies	Off On*	Print copies in color.
Allow Priority Copies	Off On*	Interrupt a print job to make copies	
Custom Job Scanning	Off* On	Set the printer to scan the first set of original documents using the specified settings, and then the next set with the same or different settings.	
Allow Save as Shortcut	Off On*	Save copy settings as a shortcut.	

Printer menus

Menu item	Submenu items	Settings	Description
Adjust ADF Skew	Off On*	Set the printer to adjust the skewed images from documents that are scanned from the ADF.	
Sample Copy	Off* On	Print a sample copy to check the quality before printing the remaining copies.	

Fax

Fax Defaults

Fax Mode

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Fax Mode	Fax* Fax Server Disabled	Select a fax mode.

Fax Setup

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
General Fax Settings	Fax Name	The setting is user-defined.	Specify your fax ID.
	Fax Number	The setting is user-defined.	Specify your fax number.
	Fax ID	Fax Name * Fax Number	Set the fax ID to use during fax negotiation. Note: This item appears only when Fax Mode is set to Analog .

Menu item	Submenu item	Settings	Description
	Enable Manual Fax	Off* On	Turn on the manual fax function in the printer. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 5px;"> <p>Notes</p> <ul style="list-style-type: none"> This menu item requires a line splitter and a telephone handset. Use a regular telephone line to answer an incoming fax job and to dial a fax number. To go directly to the manual fax function, touch # and 0 on the keypad. </div>
	Memory Use	All receive Mostly receive Equal* Mostly send All send	Set the amount of internal printer memory allocated for faxing. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 5px;"> <p>Note: This menu item prevents memory buffer conditions and failed faxes.</p> </div>
	Cancel Faxes	Allow* Don't Allow	Cancel outgoing or incoming faxes.
	Fax Number Masking	Off* From Left From Right	Specify the format for masking an outgoing fax number.
	Digits to Mask	0 to 58 (0*)	Specify the number of digits to mask in an outgoing fax number.
	Enable Line Connected Detection	Off On*	Determine whether a telephone line is connected to the printer. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 5px;"> <p>Note: Events are detected immediately.</p> </div>
	Enable Line In Wrong Jack Detection	Off On*	Determine whether a telephone line is connected to the correct port on the printer. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 5px;"> <p>Note: Events are detected immediately.</p> </div>

Printer menus

Menu item	Submenu item	Settings	Description
	Enable Extension in Use Support	Off On*	Determine whether a telephone line is used by another device, such as another phone on the same line. Note: Events are detected immediately.
	Optimize Fax Compatibility	The setting is user-defined.	Configure the printer fax functionality for optimal compatibility with other fax machines.
	Fax Transport	T.38 Analog* G.711 etherFAX None	Set the fax transport method. Note: This menu item appears only if an etherFAX or Fax over IP (FoIP) license bundle is installed in the printer.
HTTPS Fax Settings Note: This menu appears only if Fax Transport is set to etherFAX .	HTTPS service URL	The setting is user-defined.	Specify the etherFAX service URL.
	HTTPS Proxy	The setting is user-defined.	Specify a proxy server URL.
	HTTPS Proxy User	The setting is user-defined.	Specify the username and password for the proxy server.
	HTTPS Proxy Password		
	Fax Send Encryption	Disabled Enabled* Required	Enable encryption for outgoing fax messages.
	Fax Receive Encryption	Disabled Enabled* Required	Enable encryption for incoming fax messages.
	HTTPS Fax Status	The setting is a read-only information.	Show the etherFAX communication status.
Fax Send Settings	Resolution	Standard* Fine Super Fine Ultra Fine	Set the resolution of the scanned image. Note: A higher resolution increases fax transmission time and requires more memory.
	Original Size	[List of paper sizes] (Mixed Sizes*)	Specify the size of the original document.
	Orientation	Portrait* Landscape	Specify the orientation of the original document.

Printer menus

Menu item	Submenu item	Settings	Description
	Sides	Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document.
	Content Type	Text* Text/Photo Photo Graphics	Improve the output result based on the content of the original document.
	Content Source	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the source of the original document.
	Darkness	1 to 9 (5*)	Adjust the darkness of the scanned image.
	Behind a PABX	On Off*	Set the printer to dial a fax number without waiting to recognize the dial tone. Note: Private Automated Branch Exchange (PABX) is a telephone network that allows a single access number to offer multiple lines to outside callers.
	Dial Mode	Tone* Pulse	Specify the dial mode for incoming or outgoing faxes.
Advanced Imaging	Color Balance	Cyan - Red (0*) Magenta - Green (0*) Yellow - Blue (0*)	Adjust the color intensity during scanning.

Printer menus

Menu item	Submenu item	Settings	Description
	Color Dropout	Best for Content* 0 1 2 3 4 5	Set the contrast of the output.
	Mirror Image	Off* On	Create a mirror image of the original document.
	Shadow Detail	-4 to 4 (0*)	Adjust the amount of shadow detail visible on a scanned image.
	Scan Edge to Edge	Off On*	Allow edge-to-edge scanning of the original document.
	Sharpness	1 to 5 (3*)	Adjust the sharpness of the scanned image.
	Saturation	1 to 5 (1*)	Adjust the color saturation of the scanned image.
	Temperature	-4 to 4 (0*)	Specify whether to generate a cooler or warmer output.
Admin Controls	Automatic Redial	0 to 9 (5*)	Specify the number of attempts that the printer redials before it cancels sending the fax to a specified destination.
	Redial Frequency	1 to 200 minutes (3*)	Increase the time between redial attempts to increase the chance of sending fax successfully.
	Enable ECM	On* Off	Activate Error Correction Mode (ECM) for fax jobs. Note: ECM detects and corrects errors in the fax transmission process caused by telephone line noise and poor signal strength.
	Enable Fax Scans	On* Off	Create faxes using the printer scanner.
	Driver to Fax	On* Off	Allow the print driver to send fax.
	Allow Save as Shortcut	On* Off	Save fax numbers as shortcuts on the printer.

Printer menus

Menu item	Submenu item	Settings	Description
	Max Speed	33600* 14400 9600 4800 2400	Set the maximum speed for sending fax.
	Custom Job Scanning	Off* On	Turn on scanning of custom jobs by default.
	Scan Preview	Off* On	Show a preview of the scan on the display.
	Adjust ADF Skew	Off On*	Correct slight skew in the scanned image.
	Enable Color Fax Scans	Off by Default* On by Default Never Use Always Use	Enable color scans for fax.
	Auto Convert Color Faxes to Mono Faxes	On* Off	Convert all outgoing color faxes to black and white.
	Confirm Fax Number	Off* On	Ask the user to confirm the fax number.
	Dial Prefix	The setting is user-defined.	Set a dialing prefix.
	Dialing Prefix Rules	The setting is user-defined.	Establish a dialing prefix rule.
Fax Receive Settings	Fax Job Waiting	None* Toner Toner and Supplies	Remove fax jobs that request specific unavailable resources from the print queue.
	Rings to Answer	1 to 25 (3*)	Set the number of rings required before the printer answers the incoming calls.
	Auto Reduction	On* Off	Scale incoming fax to fit on the page.
	Paper Source	Tray [x] Auto*	Set the paper source for printing incoming fax.

Printer menus

Menu item	Submenu item	Settings	Description
	Sides	On Off*	Print on both sides of the paper.
	Separator Sheets	None* Before Job After Job	Specify whether to insert blank separator sheets when printing.
	Separator Sheet Source	Tray [x] (1*)	Specify the paper source for the separator sheet.
	Output Bin	Standard Bin	Specify the output bin for received faxes.
	Fax Footer	On Off*	Print the transmission information at the bottom of each page from a received fax.
	Fax Footer Time Stamp	Receive* Print	Print the time stamp at the bottom of each page from a received fax.
	Holding Faxes	Held Fax Mode (Off*)	Hold received faxes from printing until they are released.
		Fax Holding Schedule	Assign a schedule for holding faxes. Note: This menu item appears only if Held Fax Mode is set to Scheduled .
Admin Controls	Enable Fax Receive	On* Off	Set the printer to receive fax.
	Enable Color Fax Receive	On* Off	Set the printer to receive fax in color.
	Enable Caller ID	On* Off	Show the caller ID information of the incoming call on the printer display.
	Block No Name Fax	On Off*	Block incoming faxes without fax IDs.
	Banned Fax List	Add Banned Fax	Specify the phone numbers that you want to block.

Printer menus

Menu item	Submenu item	Settings	Description
	Answer On	All Rings* Single Ring Only Double Ring Only Triple Ring Only Single or Double Rings Only Single or Triple Rings Only Double or Triple Rings Only	Set a distinctive ring pattern for incoming fax.
	Auto Answer	On* Off	Set the printer to receive fax automatically.
	Manual Answer Code	0 to 9 (9*)	Manually enter a code on the telephone number pad to begin receiving fax. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 10px; margin-top: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • This menu item appears only when the printer shares a line with a telephone. • This menu item appears only when you set the printer to receive fax manually. </div>
	Fax Forwarding	Print* Print and Forward Forward	Specify whether to forward received fax.
	Forward To	Destination 1 Destination 2	Specify where to forward received fax. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 10px; margin-top: 10px;"> <p>Note: This menu item appears only when Fax Forwarding is set to Print and Forward or Forward.</p> </div>
	Max Speed	33600* 14400 9600 4800 2400	Set the maximum speed for transmitting fax.

Printer menus

Menu item	Submenu item	Settings	Description
Fax Cover Page	Fax Cover Page	Off by Default* On by Default Never Use Always Use	Configure the settings for the fax cover page.
	Include To field	Off* On	
	Include From field	Off* On	
	From	The setting is user-defined.	
	Include Message Field	Off* On	
	Message:	The setting is user-defined.	
	Include Logo	Off* On	
	Include Footer [x]	Off* On	
	Footer [x]	The setting is user-defined.	
Fax Log Settings	Transmission Log Frequency	Always* Never Only for Error	Specify how often the printer creates a transmission log.
	Transmission Log Action	Print (On*) Email (Off*)	Print or email a log for successful fax transmission or transmission error.
	Receive Error Log	Print Never* Print on Error	Print a log for fax-receive failures.
	Auto Print Logs	On* Off	Print all fax activity.
	Log Paper Source	Tray [x] (1*)	Specify the paper source for printing logs.
	Logs Display	Remote Fax Name* Dialed Number	Identify the sender by remote fax name or fax number.

Printer menus

Menu item	Submenu item	Settings	Description
	Enable Job Log	On* Off	View a summary of all fax jobs.
	Enable Call Log	On* Off	View a summary of the fax call history.
	Log Output Bin	Standard Bin* Bin [x]	Specify the output bin for printed logs.
Speaker Settings	Speaker Mode	Always Off* Always On On until Connected	Set the fax speaker mode.
	Speaker Volume	Low* High	Adjust the fax speaker volume.
	Ringer Volume	Off* On	Enable the ringer volume.
VoIP Settings	VoIP Protocol	SIP* H.323	Set the Voice over Internet Protocol (VoIP) protocol.
	STUN Server	The setting is user-defined.	Specify the STUN server to traverse a firewall.
	Force Fax Mode	Off On*	Switch VoIP gateway from analog to T.38 at the beginning of a fax call.
	Force Fax Mode Delay	0 to 15 (7*)	Set the time delay in seconds when sending another invite of Force Fax Mode .
SIP Settings	Proxy	The setting is user-defined.	Specify the IP address of the system that converts the phone number to an IP address where the fax is sent.
	Registrar	The setting is user-defined.	Specify a name or IP address of the system that handles the registration of Session Initiation Protocol (SIP) clients.
	User	The setting is user-defined.	Specify the name of the user for SIP.
	Password	The setting is user-defined.	Specify the password that is used in registering with the SIP Registrar.

Menu item	Submenu item	Settings	Description
	Auth ID	The setting is user-defined.	The username that is used when registering. Note: If the Auth ID setting is not set, the setting uses the username of the User field instead.
	Transport For Registration	UDP* TCP	Set the SIP transport type for registration.
	Transport For Incoming Calls	UDP TCP UDP And TCP*	Set the SIP transport type for incoming calls.
	Transport For Outgoing Calls	UDP* TCP	Set the SIP transport type for outgoing calls.
	Outbound Proxy	The setting is user-defined.	Specify an outbound proxy to forward all SIP communication.
	Contact	The setting is user-defined.	Specify a contact name for SIP.
	Realm	The setting is user-defined.	Specify a realm name for SIP. Note: If the Realm setting is not set, the setting uses the name of the Contact instead.
	SIP Registration Status	The setting is a read-only information.	Show the status of the SIP Registration.
H.323 Settings	Gateway	The setting is user-defined.	Specify the H.323 gateway IP address.
	Gatekeeper	The setting is user-defined.	Specify the H.323 gatekeeper.
	User	The setting is user-defined.	Specify the username used with the H.323 gateway.
	Password	The setting is user-defined.	Specify the password for the H.323 gateway.
	Enable Fast Start	Off* On	Enable Fast Start.
	Disable H.245 Tunneling	Off* On	Disable H.323 Tunneling.
	Disable Gatekeeper Discovery	Off On*	Disable H.323 Gatekeeper Discovery.

Menu item	Submenu item	Settings	Description
T.38 Settings	Indicator Redundancy	0 to 5 (3*)	Set the number of times that a fax indicator is repeated in the T.38 communication.
	Low Speed Redundancy	0 to 5 (3*)	Set the number of times that low-speed data is repeated in the T.38 communication.
	High Speed Redundancy	0 to 5 (1*)	Set the number of times that high-speed data is repeated in the T.38 communication.

Fax Server Setup

General Fax Settings

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
To Format	N/A	Specify a fax recipient. Note: If you want to use the fax number, then type the number sign (#) before a number.
Reply Address	N/A	Specify a reply address for sending fax.
Subject	N/A	Specify the fax subject and message.
Message	N/A	
Enable analog receive	Off* On	Set the printer to receive analog faxes.

Fax Server Email Settings

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Use Email SMTP Server	On* Off	Use the Simple Mail Transfer Protocol (SMTP) settings for email in receiving and sending faxes. Note: When set to On, all other settings of the Fax Server Email Settings menu are not shown.

Printer menus

Menu item	Settings	Description
Primary SMTP Gateway	N/A	Type the IP address or host name of the primary SMTP server.
Primary SMTP Gateway Port	1 to 65535 (25*)	Enter the port number of the primary SMTP server.
Secondary SMTP Gateway	N/A	Type the server IP address or host name of your secondary or backup SMTP server.
Secondary SMTP Gateway Port	1 to 65535 (25*)	Enter the server port number of your secondary or backup SMTP server.
SMTP Timeout	5 to 30 (30*)	Set the time before the printer times out if the SMTP server does not respond.
Reply Address	N/A	Specify a reply address for sending fax.
Use SSL/TLS	Disabled* Negotiate Required	Specify whether to send a fax using an encrypted link.
Require Trusted Certificate	Off On*	Specify a trusted certificate when accessing the SMTP server.
SMTP Server Authentication	No authentication required* Login / Plain NTLM CRAM-MD5 Digest-MD5 Kerberos 5 OAuth 2	Set the authentication type for the SMTP server.
Device-Initiated Email	None* Use Device SMTP Credentials	Specify whether credentials are required for device-initiated email.
User-Initiated Email	None* Use Device SMTP Credentials Use Session User ID and Password Use Session Email address and Password Prompt user	Specify whether credentials are required for user-initiated email.
Use Active Directory Device Credentials	Off* On	Enable user credentials and group destinations to connect to the SMTP server.

Printer menus

Menu item	Settings	Description
Device Userid	N/A	Specify the user ID and password to connect to the SMTP server.
Device Password	N/A	
Kerberos 5 REALM	N/A	Specify the realm for the Kerberos 5 authentication protocol.
NTLM Domain	N/A	Specify the domain name for the NTLM security protocol.
Disable "SMTP server not set up" error	Off* On	Hide the "SMTP server not set up" error message.

Fax Server Scan Settings

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Image Format	TIFF (.tif) PDF (.pdf)* XPS (.xps) TXT (.txt) RTF (.rtf) DOCX (.docx) XLSX (.xlsx) CSV (.csv)	Specify the file format for the scanned image.
Content Type	Text* Text/Photo Photo Graphics	Improve the output result based on the content of the original document.
Content Source	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the source of the original document.

Menu item	Settings	Description
Fax Resolution	Standard* Fine Super Fine Ultra Fine	Set the fax resolution.
Sides	Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document.
Darkness	1 to 9 (5*)	Set the darkness of the output.
Orientation	Portrait* Landscape	Specify the orientation of text and graphics on the page.
Original Size	[List of paper sizes]	Set the paper size of the original document. <div style="border: 1px solid gray; padding: 5px; background-color: #f0f0f0;"> <p>Notes</p> <ul style="list-style-type: none"> • Mixed Sizes is the U.S. factory default setting. A4 is the international factory default setting. • This setting may vary depending on your printer model. </div>
Use Multi-Page TIFF	Off On*	Choose between single- and multiple-page TIFF files.

Email

Email Setup

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Primary SMTP Gateway	The setting is user-defined.	Type the IP address or host name of the primary SMTP server for sending email.
Primary SMTP Gateway Port	1 to 65535 (25*)	Enter the port number of the primary SMTP server.
Secondary SMTP Gateway	The setting is user-defined.	Type the server IP address or host name of your secondary or backup SMTP server.

Printer menus

Menu item	Settings	Description
Secondary SMTP Gateway Port	1 to 65535 (25*)	Enter the server port number of your secondary or backup SMTP server.
SMTP Timeout	5 to 30 seconds (30*)	Set the time before the printer times out if the SMTP server does not respond.
Reply Address	The setting is user-defined.	Specify a reply address in the email.
Always use SMTP default Reply Address	On Off*	Always use the default reply address in the SMTP server.
Use SSL/TLS	Disabled* Negotiate Required	Specify whether to send an email using an encrypted link.
Require Trusted Certificate	Off On*	Require a trusted certificate when accessing the SMTP server.
SMTP Server Authentication	No authentication required* Login / Plain NTLM CRAM-MD5 Digest-MD5 Kerberos 5 OAuth 2	Set the authentication type for the SMTP server.
Device-Initiated Email	None* Use Device SMTP Credentials	Specify whether credentials are required for device-initiated email.
User-Initiated Email	None* Use Device SMTP Credentials Use Session User ID and Password Use Session Email address and Password Prompt user	Specify whether credentials are required for user-initiated email.
Use Active Directory Device Credentials	Off* On	Specify whether credentials are required for user-initiated email.
Device Userid	The setting is user-defined.	Specify the user ID and password to connect to the SMTP server.

Printer menus

Menu item	Settings	Description
Device Password	The setting is user-defined.	
Kerberos 5 REALM	The setting is user-defined.	Specify the realm for the Kerberos 5 authentication protocol.
NTLM Domain	The setting is user-defined.	Specify the domain name for the NTLM security protocol.
Disable “SMTP server not set up” error	Off* On	Hide the “SMTP server not set up” error message.

Email Defaults

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu items	Settings	Description
Subject:	N/A	The setting is user-defined.	Specify the email subject and message.
Message:	N/A	The setting is user-defined.	
File Name	N/A	The setting is user-defined.	Specify the filename for the scanned document.
Format	N/A	JPEG (.jpg) PDF (.pdf)* TIFF (.tif) XPS (.xps) TXT (.txt) RTF (.rtf) DOCX (.docx) XLSX (.xlsx) CSV (.csv)	Specify the file format of the scanned document. Note: The menu items may vary depending on your printer model.
Global OCR Settings	Recognized Languages	[List of languages]	Configure the settings for optical character recognition (OCR). Note: This menu item appears only if you have purchased and installed an OCR solution.
	Auto Rotate	Off* On	
	Despeckle	Off* On	
	Auto Contrast Enhance	Off* On	

Menu item	Submenu items	Settings	Description
PDF Settings	PDF Version	1.3	Configure the PDF settings of the scanned image. <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Archival Version and Archival (PDF/A) are supported only when PDF Version is set to 1.4 or 1.7. • Archival Version A-2u is the default value if PDF version is set to 1.7. It is not selectable if PDF version is set to 1.4. • Highly Compressed appears only when a storage drive is installed. • Secure is supported only when PDF Version is set to 1.4 or higher. </div>
		1.4	
		1.5*	
		1.6	
		1.7	
		2.0	
		Archival (PDF/A)	
	Archival Version	A-1a* A-1b A-2u	
Highly Compressed	Off* On		
Secure	Off* On		
Searchable	Off* On		
Split Job by Pages	0*		
Content Type	N/A	Text Text/Photo* Photo Graphics	Specify the content of the original document.
Content Source	N/A	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Specify the source of the original document.

Printer menus

Menu item	Submenu items	Settings	Description
Color	N/A	Black and White Gray Color* Auto	Specify how the original document is captured.
Resolution	N/A	75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness	N/A	1 to 9 (5*)	Adjust the darkness of the scanned image.
Orientation	N/A	Portrait* Landscape	Specify the orientation of the original document.
Original Size	N/A	Mixed Sizes	Set the paper size of the original document.
Sides	N/A	Off* Short Edge Long Edge	Specify the orientation of the original document when scanning on both sides of the document.
Advanced Imaging	Color Balance	Cyan (0*) Magenta (0*) Yellow (0*)	Adjust the color intensity for cyan, magenta, and yellow.
	Color Dropout	Color Dropout (None *) Default Red Threshold (128*) Default Green Threshold (128*) Default Blue Threshold (128*)	Specify which color to drop during scanning, and adjust the dropout setting for that color.
	Auto Color Detect	Color Sensitivity (5*) Area Sensitivity (5*) Email Bit Depth (1 bit*) Minimum Scan Resolution (300 dpi*)	Configure the auto color detection setting.

Printer menus

Menu item	Submenu items	Settings	Description
	JPEG Quality	Best for content* 5 to 95	Set the JPEG quality of the scanned image.
	Contrast	Best for content* 0 to 5	Specify the contrast for the scanned image.
	Background Removal	Background Detection (Content-based*) Level (0*)	Remove the background color or image noise from the original document.
	Mirror Image	Off* On	Create a mirror image of the original document.
	Negative Image	Off* On	Create a negative image of the original document.
	Shadow Detail	-4 to 4 (0*)	Adjust the shadow detail in the scanned image.
	Scan Edge to Edge	Off* On	Scan the original document from edge to edge.
	Sharpness	1 to 5 (3*)	Adjust the sharpness in the scanned image.
	Saturation	1 to 5 (1*)	Adjust the color saturation of the scanned image.
	Temperature	-4 to 4 (0*)	Generate a bluer or redder output of the original document.
	Blank Pages	Blank Page Removal (Do Not Remove*)	Remove the blank pages from the original document.
		Blank Page Sensitivity (5*)	Set the sensitivity of scans in relation to blank pages in the original document.
Admin Controls	Max Email Size	0 to 65535 (0*)	Set the allowable file size for each email.
	Size Error Message	The setting is user-defined.	Specify an error message that the printer sends when an email exceeds its allowable file size. Note: You can type up to 1024 characters.
	Limit Destinations	The setting is user-defined.	Limit sending of email only to the specified list of domain name. Note: Use a comma to separate each domain.

Printer menus

Menu item	Submenu items	Settings	Description
	Send Me a Copy	Never appears* On by Default Off by Default Always On	Send a copy of the email to yourself.
	Allow self emails only	Off* On	Set the printer to send emails to yourself only.
	Use cc:/bcc:	Off* On	Enable carbon copy and blind carbon copy in email.
	Use Multi-Page TIFF	Off On*	Enable scanning of multiple TIFF images in one TIFF file.
	TIFF Compression	JPEG LZW*	Specify the compression type for TIFF files.
	Text Default	5 to 95 (75*)	Set the text quality of the content being scanned.
	Text/Photo Default	5 to 95 (75*)	Set the text and photo quality of the content being scanned.
	Photo Default	5 to 95 (50*)	Set the photo quality of the content being scanned.
	Adjust ADF Skew	Off* On	Set the printer to adjust the skewed images from documents that are scanned from the ADF.
	Transmission Log	Print log* Do Not Print Log Print Only For Error	Print a transmission log for email scans.
	Log Paper Source	Tray [x] (1*) Multipurpose Feeder	Specify the paper source for printing logs.
	Custom Job Scanning	Off* On	Set the printer to scan the first set of original documents using the specified settings, and then the next set with the same or different settings.

Note: This menu item appears only when a storage drive is installed.

Menu item	Submenu items	Settings	Description
	Scan Preview	Off* On	Show a scan preview of the original document. Note: This menu item appears only when a storage drive is installed.
	Allow Save as Shortcut	Off On*	Save an email address as a shortcut.
	Email Images Sent As	Attachment* Web Link	Specify how to send the images that are included in the email.
	Reset Email Information After Sending	Off On*	Reset the To , Subject , Message , and Filename fields to their default values after sending an email.

Web Link Setup

Menu item	Settings	Description
Server	The setting is user-defined.	Specify the credentials of the server that is hosting the images that are included in the email.
Login	The setting is user-defined.	
Password	The setting is user-defined.	
Path	The setting is user-defined.	
File Name	The setting is user-defined.	
Web Link	The setting is user-defined.	

FTP

FTP Defaults

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu items	Settings	Description
Format	N/A	JPEG (.jpg) PDF (.pdf)* TIFF (.tif) XPS (.xps) TXT (.txt) RTF (.rtf) DOCX (.docx) XLSX (.xlsx) CSV (.csv)	Specify the file format for the scanned image.
Global OCR Settings	Recognized Languages	[List of languages]	Configure the settings for optical character recognition (OCR). Note: This menu appears only if you have purchased and installed an OCR solution.
	Auto Rotate	Off* On	
	Despeckle	Off* On	
	Auto Contrast Enhance	Off* On	
PDF Settings	PDF Version	1.3	Configure the PDF settings for the scanned image. Notes <ul style="list-style-type: none"> • Archival Version and Archival (PDF/A) are supported only when PDF Version is set to 1.4 or 1.7. • Archival Version A-2u is the default value if PDF version is set to 1.7. It is not selectable if PDF version is set to 1.4. • Highly Compressed appears only when a storage drive is installed. • Secure is supported only when PDF Version is set to 1.4 or higher.
		1.4	
		1.5*	
		1.6	
		1.7	
		2.0	
	Archival (PDF/A)	Off* On	
Archival Version	A-1a* A-1b A-2u		
	Highly Compressed	Off* On	
Secure	Off* On		
Searchable	Off* On		

Printer menus

Menu item	Submenu items	Settings	Description
Content Type	N/A	Text Text/Photo* Graphics Photo	Improve the output result based on the content type of the original document.
Content Source	N/A	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the content source of the original document.
Color	N/A	Black and White Gray Color* Auto	Set the printer to capture file content in color or in mono.
Resolution	N/A	75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness	N/A	1 to 9 (5*)	Adjust the darkness of the scanned image.
Orientation	N/A	Portrait* Landscape	Specify the orientation of the original document.
Original Size	N/A	Mixed Sizes*	Set the paper size of the original document.
Sides	N/A	Off* Long Edge Short Edge	Specify the orientation when scanning on both sides of the document.
File Name	N/A	The setting is user-defined.	Specify the file name of the scanned image.

Printer menus

Menu item	Submenu items	Settings	Description
Advanced Imaging	Color Balance	Cyan (0*) Magenta (0*) Yellow (0*)	Adjust the color intensity for cyan, magenta, and yellow.
	Color Dropout	Color Dropout (None*) Default Red Threshold (128*) Default Green Threshold (128*) Default Blue Threshold (128*)	Specify which color to drop during scanning, and adjust the dropout setting for that color.
	Auto Color Detect	Color Sensitivity (5*) Area Sensitivity (5*) FTP Bit Depth (1 bit*) Minimum Scan Resolution (300 dpi*)	Configure the auto color detection setting.
	JPEG Quality	Best for content* 5 to 95	Set the JPEG quality of the scanned image.
	Contrast	Best for content* 0 to 5	Specify the contrast for the scanned image.
	Background Removal	Background Detection (Content-based*) Level (0*)	Remove the background color or image noise from the original document.
	Mirror Image	Off* On	Create a mirror image of the original document.
	Negative Image	Off* On	Create a negative image of the original document.
	Shadow Detail	-4 to 4 (0*)	Adjust the shadow detail in the scanned image.
	Scan Edge to Edge	Off* On	Scan the original document from edge to edge.
	Sharpness	1 to 5 (3*)	Adjust the sharpness in the scanned image.
Saturation	1 to 5 (1*)	Adjust the color saturation of the scanned image.	

Printer menus

Menu item	Submenu items	Settings	Description
	Temperature	-4 to 4 (0*)	Generate a bluer or redder output of the original document.
	Blank Pages	Blank Page Removal (Do Not Remove *)	Remove the blank pages from the original document.
		Blank Page Sensitivity (5*)	Set the sensitivity of scans in relation to blank pages in the original document.
Admin Controls	Text Default	5 to 95 (75*)	Set the quality of text on the scanned image.
	Text/Photo Default	5 to 95 (75*)	Set the quality of text and photo on the scanned image.
	Photo Default	5 to 95 (50*)	Set the quality of photo on the scanned image.
	Use Multi-Page TIFF	On* Off	Enable scanning of multiple TIFF images in one TIFF file.
	TIFF Compression	LZW* JPEG	Specify the compression type for TIFF files.
	Transmission Log	Print Log* Do Not Print Log Print Only For Error	Print a transmission log for FTP scans.
	Log Paper Source	Tray [x] (1*) Multipurpose Feeder	Specify the paper source for printing FTP logs.
	Custom Job Scanning	Off* On	Set the printer to scan the first set of original documents using the specified settings, and then the next set with the same or different settings. Note: This menu item appears only when a storage drive is installed.
	Scan Preview	Off* On	Show a preview of the original document. Note: This menu item appears only when a storage drive is installed.
Allow Save as Shortcut	Off On*	Save an FTP address as a shortcut.	

Menu item	Submenu items	Settings	Description
	Adjust ADF Skew	On* Off	Set the printer to adjust the skewed images from documents that are scanned from the ADF.
	Use Passive FTP	Off* On	Let the FTP server specify the data port that the printer connects to.

USB Drive

Flash Drive Scan

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Format	N/A	JPEG (.jpg) PDF (.pdf)* TIFF (.tif) XPS (.xps) TXT (.txt) RTF (.rtf) DOCX (.doc) XLSX (.xlsx) CSV (.csv)	Specify the file format for the scanned image. Note: TXT (.txt) , RTF (.rtf) , DOCX (.docx) , XLSX (.xlsx) , and CSV (.csv) appear only if you have purchased and installed an optical character recognition (OCR) solution.
Global OCR Settings	Recognized Languages	[List of languages]	Configure the settings for OCR. Note: Global OCR Settings appears only if you have purchased and installed an OCR solution.
	Auto Rotate	Off* On	
	Despeckle	Off* On	
	Auto Contrast Enhance	Off* On	

Menu item	Submenu item	Settings	Description
PDF Settings	PDF Version	1.3	Configure the PDF settings of the scanned image. Notes <ul style="list-style-type: none"> • Archival (PDF/A) and Archival Version are supported only when PDF Version is set to 1.4 or 1.7. • Archival Version A-2u is the default value if PDF version is set to 1.7. It is not selectable if PDF version is set to 1.4. • Highly Compressed appears only when a hard disk is installed. • Secure is supported only when PDF Version is set to 1.4 or higher.
		1.4	
		1.5*	
		1.6	
		1.7	
	2.0		
Archival (PDF/A)	Off* On		
Archival Version	A-1a* A-1b A-2u		
Highly Compressed	Off* On		
Secure	Off* On		
Searchable	Off* On		
Content Type	N/A	Text Text/Photo* Photo Graphics	Improve the output result based on the content type of the original document.
Content Source	N/A	Black and White Laser Color Laser* Inkjet Photo/Film Magazine Newspaper Press Other	Improve the output result based on the content source of the original document.

Printer menus

Menu item	Submenu item	Settings	Description
Color	N/A	Black and White Gray Color* Auto	Set the printer to capture file content in color or in mono.
Resolution	N/A	75 dpi 150 dpi* 200 dpi 300 dpi 400 dpi 600 dpi	Set the resolution of the scanned image.
Darkness	N/A	1 to 9 (5*)	Adjust the darkness of the scanned image.
Orientation	N/A	Portrait* Landscape	Specify the orientation of the original document.
Original Size	N/A	Mixed Sizes*	Set the paper size of the original document.
Sides	N/A	Off* Short edge Long edge	Specify the orientation of the original document when scanning on both sides of the document.
File Name	N/A	The setting is user-defined.	Specify the file name of the scanned image.
Advanced Imaging	Color Balance	Cyan (0*) Magenta (0*) Yellow (0*)	Adjust the color intensity for cyan, magenta, and yellow.
	Color Dropout	Color Dropout (None*) Default Red Threshold (128*) Default Green Threshold (128*) Default Blue Threshold (128*)	Specify which color to drop during scanning, and adjust the dropout setting for that color.

Printer menus

Menu item	Submenu item	Settings	Description
	Auto Color Detect	Color Sensitivity (5*) Area Sensitivity (5*) Scan Bit Depth (1 bit*) Minimum Scan Resolution (300 dpi*)	Configure the auto color detection setting.
	JPEG Quality	Best for content* 5 to 95	Set the JPEG quality of the scanned image.
	Contrast	Best for content* 0 to 5	Specify the contrast for the scanned image.
	Background Removal	Background Detection (Content-based*) Level (0*)	Remove the background color or image noise from the original document.
	Mirror Image	Off* On	Create a mirror image of the original document.
	Negative Image	Off* On	Create a negative image of the original document.
	Shadow Detail	-4 to 4 (0*)	Adjust the shadow detail in the scanned image.
	Scan Edge to Edge	Off* On	Scan the original document from edge to edge.
	Sharpness	1 to 5 (3*)	Adjust the sharpness in the scanned image.
	Saturation	1 to 5 (1*)	Adjust the color saturation of the scanned image.
	Temperature	-4 to 4 (0*)	Generate a bluer or redder output of the original document.
	Blank Pages	Blank Page Removal (Do Not Remove*) Blank Page Sensitivity (5*)	Set the sensitivity of scans in relation to blank pages in the original document.

Printer menus

Menu item	Submenu item	Settings	Description
Admin Controls	Text Default	5 to 95 (75*)	Set the quality of text on the scanned image.
	Text/Photo Default	5 to 95 (75*)	Set the quality of text and photo on the scanned image.
	Photo Default	5 to 95 (50*)	Set the quality of a photo on the scanned image.
	Use Multi-Page TIFF	Off On*	Enable scanning of multiple TIFF images in one TIFF file.
	TIFF Compression	JPEG LZW*	Specify the compression type for TIFF files.
	Custom Job Scanning	Off* On	Set the printer to scan the first set of original documents using the specified settings, and then the next set with the same or different settings. Note: This menu item appears only when a storage drive is installed.
	Scan Preview	Off* On	Show a scan preview of the original document. Note: This menu item appears only when a storage drive is installed.
	Adjust ADF Skew	Off On*	Set the printer to adjust the skewed images from documents that are scanned from the automatic document feeder.

Flash Drive Print

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Number of Copies	1 to 9999 (1*)	Set the number of copies in a print job.
Paper Source	Tray [x] (1*) Multipurpose Feeder Manual Paper Manual Envelope	Set the paper source for the print job.
Color	Off On*	Print the flash drive file in color.
Collate	Off [1,1,1,2,2,2] On [1,2,1,2,1,2]*	Keep the pages of a print job stacked in sequence, particularly when printing multiple copies of the job.

Menu item	Settings	Description
Sides	1-Sided* 2-Sided	Specify whether to print on one side or both sides of the paper.
Staple	Off* 1 staple, top left corner 2 staples, left 1 staple, top right corner 2 staples, top 1 staple, bottom left corner 2 staples, bottom 1 staple, bottom right corner 2 staples, right	Specify the staple position for all print jobs. <div style="background-color: #f0f0f0; padding: 5px;"> <p>Note: Staple appears only when a staple finisher is installed.</p> </div>
Hole Punch	Off* 2 holes 3 holes 4 holes	Set the punch mode for all print jobs. <div style="background-color: #f0f0f0; padding: 5px;"> <p>Note: This menu item appears only when a staple, hole punch finisher or booklet finisher is installed.</p> </div>
Offset Pages	None* Between Copies Between Jobs	Offset the output of each print job or each copy of a print job. <div style="background-color: #f0f0f0; padding: 5px;"> <p>Notes</p> <ul style="list-style-type: none"> • Between Copies—Offsets each copy of a print job if Collate is set to On [1,2,1,2,1,2]. If Collate is set to Off [1,1,1,2,2,2], then each set of printed pages is offset, such as all pages designated as 1 and all pages designated as 2. • Between Jobs—Sets the same offset position for the entire print job regardless of the number of copies printed. </div>
Flip Style	Long Edge* Short Edge	Determine which side of the paper is bound when performing two-sided printing.

Menu item	Settings	Description
Pages per Side	Off* 2 pages per side 3 pages per side 4 pages per side 6 pages per side 9 pages per side 12 pages per side 16 pages per side	Print multiple page images on one side of a sheet of paper.
Pages per Side Ordering	Horizontal* Reverse Horizontal Reverse Vertical Vertical	Specify the positioning of multiple page images when using the Pages per Side menu.
Pages per Side Orientation	Auto* Landscape Portrait	Specify the orientation of multiple page images when using the Pages per Side menu.
Pages per Side Border	None* Solid	Print a border around each page image when using the Pages per Side menu.
Separator Sheets	Off* Between Copies Between Jobs Between Pages	Insert blank separator sheets when printing.
Separator Sheet Source	Tray [x] (1*) Multipurpose Feeder	Specify the paper source for the separator sheet.
Blank Pages	Do Not Print* Print	Print blank pages in a print job.

Network/Ports

Network Overview

Note: An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Active Adapter	Auto* Standard Network Wireless	Specify the type of the network connection. Note: Wireless is available only in printers connected to a wireless network.
Network Status	The setting is a read-only information.	Show the connectivity status of the printer network.
Display Network Status on Printer	Off On*	Show the network status on the display.
Speed, Duplex	The setting is a read-only information.	Show the speed of the currently active network card.
IPv4	The setting is a read-only information.	Show the IPv4 address.
All IPv6 Addresses	The setting is a read-only information.	Show all the IPv6 addresses.
Reset Print Server	Start	Reset all active network connections to the printer. Note: Pressing Start removes all network configuration settings.
Network Job Timeout	Off On* (90 seconds)	Set the time before the printer cancels a network print job.
Banner Page	Off* On	Print a banner page.
Scan to PC Port Range	The setting is user-defined.	Specify a valid port range for printers that are behind a port blocking firewall.
Enable Network Connections	Off On*	Enable the printer to connect to a network.
Enable LLDP	Off* On	Show the network status on the home screen.

Wireless

Notes

- This menu is available only in printers connected to a Wi-Fi network or printers that have a wireless network adapter.
- An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Submenu item	Settings	Description
Setup On Printer Panel	Choose Network	[List of available wireless networks]	Determine the wireless network that the printer connects to.
	Add Wi-Fi Network	Network Name Network Mode (Infra-structure*) Wireless Security Mode (Disabled*)	Manually enter a network name and network type.
Wi-Fi Protected Setup	N/A	Start Push Button Method Start PIN Method	Establish a Wi-Fi network and enable network security. <div style="background-color: #f0f0f0; padding: 10px; margin-top: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Start Push-Button Method connects the printer to a Wi-Fi network when buttons on both the printer and the access point (wireless router) are pressed within a given time. • Start PIN Method connects the printer to a Wi-Fi network when a PIN on the printer is entered into the wireless settings of the access point. </div>
Network Mode	N/A	BSS Type Infrastructure*	Specify the network mode.
Compatibility	N/A	802.11b/g/n (2.4GHz)* 802.11a/b/g/n/ac (2.4GHz/5GHz) 802.11a/n/ac (5GHz)	Specify the standard for the Wi-Fi network. <div style="background-color: #f0f0f0; padding: 10px; margin-top: 10px;"> <p>Note: 802.11a/b/g/n/ac (2.4GHz/5GHz) and 802.11a/n/ac (5GHz) appear only when a Wi-Fi option is installed.</p> </div>

Printer menus

Menu item	Submenu item	Settings	Description
Wireless Security Mode	N/A	Disabled* WPA2/WPA-Personal WPA2-Personal WPA2/WPA3-Personal WPA3-Personal 802.1x - RADIUS	Set the security mode for connecting the printer to Wi-Fi devices.
WPA2/WPA Personal	N/A	AES	Enable Wi-Fi security through Wi-Fi Protected Access (WPA). Note: This menu item appears only when Wireless Security Mode is set to WPA2/WPA-Personal .
Set PSK	N/A	The setting is user-defined.	Set the password for a secure Wi-Fi connection. Note: This menu item appears only when Wireless Security Mode is set to any of the following: <ul style="list-style-type: none"> • WPA2/WPA-Personal • WPA2-Personal • WPA3/WPA-Personal • WPA3-Personal
WPA2-Personal	N/A	AES	Enable Wi-Fi security through WPA2. Note: This menu item appears only when Wireless Security Mode is set to WPA2-Personal .

Menu item	Submenu item	Settings	Description
802.1x Encryption Mode	N/A	WPA+ WPA2* WPA2 + PMF	Enable Wi-Fi security through the 802.1x standard. <div style="border: 1px solid #ccc; background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • This menu item appears only when Wireless Security Mode is set to 802.1x - RADIUS. • 802.1x - RADIUS can be configured only from the Embedded Web Server. </div>
IPv4	Enable DHCP	On* Off	Enable and configure the IPv4 settings in the printer.
	Set Static IP Address	IP Address Netmask Gateway	
IPv6	Enable IPv6	On* Off	Enable and configure the IPv6 settings in the printer.
	Enable DHCPv6	On Off*	
	Stateless Address Autoconfiguration	On* Off	
	IPv6 Address Generation Mode	EUI64* Stable Privacy Random	
	DNS Server Address	The setting is user-defined.	
	Manually Assigned IPv6 Address	The setting is user-defined.	
	Manually Assigned IPv6 Router	The setting is user-defined.	
	Address Prefix	The setting is user-defined.	
	All IPv6 Addresses	The setting is user-defined.	
	All IPv6 Router Addresses	The setting is user-defined.	

Printer menus

Menu item	Submenu item	Settings	Description
Network Address	N/A	UAA LAA	View the network addresses.
PCL SmartSwitch	N/A	Off On*	Set the printer to switch automatically to PCL emulation when a print job requires it, regardless of the default printer language. Note: If PCL SmartSwitch is set to Off , then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
PS SmartSwitch	N/A	Off On*	Set the printer to switch automatically to PS emulation when a print job requires it, regardless of the default printer language. Note: If PS SmartSwitch is set to Off , then the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
Job Buffering	N/A	On Off*	Temporarily store print jobs in the storage drive before printing. Note: This menu item appears only when a storage device is installed.
Mac Binary PS	N/A	Auto* On Off	Set the printer to process Macintosh binary PostScript emulation print jobs. Notes <ul style="list-style-type: none"> • On—Processes raw binary PostScript emulation print jobs. • Off—Filters print jobs using the standard protocol.

Wi-Fi Direct

Note: An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Enable Wi-Fi Direct	On Off*	Set the printer to connect directly to Wi-Fi devices.
Wi-Fi Direct Name	The setting is user-defined.	Specify the name of the Wi-Fi Direct network.
Wi-Fi Direct Password	The setting is user-defined.	Set the password to authenticate and validate users on a Wi-Fi connection.
Show Password on Setup Page	Off* On	Show the Wi-Fi Direct Password on the Network Setup Page .
Preferred Channel Number	1 to 11 Auto*	Set the preferred channel of the Wi-Fi network.
Group Owner IP Address	The setting is user-defined.	Specify the IP address of the group owner.
Auto-Accept Push Button Requests	Off* On	Accept requests to connect to the network automatically. Note: Accepting clients automatically is not secured.

Mobile Services Management

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Enable IPP Print	On* Off	Enable a network printer to print jobs using Internet Printing Protocol (IPP).
Enable IPP Fax	On* Off	Enable a USB printer to send fax jobs using IPP.
Enable IPP Over USB	On* Off	Enable a USB printer to print jobs using IPP. Note: IPP is normally designed for network printers.
Enable Scan	On* Off	Enable a network printer to print jobs using eSCL protocol.
Enable Mopria Discovery	On* Off	Enable mobile devices to discover a Mopria™ certified printer.

Ethernet

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Network Speed	N/A	The setting is a read-only information.	Show the speed of the active network adapter.
IPv4	Enable DHCP	On* Off	Configure the IPv4 settings. Note: The settings are user-defined.
	Set Static IP Address	IP Address Netmask Gateway	
IPv6	Enable IPv6	On* Off	Configure the IPv6 settings.
	Enable DHCPv6	Off* On	
	Stateless Address Autoconfiguration	On* Off	
	IPv6 Address Generation Mode	EUI64* Stable Privacy Random	
	DNS Server Address	The setting is user-defined.	
	Manually Assigned IPv6 Address	The setting is user-defined.	
	Manually Assigned IPv6 Router	The setting is user-defined.	
	Address Prefix	0 to 128 (64*)	
	All IPv6 Addresses	The setting is a read-only information.	
	All IPv6 Router Addresses	The setting is a read-only information.	
Network Address	N/A	UAA LAA	Specify the network address.

Printer menus

Menu item	Submenu item	Settings	Description
PCL SmartSwitch	N/A	Off On*	<p>Set the printer to switch automatically to PCL emulation when a print job requires it, regardless of the default printer language.</p> <p>Note: When this setting is disabled, the printer does not examine incoming data and uses the default printer language specified in the Setup menu.</p>
PS SmartSwitch	N/A	Off On*	<p>Set the printer to switch automatically to PostScript emulation when a print job requires it, regardless of the default printer language.</p> <p>Note: When this setting is disabled, the printer does not examine incoming data and uses the default printer language specified in the Setup menu.</p>
Job Buffering	N/A	Off* On	<p>Temporarily store jobs on the storage drive before printing.</p> <p>Note: This menu item appears only when a storage drive is installed.</p>
Mac Binary PS	N/A	Auto* Off On	<p>Set the printer to process Macintosh binary PostScript emulation print jobs.</p> <p>Notes</p> <ul style="list-style-type: none">• Auto—Processes print jobs from computers using either Windows or Macintosh operating systems.• Off—Filters PostScript emulation print jobs using the standard protocol.
Energy Efficient Ethernet	N/A	On Off Auto*	<p>Reduce power consumption when the printer does not receive data from the Ethernet network.</p>

TCP/IP

Notes

- This menu appears only in network printers or printers attached to print servers.
- An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Set Hostname	The setting is user-defined.	Set the current TCP/IP host name.
Domain Name	The setting is user-defined.	Set the domain name.
Allow DHCP/BOOTP to update NTP server	On* Off	Allow the Dynamic Host Configuration Protocol (DHCP) and BOOTstrap Protocol (BOOTP) clients to update the NTP settings of the printer.
Zero Configuration Name	The setting is user-defined.	Specify a service name for the zero configuration network.
Enable Auto IP	Off On*	Assign an IP address automatically.
DNS Server Address	The setting is user-defined.	Specify the current Domain Name System (DNS) server address.
Backup DNS Server Address	The setting is user-defined.	Specify the backup DNS server addresses.
Backup DNS Server Address 2		
Backup DNS Server Address 3		
Domain Search Order	The setting is user-defined.	Specify a list of domain names to locate the printer and its resources that reside in different domains on the network.
Enable DDNS	Off* On	Update the Dynamic DNS settings.
DDNS TTL	The setting is user-defined.	Specify the current DDNS settings.
Default TTL		
DDNS Refresh Time		
Enable mDNS	Off On*	Update the multicast DNS settings.
WINS Server Address	The setting is user-defined.	Specify a server address for Windows Internet Name Service (WINS).
Enable BOOTP	Off* On	Allow the BOOTP to assign a printer IP address.

Menu item	Settings	Description
Restricted Server List	The setting is user-defined.	Specify the IP addresses that are allowed to communicate with the printer over TCP/IP. <div style="border: 1px solid #ccc; background-color: #f9f9f9; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • Use a comma to separate each IP address. • You can add up to 50 IP addresses. </div>
Restricted Server List Options	Block All Ports* Block Printing Only Block Printing and HTTP Only	Specify the access option for IP addresses that are not in the list.
MTU	256 to 1500 Ethernet (1500*)	Specify a maximum transmission unit (MTU) parameter for the TCP connections.
Raw Print Port	1 to 65535 (9100*)	Specify a raw port number for printers connected on a network.
Outbound Traffic Maximum Speed	Off* On	Set the maximum transfer rate of the printer. <div style="border: 1px solid #ccc; background-color: #f9f9f9; padding: 5px;"> <p>Note: When enabled, the option for this setting is 100–1000000 Kilobits/second.</p> </div>
TLS Support	Enable TLSv1.0 (Off*) Enable TLSv1.1 (Off*) Enable TLSv1.2 (On*)	Enable the Transport Layer Security protocol.
SSL Cipher List	The setting is user-defined.	Specify the cipher algorithms to use for the SSL or the TLS connections.
TLSv1.3 SSL Cipher List		

SNMP

Notes

- This menu appears only in network printers or printers attached to print servers.
- An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu Item	Settings	Description
SNMP Versions 1 and 2c	Enabled	Off On*	Configure Simple Network Management Protocol (SNMP) versions 1 and 2c to install print drivers and applications.
	Allow SNMP Set	Off On*	

Printer menus

Menu item	Submenu Item	Settings	Description
	Enable PPM MIB	Off On*	
	SNMP Community	The setting is user-defined.	
SNMP Version 3	Enabled	Off On*	Enable the SNMP version 3 to install and update the printer security.
	Context Name	The setting is user-defined.	Enter the context name.
	Set Read/Write Credentials	Username Authentication Password Privacy Password	Enter the read and write credentials for SNMP version 3.
	Set Read-only Credentials	Username Authentication Password Privacy Password	Enter the read-only credentials for SNMP version 3.
	Authentication Hash	MD5 SHA1*	Set the applicable authentication hash.
	Minimum Authentication Level	No Authentication, No Privacy Authentication, No Privacy Authentication, Privacy*	Set the applicable minimum authentication level.
	Privacy Algorithm	DES AES-128*	Set the applicable privacy algorithm.

IPSec

Notes

- This menu appears only in network printers or printers attached to print servers.
- An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Enable IPSec	Off* On	Enable Internet Protocol Security (IPSec).

Printer menus

Menu item	Settings	Description
Base Configuration	Default* Compatibility Secure	Set the IPsec base configuration. Note: This menu item appears only when Enable IPsec is set to On .
DH (Diffie-Hellman) Group Proposal	modp2048 (14)* modp3072 (15) modp4096 (16) modp6144 (17)	Set the IPsec base configuration. Note: This menu item appears only when Base Configuration is set to Compatibility .
Proposed Encryption Method	3DES AES*	Set the encryption method. Note: This menu item appears only when Base Configuration is set to Compatibility .
Proposed Authentication Method	SHA1 SHA256* SHA512	Set the authentication method. Note: This menu item appears only when Base Configuration is set to Compatibility .
IKE SA Lifetime (Hours)	1 2 4 8 24*	Specify the IKE SA expiry period. Note: This menu item appears only when Base Configuration is set to Secure .
IPsec SA Lifetime (Hours)	1 2 4 8* 24	Specify the IPsec SA expiry period. Note: This menu item appears only when Base Configuration is set to Secure .
IPsec Device Certificate	default*	Specify an IPsec certificate. Note: This menu item appears only when Enable IPsec is set to On .
Pre-Shared Key Authenticated Connections	Host [x]	Configure the authenticated connections of the printer. Note: These menu items appear only when Enable IPsec is set to On .
Certificate Authenticated Connections	Host [x] Address[/subnet]	

802.1x

Notes

- This menu appears only in network printers or printers attached to print servers.
- An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu Items	Settings	Description
Active	N/A	Off* On	Let the printer join networks that require authentication before allowing access.
802.1x Authentication	Device Login Name	The setting is user-defined.	Specify the unique login name.
	Device Login Password	The setting is user-defined.	Specify the unique password.
	Validate Server Certificate	On* Off	Enable this option to require verification of the security certificate on the authenticating server.
	Enable Event Logging	On Off*	Enable the printer to record connection logs.
	802.1x Device Certificate	default*	Select the digital certificate that you want to use. Note: If only one certificate is installed, then default is the only option that appears.
Authentication Mechanism	EAP - MD5	On* Off	Enable the Extensible Authentication Protocol (EAP) MD5 framework.
	EAP - MSCHAPv2	On* Off	Enable the EAP Microsoft Challenge Handshake Authentication Protocol (MSCHAP) version 2 authentication method.
	LEAP	On* Off	Enable Lightweight Extensible Authentication Protocol (LEAP), a modified version of MSCHAP.
	PEAP	On* Off	Enable Protected Extensible Authentication Protocol (PEAP), a method that provides more secure authentication for 802.11 WLANs. PEAP supports 802.1x port access control.
	EAP - TLS	On* Off	Enable EAP Transport Layer Security (TLS), a protocol in which the client and server authenticate each other using digital certificates.

Menu item	Submenu Items	Settings	Description
	EAP - TTLS	On* Off	Enable EAP tunneled Transport Layer Security (TLS), a protocol similar to EAP_TLS except that only the server has a certificate to authenticate itself to the client first.
	TTLS Authentication Method	CHAP MSCHAP MSCHAPv2* PAP	Select which EAP TTLS method to use for your device.

LPD Configuration

Notes

- This menu appears only in network printers or printers attached to print servers.
- An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
LPD Timeout	0 to 665535 seconds (90*)	Set the timeout value to stop the Line Printer Daemon (LPD) server from waiting indefinitely for hung or invalid print jobs.
LPD Banner Page	Off* On	Print a banner page for all LPD print jobs. Note: A banner page is the first page of a print job used as a separator of print jobs and to identify the originator of the print job request.
LPD Trailer Page	Off* On	Print a trailer page for all LPD print jobs. Note: A trailer page is the last page of a print job.
LPD Carriage Return Conversion	Off* On	Enable carriage return conversion. Note: Carriage return is a mechanism that commands the printer to move the position of the cursor to the first position on the same line.

HTTP/FTP Settings

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu Item	Settings	Description
Proxy	HTTP Proxy IP Address	The setting is user-defined.	Configure the HTTP server settings.

Printer menus

Menu item	Submenu Item	Settings	Description
	HTTP Default IP Port	The setting is user-defined.	Configure the HTTP default IP port address. Note: The factory default port for HTTP is 80.
	FTP Proxy IP Address	The setting is user-defined.	Configure the FTP settings.
	FTP Default IP Port	The setting is user-defined.	Configure the FTP default IP port address. Note: The factory default port for HTTP is 21.
	Authentication	None Auto* Basic Digest NTLM	Specify the authentication credentials.
	Username	The setting is user-defined.	Specify the unique username.
	Password	The setting is user-defined.	Specify the unique password.
	Local Domains	The setting is user-defined.	Specify domain names for HTTP and FTP servers.
Other Settings	Enable HTTP Server	On* Off	Access the Embedded Web Server to monitor and manage the printer.
	Enable HTTPS	On* Off	Enable Hypertext Transfer Protocol Secure (HTTPS) to encrypt data transferring to and from the print server.
	Force HTTPS Connections	On Off*	Force the printer to use HTTPS connections.
	Enable FTP/TFTP	On* Off	Send files using FTP/TFTP.
	HTTPS Device Certificate	default*	View the HTTP device certificate used on the printer.
	Timeout for HTTP/FTP Requests	1 to 299 seconds (30*)	Specify the amount of time before the server connection stops.
	Retries for HTTP/FTP Requests	1 to 299 seconds (3*)	Set the number of retries to connect to the HTTP/FTP server.

ThinPrint

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Enable ThinPrint	Off* On	Print using ThinPrint.
Port Number	4000 to 4999 (4000*)	Set the port number for the ThinPrint server. Note: This menu item can only be configured when Enable ThinPrint is set to On .
Bandwidth (bits/sec)	100 to 1000000 (0*)	Set the speed to transmit data in a ThinPrint environment. Note: This menu item can only be configured when Enable ThinPrint is set to On .
Packet Size (kbytes)	0 to 64000 (0*)	Set the packet size for data transmission. Note: This menu item can only be configured when Enable ThinPrint is set to On .

USB

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
PCL SmartSwitch	Off On*	Set the printer to switch to PCL emulation when a print job received through a USB port requires it, regardless of the default printer language. Note: When this setting is disabled, the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
PS SmartSwitch	Off On*	Set the printer to switch to PostScript emulation when a print job received through a USB port requires it, regardless of the default printer language. Note: When this setting is disabled, the printer does not examine incoming data and uses the default printer language specified in the Setup menu.
Job Buffering	Off* On	Temporarily store jobs on the storage drive before printing. Note: This menu item appears only when a storage drive is installed.

Printer menus

Menu item	Settings	Description
Mac Binary PS	Auto* On Off	Set the printer to process Macintosh binary PostScript emulation print jobs. <div style="border: 1px solid #ccc; padding: 5px;"> <p>Notes</p> <ul style="list-style-type: none"> • Auto—Processes print jobs from computers using either Windows or Macintosh operating systems. • Off—Filters PostScript emulation print jobs using the standard protocol. </div>
Enable USB Port	Off On*	Enable the front and rear USB ports.

Restrict External Network Access

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Restrict external network access	Off* On	Restrict access to network sites.
External network address	The setting is user-defined.	Specify the network addresses with restricted access. <div style="border: 1px solid #ccc; padding: 5px;"> <p>Note: This menu item can only be configured when Restrict external network access is set to On.</p> </div>
Email address for notification		Specify an email address to send a notification of logged events. <div style="border: 1px solid #ccc; padding: 5px;"> <p>Note: This menu item can only be configured when Restrict external network access is set to On.</p> </div>
Ping frequency	1 to 300 (10*)	Specify the network query interval in seconds. <div style="border: 1px solid #ccc; padding: 5px;"> <p>Note: This menu item can only be configured when Restrict external network access is set to On.</p> </div>
Subject	The setting is user-defined.	Specify the subject and message of the notification email. <div style="border: 1px solid #ccc; padding: 5px;"> <p>Note: This menu item can only be configured when Restrict external network access is set to On.</p> </div>
Message		

Security

Login Methods

Manage Permissions

Menu item	Settings	Description
Function Access	<ul style="list-style-type: none"> Access Address Book in Apps Modify Address Book Manage Shortcuts Create Profiles Manage Bookmarks Flash Drive Print Flash Drive Color Printing Flash Drive Scan Copy Function Copy Color Printing Color Dropout Email Function Fax Function FTP Function Release Held Faxes Held Jobs Access Use Profiles Cancel Jobs at the Device Change Language Internet Printing Protocol (IPP) Initiate Scans Remotely B/W Print Color Print Network Folder - Scan 	<p>Specify the printer functions that the user can access.</p> <p>Note: Some menu items appear only when a storage drive is installed.</p>

Printer menus

Menu item	Settings	Description
	<ul style="list-style-type: none"> Hard Disk - Print Hard Disk - Color Print Hard Disk - Scan 	
Administrative Menus	<ul style="list-style-type: none"> Security Menu Network/Ports Menu Paper Menu Reports Menu Function Configuration Menus Supplies Menu Option Card Menu SE Menu Device Menu 	Specify the printer menus that the user can access.
Device Management	<ul style="list-style-type: none"> Remote Management Firmware Updates Apps Configuration Operator Panel Lock Embedded Web Server Access Import / Export All Settings Out of Service Erase Cloud Services Enrollment 	Specify the Device Management functions that the user can access.
Apps	<ul style="list-style-type: none"> New Apps Slideshow Change Wallpaper Screen Saver Scan Center Scan Center Custom [X] 	Control access to the printer apps.

Local Accounts

Menu item	Submenu Item	Settings	Description
Manage Groups/ Permissions	Add Group	The setting is user-defined.	Specify the groups that have access to printer functions, administrative menus, printer management options, and apps.
	All Users	Import Access Controls	Import access controls from accounts enrolled in the printer.
Add User	Username/Password Username Password PIN	The setting is user-defined.	Add a user and specify the login method to the printer.

Default Login Methods

Note: This menu appears only when the **Local Accounts** menu is configured.

Menu item	Settings	Description
Control Panel	Username/Password Username Password PIN	Specify the default login method to access the control panel.
Browser	Username/Password Username Password PIN	Specify the default login method to access the browser.

Schedule USB Devices

Menu item	Submenu items	Settings	Description
Schedules	Add New Schedule	Save Schedule Action Day(s) Time	Schedule access to the front USB port.

Security Audit Log

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Enable Audit	Off On*	Set the printer to record the events in the secure audit log and remote syslog.
Enable Remote Syslog	Off* On	Set the printer to send audit logs to a remote server.
Remote Syslog Server	The setting is user-defined.	Specify the remote syslog server.
Remote Syslog Port	1 to 65535 (514*)	Specify the port over which the printer sends logged events to a remote server.
Remote Syslog Method	Normal UDP* Stunnel	Identify the protocol that the printer uses to transmit logged events to a remote server.

Menu item	Settings	Description
<p>Remote Syslog Facility</p>	<p>0 - Kernel Messages</p> <p>1 - User-Level Messages</p> <p>2 - Mail System</p> <p>3 - System Daemons</p> <p>4 - Security/ Authorization Messages*</p> <p>5 - Messages Generated Internally by Syslogd</p> <p>6 - Line Printer Subsystem</p> <p>7 - Network News Subsystem</p> <p>8 - UUCP Subsystem</p> <p>9 - Clock Daemon</p> <p>10 - Security/ Authorization Messages</p> <p>11 - FTP Daemon</p> <p>12 - NTP Subsystem</p> <p>13 - Log Audit</p> <p>14 - Log Alert</p> <p>15 - Clock Daemon</p> <p>16 - Local Use 0 (local0)</p> <p>17- Local Use 1 (local1)</p> <p>18 - Local Use 2 (local2)</p> <p>19 - Local Use 3 (local3)</p> <p>20 - Local Use 4 (local4)</p> <p>21 - Local Use 5 (local5)</p> <p>22 - Local Use 6 (local6)</p> <p>23 - Local Use 7 (local7)</p>	<p>Specify a Facility value that the printer uses when sending log events to the remote syslog server.</p>

Printer menus

Menu item	Settings	Description
Severity of Events to Log	0 - Emergency 1 - Alert 2 - Critical 3 - Error 4 - Warning* 5 - Notice 6 - Informational 7 - Debug	Specify the severity value of each event.
Remote Syslog Non-Logged Events	Off* On	Set the printer to send any applicable events.
Admin's Email Address	The setting is user-defined.	Specify the email address of the printer administrator who is notified of certain log events.
Email Log Cleared Alert	Off* On	Set the printer to send an email to the administrator every time a log is deleted.
Email Log Wrapped Alert	Off* On	Set the printer to send the administrator an email when log entries are wrapping.
Log Full Behavior	Wrap Over Oldest Entries* Email Log Then Delete All Entries	Determine how the printer resolves log storage issues when the log fills its allotted memory.
Email % Full Alert	Off* On	Set the printer to send the administrator an email when the log fills its allotted memory.
% Full Alert Level	1 to 99 (90*)	Determine if the space occupied by the log equals or exceeds the value of the full alert level.
Email Log Exported Alert	Off* On	Send an email notification to the administrator when a log is exported.
Email Log Settings Changed Alert	Off* On	Set the printer to send an email to the administrator when the value of the Enable Audit menu is changed.
Log Line Endings	LF (ln)* CR (lr) CRLF (lrln)	Determine how the printer handles line endings in the log file, depending on the operating system that the file is parsed or viewed.
Digitally Sign Exports	Off* On	Set the printer to sign exported security logs automatically.
Clear Log	Clear	Delete all audit logs.

Printer menus

Menu item	Settings	Description
Export Log	Syslog (RFC 5424) Syslog (RFC 3164) CSV	Export logs from the printer or flash drive.

Login Restrictions

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Login failures	1 to 10 (3*)	Specify the number of failed login attempts before the user is locked out.
Failure time frame	1 to 60 minutes (5*)	Specify the time frame that failed login attempts are allowed before the user is locked out.
Lockout time	1 to 60 minutes (5*)	Specify the amount of time where no logins are allowed.
Web Login Timeout	1 to 120 minutes (10*)	Specify the amount of time that a remote interface such as a web page can remain idle before the user is logged off automatically.

Confidential Print Setup

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Max Invalid PIN	2 to 10	Set the limit for entering an invalid PIN. Note: When the limit is reached, the print jobs for that username are deleted.

Printer menus

Menu item	Settings	Description
Confidential Job Expiration	Off* 1 Hour 4 Hours 24 Hours 72 Hours 1 Week	Set an individual expiration time for each type of held job before the printer deletes it automatically from memory. <div style="background-color: #f0f0f0; padding: 10px; margin-top: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • The types of held jobs are Confidential, Repeat, Reserve, and Verify. • If the expiration time setting is changed while confidential print jobs reside on the printer memory or hard disk, then the expiration time for those print jobs does not change to the new default value. • If the printer is turned off, then all confidential jobs held in the printer memory are deleted. </div>
Repeat Job Expiration	Off* 1 Hour 4 Hours 24 Hours 72 Hours 1 Week	Set the expiration time for print jobs that you want to repeat.
Verify Job Expiration	Off* 1 Hour 4 Hours 24 Hours 72 Hours 1 Week	Set the expiration time for printing a copy of a job for you to check its quality before printing the remaining copies.
Reserve Job Expiration	Off* 1 Hour 4 Hours 24 Hours 72 Hours 1 Week	Set the expiration time for jobs that you want to store in the printer for printing later.
Require All Jobs to be Held	Off* On	Set the printer to hold all print jobs.
Keep duplicate documents	Off* On	Set the printer to keep all documents with the same file name.

Encryption

Menu item	Settings	Description
Internal Storage	The setting is a read-only information.	Show the encryption status of the internal storage.
Hard Disk	The setting is a read-only information.	Show the encryption status of the hard disk. Note: This menu item appears only when a hard disk is installed.
Intelligent Storage Drive	The setting is a read-only information.	Show the encryption status of the intelligent storage drive (ISD). Note: This menu item appears only when an ISD is installed.

Erase Temporary Data Files

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Stored in onboard memory	Off* On	Set the printer to erase all the data of a job from its memory after the job is finished.
Stored on hard disk	1 Pass Erase* 3 Pass Erase 7 Pass Erase	Specify the method that the printer uses to erase all the data of a job from the hard disk after the job is finished. Note: This menu item appears only when a hard disk is installed.

Solutions LDAP Settings

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
Follow LDAP Referrals	Off* On	Search the different servers in the domain for the logged-in user account.
LDAP Certificate Verification	Yes No*	Enable verification of LDAP certificates.

Miscellaneous

Note: An asterisk (*) next to a value indicates the factory default setting.

Printer menus

Menu item	Settings	Description
Protected Features	Show* Hide	Show all the features that Function Access Control (FAC) protects regardless of the security permission that the user has. Note: Hide —Displays only FAC-protected features that the user has access.
Print Permission	Off* On	Require the user to log in before printing.
Default Print Permission Login	PIN* Username/Password Username	Set the default login for Print Permission . Note: The settings appear only when security logins accounts are created and depend on the type of login account added.
Security Reset Jumper	Enable “Guest” access* No Effect	Specify user access to the printer. Notes <ul style="list-style-type: none"> • Enable “Guest” access gives anyone access to all aspects of the printer. • No Effect may make access to the printer impossible when the required security information is unavailable.
Reset Device Modes	Allow with FAC Allow* Don't Allow	Allow the printer mode to be reset.
Use Intelligent Storage Drive for User Data	Off On*	Enable the intelligent storage drive to store user data. Note: This menu item is disabled when a hard disk is installed.
Minimum Password Length	0 to 32 (0*)	Specify the minimum password length that is used for internal accounts such as Password and Username/Password accounts.
Enable Password/PIN Reveal	Off* On	Show the password or personal identification number.
Allow Encryption of Service Nonvolatile Memory	Off* On	Enable the encryption of service nonvolatile memory in your device. Note: This menu item appears only if Encrypt Service Nonvolatile Memory is disabled.

Cloud Services

Cloud Services Enrollment

Note: An asterisk (*) next to a value indicates the factory default setting.

Menu item	Settings	Description
View More Information	The setting is a read-only information.	View more information on the usage of Lexmark Cloud Services.
Enable communication with Lexmark Cloud Services	Off* On	Enable the printer to communicate with Lexmark Cloud Services.
View Current Status	The setting is a read-only information.	View the connection status between the printer and Lexmark Cloud Services.

Reports

Menu Settings Page

Menu item	Description
Menu Settings Page	Print a report that contains the printer menus.

Device

Menu item	Description
Device Information	Print a report that contains information about the printer.
Device Statistics	Print a report about supply status, paper count, job information, and more.
Profiles List	Print a list of profiles that are stored in the printer.
Asset Report	Print a diagnostic tool for print problems. Note: To avoid clipping the content, print the report on letter- or A4-size paper.

Print

Menu item	Settings	Description
Print Fonts	PCL Fonts PS Fonts	Print samples and information about the fonts that are available in each printer language.
Print Demo	Demo Page	Print a diagnostic tool for print problems. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Notes</p> <ul style="list-style-type: none"> • To avoid clipping the content, print the report on letter- or A4-size paper. • This menu item appears only when the printer has a demo page installed. </div>
Print Directory	The setting is user-defined.	Print a report that shows the resources that are stored in the flash drive or hard disk.

Shortcuts

Menu item	Description
All Shortcuts	Print a report that lists the shortcuts that are stored in the printer. <div style="background-color: #f0f0f0; padding: 10px;"> <p>Note: Fax Shortcuts appears only when Fax is installed.</p> </div>
Fax Shortcuts	
Copy Shortcuts	
Email Shortcuts	
FTP Shortcuts	
Network Folder Shortcuts	

Fax

Note: This menu appears only if **Fax** is configured, and **Enable Job Log** is set to **On**.

Menu item	Description
Fax Job Log	Print a report about the last 200 completed fax jobs.
Fax Call Log	Print a report about the last 100 attempted, received, and blocked calls.

Network

Menu item	Description
Network Setup Page	<p>Print a page that shows the configured network and wireless settings on the printer.</p> <p>Note: This menu item appears only in network printers or printers connected to print servers.</p>
Wi-Fi Direct Connected Clients	<p>Print a page that shows the list of devices that are connected to the printer using Wi-Fi Direct.</p> <p>Note: This menu item appears only when Enable Wi-Fi Direct is set to On.</p>

Troubleshooting

Menu item	Description
Print Quality Test Pages	Print sample pages to identify and correct print quality defects.
Cleaning the Scanner	Print instructions on how to clean the scanner.

Forms Merge

Notes

- This menu item appears only when a storage drive is installed.
- An asterisk (*) next to a value indicates the factory default setting.

Menu item	Submenu item	Settings	Description
Merge Mode	N/A	Print* Data Capture Disabled	Specify the mode of operation for Forms Merge.
Data Capture Target	N/A	Flash*	<p>Set the target destination where the captured data is forwarded.</p> <p>Note: This menu item appears only when Merge Mode is set to Data Capture.</p>
Print Port and Filter Settings	Network Port	On* Off	Enable Forms Merge to process all data that are sent to the network port.

Menu item	Submenu item	Settings	Description
	Network Filter	Disabled* NULL OFIS OFIS+NULL OFIS+AS400 AS400 PCL ZPL ZPLF	Specify the network filter for all data that are sent to the printer.
	USB Port	On* Off	Enable Forms Merge to process all data that are sent to the USB port.
	USB Filter	Disabled* NULL OFIS OFIS+NULL OFIS+AS400 AS400 PCL ZPL ZPLF	Specify the USB filter for all data that are sent to the printer.
	Local Port Timeout	1 to 100 (10*)	Specify the timeout value for Forms Merge jobs that are sent to the local port.
Miscellaneous	Print All Forms	Start	Print all form sets that are stored in the intelligent storage drive or hard disk.
	Error Page Print	On* Off	Enable printing of an error page when an error is encountered in a Forms Merge job.


Printing the Menu Settings Page report


Note: Keep the printed pages for reference in case the printer is serviced, or the settings are changed.

1. From the control panel, navigate to **Settings > Reports** .
2. Select **Menu Settings Page**.

Maintain the printer

Checking the status of parts and supplies

1. From the upper-right corner of the control panel, select .
2. View the status of the printer parts and supplies.

Note: You can also select  to check notifications that require user intervention.

Configuring supply notifications

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Device** > **Notifications**.
3. Click **Custom Supply Notifications**.
4. Select a notification for each supply item.
5. Apply the changes.

Setting up email alerts

Email alerts let you set up a mail server so the printer can automatically send messages to a group of email addresses when certain events happen.

1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Settings** > **Device** > **Notifications**.
3. Click **Email Alert Setup**.
4. In the **Email Setup** section, configure the settings.

Note: For more information on SMTP settings, see [Configuring the email SMTP settings on page 322](#).

5. Click **Save**.

6. Click **Setup Email Lists and Alerts**, and then do the following:
 - Specify the email addresses that you want to send the alerts to.
 - Specify the subject of the email alert.
 - Specify the printer events that you want to send.
7. Click **Save**.

Printing printer reports and logs

Printer reports show the printer status, toner levels, number of pages printed or scanned, and any errors.

1. From the control panel, navigate to **Settings > Reports**.
2. Select the report or log that you want to print.

Menu Settings Page—Show the current printer preferences, settings, and configurations.

Device

- **Device Information**—Show printer information such as serial number, installed memory, and page count.
- **Device Information**—Show printer information such as serial number, installed memory, and page count.
- **Device Statistics**—Show printer information such as supply status, total printed sheets, and printer job information.
- **Profiles List**—Show a list of profiles or shortcuts that are stored in the printer.
- **Asset Report**— Show printer information such as color and mono print counts, IP address, and firmware levels.

Print

- **Print Fonts**—Show the fonts that are available in each printer language.
- **Print Demo**—Show the demo files that are available in the firmware, the flash option, and the disk option.
- **Print Directory**—Show the resources that are stored on the flash drive, hard disk, or intelligent storage drive (ISD).

Note: This report appears only when a flash drive, a printer hard disk, or an ISD is installed.

Shortcuts

- **All Shortcuts**—Show a list of all the shortcuts that are stored on the printer.
- **Fax Shortcuts**—Show a list of fax shortcuts that are stored on the printer.
- **Copy Shortcuts**—Show a list of copy shortcuts that are stored on the printer.
- **Email Shortcuts**—Show a list of email shortcuts that are stored on the printer.
- **FTP Shortcuts**—Show a list of File Transfer Protocol (FTP) shortcuts that are stored on the printer.
- **Network Folder Shortcuts**—Show a list of network folder shortcuts that are stored on the printer.

Fax

- **Fax Job Log**—List the last 200 completed fax jobs.

Note: This report appears only when **Enable Job Log** is enabled.

- **Fax Call Log**—Show the resources that are stored on the flash drive or storage drive.

Note: This report appears only when a flash drive or storage drive is installed.

Network

- **Network Setup Page**—Show the configured network and wireless settings on the printer.

Note: This report appears only in network printers and printers connected to print servers.

- **Wi-Fi Direct Connected Clients**—Show the list of devices that are connected to the printer using Wi-Fi Direct.

Note: This report appears only when **Enable Wi-Fi Direct** is set to **On**.

Ordering parts and supplies

Contact information and precaution

To order supplies in the U.S., contact Lexmark at 1-800-539-6275 for information about Lexmark authorized supplies dealers in your area. In other countries or regions, go to www.lexmark.com or contact the place where you purchased the printer.

Note: All life estimates for printer supplies assume printing on letter- or A4-size plain paper.

Warning—Potential Damage

Failure to maintain optimum printer performance or to replace supplies can cause damage to your printer.

Using genuine Lexmark parts and supplies

Your Lexmark printer is designed to function best with genuine Lexmark parts and supplies. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components. It can also affect warranty coverage. Damage caused by the use of third-party parts and supplies is not covered by the warranty. All life indicators are designed to function with Lexmark parts and supplies, and may deliver unpredictable results if third-party parts and supplies are used. Imaging component usage beyond the intended life may damage your Lexmark printer or its associated components.

Warning—Potential Damage

Supplies and parts without Return Program agreement terms may be reset and remanufactured. However, the manufacturer's warranty does not cover any damage caused by non-genuine supplies or parts. Resetting counters on the supply or part without proper remanufacturing can cause damage to your printer. After resetting the supply or part counter, your printer may display an error indicating the presence of the reset item.

Ordering a toner cartridge

Notes:

- The estimated cartridge yield is based on the ISO/IEC 19752 standard.
- Extremely low print coverage for extended periods of time may negatively affect actual yield.

Return Program toner cartridges

Lexmark CX950, CX51

Item	United States, Canada, Australia, and New Zealand	European Union, European Economic Area, Iceland, Liechtenstein, Norway, Switzerland	Rest of Asia Pacific	Latin America, Puerto Rico, and Mexico	Rest of Europe, Middle East, Africa, Central Eastern Europe, Commonwealth of Independent States
Cyan	77L10C0	77L20C0	77L30C0	77L40C0	77L50C0
Magenta	77L10M0	77L20M0	77L30M0	77L40M0	77L50M0
Yellow	77L10Y0	77L20Y0	77L30Y0	77L40Y0	77L50Y0
Black	77L10K0	77L20K0	77L30K0	77L40K0	77L50K0

For more information on countries in each region, go to www.lexmark.com/regions.

Lexmark XC9525, XC9535

Item	United States, Canada, Australia, New Zealand	Rest of Europe, Middle East, and Africa
Cyan	24B7602	24B7606
Magenta	24B7603	24B7607
Yellow	24B7604	24B7608
Black	24B7605	24B7609

For more information on countries in each region, go to www.lexmark.com/regions.

High Yield Return Program toner cartridges

Lexmark CX950, CX951

Item	United States, Canada, Australia, and New Zealand	European Union, European Economic Area, Iceland, Liechtenstein, Norway, Switzerland	Rest of Asia Pacific	Latin America, Puerto Rico, and Mexico	Rest of Europe, Middle East, Africa, Central Eastern Europe, Commonwealth of Independent States
Cyan	79L10K0	79L20K0	79L30K0	79L40K0	79L50K0
Magenta	79L1HM0	79L2HM0	79L3HM0	79L4HM0	79L5HM0
Yellow	79L1HY0	79L2HY0	79L3HY0	79L4HY0	79L5HY0
Black	79L1HK0	79L2HK0	79L3HK0	79L4HK0	79L5HK0

For more information on countries in each region, go to www.lexmark.com/regions.

Lexmark XC9525, XC9535

Maintain the printer

Item	United States, Canada, Australia, New Zealand	Rest of Europe, Middle East, and Africa
Cyan	24B7574	24B7582
Magenta	24B7575	24B7583
Yellow	24B7576	24B7584
Black	24B7577	24B7585

For more information on countries in each region, go to www.lexmark.com/regions.

High Yield Regular toner cartridges

Lexmark CX950, CX951

Item	Worldwide
Cyan	77L0H20
Magenta	77L0H30
Yellow	77L0H40
Black	77L0H10

For more information on countries in each region, go to www.lexmark.com/regions.

Lexmark XC9525, XC9535

Item	Worldwide
Cyan	77L0H20
Magenta	77L0H30
Yellow	77L0H40
Black	77L0H10

For more information on countries in each region, go to www.lexmark.com/regions.

Ordering a black imaging unit

Item	Part number
Return Program black imaging unit	77L0ZK0
Black imaging unit	77L0Z10

Ordering a color imaging kit

Item	Part number
Return Program color imaging kit	77L0ZV0

Maintain the printer

Item	Part number
Color imaging kit	77L0Z50

Ordering the waste toner bottle

Item	Part number
Waste toner bottle	77L0W00

Ordering a staple cartridge

Item	Part number
Staple cartridge (4-pack) ¹	20L7500
Staple cartridge (3-pack) ²	25A0013

¹ Available only for the booklet maker.

² Available only for the booklet finisher, staple finisher, and staple, hole punch finisher.

Ordering a maintenance kit

Match the maintenance kit to the printer voltage.

Notes

- Using certain types of paper may require more frequent replacement of the maintenance kit.
- The maintenance kit includes a fuser and pick tires. These parts may be individually ordered and replaced if necessary.


Item	Part number
100 V Return Program fuser maintenance kit, Type 02	41X5654
110-120 V Return Program fuser maintenance kit, Type 00	41X5655
220-240 V Return Program fuser maintenance kit, Type 01	41X5656
100 V Regular fuser maintenance kit, Type 12	41X6053
110-120 V Regular fuser maintenance kit, Type 10	41X6051
220-240 V Regular fuser maintenance kit, Type 11	41X6052

Note: Only an authorized service technician can replace the maintenance kit. Contact your service provider.



Replacing parts and supplies

Replacing a toner cartridge



1. Open the front door.

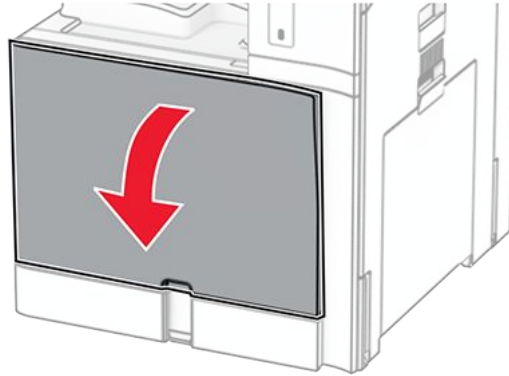

2. Remove the used toner cartridge.

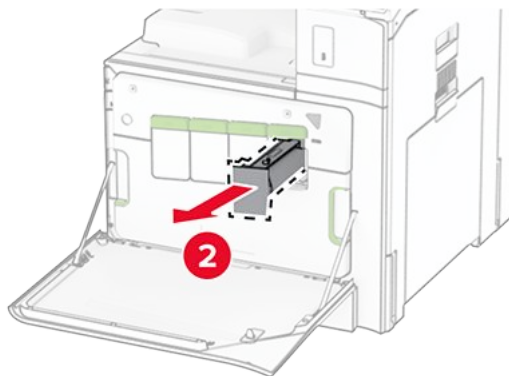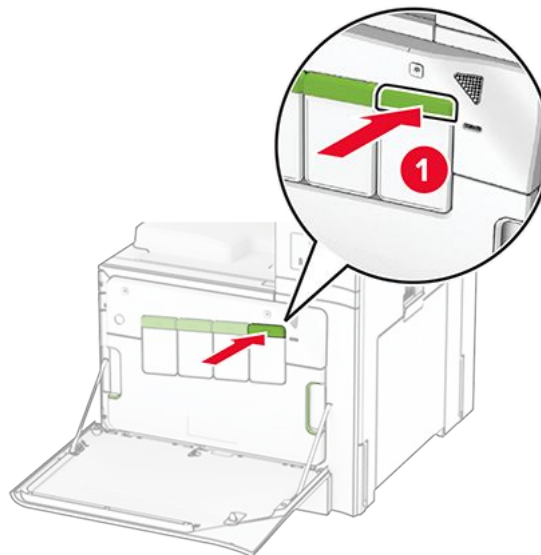


3. Unpack the new toner cartridge.
4. Insert the new toner cartridge until it clicks into place.

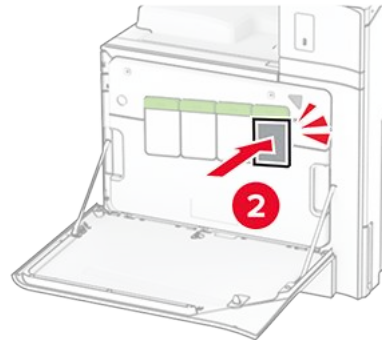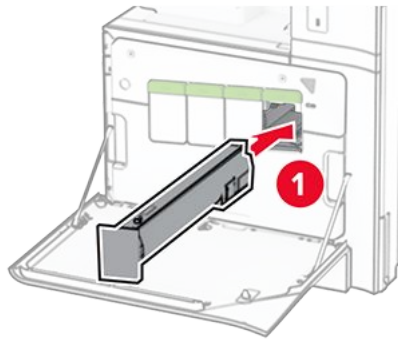



5. Close the door.

Replacing the black imaging unit


1. Open the front door.

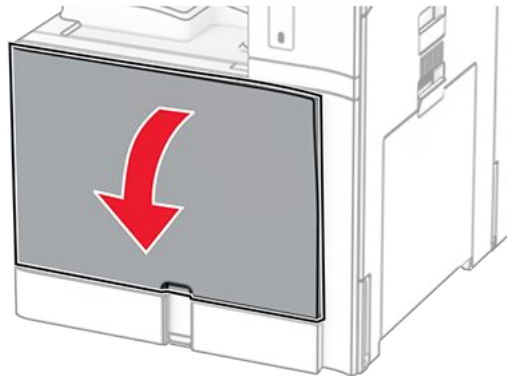


2. Remove the toner cartridges.

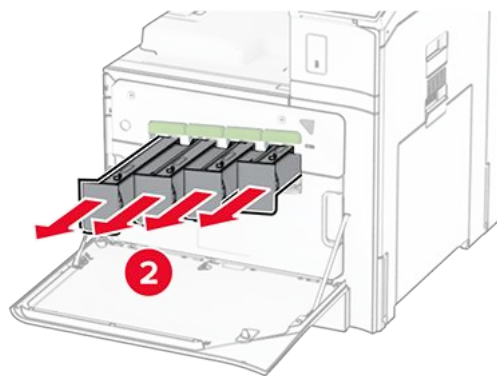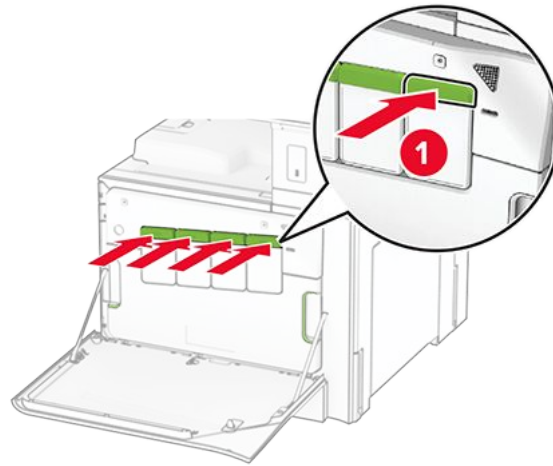




3. Remove the waste toner bottle.

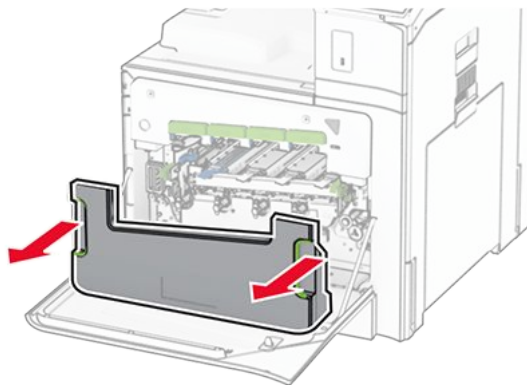

Note: To avoid spilling the toner, place the bottle in an upright position.

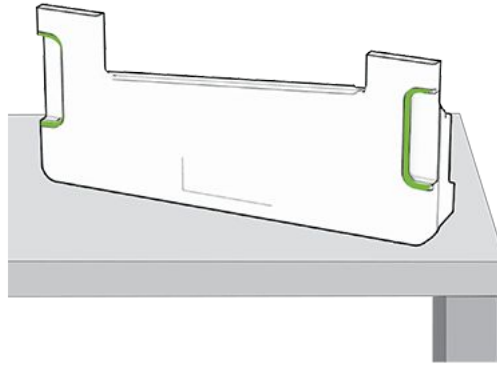

4. Remove the imaging kit.

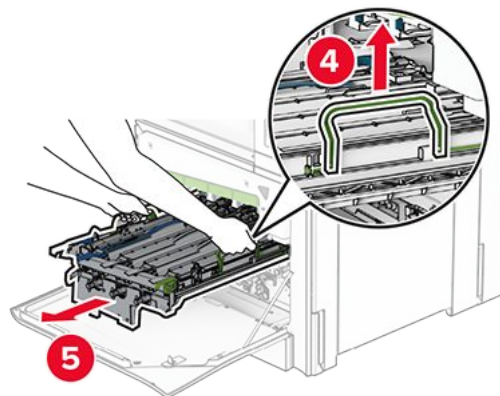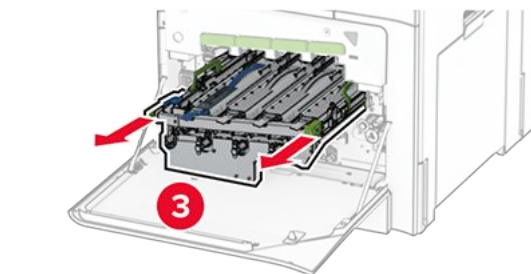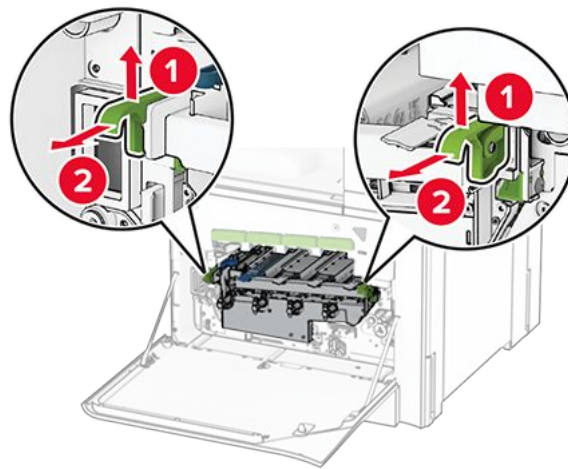


Warning—Potential Damage


Do not expose the imaging kit to direct light. Extended exposure to light may cause print quality problems.

Warning—Potential Damage



Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs.

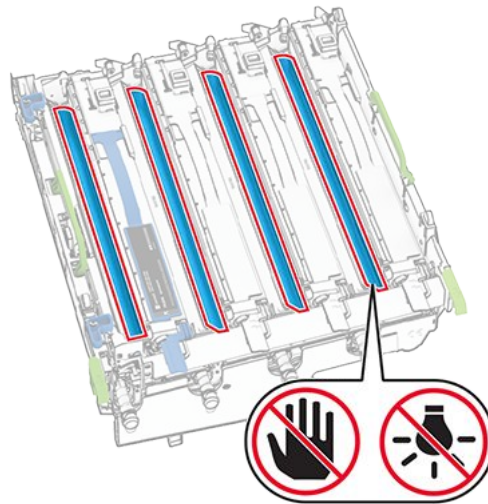


Note: To avoid scratching or damaging the photoconductor drum, place the imaging kit on a clean, flat surface and in an upright position.

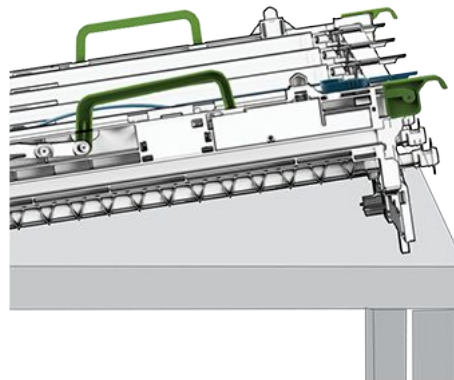

5. Unlock the used black imaging unit.

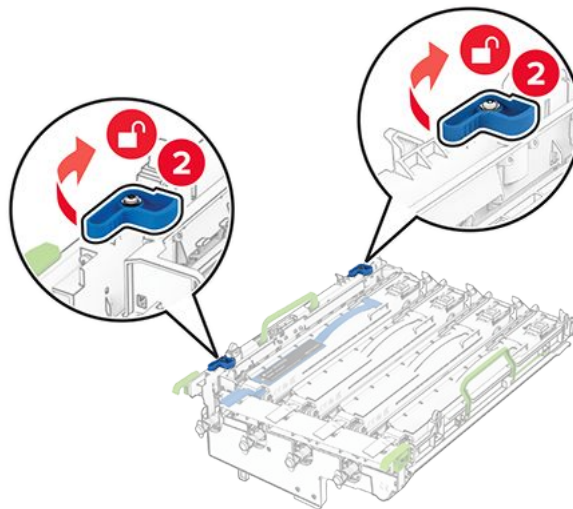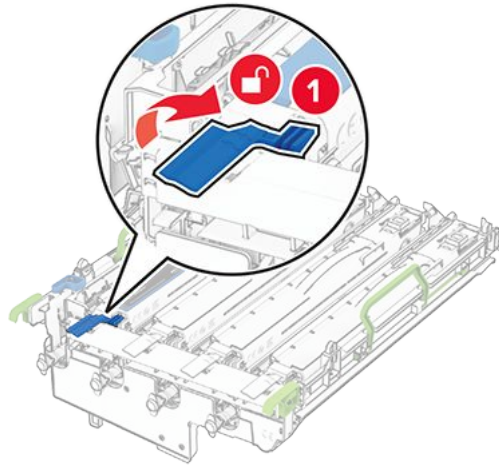


6. Remove the used black imaging unit.


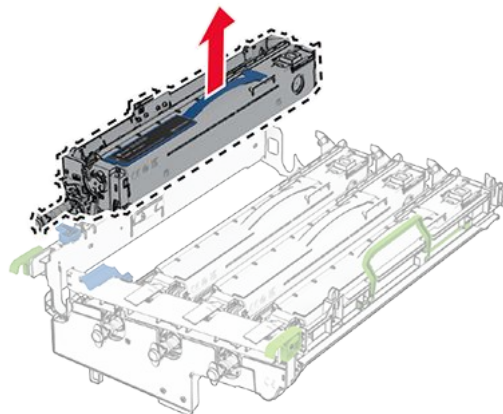


7. Unpack the new black imaging unit.


8. Insert the new black imaging unit.

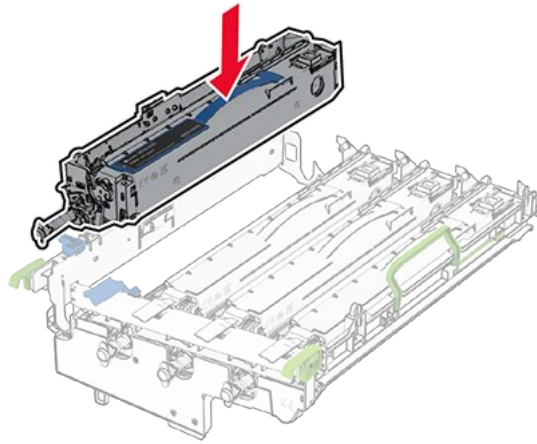



9. Lock the new black imaging unit in place.

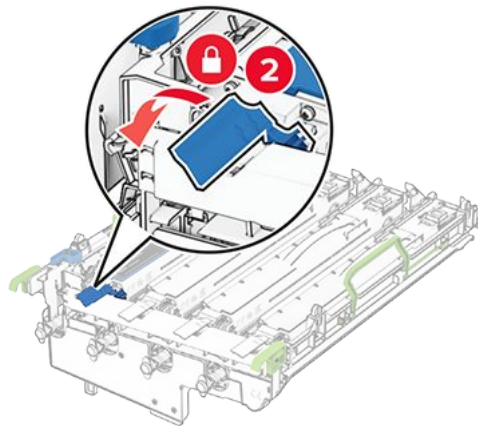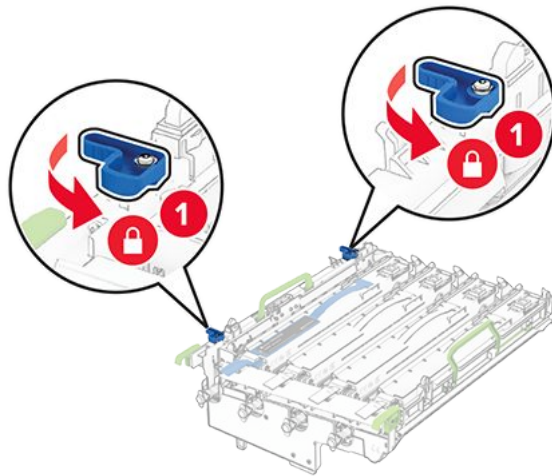


10. Insert the imaging kit until it is fully seated.

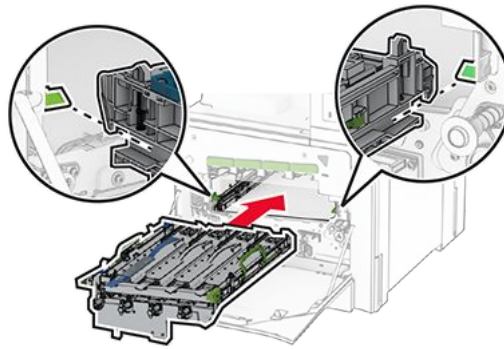


11. Insert the waste toner bottle until it clicks into place.

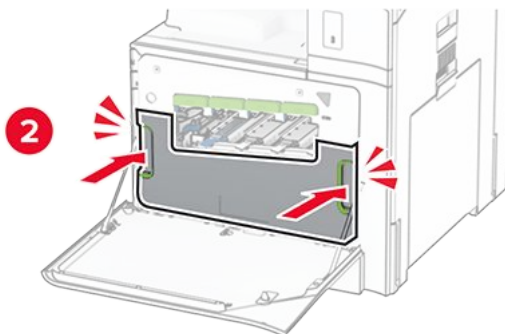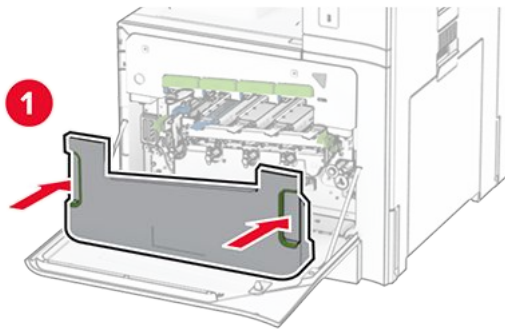

12. Gently pull out the printhead wipers, and then clean the printhead lenses. For more information, see [Cleaning the printhead lenses on page 492](#).

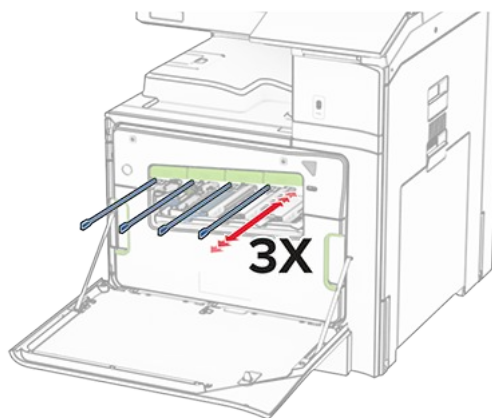


13. Insert the toner cartridges.

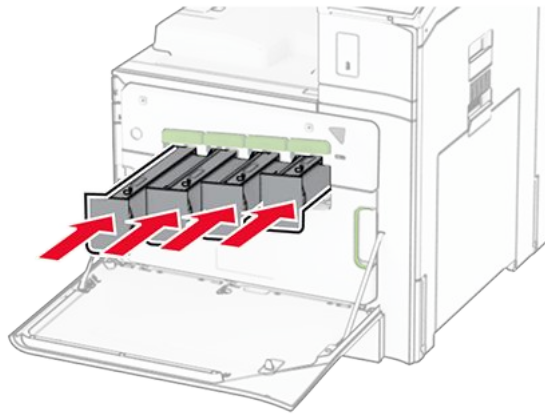



14. Close the door.

Replacing the color imaging kit


1. Open the front door.

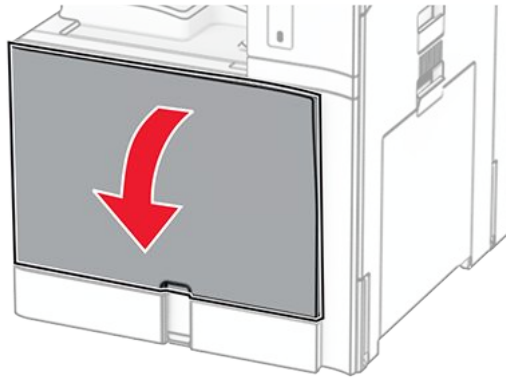


2. Remove the toner cartridges.

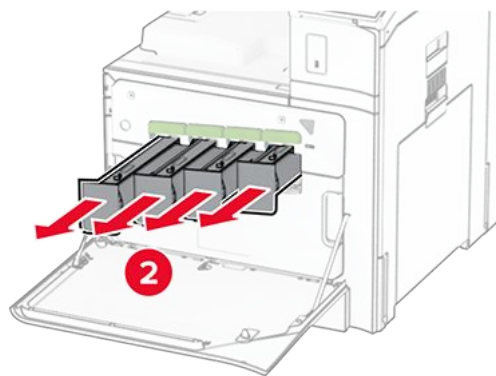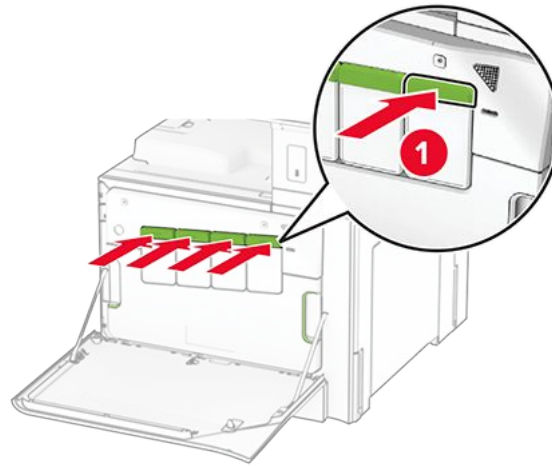



3. Remove the waste toner bottle.

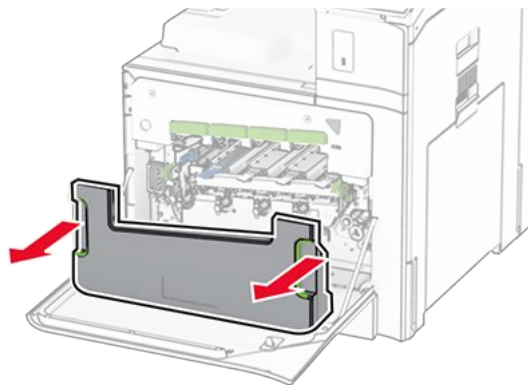


Note: To avoid spilling the toner, place the bottle in an upright position.

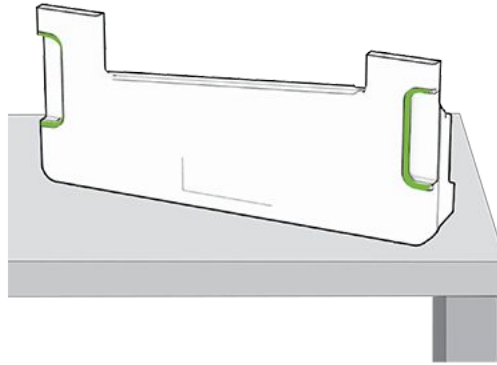



4. Remove the used imaging kit.

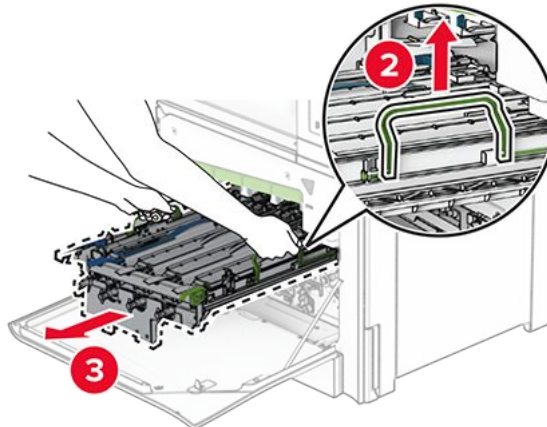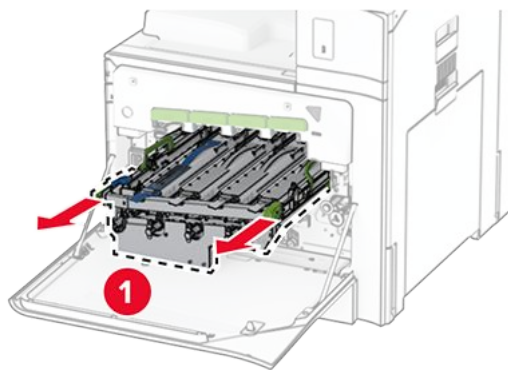


Note: To avoid scratching or damaging the photoconductor drum, place the imaging kit on a clean, flat surface and in an upright position.

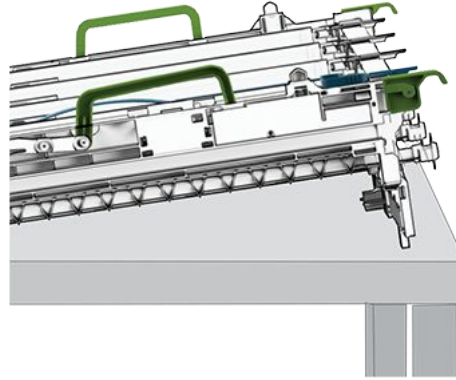

5. Unlock the black imaging unit.

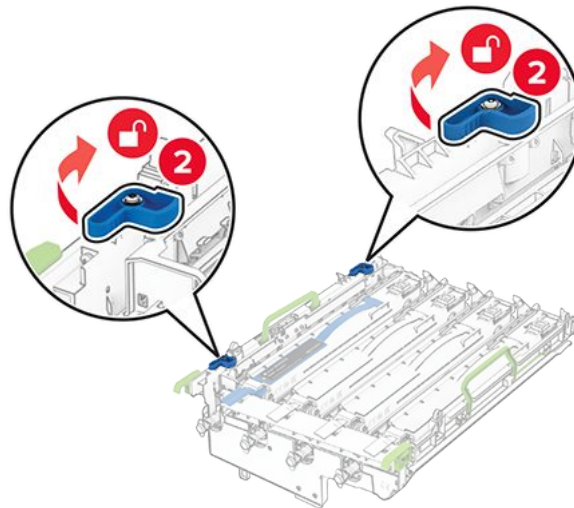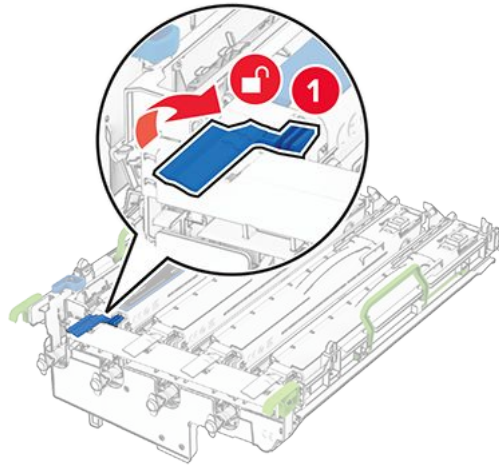

6. Remove the black imaging unit.

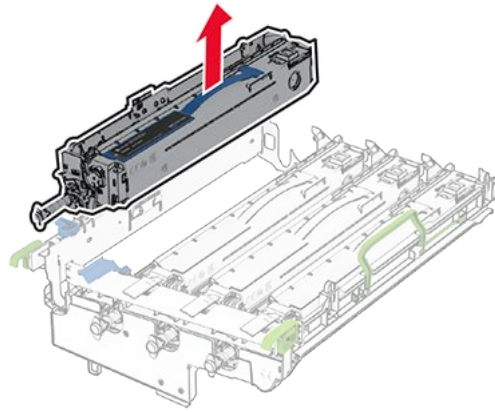

Note: Do not throw away the black imaging unit. It will be installed on the new imaging kit.

7. Unpack the new imaging kit.


Note: The imaging kit includes the imaging basket and the cyan, magenta, and yellow developer units.

Warning—Potential Damage


Do not expose the imaging kit to direct light. Extended exposure to light may cause print quality problems.

Warning—Potential Damage



Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs.

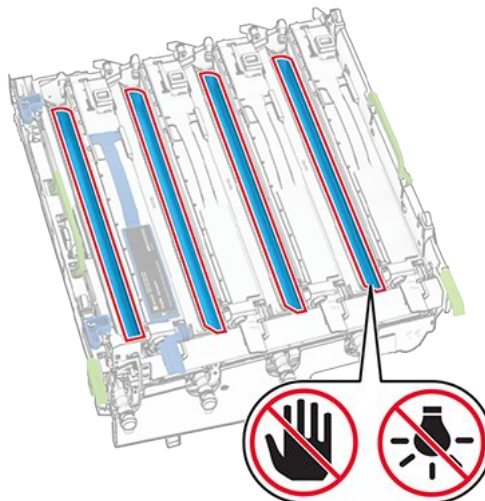


8. Insert the black imaging unit into the new imaging kit.

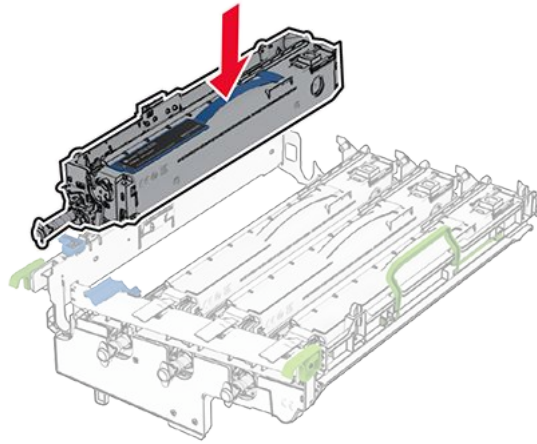



9. Lock the black imaging unit in place.

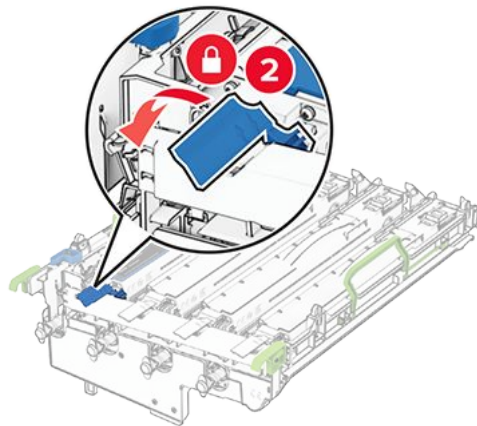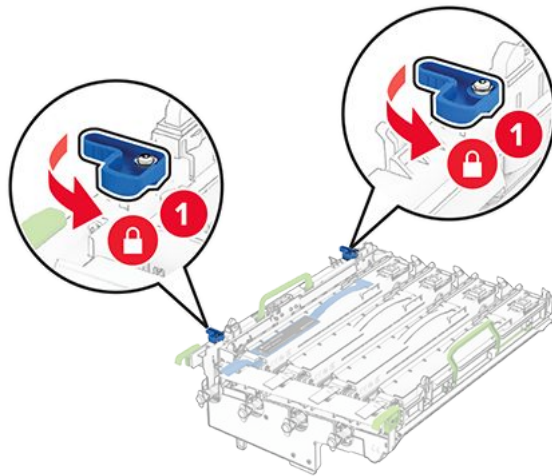


10. Insert the new imaging kit until it is fully seated.

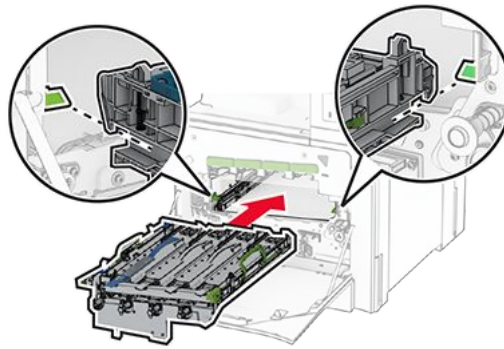


11. Insert the waste toner bottle until it clicks into place.

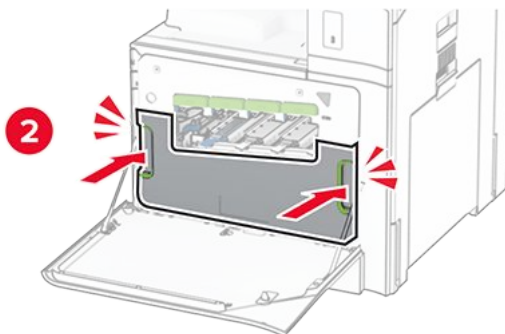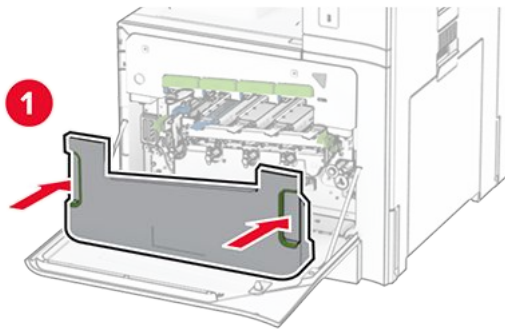

12. Gently pull out the printhead wipers, and then clean the printhead lenses. For more information, see [Cleaning the printhead lenses on page 492](#).

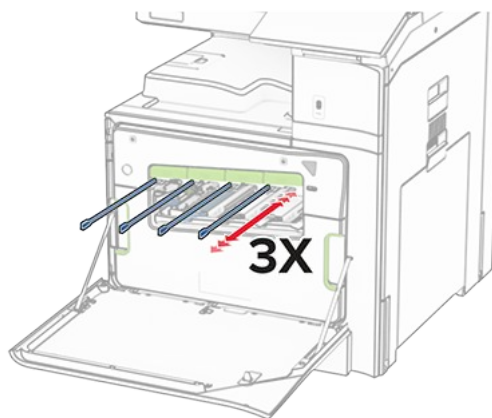


13. Insert the toner cartridges.

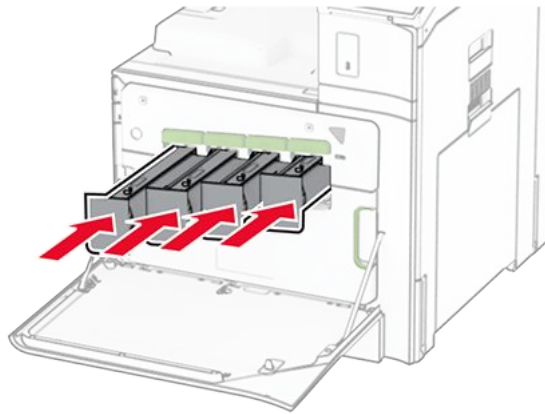


14. Close the door.

Replacing the waste toner bottle


1. Open the front door.

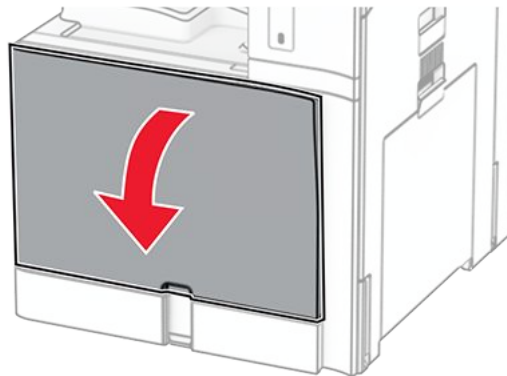



2. Remove the used waste toner bottle.

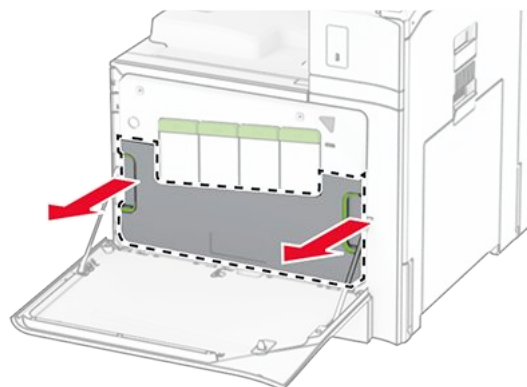

Note: To avoid spilling the toner, place the bottle in an upright position.

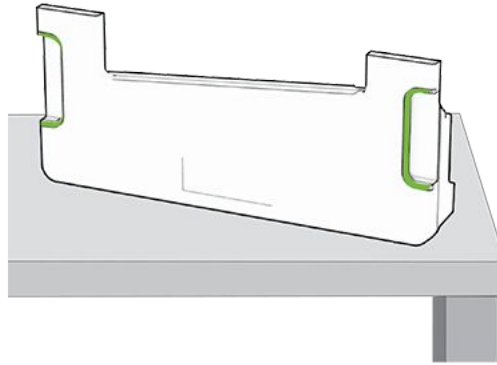


3. Unpack the new waste toner bottle.
4. Insert the new waste toner bottle until it clicks into place, and then close the door.

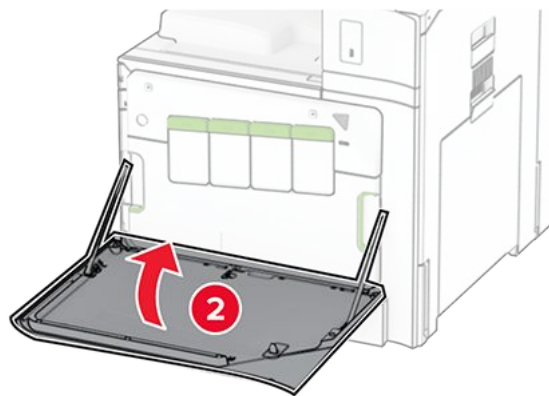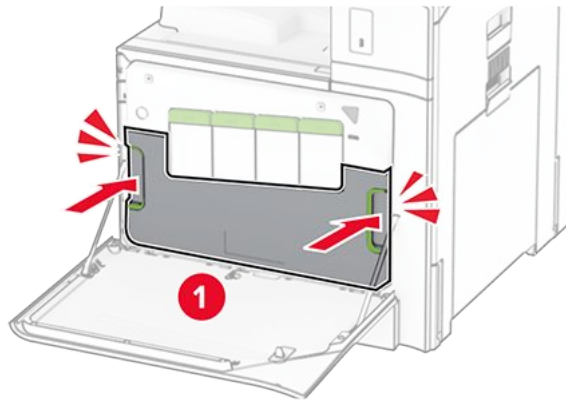

Replacing the fuser

1. Turn off the printer.

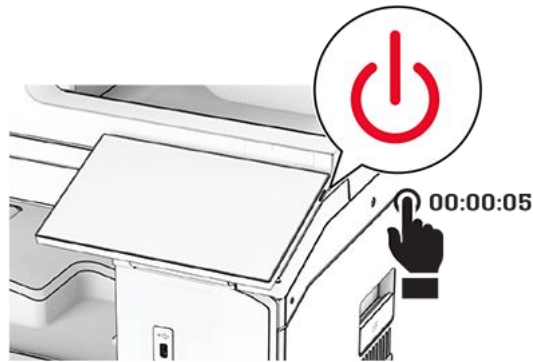


2. Unplug the power cord from the electrical outlet, and then from the printer.
3. Open door B.




CAUTION—HOT SURFACE



The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

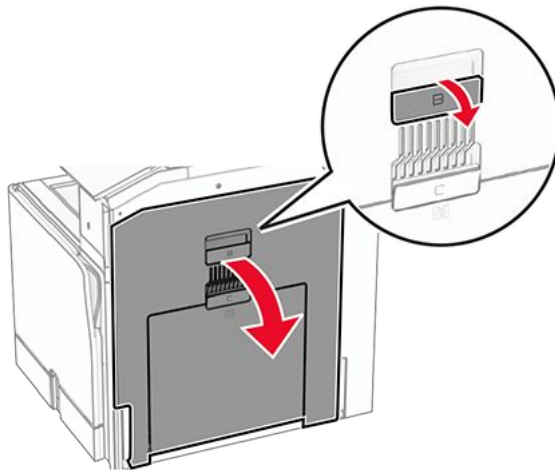

4. Loosen the screws, and then remove the used fuser.

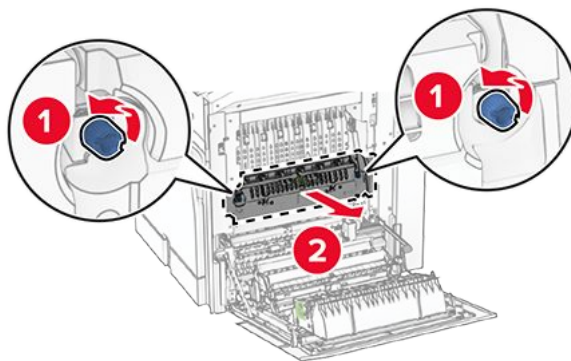

5. Unpack the new fuser.
6. Insert the new fuser until it clicks into place, and then tighten the screws.

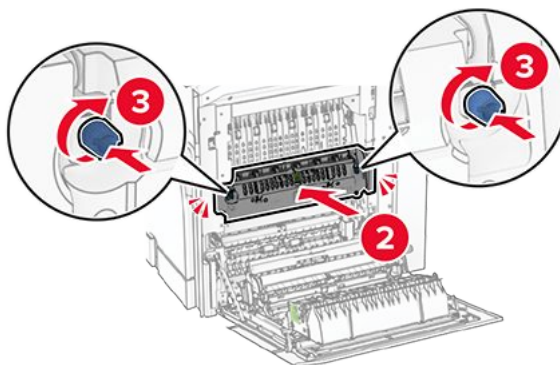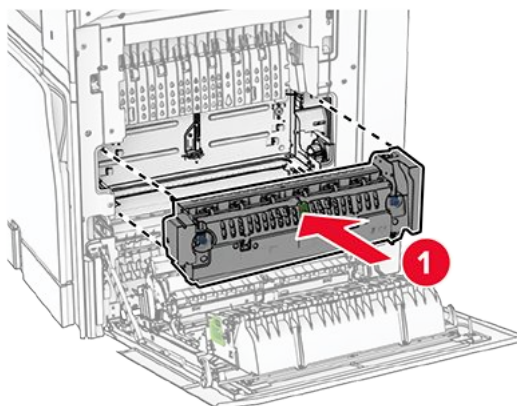

7. Close the door.
8. Connect one end of the power cord to the printer, and then the other end to the electrical outlet.




CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.


9. Turn on the printer.

Replacing the tray insert

1. Pull out the used tray insert.


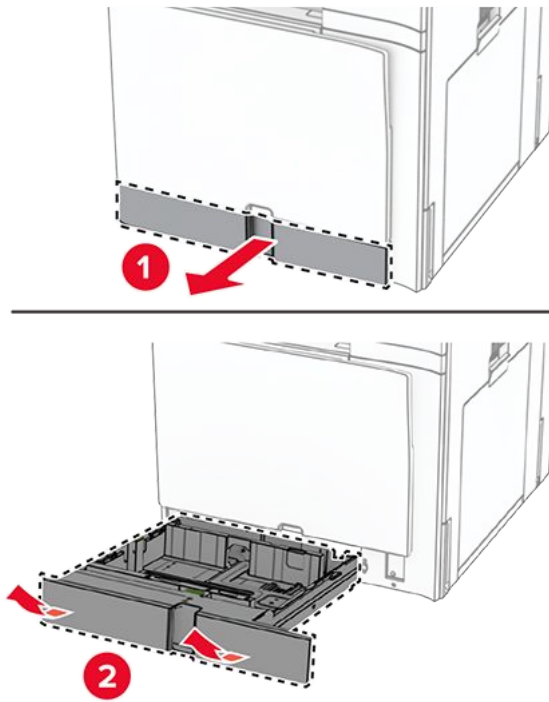


2. Unpack the new tray insert.
3. Insert the new tray insert.


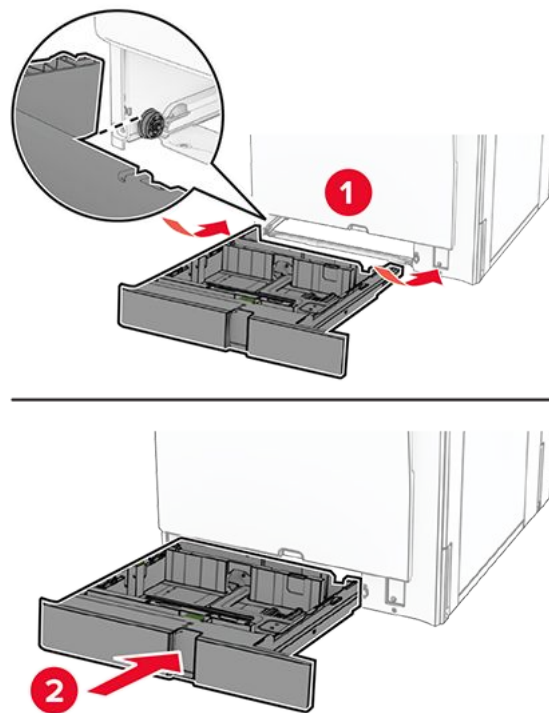


Replacing the size guides in the optional 550-sheet tray

1. Pull out the tray.

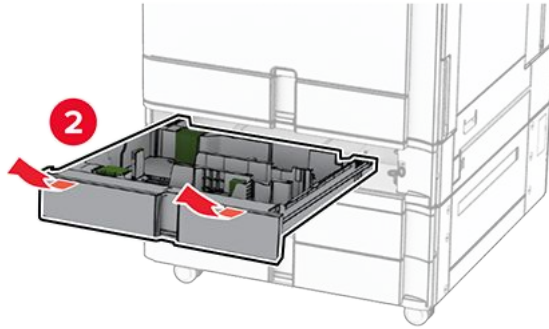
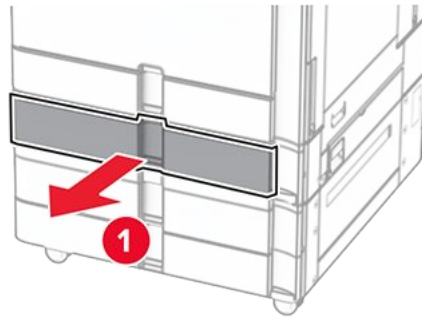


2. Remove the used size guides.

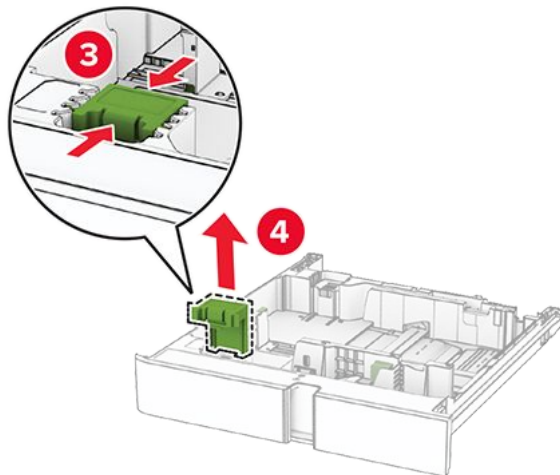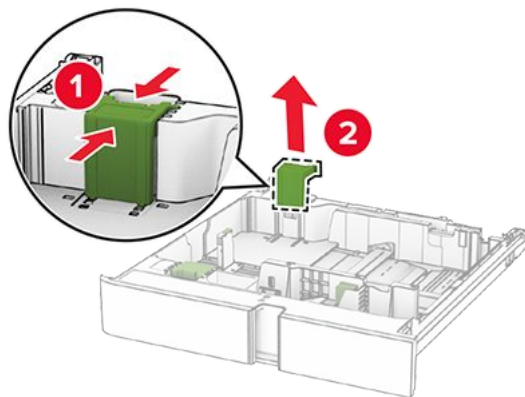

3. Unpack the new size guides.


4. Insert the new size guides until they click into place.

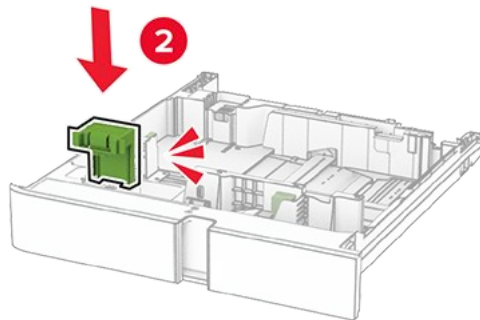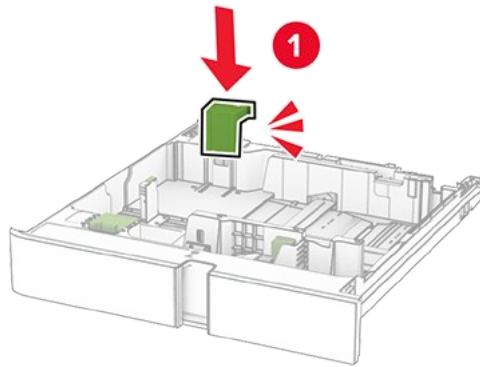



5. Insert the tray.

Replacing the cover in the optional 550-sheet tray

1. Remove the used tray cover.

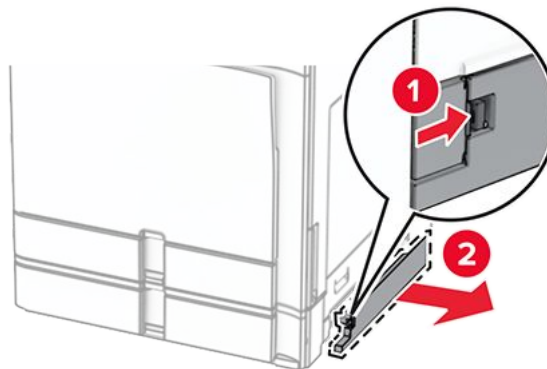


2. Unpack the new tray cover.
3. Insert the new tray cover until it clicks into place.

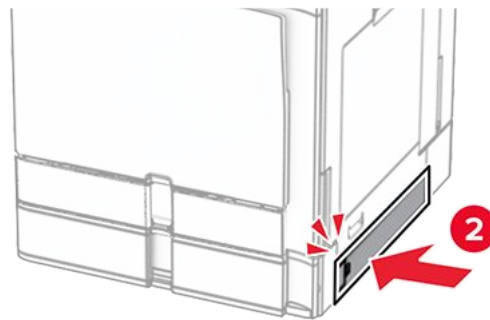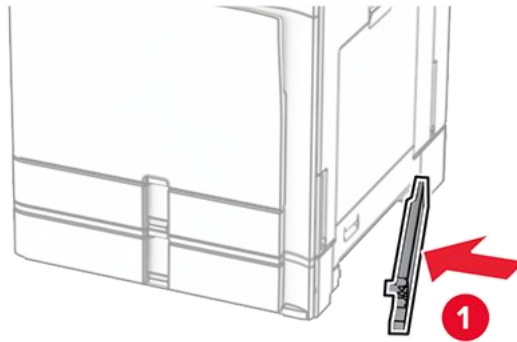

Replacing the booklet finisher top bin extension

1. Remove the used top bin extension.

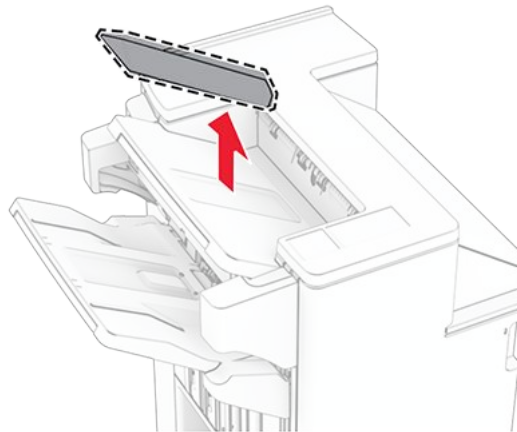


2. Unpack the new top bin extension.
3. Insert the new top bin extension.




Replacing the hole punch box

Note: Depending on the finisher installed, the appearance of the hole punch box may vary.


1. Open the finisher door.

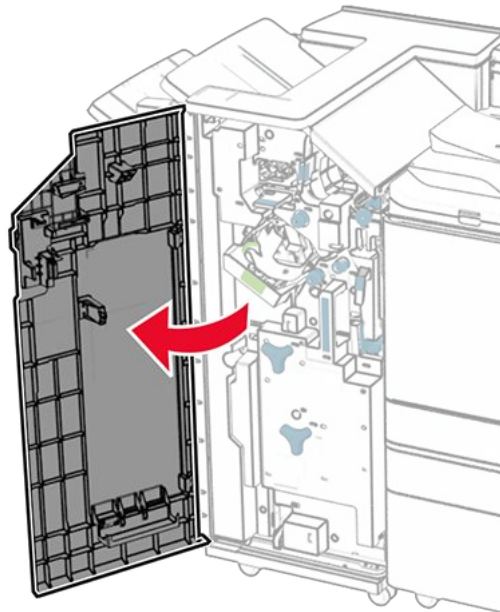

2. Remove the used hole punch box.

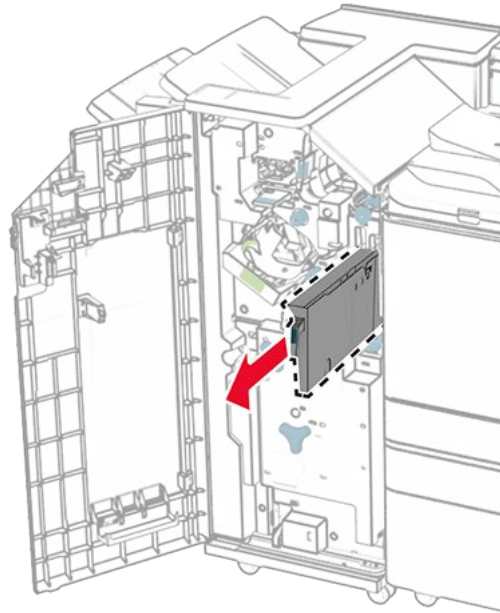


3. Unpack the new hole punch box.
4. Insert the new hole punch box.

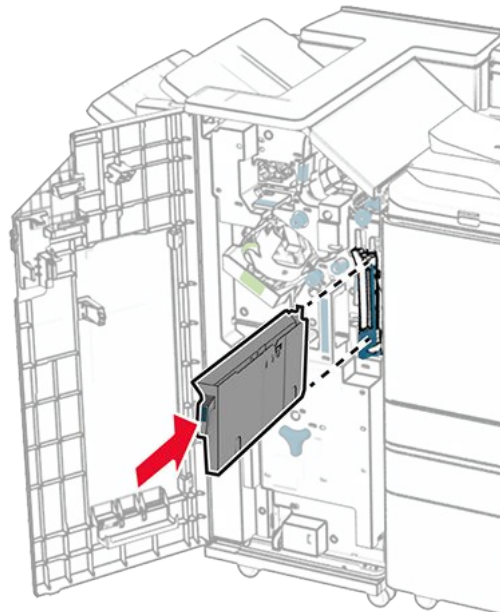



5. Close the finisher door.

Replacing the standard bin

1. Remove the used standard bin.

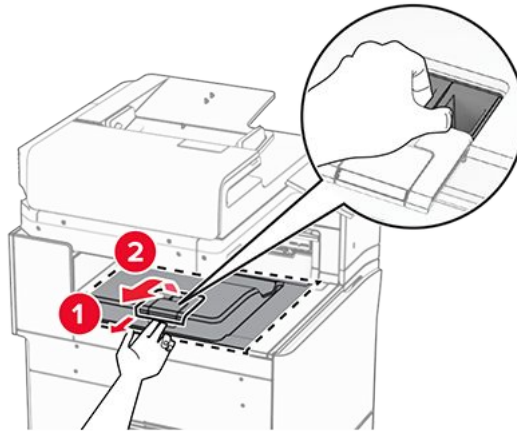


2. Unpack the new standard bin.
3. Attach the new standard bin.

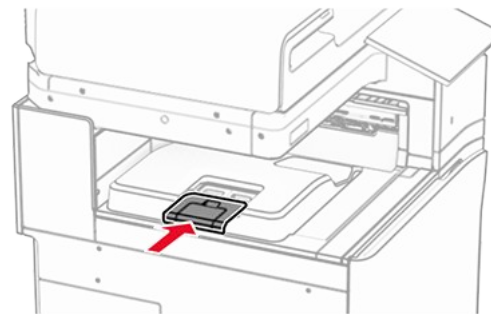
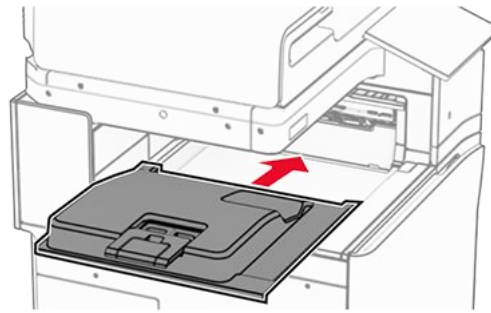


Replacing the fan cover

1. Remove the used fan cover.


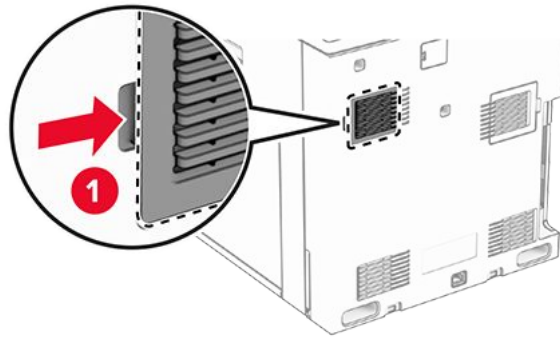


2. Unpack the new cover.
3. Insert the new cover until it clicks into place.

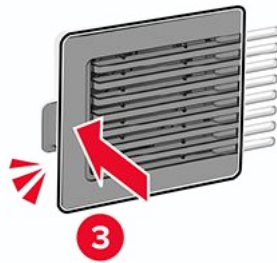
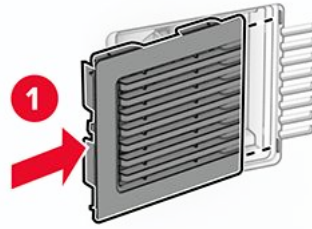


Replacing the right cover

1. Remove the used right cover.

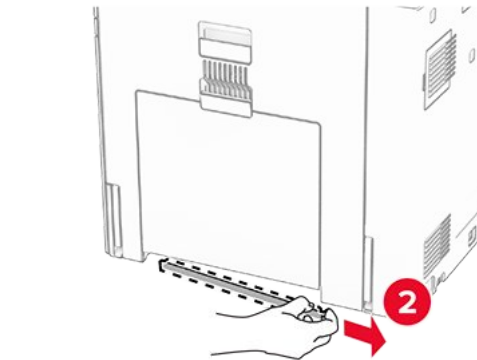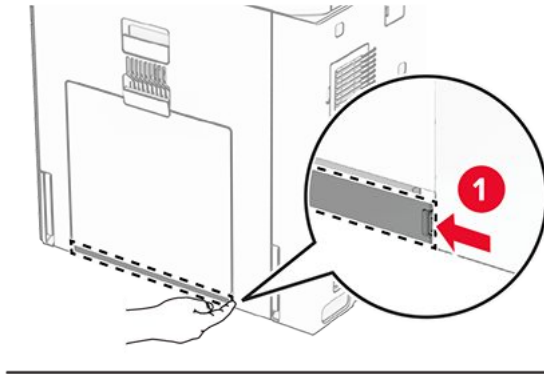


2. Unpack the new cover.
3. Insert the new cover until it clicks into place.

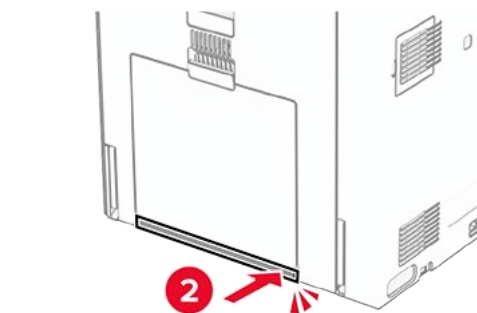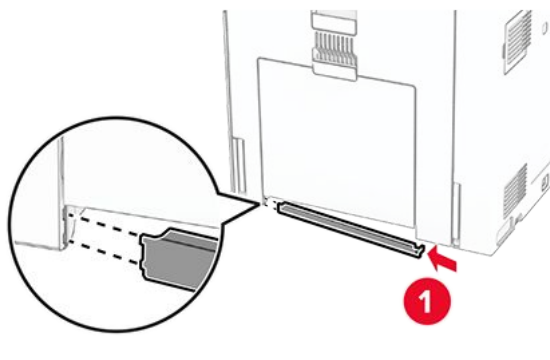


Replacing the glass cleaner tool


1. Open the scanner cover.

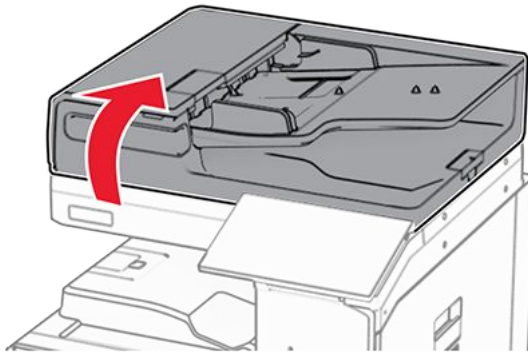

2. Remove the used glass cleaner tool.

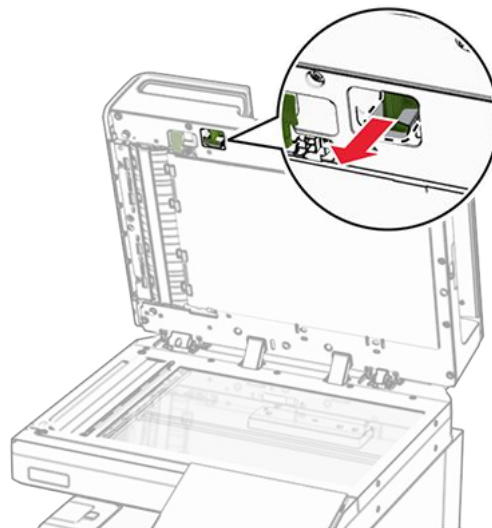


3. Unpack the new glass cleaner tool.
4. Insert the new glass cleaner tool.

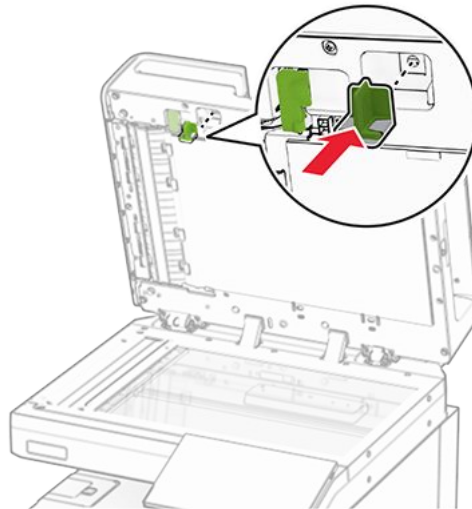


5. Close the scanner cover.

Replacing the paper transport connector cover



1. Remove the standard bin.

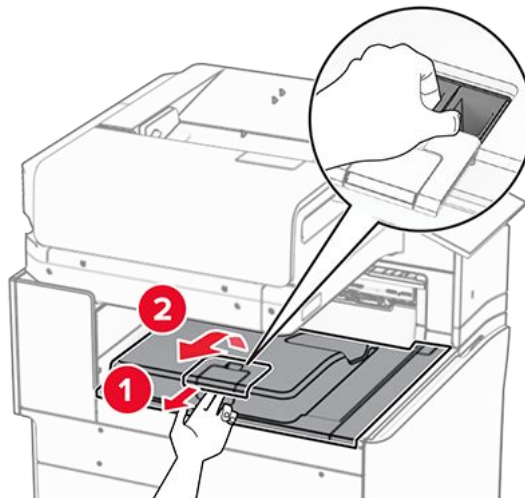



2. Remove the used paper transport connector cover.

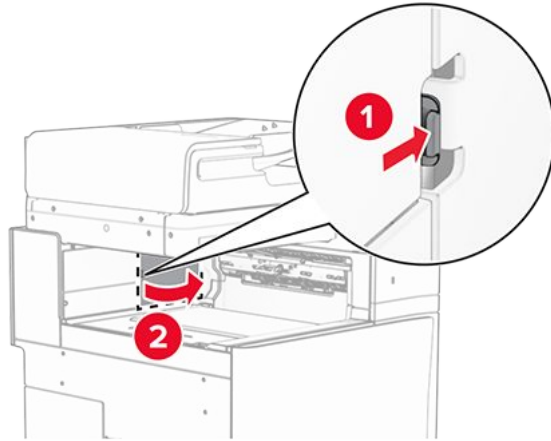

3. Unpack the new connector cover.
4. Attach the new connector cover until it clicks into place.

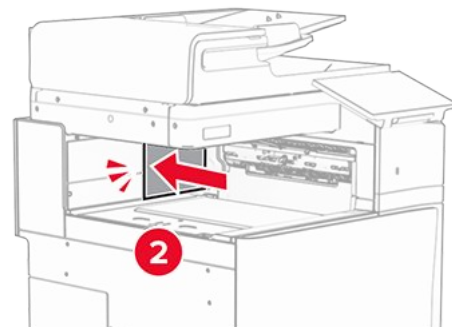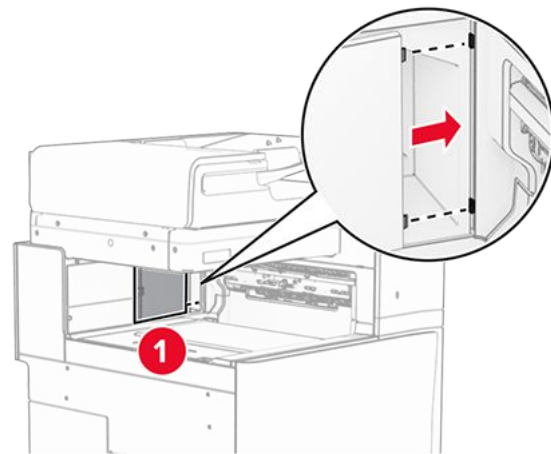


5. Attach the standard bin.

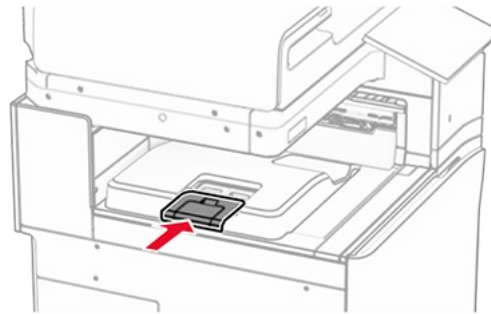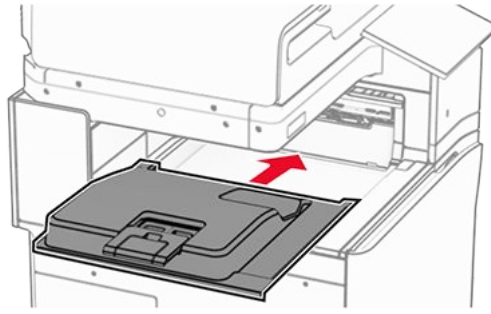


Replacing the staple cartridge unit

Replacing the staple cartridge in the staple finisher


1. Grab handle F, and then slide the staple finisher to the left.

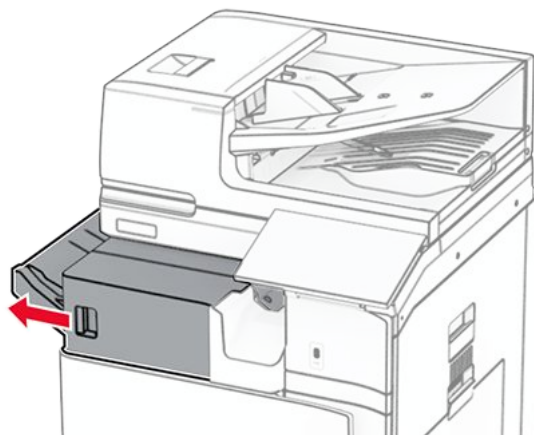


2. Remove the staple cartridge holder.

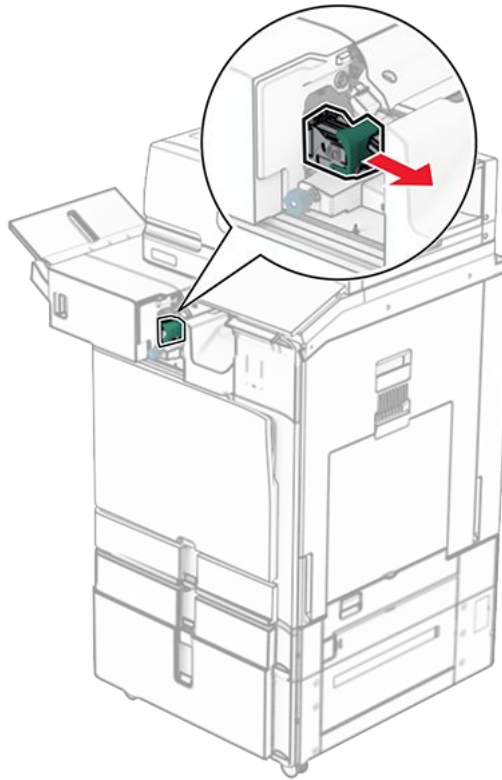


3. Remove the empty staple cartridge.

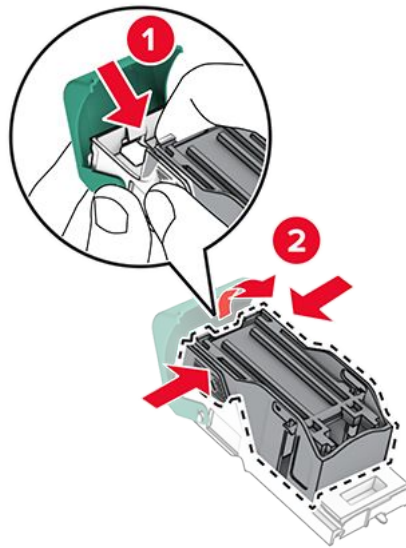

4. Insert the new staple cartridge until it clicks into place.

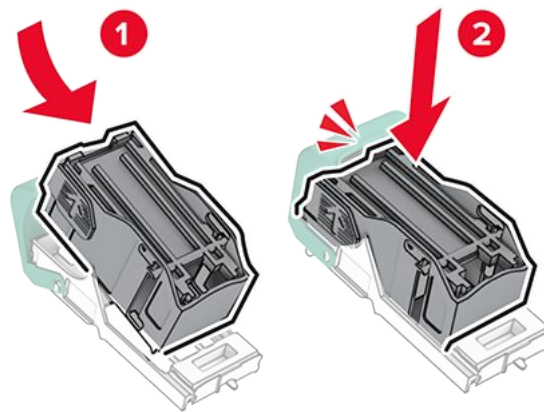


5. Insert the staple cartridge holder until it clicks into place.

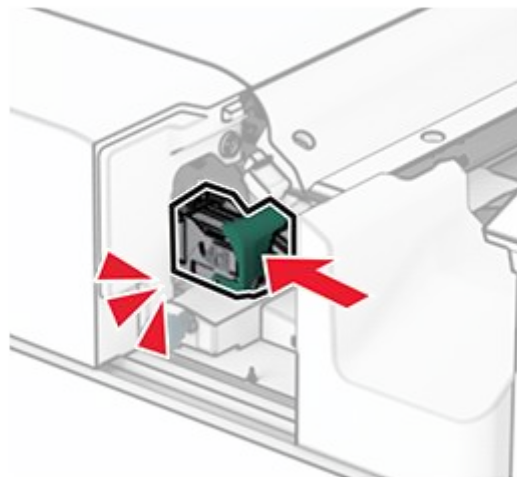


6. Slide the staple finisher to the right.

Replacing the staple cartridge in the staple, hole punch finisher


1. Open door H.

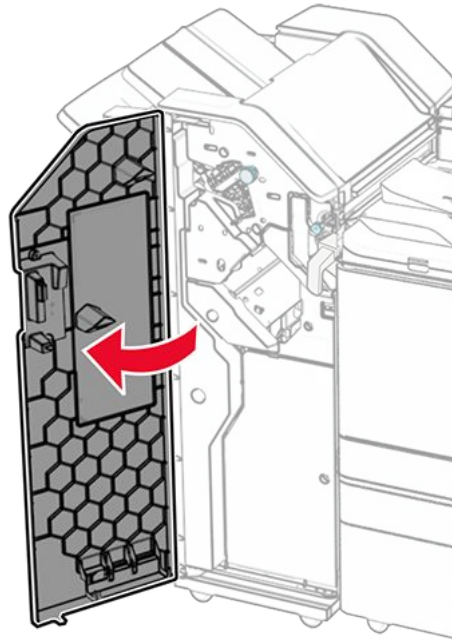


2. Pull out the green handle, and then remove the staple cartridge holder.

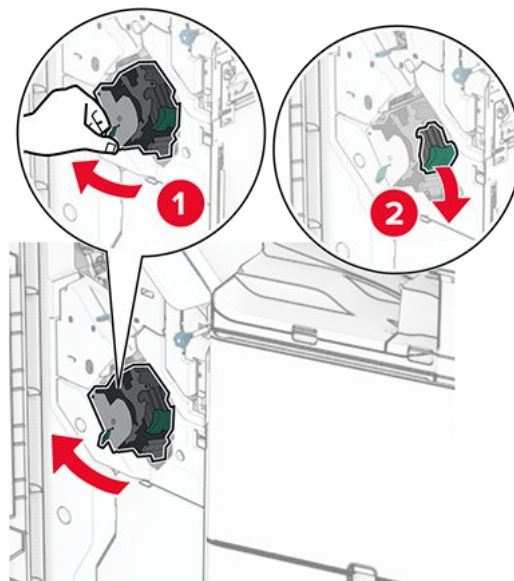


3. Remove the empty staple cartridge.

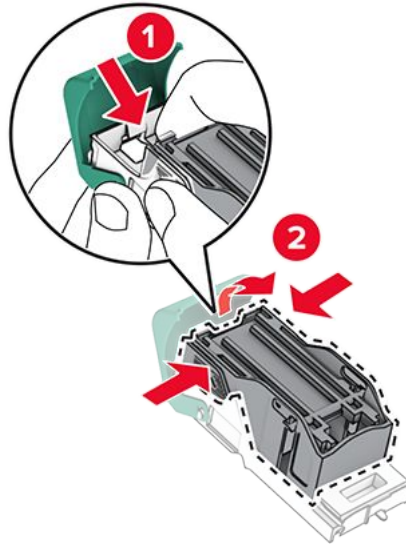

4. Unpack the new staple cartridge.
5. Insert the new staple cartridge until it clicks into place.

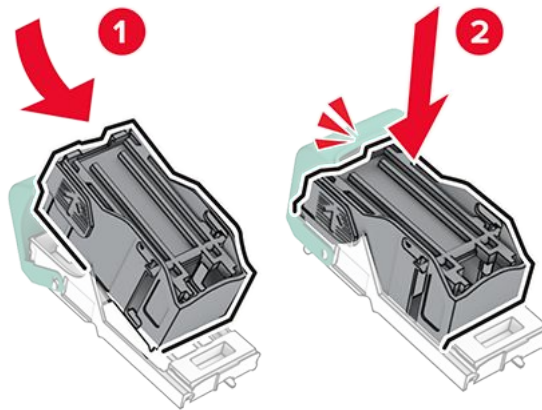


6. Insert the staple cartridge holder until it clicks into place.

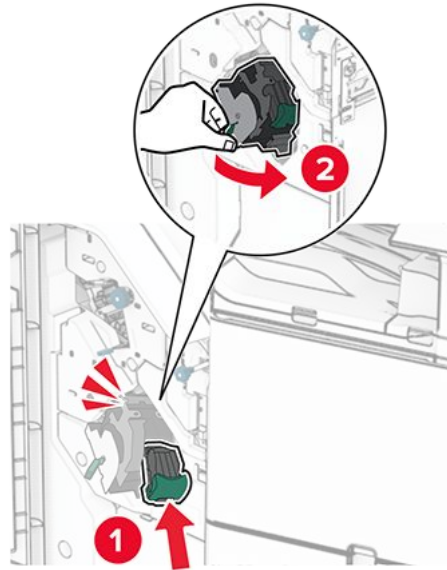


7. Close door H.

Replacing the staple cartridge in the booklet finisher


1. Open door H.

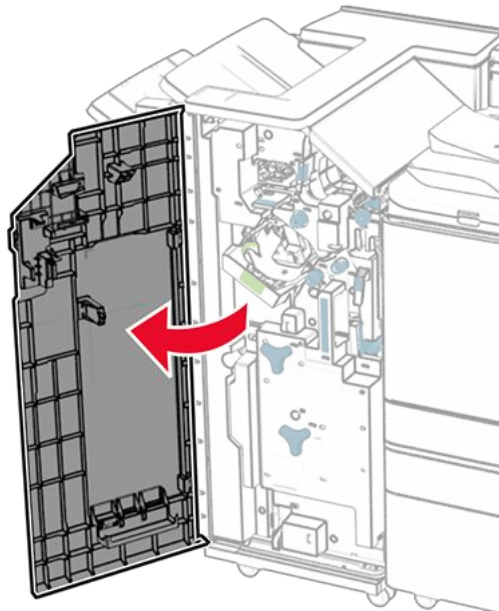

2. Pull out the green handle, and then remove the staple cartridge holder.

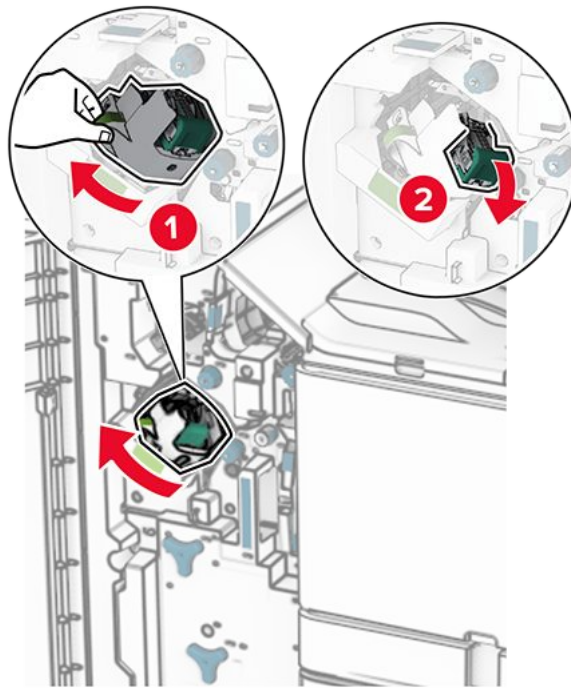


3. Remove the empty staple cartridge.

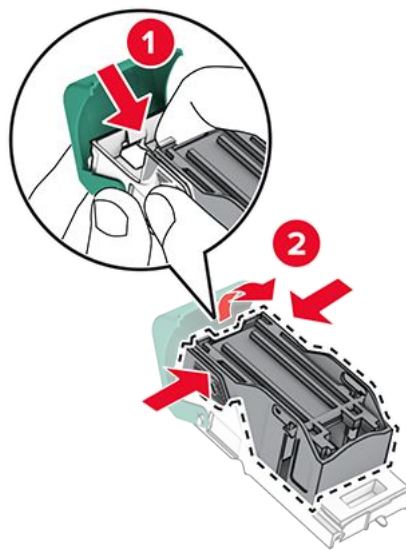


4. Unpack the new staple cartridge.

5. Insert the new staple cartridge until it clicks into place.

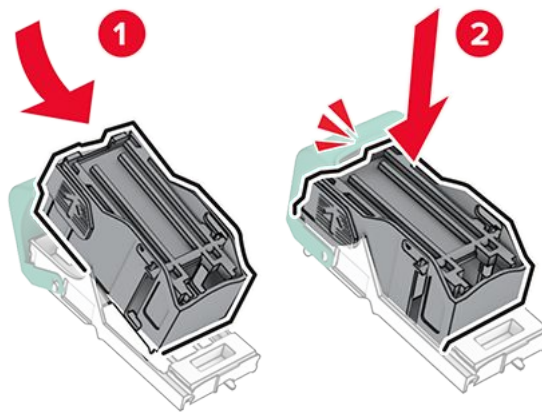


6. Insert the staple cartridge holder until it clicks into place.

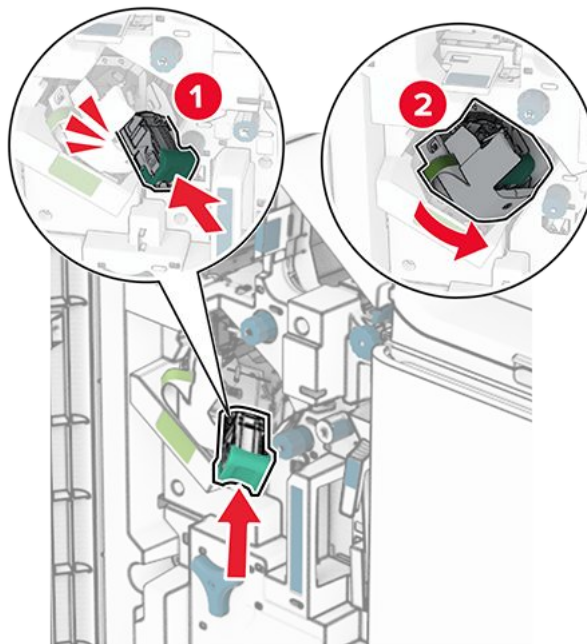


7. Close door H.

Replacing the staple cartridge holders in the booklet finisher


1. Open the finisher door.

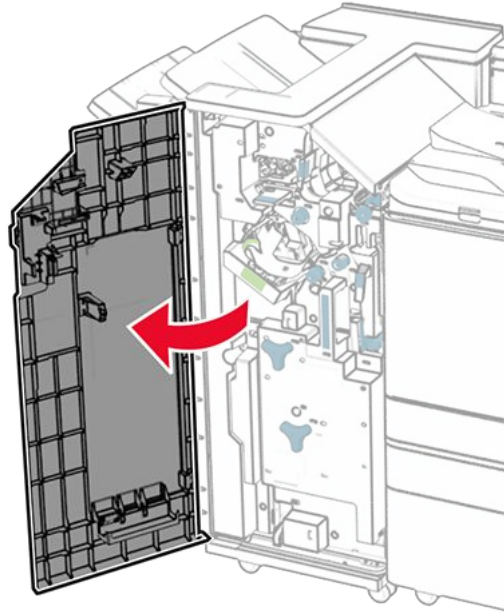

2. Pull out the booklet maker, and then remove the used staple cartridge holders.

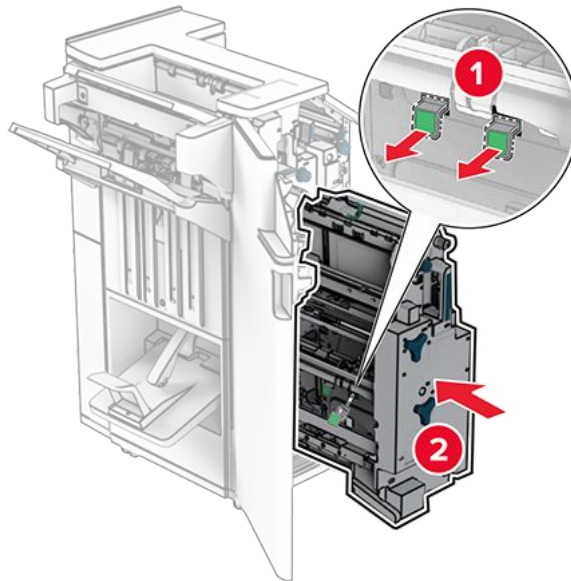

3. Unpack the new staple cartridge holders.
4. Insert the new staple cartridge holders.

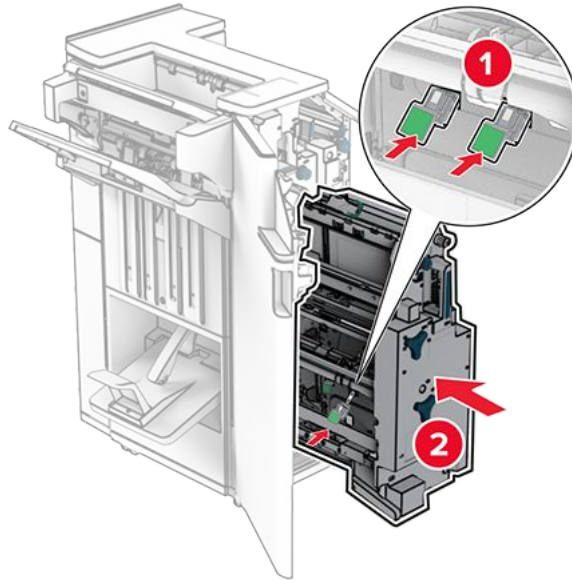

5. Insert the booklet maker, and then close the finisher door.

Resetting the supply usage counters

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Configuration Menu** › **Supply Usage And Counters**.
2. Select the counter that you want to reset.

Warning—Potential Damage

Supplies and parts without Return Program agreement terms may be reset and remanufactured. However, the manufacturer's warranty does not cover any damage caused by non-genuine supplies or parts. Resetting counters on the supply or part without proper remanufacturing can cause damage to your printer. After resetting the supply or part counter, your printer may display an error indicating the presence of the reset item.

Cleaning printer parts

Cleaning the exterior of the printer

Regular maintenance of your printer is essential to ensure its longevity and optimal performance. When cleaning the printer, take the necessary precautions to avoid damage. Damage to the printer caused by improper handling is not covered by the printer warranty.

1. Turn off the printer, and then unplug the power cord from the electrical outlet.



CAUTION—SHOCK HAZARD

To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

2. Remove paper from the standard bin, the trays, and the multipurpose feeder or manual feeder.

Maintain the printer

- Using a soft brush, remove any dust, lint, and pieces of paper around the printer.
- Using a damp, soft, lint-free cloth, wipe the following areas:

Warning—Potential Damage

To avoid damaging the finish of the printer, do not use household cleaners or detergents.

- Control panel
 - Standard bin
 - Trays
 - Multipurpose feeder or manual feeder
 - Front, sides, and rear of the printer
- Make sure that all areas of the printer are dry after cleaning.
 - Connect the power cord to the electrical outlet, and then turn on the printer.




CAUTION—POTENTIAL INJURY


To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

Cleaning the scanner


- Open the scanner cover.

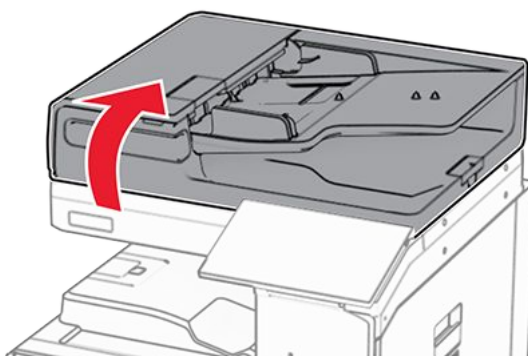


- Remove the glass cleaner tool.

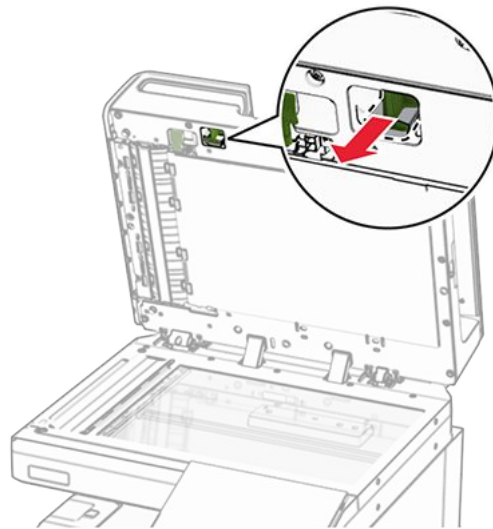

3. Close the scanner cover.
4. Open door A.
5. Using the glass cleaner tool, wipe the following areas:

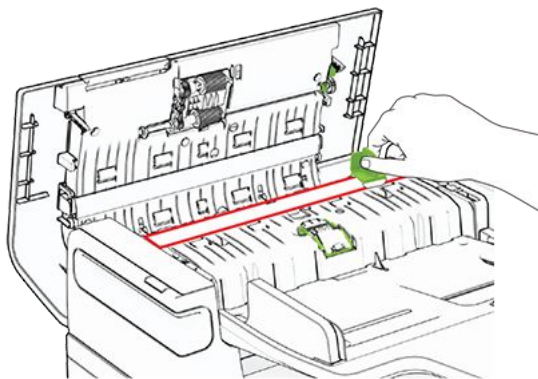


a. ADF glass in door A

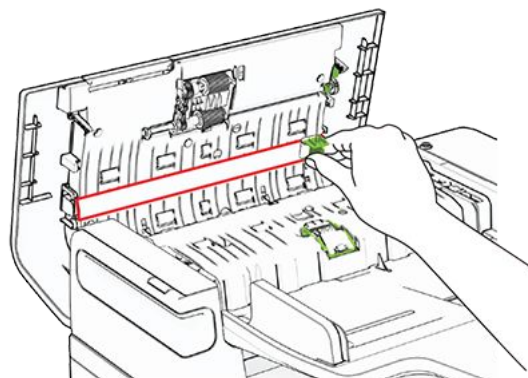


b. ADF glass pad in door A


6. Close door A.
7. Open the scanner cover.

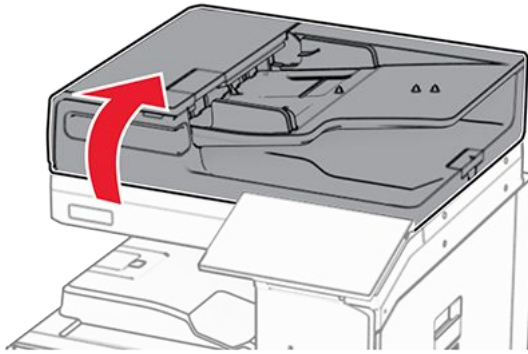


8. Using a damp, soft, lint-free cloth, wipe the following areas:
 - a. Scanner glass pad

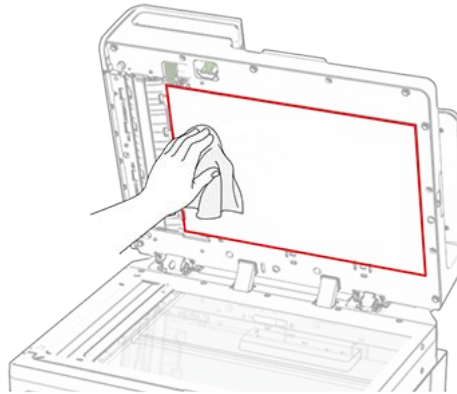


- b. Scanner glass

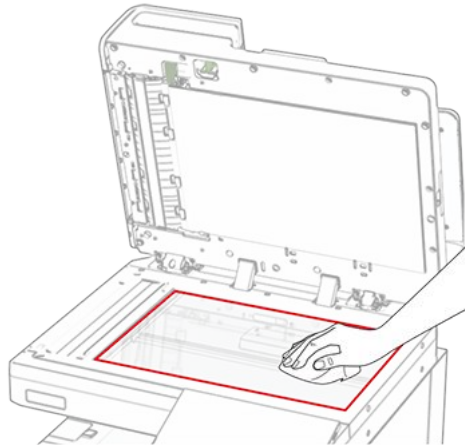


9. Using the glass cleaner tool, wipe the following areas:
 - a. ADF glass pad in the scanner area

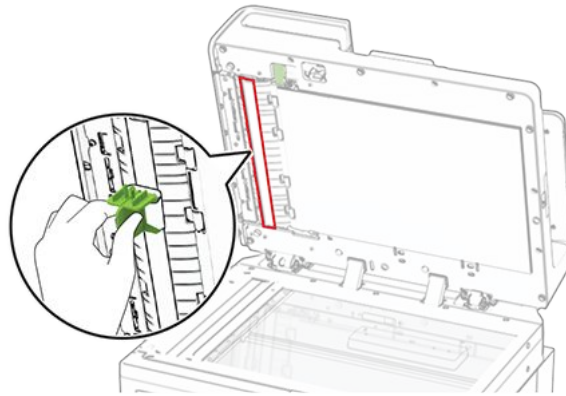

b. ADF glass in the scanner area

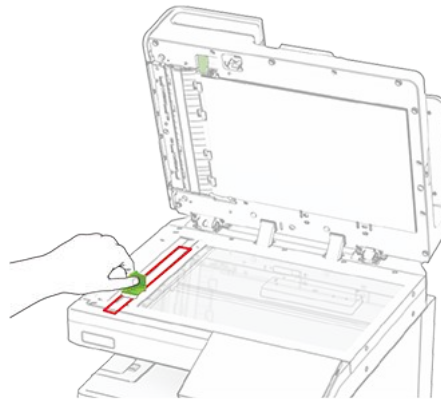


10. Return the glass cleaner tool to its place.

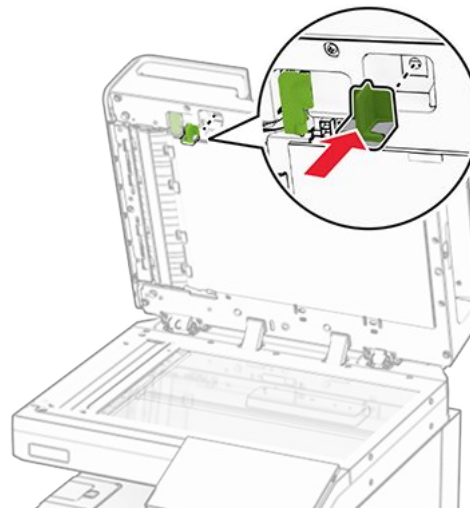



11. Close the scanner cover.

Cleaning the printhead lenses


1. Open the front door.

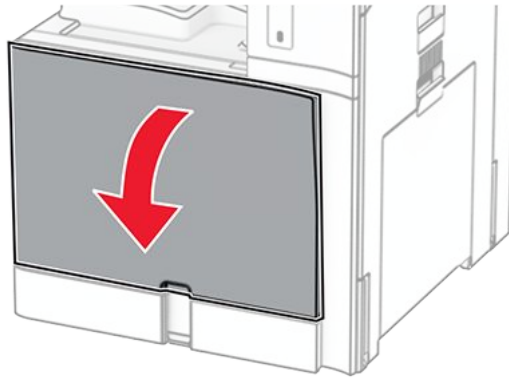

2. Remove the toner cartridges.

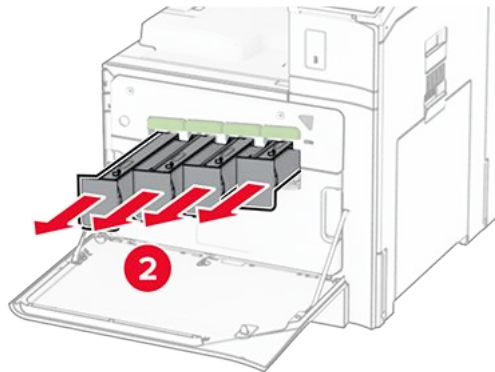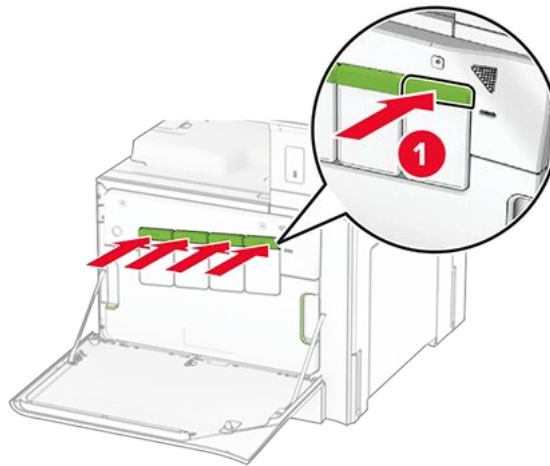


3. Gently pull out the wiper until it stops.

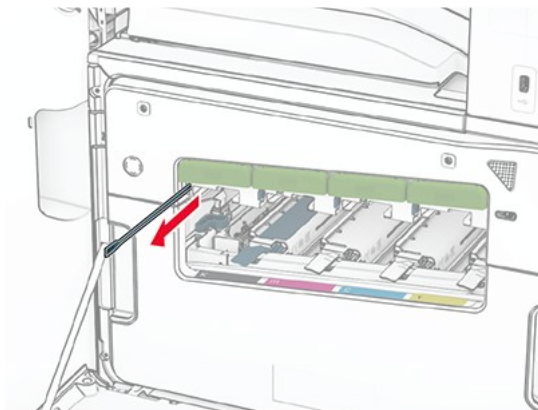


Note: The wiper does not detach from the printer.

4. Push the wiper back into the printhead until it stops.

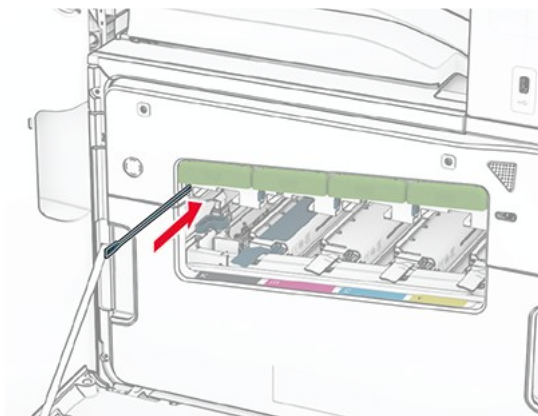

5. Repeat [step 3](#) and [step 4](#) three times for each printhead.
6. Insert the toner cartridges.

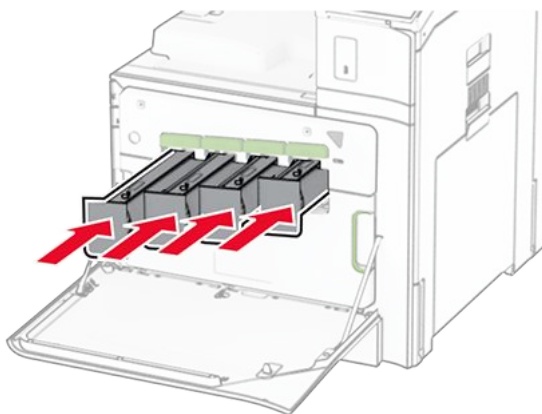


7. Close the front door.


Emptying the hole punch box

Note: Depending on the finisher installed, the appearance of the hole punch box may vary.


1. Open the finisher door.

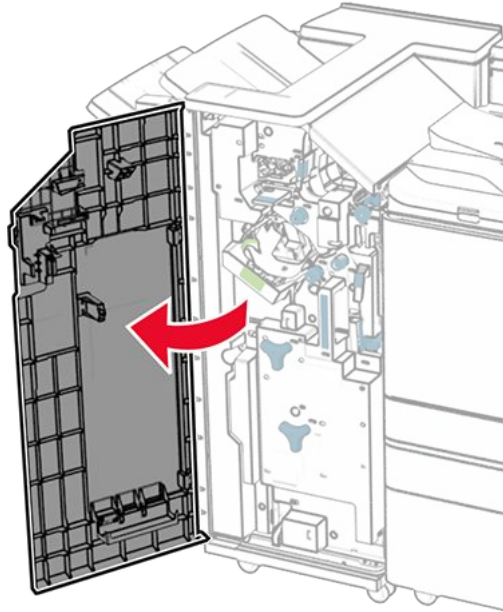

2. Remove, and then empty the hole punch box.

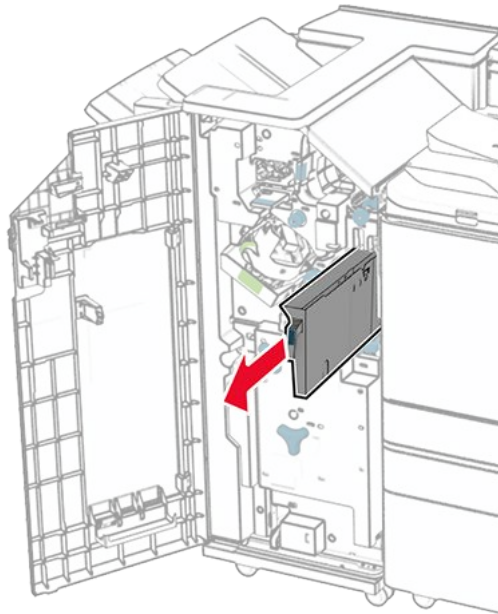

3. Insert the hole punch box.

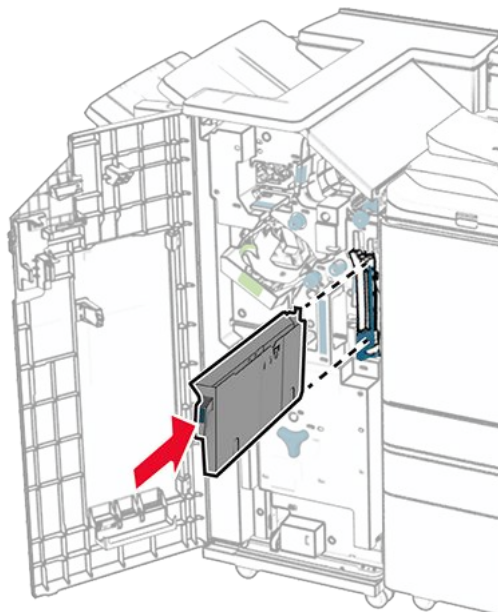

4. Close the finisher door.

Saving energy and paper

Configuring the power save mode settings

Sleep mode

1. From the control panel, navigate to **Settings** › **Device** › **Power Management** › **Timeouts** › **Sleep Mode**.
2. Set the amount of time that the printer stays idle before it enters **Sleep Mode**.

Hibernate mode

1. From the control panel, navigate to **Settings** › **Device** › **Power Management** › **Timeouts** › **Hibernate Timeout**.
2. Set the amount of time that the printer stays idle before it enters Hibernate mode.

Notes

- For **Hibernate Timeout** to work, set **Hibernate Timeout on Connection** to **Hibernate**.
- The Embedded Web Server is disabled when the printer is in Hibernate mode.

Adjusting the brightness of the display

1. From the control panel, navigate to **Settings** › **Device** › **Preferences**.

2. In the **Screen Brightness** menu, adjust the setting.

Conserving supplies

- Print on both sides of the paper.

Note: Two-sided printing is the default setting in the printer.

- Print multiple pages on a single sheet of paper.
- Use the preview feature to see how the document looks like before printing it.
- Print one copy of the document to check its content and format for accuracy.

Moving the printer to another location



CAUTION—POTENTIAL INJURY

If the printer weight is greater than 20 kg (44 lb), then it may require two or more people to lift it safely.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION—POTENTIAL INJURY

When moving the printer, follow these guidelines to avoid personal injury or printer damage:


- Make sure that all doors and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has separate floor-standing optional trays or output options attached to it, then disconnect them before moving the printer.
- If the printer has a caster base, then carefully roll it to the new location. Use caution when passing over thresholds and breaks in flooring.
- If the printer does not have a caster base but is configured with optional trays or output options, then remove the output options and lift the printer off the trays. Do not try to lift the printer and any options at the same time.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Any cart used to move the hardware options must have a surface able to support the dimensions of the options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.

Note: Damage to the printer caused by improper moving is not covered by the printer warranty.


Troubleshoot a problem

Print quality problems

Find the image that resembles the print quality problem you are having, and then click the link below it to read problem-solving steps.

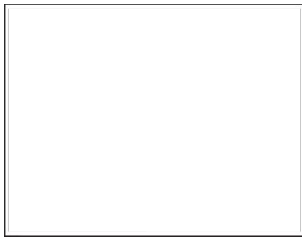


[Blank or white pages on page 515](#)

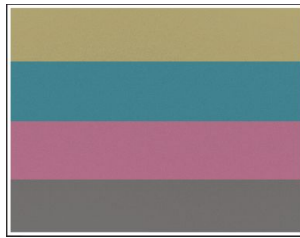


[Dark print on page 516](#)




[Ghost images on page 517](#)

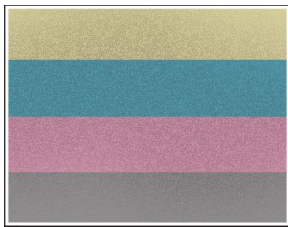


[Gray or colored background on page 518](#)

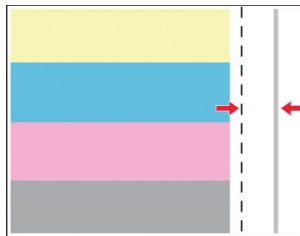

[Incorrect margins on page 519](#)

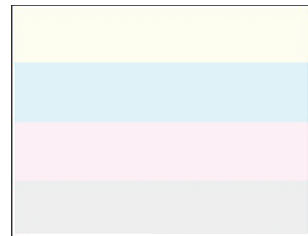


[Light print on page 519](#)

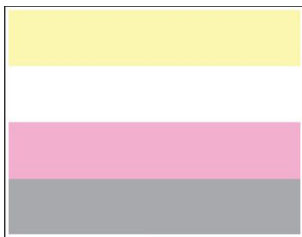


[Missing colors on page 521](#)



[Mottled print and dots on page 522](#)

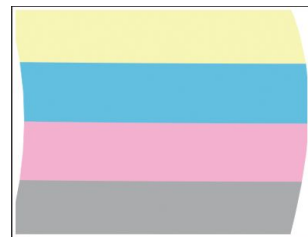

[Paper curl on page 591](#)

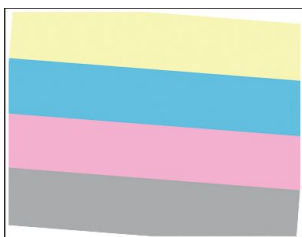






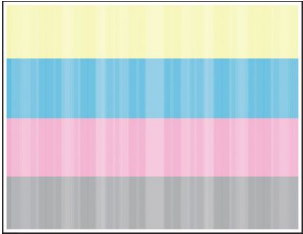
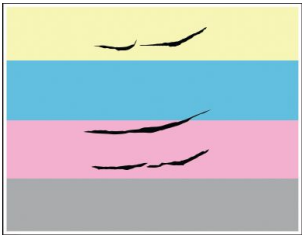
[Print crooked or skewed on page 523](#)



[Solid color or black images on page 524](#)



[Text or images cut off on page 525](#)

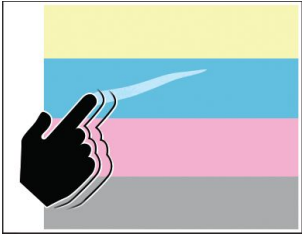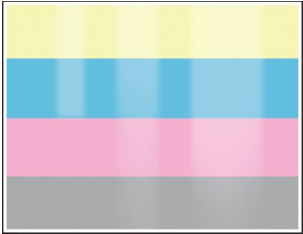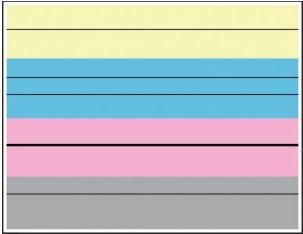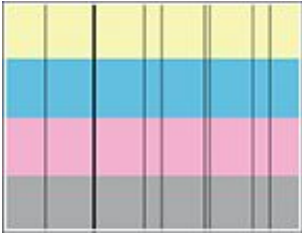		
<p>Toner easily rubs off on page 526</p>	<p>Uneven print density on page 526</p>	<p>Horizontal dark lines on page 527</p>
		
<p>Vertical dark lines or streaks on page 530</p>	<p>Horizontal white lines on page 528</p>	<p>Vertical white lines on page 529</p>
		
<p>Repeating defects on page 531</p>		

Printer error codes


Error codes	Error message	Solution
2.01	Wait for supplies.	Select Cancel Job and order the needed supply. For more information, see the Ordering parts and supplies section.
3.01	The standard bin is full.	Remove the paper from the bin, and then select Continue .
3.02, 3.03, 3.04	Remove paper from bin [x].	Remove the paper from the bin, and then select Continue .
7.13, 7.23, 7.33, 7.43	Insert tray [x].	Insert the indicated tray.
8.01	Close the front door.	Keep the front door closed unless performing maintenance.
8.02, 8.03, 8.04, 8.05, 8.08, 8.10, 8.11	Close door [x].	Keep the indicated door closed unless performing maintenance.
8.06	Reattach the 1500-sheet tray.	Make sure that the tray is properly attached to the printer.
8.07	Reattach staple finisher.	Make sure that the finisher is properly attached to the printer.

Troubleshoot a problem

Error codes	Error message	Solution
8.08	Close paper transport cover F.	Keep the cover closed unless performing maintenance.
8.09	Close paper transport cover G.	
9	Printer had to restart. Last job may be incomplete.	Select Continue to clear the message and continue printing.
11.11, 11.21, 11.31, 11.41, 11.51, 11.81, 11.91	Load <source/> with <type/> <size/>.	Load the indicated tray with paper. For more information, see the Loading paper and specialty media section.
11.12, 11.22, 11.32, 11.42, 11.82, 11.92	Load <source/> with <type/> <size/> <orientation/>.	
12.11, 12.21, 12.31, 12.32, 12.41, 12.51, 12.91	Change <source/> to <type/> <size/>.	Pull out the indicated tray, remove paper, and then load the correct paper type and size. For more information, see the Loading paper and specialty media section.
12.12, 12.22, 12.32, 12.42, 12.92	Change <source/> to <type/> <size/> <orientation/>.	
14.1, 14.2	[pick up text from 'data1' and 'data2 but not 'userMessage1' and 'userMessage2']	Write down the message, and then contact your system administrator.
31.00	Hole punch box missing or full.	<ol style="list-style-type: none"> 1. Open door H. 2. Remove the hole punch box. <p>Note: If the hole punch box is full, then empty it.</p> <ol style="list-style-type: none"> 3. Insert the hole punch box. 4. Close door H.
31.35, 31.35A, 31.35B	Reinstall the missing or unresponsive waste toner bottle.	<ol style="list-style-type: none"> 1. Open the front door. 2. Remove the waste toner bottle. <p>Note: To avoid spilling the toner, place the bottle in an upright position.</p> <ol style="list-style-type: none"> 3. Insert the waste toner bottle. 4. Close the front door.

Troubleshoot a problem

Error codes	Error message	Solution
31.40z, 31.41z, 31.42z, 31.43z, 43.40z, 43.41z	Reinstall missing or unresponsive [color] toner cartridge.	<ol style="list-style-type: none">1. Open the front door.2. Remove the cartridge.3. Insert the cartridge.4. Close the front door.
31.60z, 43.60z	Reinstall missing or unresponsive black imaging unit.	<ol style="list-style-type: none">1. Open the front door.2. Remove the toner cartridges.3. Remove the waste toner bottle. Note: To avoid spilling the toner, place the bottle in an upright position.4. Remove the imaging kit. Warning—Potential Damage Do not expose the imaging kit to direct light. Extended exposure to light may cause print quality problems. Warning—Potential Damage Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs.5. Unlock, and then remove the black imaging unit.6. Insert the black imaging unit, and then lock it in place.7. Insert the imaging kit until it is fully seated.8. Insert the waste toner bottle.9. Insert the toner cartridges.10. Close the front door.

Error codes	Error message	Solution
31.64z, 43.64z	Reinstall missing, unplugged, or unresponsive color imaging kit.	<ol style="list-style-type: none"> 1. Open the front door. 2. Remove the toner cartridges. 3. Remove the waste toner bottle. <ul style="list-style-type: none"> Note: To avoid spilling the toner, place the bottle in an upright position. 4. Remove the imaging kit. <ul style="list-style-type: none"> Warning—Potential Damage Do not expose the imaging kit to direct light. Extended exposure to light may cause print quality problems. Warning—Potential Damage Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs. 5. Insert the imaging kit until it is fully seated. 6. Insert the waste toner bottle. 7. Insert the toner cartridges. 8. Close the front door.
31.80z	Reinstall missing or unresponsive fuser.	<ol style="list-style-type: none"> 1. Open door B. <ul style="list-style-type: none">  CAUTION—HOT SURFACE The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it. 2. Unlock, and then remove the fuser. 3. Insert the fuser, and then lock it in place. 4. Close door B.
32.40p, 32.41p, 32.42p, 32.43p	Reinstall the used [color] cartridge.	<ol style="list-style-type: none"> 1. Open the front door. 2. Remove the toner cartridge. 3. Insert the toner cartridge. 4. Close the front door.
32.40z, 32.41z, 32.42z, 32.43z	Replace unsupported [color] toner cartridge.	For more information, see Replacing a toner cartridge on page 447 .

Troubleshoot a problem

Error codes	Error message	Solution
32.60z	Replace unsupported black imaging unit.	For more information, see Replacing the black imaging unit on page 448 .
32.65z	Replace unsupported color imaging kit.	For more information, see Replacing the color imaging kit on page 455 .
33.40z, 33.41z, 33.42z, 33.43z	Refilled regular [color] cartridge	For more information, see Refilled regular [color] cartridge on page 590 .
33.60z	Non-genuine black imaging unit, see <i>User's Guide</i> .	For more information, see Non-Lexmark supply .
33.64z	Non-genuine color imaging kit, see <i>User's Guide</i> .	
34	Paper too short.	Set the paper size setting to match the paper loaded in the tray. From the control panel, navigate to Settings > Paper > Tray > Configuration > Paper Size/Type .
37.1	Insufficient memory to collate job.	Try either of the following: <ul style="list-style-type: none">• Select Continue to print the part of the job that is stored and to begin collating the rest of the print job.• Cancel the current print job.
37.3	Insufficient memory, some held jobs were deleted.	Select Continue to clear the message and continue printing.
38.1	Memory full.	Try one or more of the following: <ul style="list-style-type: none">• Select Continue to clear the message and continue printing.• Cancel the current print job.• Install more printer memory.• Reduce the number of pages in the print job.

Troubleshoot a problem

Error codes	Error message	Solution
39.1	Complex page, some data may not have printed.	<p>Try one or more of the following:</p> <ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Cancel the current print job. • Install more printer memory. • Reduce the complexity and size of the print job before sending it to print again. • Reduce the number of pages in the print job. • Reduce the number and size of any downloaded fonts. • Delete any unnecessary fonts or macros from the print job. • Reduce the number of graphics in the print job.
42.yyC, 42.yyK, 42.yyM, 42.yyY	Replace [color] toner cartridge, printer region mismatch.	For more information, see Replace cartridge, printer region mismatch on page 590 .
43.40Y, 43.41Y, 43.42Y, 43.43Y	Reinstall [color] toner cartridge.	<ol style="list-style-type: none"> 1. Open the front door. 2. Remove the cartridge. 3. Insert the cartridge. 4. Close the front door.
43.40Z, 43.41Z, 43.42Z, 43.43Z	Replace [color] toner cartridge.	For more information, see Replacing a toner cartridge on page 447 .
50	PPDS font error.	Install the PPDS font indicated in the print job, and then select Continue to let the printer search for the substitute font.
51	Defective flash detected.	<p>Try one or more of the following:</p> <ul style="list-style-type: none"> • Replace the flash memory. • Select Continue to clear the message and continue printing. • Cancel the current print job.

Troubleshoot a problem

Error codes	Error message	Solution
52	Not enough free space in flash memory for resources.	<p>Try one or more of the following:</p> <ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Delete fonts, macros, and other data stored in the flash memory. • Install a storage drive. <p>Note: Downloaded fonts and macros that are not previously stored in the flash memory are deleted.</p>
58.4	Incorrect output option configuration.	Turn off the printer, and then install the correct bin or finisher.
61	Remove defective disk.	Replace the defective storage drive.
62	Disk full.	<p>Try one or more of the following:</p> <ul style="list-style-type: none"> • Select Continue to clear the message and continue printing. • Delete fonts, macros, and other data stored in the storage drive. • Install a storage drive.
63	Format the disk.	<p>Formatting now wipes all information from the storage drive.</p> <p>To format the disk, do the following:</p> <ol style="list-style-type: none"> 1. From the control panel, navigate to Settings > Device > Maintenance > Out of Service Erase. 2. Select Sanitize all information on hard disk, and then select ERASE.
71.01	Fax Station Name not set up. Contact system administrator.	For more information, see Setting up the fax function using analog fax on page 102 .
71.02	Fax Station Number not set up. Contact system administrator.	
71.03	No analog phone line connected to modem, fax is disabled.	Check the connection and the line for a signal. For more information, see Setting up the fax function using analog fax on page 102 .
71.04	Analog phone line is connected to the wrong port.	Unplug the phone line, and then connect it to the LINE port.
71.06	Unable to connect to HTTPS Fax Server.	Connection to HTTPS Fax Server is disconnected. Check the Internet connection of the printer.

Troubleshoot a problem

Error codes	Error message	Solution
71.07	Printer is not registered to HTTPS Fax Server.	Make sure that the printer is added to the device list in the HTTPS Fax Server portal. Contact the system administrator.
71.11	Fax partition.	The fax partition is not working. Contact the system administrator.
71.12	Memory full, cannot print faxes.	Select Print All to print as many of the faxes as have been saved.
71.13	Memory full. Cannot send faxes.	Try either of the following: <ul style="list-style-type: none"> • Continue and try sending the fax again. • Scan the original document one page at a time, dial the fax number, and then fax the document.
71.4	Printer's time is incorrect.	Configure the printer time. From the control panel, navigate to Settings > Device > Preferences > Date and Time > Configure .
72.01	Email SMTP server not set up. Contact system administrator.	Try either of the following: <ul style="list-style-type: none"> • Set up the email function. For more information, see Configuring the email SMTP settings on page 322. • Disable the error message. For more information, see Disabling the "SMTP server not set up" error message on page 593.
72.02	Web Link server not set up. Contact system administrator.	Contact your system administrator.
72.04	Fax server To Format not set up. Contact system administrator.	Try either of the following: <ul style="list-style-type: none"> • Configure the To Format. From the control panel, navigate to Settings > Fax > Fax Server Setup > General Fax Settings. • Contact your system administrator.
75.01	Secure Element detected.	Try either of the following: <ul style="list-style-type: none"> • Use the installed Secure Element. <div style="background-color: #f0f0f0; padding: 5px; margin: 5px 0;"> <p>Note: The printer erases all existing certificates and may also erase and reformat the storage drive.</p> </div> <ul style="list-style-type: none"> • Turn off the printer, and then remove the Secure Element.
75.02	Secure Element not recognized.	

Troubleshoot a problem

Error codes	Error message	Solution
75.03	Error communicating with Secure Element.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Stop using the Secure Element. <p>Note: The printer erases all existing certificates and may also erase and reformat the storage drive.</p> <ul style="list-style-type: none"> Turn off the printer, remove, and then install the Secure Element.
75.11	Secure Element update failed.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Try the update again. Cancel the update. <p>Note: The printer may erase all existing certificates and storage drive contents.</p>
75.12	Secure Element update incomplete.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Restart the printer. <p>Note: Wait for 10 seconds to complete the update.</p> <ul style="list-style-type: none"> Cancel the update. <p>Note: The printer may erase all existing certificates and storage drive contents.</p>
80.01, 80.09	Maintenance kit nearly low.	Select Continue to clear the message.
80.11, 80.19	Maintenance kit low.	
80.21, 80.29	Maintenance kit very low.	
80.31	Replace maintenance kit to continue printing.	For more information, see Replacing the fuser on page 463 .
80.31	Replace maintenance kit, recommended life exceeded.	
81.11	1500-sheet tray roller kit low.	Select Continue to clear the message.
81.31	Replace 1500-sheet tray roller kit, recommended life exceeded.	For more information, contact customer support .

Troubleshoot a problem

Error codes	Error message	Solution
82.00, 82.02, 82.09	Waste toner bottle is nearly full.	For more information, see Replacing the waste toner bottle on page 462 .
82.3, 82.32, 82.33, 82.39	Replace the waste toner bottle.	
83.3y	Replace transfer module, recommended life exceeded.	For more information, contact customer support .
83.4y	Replace transfer module.	
83.20	Staple cartridge low.	Select Continue to clear the message.
83.20	Staple S2 inner low.	
83.20	Staple S2 outer low.	
83.30	Staple cartridge empty or missing.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Remove, and then insert the staple cartridge. Replace the staple cartridge. For more information, see Replacing the staple cartridge in the staple, hole punch finisher on page 481 or Replacing the staple cartridge in the staple finisher on page 479.
83.30	Staple cartridge S1 empty or missing.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Remove, and then insert the staple cartridge. Replace the staple cartridge. For more information, see Replacing the staple cartridge in the booklet finisher on page 484.
83.30	Inner staple cartridge S2 empty or missing.	<p>Try either of the following:</p> <ul style="list-style-type: none"> Remove, and then insert the staple cartridge. Replace the staple cartridge. For more information, see Replacing the staple cartridge holders in the booklet finisher on page 486.
83.30	Outer staple cartridge S2 empty or missing.	
84.01K, 84.03K, 84.09K	Black imaging unit nearly low.	Select Continue to clear the message.
84.11K, 84.13K, 84.19K	Black imaging unit low.	
84.21K, 84.23K, 84.29K	Black imaging unit very low.	

Troubleshoot a problem

Error codes	Error message	Solution
84.01C, 84.03C, 84.09C	Color imaging kit nearly low.	
84.11C, 84.13C, 84.19C	Color imaging kit low.	
84.21C, 84.23C, 84.29C	Color imaging kit very low.	
84.31, 84.33	Replace black imaging unit, recommended life exceeded.	For more information, see Replacing the black imaging unit on page 448 .
84.31, 84.33	Replace color imaging kit, recommended life exceeded.	For more information, see Replacing the color imaging kit on page 455 .
84.41, 84.43, 84.48	Replace black imaging unit to continue printing.	For more information, see Replacing the black imaging unit on page 448 .
84.41, 84.43, 84.48	Replace color imaging kit to continue printing.	For more information, see Replacing the color imaging kit on page 455 .
86.23	Scanner maintenance required soon.	Select Continue to clear the message.
86.33	Replace ADF kit, recommended life exceeded.	For more information, contact customer support .
88.00[x], 88.07[x], 88.08[x], 88.09[x]	[Color] toner cartridge is nearly low.	Select Continue to clear the message.
88.10[x], 88.17[x], 88.18[x], 88.19[x]	[Color] toner cartridge is low.	
88.20[x], 88.27[x], 88.28[x], 88.29[x]	[Color] toner cartridge is very low.	
88.30[x], 88.37[x], 88.38[x]	Replace [color] toner cartridge, <NUM/> estimated pages remaining.	For more information, see Replacing a toner cartridge on page 447 .
88.30[x], 88.37[x], 88.38[x]	Replace [color] toner cartridge.	
88.40[x], 88.47[x], 88.48[x]	Replace [color] toner cartridge, 0 pages remain.	
88.40[x], 88.47[x], 88.48[x]	Replace [color] toner cartridge.	

Troubleshoot a problem

Error codes	Error message	Solution
200.03, 200.05, 200.12, 200.13, 200.14, 200.15, 200.22, 200.23, 200.24, 200.25, 200.26, 200.32, 200.33, 200.34, 200.35, 200.36, 200.42, 200.43, 200.44, 200.45, 200.46, 200.52, 200.53, 200.54, 200.55, 200.56, 200.91, 201.91, 202.02, 202.03, 202.04, 202.05, 202.12, 202.13, 202.14, 202.15, 202.22, 202.23, 202.24, 202.25, 202.32, 202.33, 202.34, 202.35, 202.42, 202.43, 202.44, 202.45, 202.52, 202.53, 202.54, 202.55, 202.91, 202.93, 202.95, 231.03, 231.05, 231.13, 231.15, 231.23, 231.25, 231.33, 231.35, 231.43, 231.45, 231.53, 231.55, 231.91, 232.03, 232.05, 232.13, 232.15, 232.23, 232.25, 232.33, 232.35, 232.43, 232.45, 232.53, 232.55, 232.93, 232.94, 232.95, 240.05, 240.25, 240.35, 240.45, 240.55, 240.91, 240.95, 241.12, 241.14, 241.15, 241.91	Paper jam in <LOCATION/>.	For more information, see Paper jam in door B on page 547 .
240.06	Paper jam in <LOCATION/>.	For more information, see Paper jam in the multipurpose feeder on page 543 .
241.16, 241.82, 241.83, 241.84, 661.13, 661.84	Paper loading error in <LOCATION/>.	<ol style="list-style-type: none"> 1. Open tray 1. 2. Remove, and then readjust the paper stack. 3. If necessary, adjust the paper guides. 4. Reload tray 1. 5. Close tray 1.

Troubleshoot a problem

Error codes	Error message	Solution
242.23, 242.25, 242.35, 242.45, 242.55, 242.91	Paper jam in <LOCATION/>.	For more information, see Paper jam in the optional 550-sheet tray on page 539 .
242.33, 242.43, 243.33, 243.35, 243.36, 243.43, 243.35, 243.45, 243.45, 243.55, 243.91, 244.43, 244.45, 244.91	Paper jam in <LOCATION/>.	For more information, see either of the following: <ul style="list-style-type: none"> • Paper jam in the 2 x 550-sheet tray on page 543 • Paper jam in the 2000-sheet tandem tray on page 545
243.43, 243.53, 244.43, 244.45, 244.46, 244.91, 245.53, 245.56, 245.55, 245.91, 602.59, 664.43, 665.53	Paper jam in <LOCATION/>.	For more information, see Paper jam in the 1500-sheet tray on page 546 .
28X.13K, 28X.93K, 28X.15K, 28X.95K, 281.16K, 281.96K, 680.20K, 680.40K	Replace all originals if restarting job.	Try either of the following: <ul style="list-style-type: none"> • Restart the job. • Cancel the job.
28X.13Q, 28X.93Q, 28X.15Q, 28X.95Q, 281.16Q, 281.96Q, 680.20Q	Replace jammed originals if continuing job.	Try one or more of the following: <ul style="list-style-type: none"> • Scan from the scanner glass. • Scan from the automatic document feeder. • Finish the job without further scanning. • Cancel the job.
280.06	Reload originals in ADF and restart job.	
280.06, 280.11, 280.13, 280.15, 280.91, 280.93, 280.95, 281.11, 281.15, 281.16, 281.91, 281.95, 281.96, 282.11, 282.13, 282.15, 282.91, 282.93, 282.95, 283.11, 283.13, 283.91, 283.15, 283.93, 284.11, 284.13, 284.15, 284.91, 284.93, 284.95, 295.01	Scanner jam.	For more information, see Paper jam in the automatic document feeder on page 540 .
289.01	Cannot communicate with the scanner card.	Select Continue to clear the message.

Troubleshoot a problem

Error codes	Error message	Solution
291.06	Close flatbed cover and load originals if restarting job.	Try one or more of the following: <ul style="list-style-type: none">• Scan from the scanner glass.• Scan from the automatic document feeder.• Finish the job without further scanning.• Cancel the job.
400.11, 400.13, 400.15, 401.11, 401.13, 401.15, 404.19, 438.11, 438.21, 444.66, 450.21, 450.23, 450.25, 450.98, 450.99, 451.21, 451.23, 451.25, 452.66, 453.21, 453.23, 454.21, 454.23, 454.25, 457.21, 457.23, 457.25, 460.66, 461.66, 464.66, 465.66, 466.66, 467.66, 468.66, 469.66, 472.66, 477.66, 480.66, 483.66, 486.29, 504.11, 504.15, 505.11, 505.15, 514.19, 698.29	Paper jam in <LOCATION/>.	For more information, see Paper jam in the staple, hole punch finisher on page 559 .

Troubleshoot a problem

Error codes	Error message	Solution
400.11, 400.13, 400.15, 401.11, 401.13, 401.15, 404.19, 438.11, 438.21, 442.66, 444.66, 445.66, 450.21, 450.23, 450.25, 451.21, 451.23, 451.25, 451.98, 451.99, 452.66, 453.21, 453.23, 453.25, 454.21, 454.23, 454.25, 457.21, 457.23, 457.25, 459.66, 460.66, 461.66, 462.66, 463.66, 464.66, 465.66, 466.66, 467.66, 468.66, 469.66, 470.66, 472.66, 473.66, 476.66, 477.66, 480.66, 483.66, 486.29, 490.66, 491.21, 491.25, 491.66, 493.21, 494.21, 492.66, 494.66, 495.66, 496.66, 497.66, 504.11, 504.15, 505.11, 505.15, 514.19, 698.29	Paper jam in <LOCATION/>.	For more information, see Paper jam in the booklet finisher on page 570 .
420.11, 420.13, 420.15, 420.99, 421.56, 422.56, 423.56, 424.56, 425.13, 425.15, 425.11, 426.11, 426.15, 428.56A, 428.56B, 431.56, 435.56, 438.11, 439.19, 461.56, 698.19	Paper jam in <LOCATION/>.	For more information, see either of the following: <ul style="list-style-type: none"> • Paper jam in the staple finisher on page 551 • Paper jam in the staple finisher with hole punch on page 553
438.11, 500.11, 500.13, 500.15, 500.99, 502.11, 502.13, 502.15, 504.11, 504.13, 504.15, 505.13, 506.11, 506.13, 506.15, 507.11, 507.13, 507.15, 508.56, 509.56, 510.56, 511.56, 512.56, 513.56, 514.19, 698.19, 698.29	Paper jam in <LOCATION/>.	For more information, see Paper jam in the folding paper transport on page 556 .
602.29, 662.23	Paper loading error in tray 2.	For more information, see Loading the 550-sheet tray on page 114 .

Troubleshoot a problem

Error codes	Error message	Solution
602.39, 663.33	Paper loading error in tray 3.	For more information, see either of the following: <ul style="list-style-type: none"> • Loading the 550-sheet tray on page 114 • Loading the 2000-sheet tandem tray on page 118
602.49, 664.43	Paper loading error in tray 4.	For more information, see Loading the 550-sheet tray on page 114 .
680.1, 680.2	Scanner jam.	For more information, see Paper jam in the automatic document feeder .
680.20K	Replace all originals if restarting job.	Try one or more of the following: <ul style="list-style-type: none"> • Select Cancel job to clear the message and cancel the scan job. • Select Scan from automatic feeder to continue scanning from the ADF immediately after the last successful scan job. • Select Scan from flatbed to continue scanning from the scanner immediately after the last successful scan job. • Select Finish job without further scanning to end the last successful scan job. • Select Restart job to restart the scan job with the same settings from the previous scan job.
680.20Q	Replace jammed originals if continuing job.	Try one or more of the following: <ul style="list-style-type: none"> • Select Cancel job to clear the message and cancel the scan job. • Select Scan from automatic feeder to continue scanning from the ADF immediately after the last successful scan job. • Select Scan from flatbed to continue scanning from the scanner immediately after the last successful scan job. • Select Finish job without further scanning to end the last successful scan job. • Select Restart job to restart the scan job with the same settings from the previous scan job.
680.50	Scan failed.	Unable to scan this original. For more information, see https://rulesforuse.org/ . Select Continue to clear the message.
843.00	The flatbed scanner carriage failed to reach home position.	Remove the shipping screw.

Printing problems

Print quality is poor

Blank or white pages



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging** › **Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings** › **Troubleshooting** › **Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Make sure that all packing material is removed from the imaging kit, imaging unit, and toner cartridges.
- Check if the printer is using a genuine and supported Lexmark toner cartridge.

Note: If the cartridge is not supported, then install a supported one.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Dark print

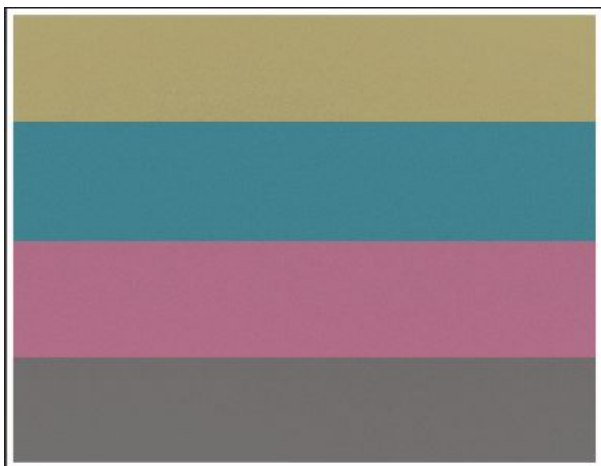

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings › Print › Quality › Advanced Imaging › Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Depending on your operating system, reduce the toner darkness from the Printing Preferences or Print dialog.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Print › Quality › Toner Darkness**.

- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded in the tray.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

- Make sure that the paper does not have a texture or rough finish.
- Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

If the problem persists, then contact [customer support](#).

Ghost images



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings › Print › Quality › Advanced Imaging › Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.


Try one or more of the following:

- Load the tray with the correct paper type and weight.
- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded in the tray.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

If the problem persists, then contact [customer support](#).

Gray or colored background

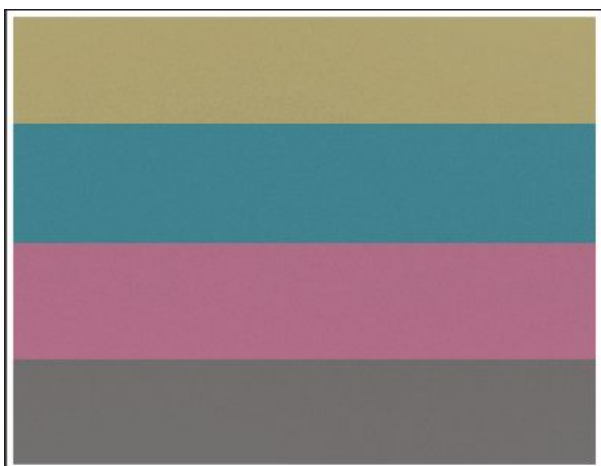

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging** › **Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings** › **Troubleshooting** › **Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Make sure that the printer settings for texture and weight match the paper being loaded.

From the control panel, navigate to **Settings** › **Paper** › **Media Configuration** › **Media Types**.

Note: Rough paper texture and heavy paper weight may print more slowly.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Incorrect margins

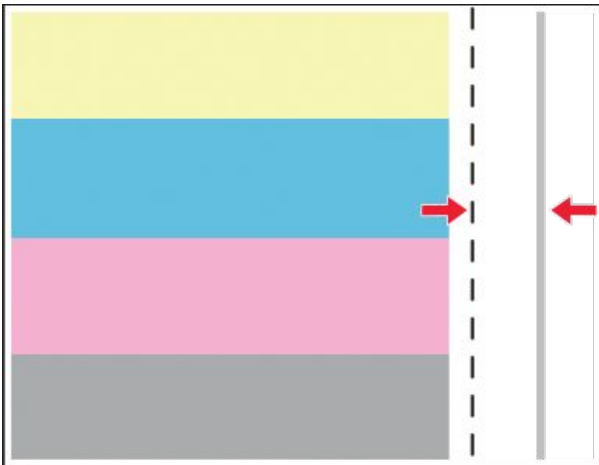

Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.


Try one or more of the following:

- Adjust the paper guides in the tray to the correct position for the paper loaded.
- Depending on your operating system, specify the paper size from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

If the problem persists, then contact [customer support](#).

Light print

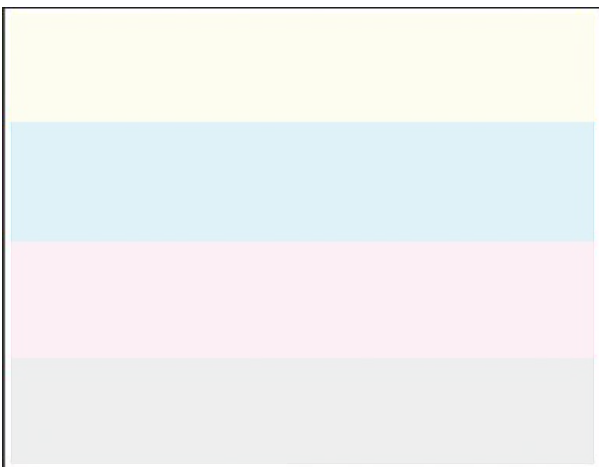

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings › Print › Quality › Advanced Imaging › Color Adjust**.

Troubleshoot a problem

2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Make sure that all packing material is removed from the imaging kit, imaging unit, and toner cartridges.
- Depending on your operating system, increase the toner darkness from the Printing Preferences or Print dialog.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Print › Quality › Toner Darkness**.

- From the control panel, **Settings › Print › Quality**, and then turn off **Color Saver**.
- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

- Make sure that the paper does not have a texture or rough finish.
- Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Missing colors

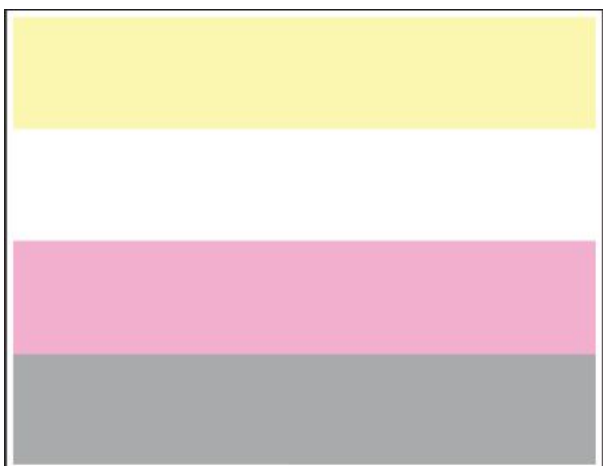

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Make sure that all packing material is removed from the imaging kit, imaging unit, and toner cartridges.
- Remove the developer unit of the missing color.
 1. Remove the imaging kit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Remove, and then insert the developer unit of the missing color.
3. Insert the imaging kit.

If the problem persists, then contact [customer support](#).

Mottled print and dots



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging** › **Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings** › **Troubleshooting** › **Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Check the printer for leaked toner contamination.
- Make sure that the paper size and paper type settings match the paper loaded. **Settings** › **Paper** › **Tray Configuration** › **Paper Size/Type**.

Note: Make sure that the paper does not have a texture or rough finish.

- Depending on your operating system, specify the paper size and paper type from the Printing Preferences or Print dialog. Make sure that the settings match the paper loaded in the tray.
- Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage


Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

Troubleshoot a problem

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Print crooked or skewed

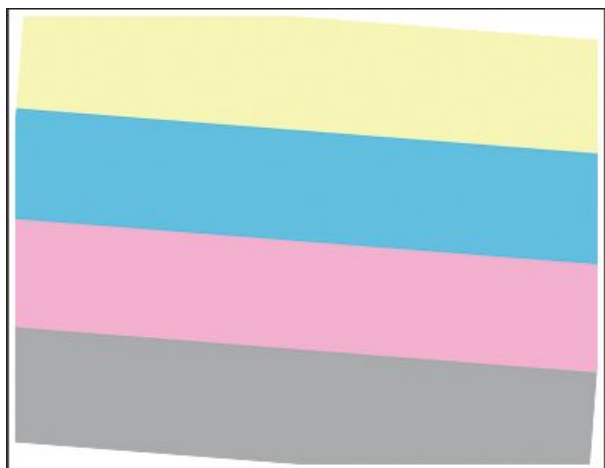

Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Load paper from a fresh package.
 1. Open the tray, and then remove the paper.
 2. Adjust the paper guides in the tray to the correct position for the paper loaded.
 3. Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

- Make sure that you are printing on a supported paper.

If the problem persists, then contact [customer support](#).

Solid color or black images



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging** › **Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings** › **Troubleshooting** › **Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Text or images cut off



Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Make sure that all packing material is removed from the imaging kit, imaging unit, and toner cartridges.
- Adjust the paper guides in the tray to the correct position for the paper loaded.
- Depending on your operating system, specify the paper size from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded in the tray.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Toner easily rubs off

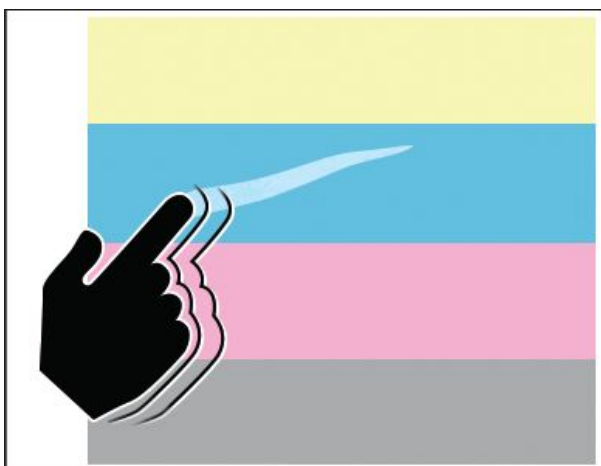

Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try any of the following:

- Make sure that the printer power cord is plugged into an appropriately rated and properly grounded electrical outlet.
- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded.
- Configure the paper type from the control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

If the problem persists, then contact [customer support](#).

Uneven print density



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings › Print › Quality › Advanced Imaging › Color Adjust**.

Troubleshoot a problem

2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Open door B, and then make sure that the second transfer roller is locked in place.
- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Horizontal dark lines

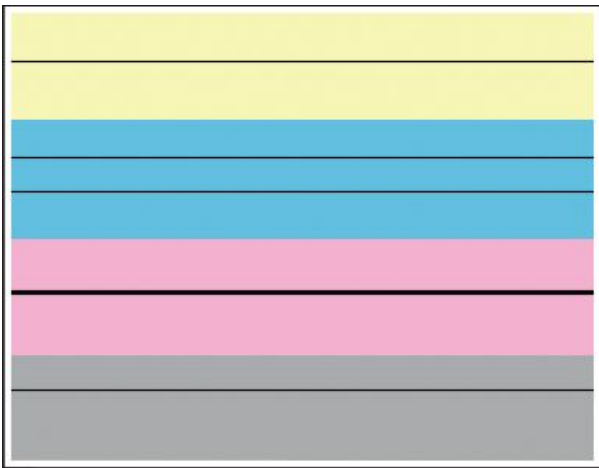

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings › Print › Quality › Advanced Imaging › Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings › Troubleshooting › Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

Troubleshoot a problem

- If the issue is seen on a copied document, then clean the scanner. For more information, see [Cleaning the scanner](#).
- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- Make sure that the paper does not have a texture or rough finish.
- Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.

If the problem persists, then contact [customer support](#).

Horizontal white lines



Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Troubleshoot a problem

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded in the tray.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- Load the specified paper source with the recommended paper type.
- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the photoconductor drum to direct light. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drums. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.
- Clean the printhead lenses. For more information, see [Cleaning the printhead lenses on page 492](#).

If the problem persists, then contact [customer support](#).

Vertical white lines

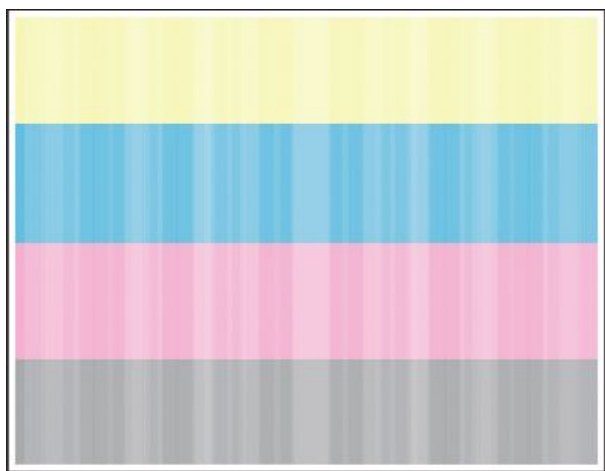

Before solving the problem, do the following:

1. Perform Color Adjust. From the control panel, navigate to **Settings > Print > Quality > Advanced Imaging > Color Adjust**.
2. Print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Troubleshoot a problem

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded in the tray.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- Check if you are using the recommended paper type. Be sure to load the specified paper source with the recommended paper type.
- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Remove the imaging kit, and then remove the black imaging unit.

Warning—Potential Damage

Do not expose the imaging kit and black imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


Warning—Potential Damage

Do not touch the photoconductor drum under the imaging kit and black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit, and then insert the imaging kit.
- Clean the printhead lenses using the printhead cleaning tool. For more information, see [Cleaning the printhead lenses on page 492](#).

If the problem persists, then contact [customer support](#).

Vertical dark lines or streaks

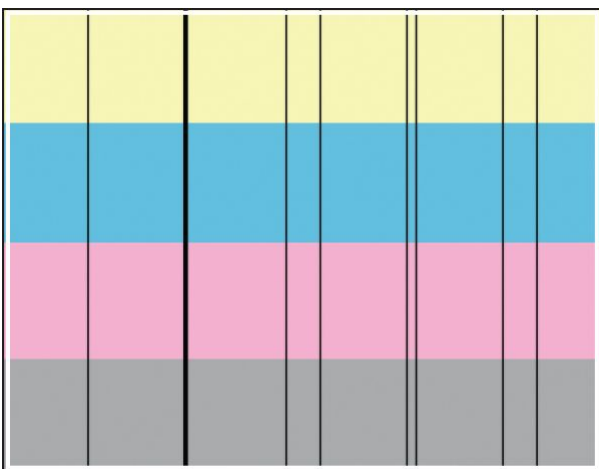

Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

Try one or more of the following:

Troubleshoot a problem

- Clean the scanner. From the control panel, navigate to **Settings** › **Troubleshooting** › **Cleaning the Scanner**.
- Check if the printer is using a genuine and supported Lexmark toner cartridge.

Note: If the cartridge is not supported, then install a supported one.

- Make sure that the imaging kit and black imaging unit are properly installed.
 1. Pull out the imaging kit, and then remove the black imaging unit from the imaging kit.

Warning—Potential Damage

Do not touch the photoconductor drum under the black imaging unit. Doing so may affect the quality of future print jobs.

2. Insert the black imaging unit into the imaging kit, and then insert the imaging kit into the printer.

- Replace the black imaging unit.

If the problem persists, then contact [customer support](#).

Repeating defects



Before solving the problem, print the Print Quality Test Pages. From the control panel, navigate to **Settings** › **Troubleshooting** › **Print Quality Test Pages**.

Note: Use tray 1 to print the sample pages and make sure that the paper is loaded in the portrait orientation.

1. Measure the distance between the repeating defects on the affected color page. Using the Maintenance Defect Ruler, measure the distance between the repeating defects on the affected color page.
2. Replace the supply item or part that matches the measurement on the affected color page.

Color imaging kit or black imaging unit

- 94.5 mm (3.72 in.)
- 19.9 mm (1.18 in.)
- 23.2 mm (0.19 in.)

Developer unit

- 43.6 mm (1.72 in.)

Troubleshoot a problem

- 45.0 mm (1.77 in.)

Fuser

- 95 mm (3.74 in.)
- 110 mm (4.33 in.)

If the problem persists, then contact [customer support](#).

Print jobs do not print

Try one or more of the following:

- From the document that you are trying to print, open the Printing Preferences or Print dialog, and then check if the correct printer is selected.
- Check if the printer is on, and then resolve any error messages that appear on the display.
- Check if the ports are working and if the cables are securely connected to the computer and the printer. For more information, see the setup documentation that came with the printer.
- Turn off the printer, wait for about 10 seconds, and then turn on the printer.
- Remove, and then reinstall the print driver.

If the problem persists, then contact [customer support](#).

Confidential and other held documents do not print

Try one or more of the following:

- From the control panel, check if the documents appear in the **Held Jobs** list.

Note: If the documents are not listed, then print the documents using the Print and Hold options.

- Resolve possible formatting errors or invalid data in the print job.
 - Delete the print job, and then send it again.
 - For PDF files, generate a new file, and then print the document.
- If you are printing from the Internet, then the printer may be reading the multiple job titles as duplicates.
 - For Windows users, make sure to select **Keep duplicate documents** in the Printing Preferences or Print dialog.
 - For Macintosh users, name each job differently.
- Delete some held jobs to free up printer memory.
- Install more printer memory.

If the problem persists, then contact [customer support](#).

Job prints from the wrong tray or on the wrong paper

Try one or more of the following:

- Make sure that you are printing on the correct paper.
- Depending on your operating system, specify the paper size and paper type from the Printing Preferences or Print dialog. Make sure that the settings match the paper loaded.

Note: You can also change the setting on the printer control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.

- Check if the trays are linked. For more information, see [Linking trays on page 127](#).

If the problem persists, then contact [customer support](#).

Slow printing

Try one or more of the following:

- Make sure that the printer cable is securely connected to the printer, computer, print server, option, and other network device.
- Make sure that the printer is not in **Quiet Mode**.

From the control panel, navigate to **Settings › Device › Maintenance › Configuration Menu › Device Operations › Quiet Mode**.

- Specify the resolution of the document that you want to print.
 1. Depending on your operating system, access the Printing Preferences or Print dialog.
 2. Set the resolution to **4800 CQ**.

Note: You can also change the setting on the control panel. Navigate to **Settings › Print › Quality › Print Resolution**.

- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog.

Notes

- You can also change the setting on the control panel. Navigate to **Settings › Paper › Tray Configuration › Paper Size/Type**.
- Heavier paper print more slowly.
- Paper that is narrower than letter, A4, and legal may print more slowly.

- Make sure that the printer settings for texture and weight match the paper being loaded.

From the control panel, navigate to **Settings › Paper › Media Configuration › Media Type Setup**.

Note: Rough paper texture and heavy paper weight may print more slowly.

- Remove held jobs.
- Make sure that the printer is not overheating.

Notes

- Allow the printer to cool down after a long print job.
- Observe the recommended ambient temperature for the printer. For more information, see [Selecting a location for the printer on page 89](#).

If the problem persists, then contact [customer support](#).

The printer is not responding

Try one or more of the following:

- Check if the power cord is connected to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

- Make sure that the electrical outlet is not turned off by a switch or breaker.
- Check if the printer is on.
- Make sure that the printer is not in Sleep or Hibernate Mode.
- Make sure that the cables connecting the printer and computer are connected to the correct ports.
- Turn off the printer, install the hardware options, and then turn on the printer. For more information, see the documentation that came with the option.
- Install the correct print driver.
- Turn off the printer, wait for about 10 seconds, and then turn on the printer.

If the problem persists, then contact [customer support](#).

Unable to read flash drive

Try one or more of the following:

- Make sure that the printer is not busy processing multiple jobs.
- Make sure that the flash drive is inserted into the front USB port.

Note: The flash drive does not work when it is inserted into the rear USB port.

- Make sure that the flash drive is supported. For more information, see [Supported flash drives and file types on page 88](#).
- Remove, and then insert the flash drive.

If the problem persists, then contact [customer support](#).

Enabling the USB port

1. From the control panel, navigate to **Settings > Network/Ports > USB**.

2. Select **Enable USB Port**.

Indicator light is alternating between blue and blinking red

A communication issue has occurred between the controller board and the control panel card.

1. Turn off the printer.
2. Unplug the power cord from the electrical outlet, and then wait for 10 seconds.
3. Connect the power cord to the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

4. Turn on the printer.


If the problem persists, then contact [customer support](#).

Clearing jams


Avoiding jams

Load paper properly

- Make sure that the paper lies flat in the tray.

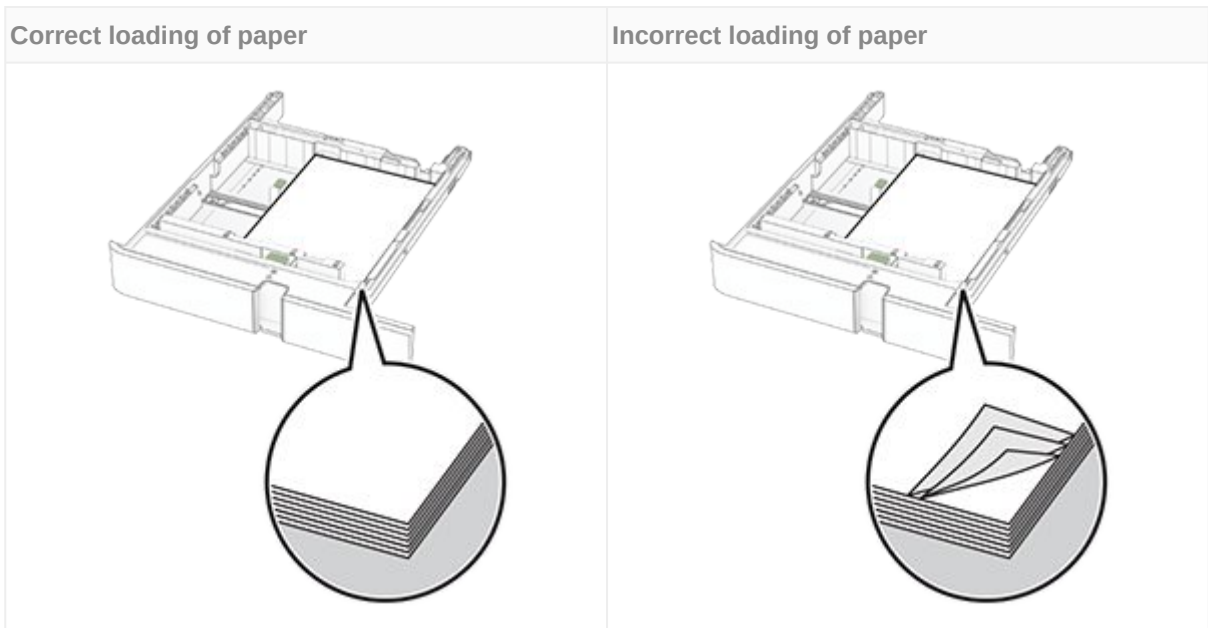


- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum fill line.
- Do not slide paper into the tray. Load paper as shown in the illustration.

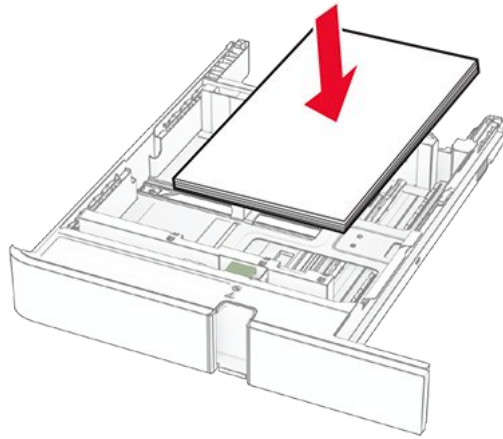

- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

Use recommended paper

- Use only recommended paper or specialty paper.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan, and align the paper edges before loading.

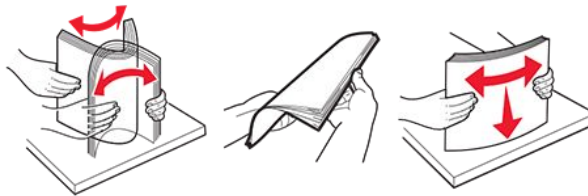


- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

Identifying jam locations

Notes

- When **Jam Assist** is set to **On**, the printer flushes blank pages or pages with partial prints after a jammed page has been cleared. Check your printed output for blank pages.
- When **Jam Recovery** is set to **On** or **Auto**, the printer reprints jammed pages.


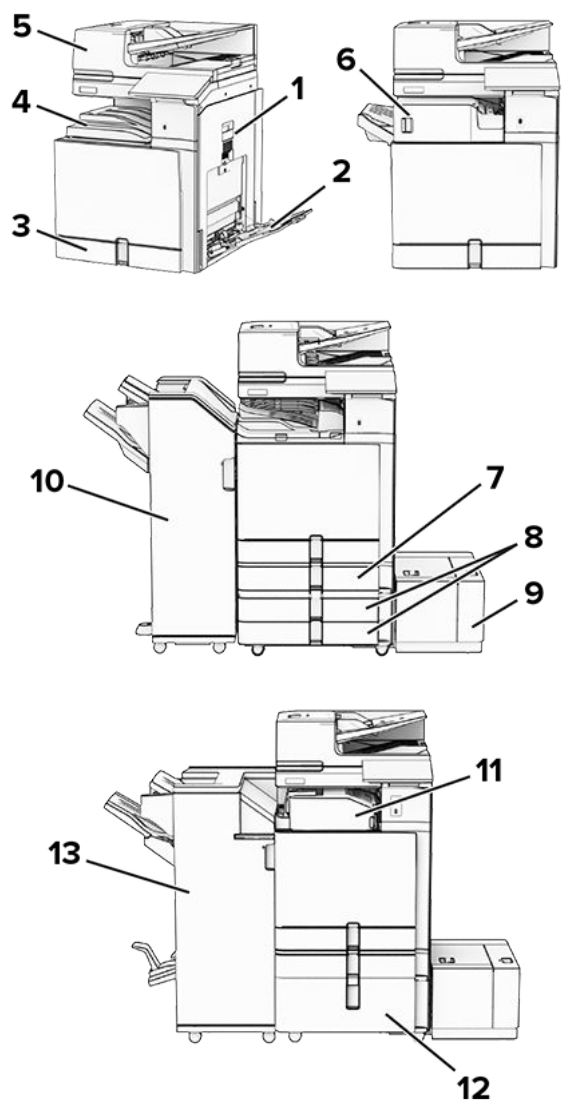


	Jam locations
1	Door B
2	Multipurpose feeder
3	Standard tray
4	Standard bin
5	Automatic document feeder
6	Staple finisher or staple finisher with hole punch
7	Optional 550-sheet tray
8	2 x 550-sheet tray
9	1500-sheet tray
10	Staple, hole punch finisher
11	Folding paper transport
12	2000-sheet tandem tray

	Jam locations
13	Booklet finisher


Paper jam in the standard tray

1. Pull out the standard tray.

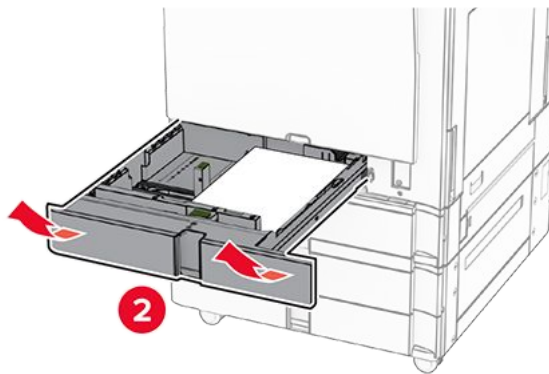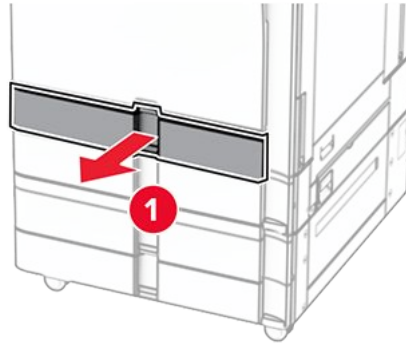

2. Remove the jammed paper.



Note: Make sure that all paper fragments are removed.

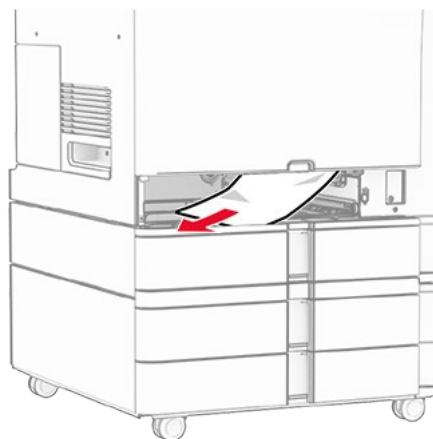

3. Insert the tray.


Paper jam in the optional 550-sheet tray

1. Open door D.

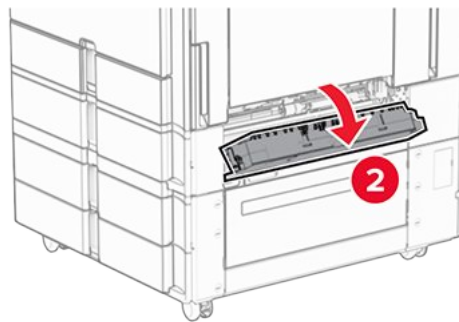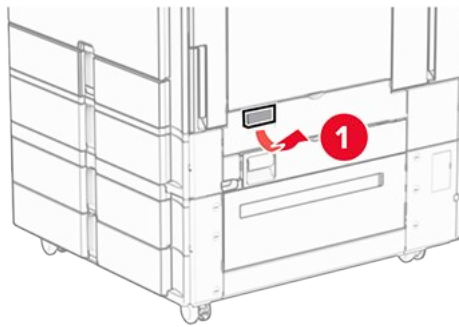


2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

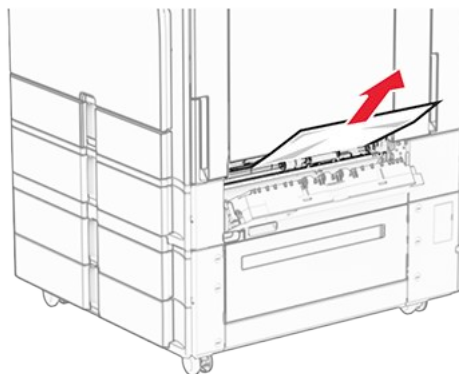


3. Close the door.
4. Pull out the optional 550-sheet tray.

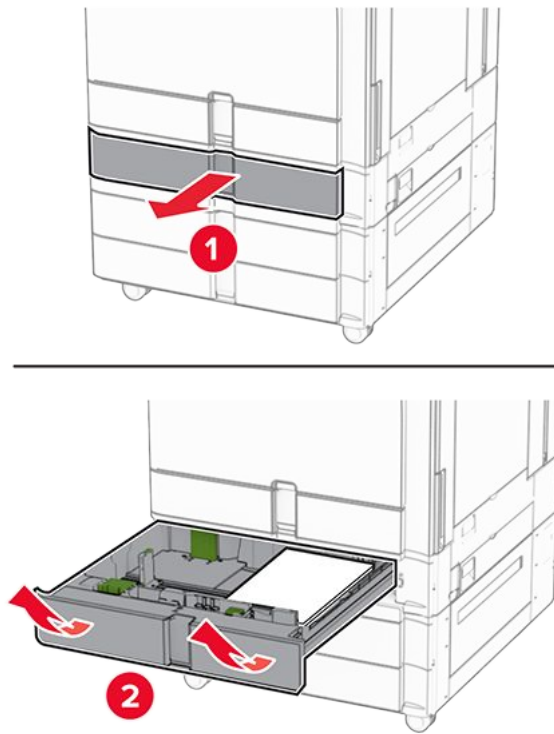

5. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

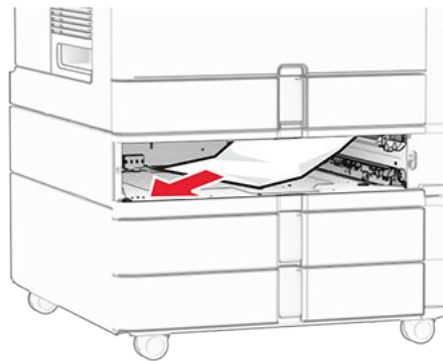


6. Insert the tray.

Paper jam in the automatic document feeder


Paper jam in door A

1. Open door A.

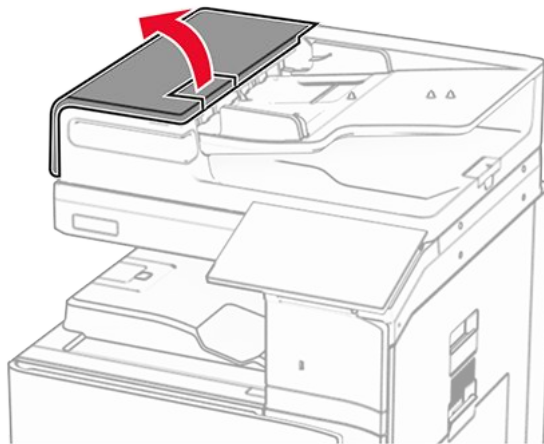

2. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

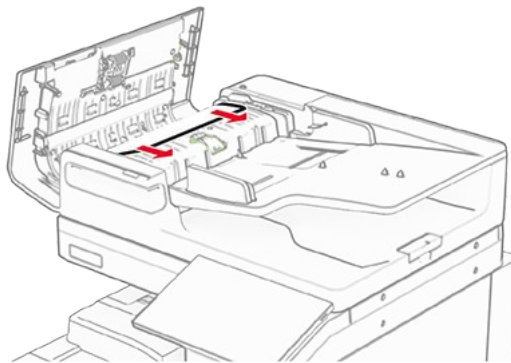



3. Close door A.

Paper jam in door A1

1. Open the scanner cover.

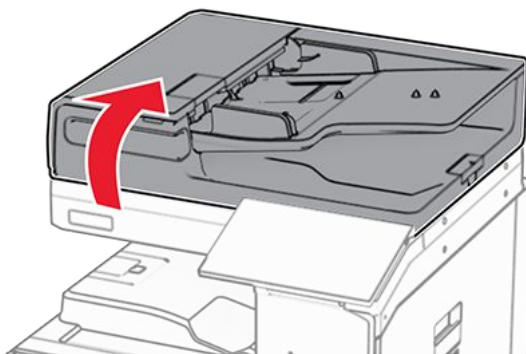


2. Pull the green latch to open door A1.

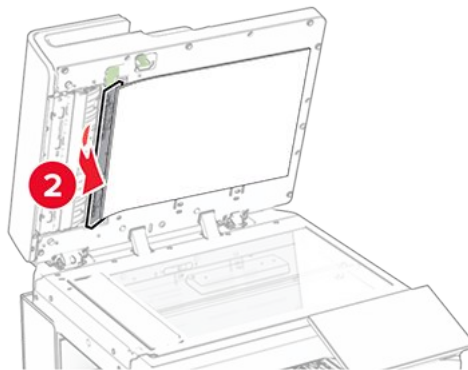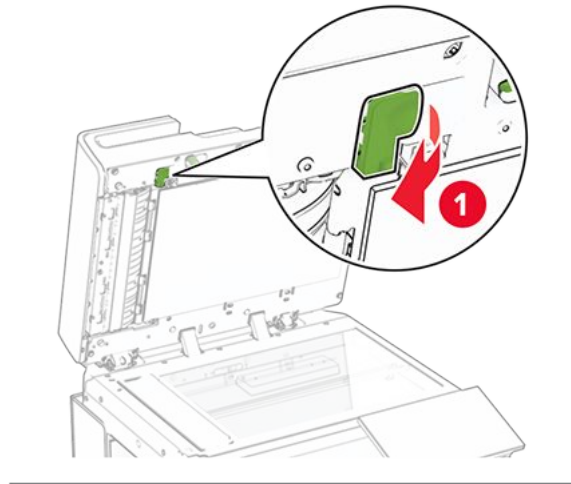

3. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

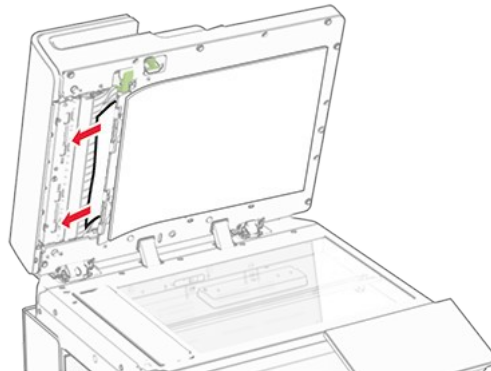


4. Close door A1, and then close the scanner cover.

Paper jam in the automatic document feeder bin

1. Remove any paper from the automatic document feeder bin.
2. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

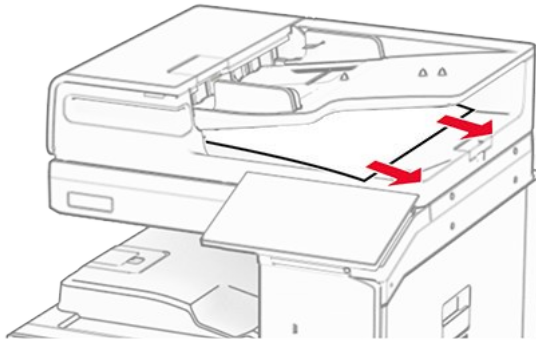

Paper jam in the multipurpose feeder


1. Remove any paper from the multipurpose feeder.
2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

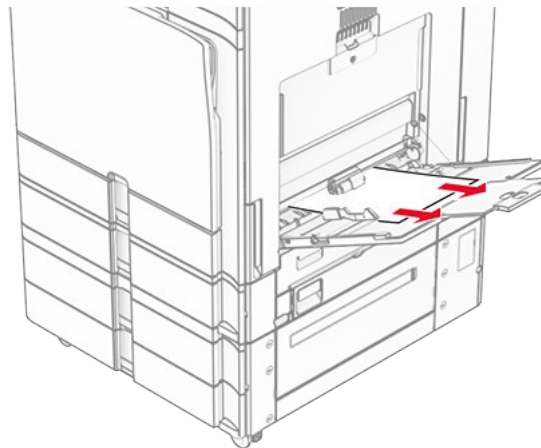

Paper jam in the 2 x 550-sheet tray


1. Open door E.

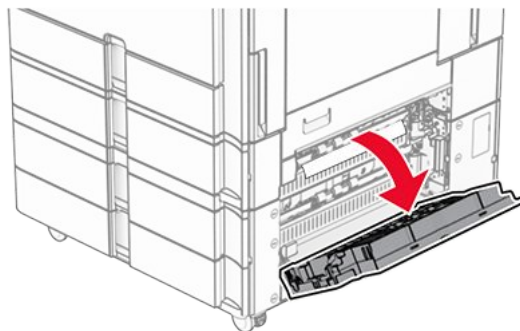



Troubleshoot a problem

2. Remove the jammed paper inside door E.

Note: Make sure that all paper fragments are removed.

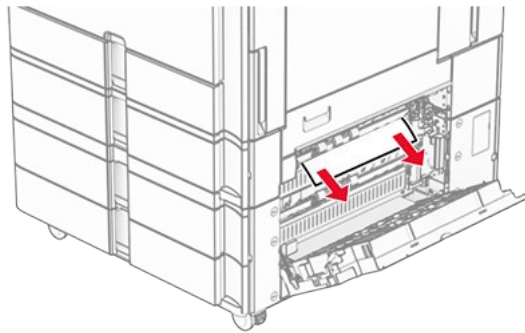


3. Close door E.
4. Pull out tray 3.

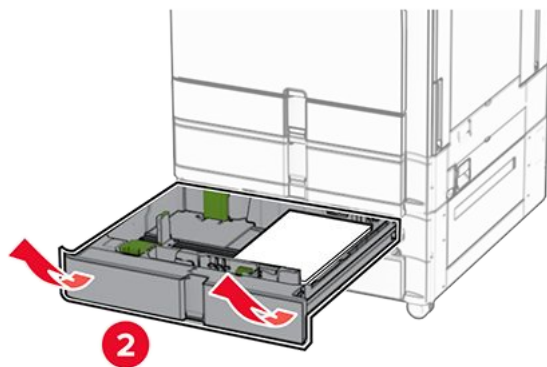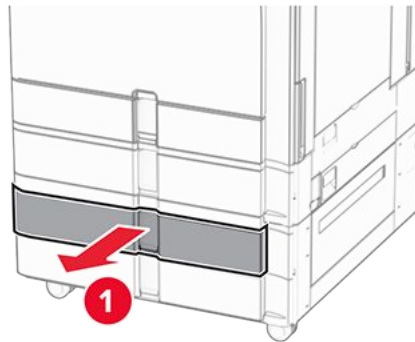

5. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

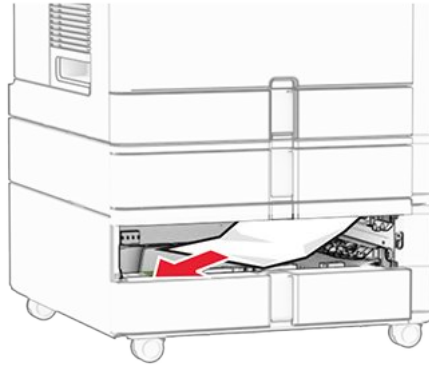

6. Insert tray 3.
7. Repeat [step 4](#) through [step 6](#) for tray 4.


Paper jam in the 2000-sheet tandem tray

1. Open door E.

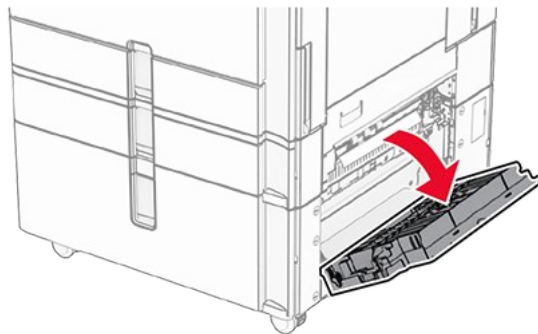

2. Remove the jammed paper inside door E.


Note: Make sure that all paper fragments are removed.

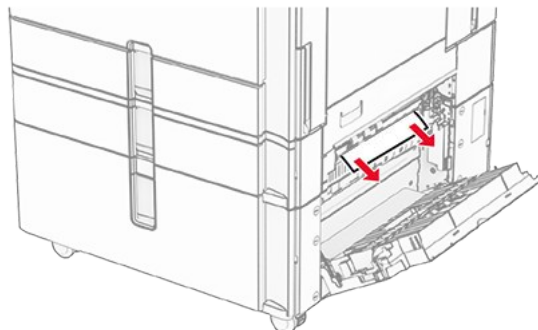

3. Close door E.


Paper jam in the 1500-sheet tray

1. Open door K.

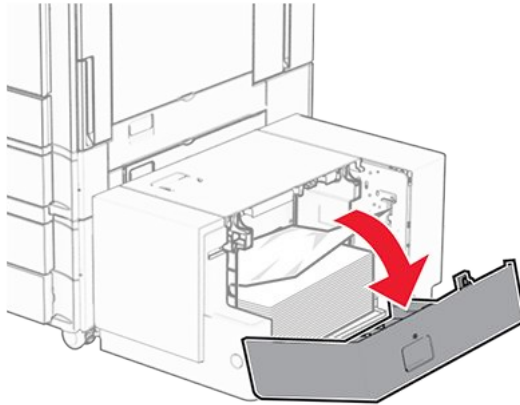


2. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

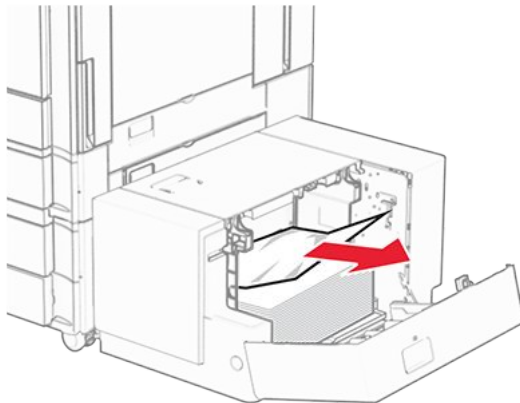


3. Close door K.
4. Grab handle J, and then slide the tray to the right.

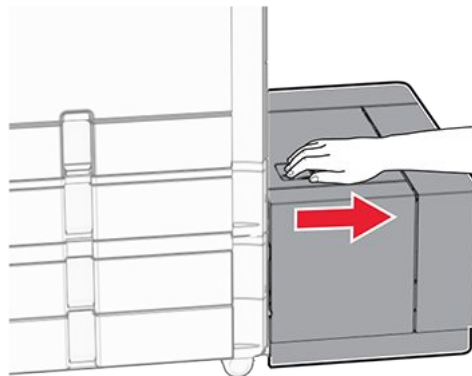

5. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

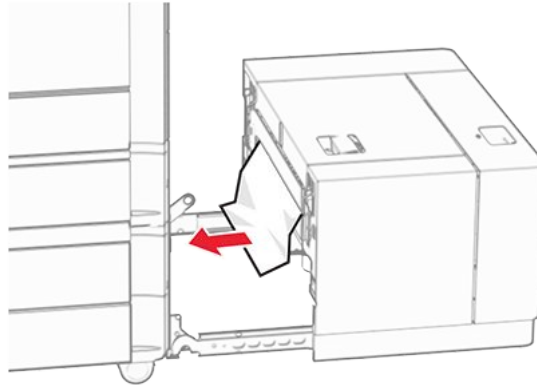

6. Slide the tray back into place.

Paper jam in door B

1. Open door B.




CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.

Warning—Potential Damage

To prevent damage from electrostatic discharge, touch any exposed metal frame of the printer before accessing or touching interior areas of the printer.

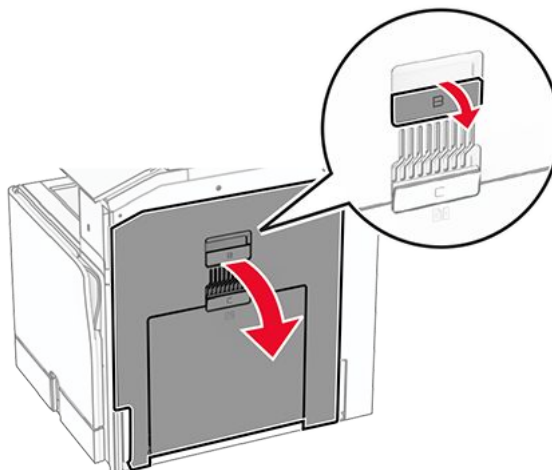


2. Remove the jammed paper in any of the following locations:



Note: Make sure that all paper fragments are removed.

Troubleshoot a problem


- Above the fuser

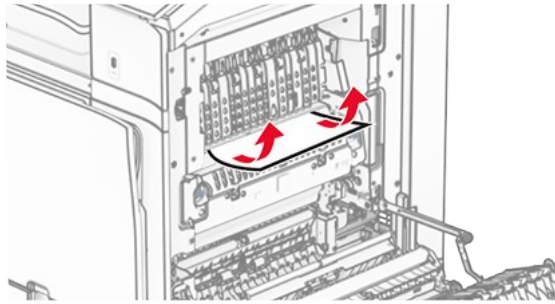


- In the fuser

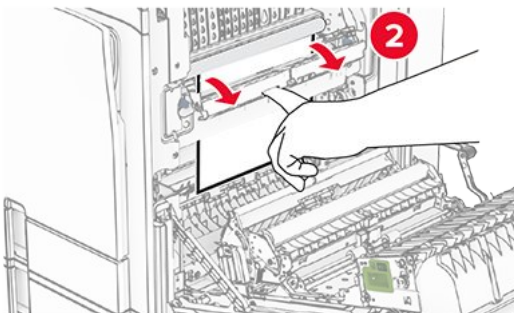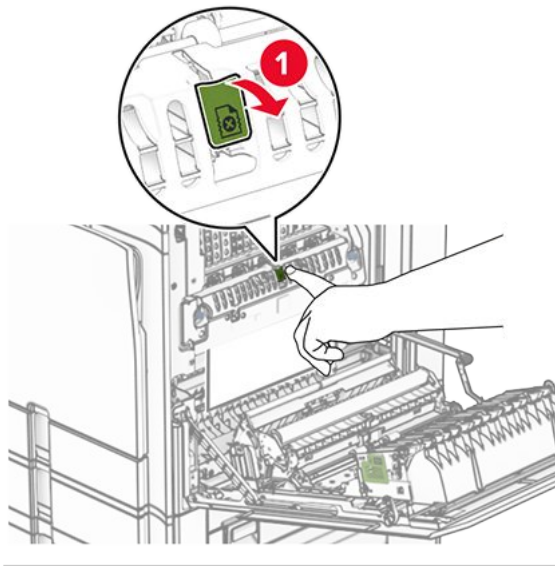




- Below the fuser

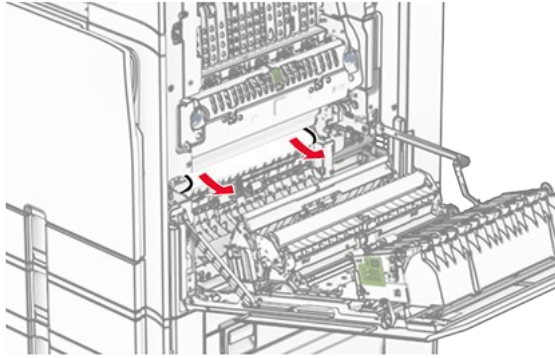

- Under the standard bin exit roller

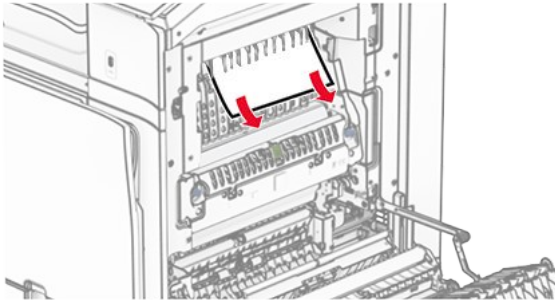

- In the duplex unit

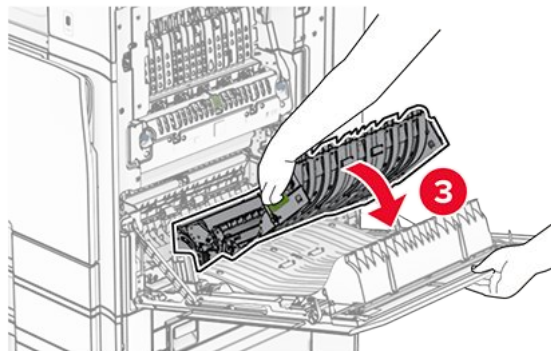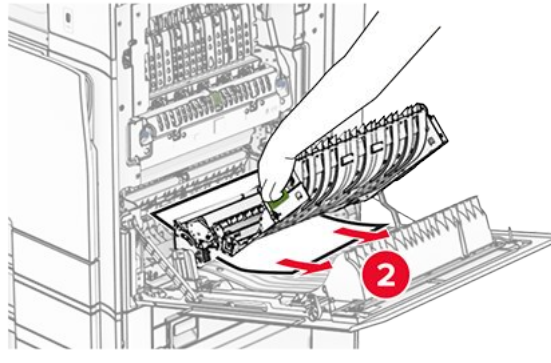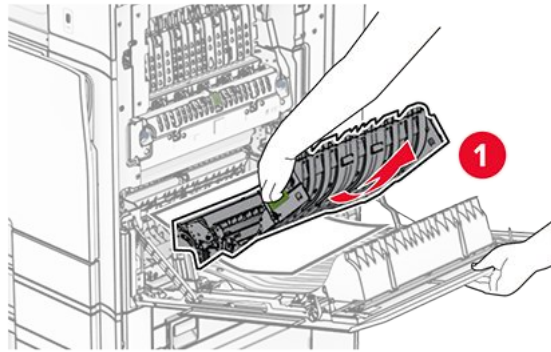


3. Close door B.

Paper jam in the standard bin

1. Remove any paper from the standard bin.
2. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

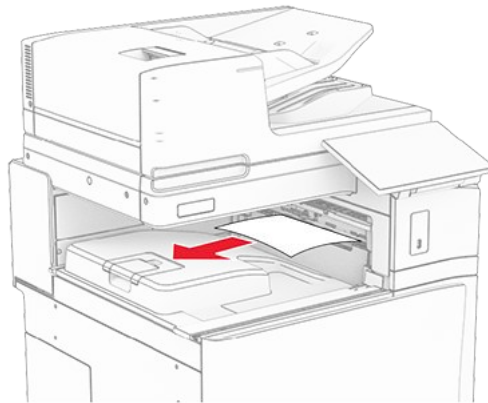


Paper jam in the staple finisher

1. Remove the jammed paper in the staple finisher bin.



Note: Make sure that all paper fragments are removed.

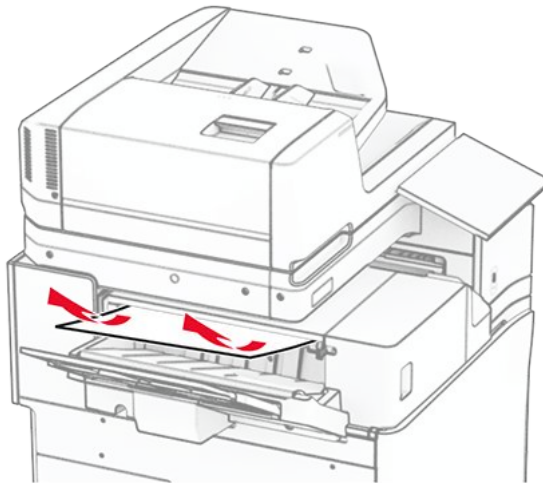

2. Grab handle F, and then slide the staple finisher to the left.

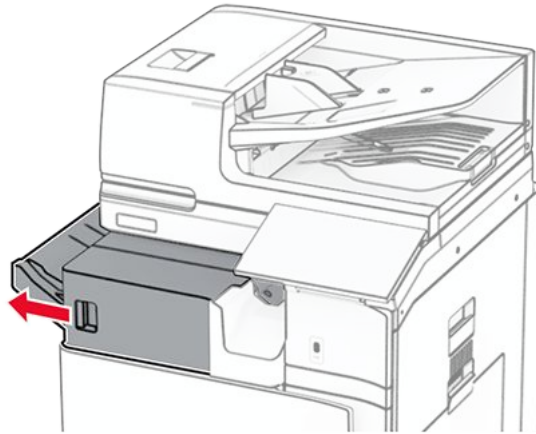


3. Open door R1, and then rotate the knob R2 clockwise.

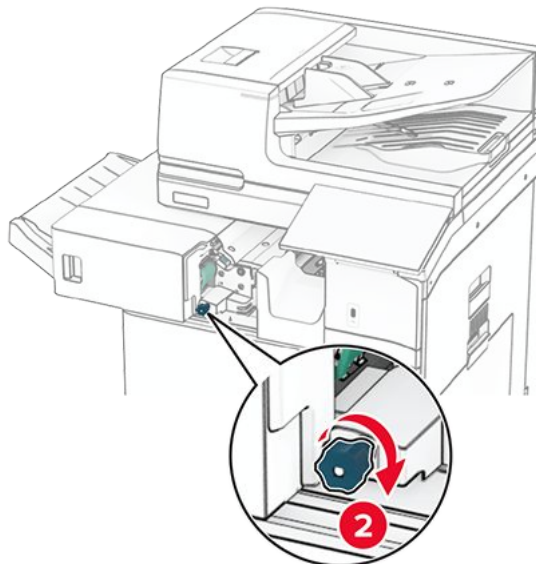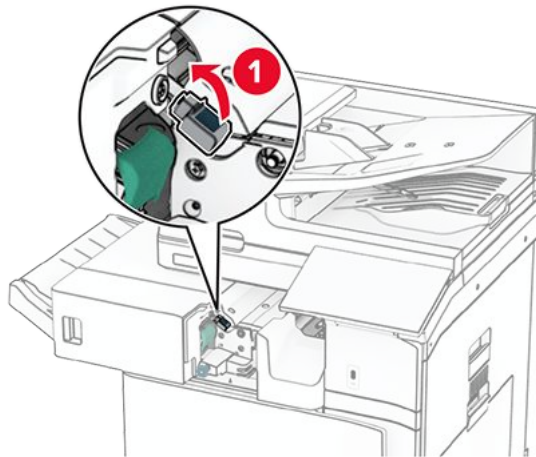


4. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

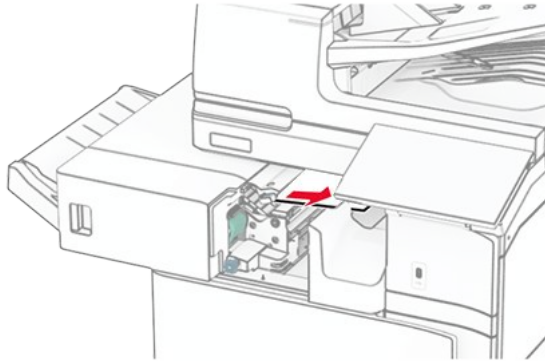


5. Close door R1.
6. Remove the jammed paper in the standard bin exit roller.

Note: Make sure that all paper fragments are removed.

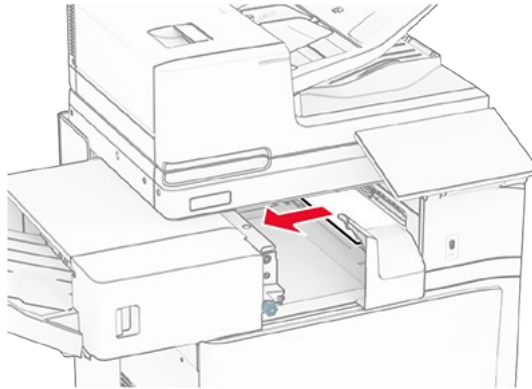


7. Slide the staple finisher back into place.

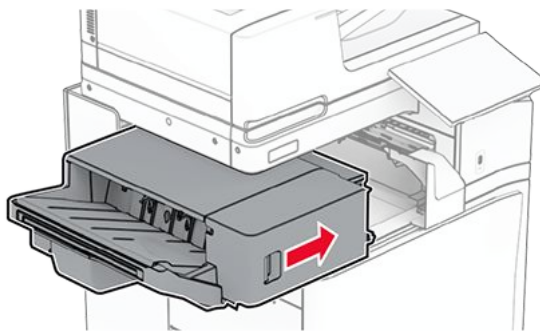


Paper jam in the staple finisher with hole punch

1. Remove the jammed paper in the staple finisher bin.



Note: Make sure that all paper fragments are removed.

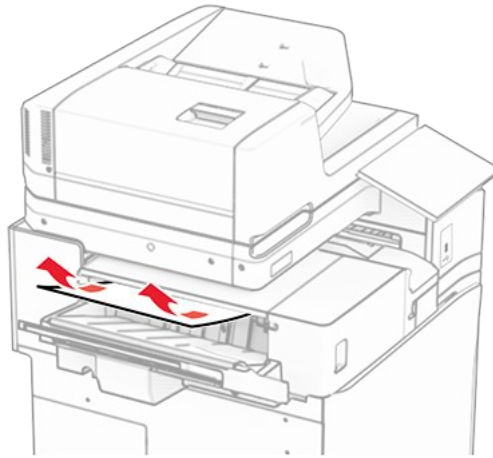

2. Grab handle F, and then slide the staple finisher to the left.

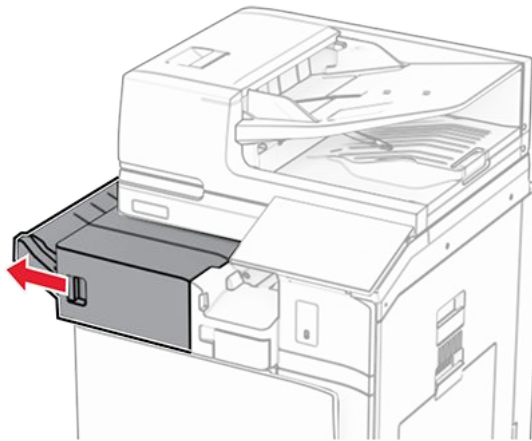


3. Open door R1, and then rotate the knob R2 clockwise.

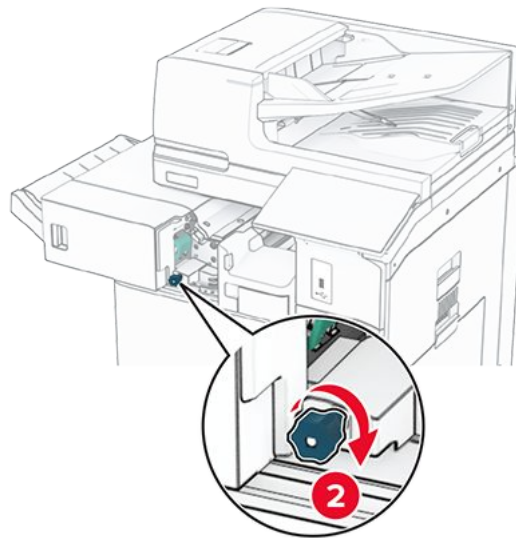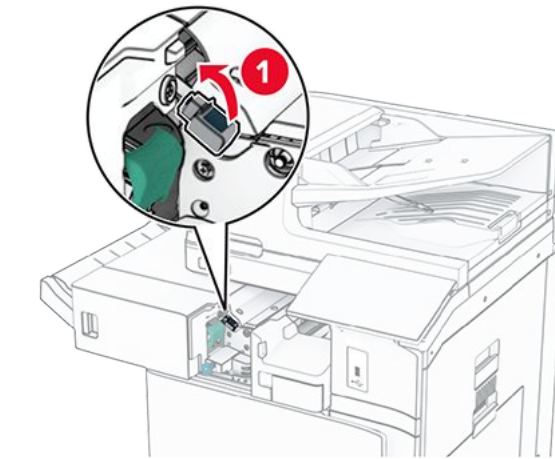


4. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

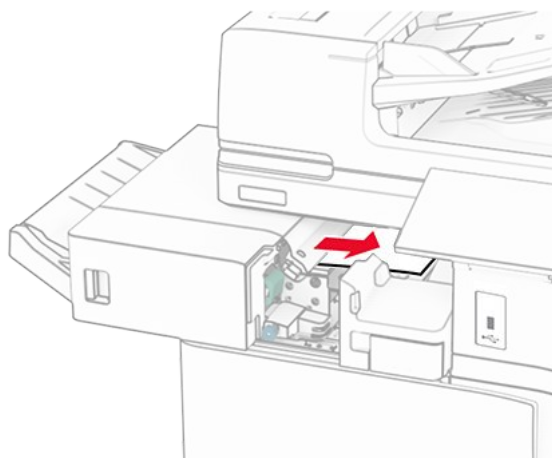


5. Close door R1.

6. Slide the hole punch unit to the left.

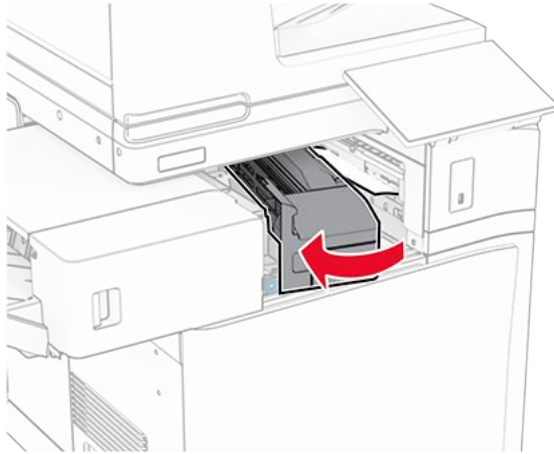

7. Remove the jammed paper in the standard bin exit roller.

Note: Make sure that all paper fragments are removed.

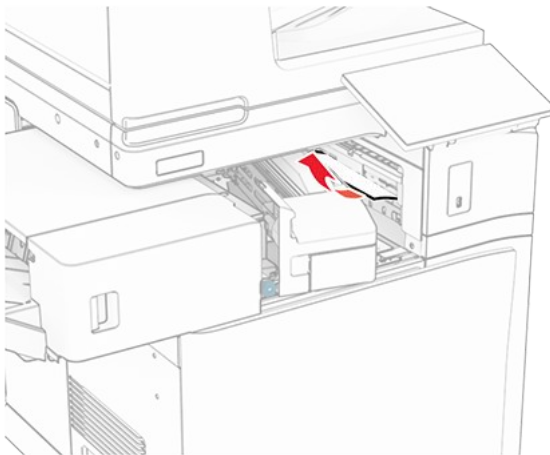


8. Slide the hole punch unit to the right, and then slide the staple finisher back into place.


Paper jam in the folding paper transport

1. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

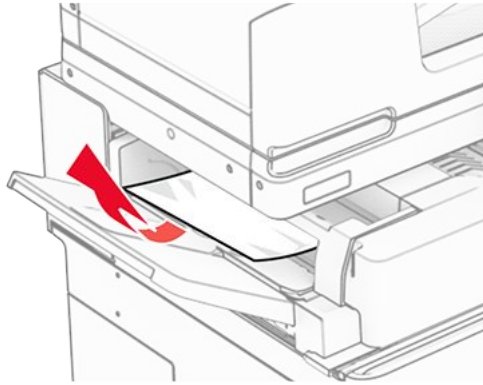


2. Open door F.

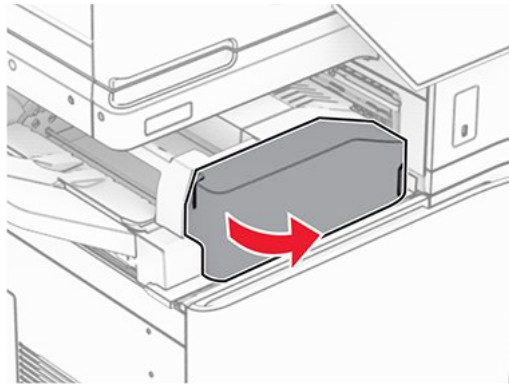

3. Lift handle N4.

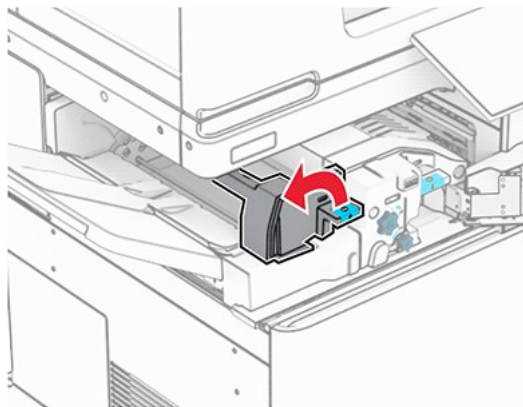


4. Lift handle N5.

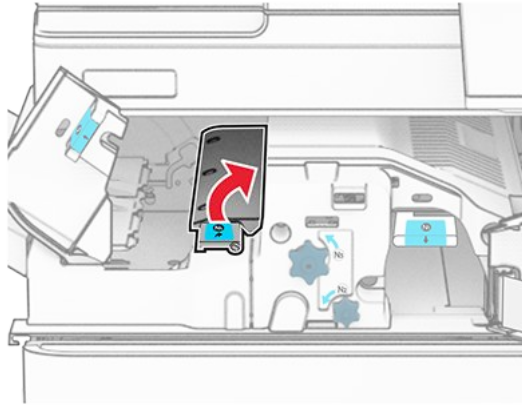


5. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

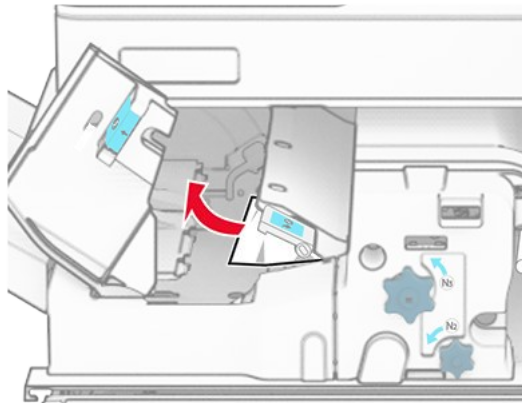

6. Close handle N5, and then close handle N4.
7. Push down handle N1.

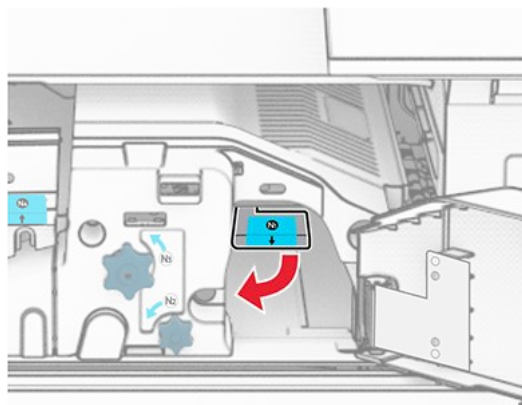

8. Turn knob N2 counterclockwise.




9. Remove the jammed paper.

Warning—Potential Damage

To prevent damage to the printer, remove any hand accessories before removing the jammed paper.

Note: Make sure that all paper fragments are removed.

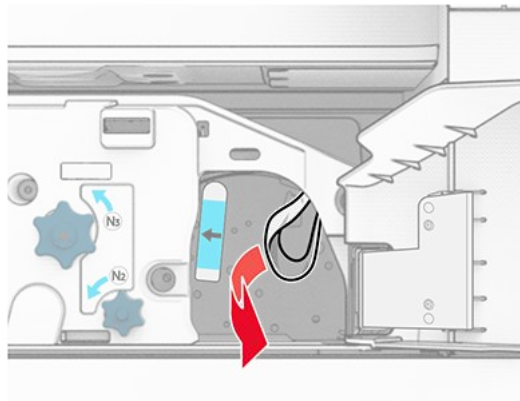

10. Put handle N1 back into place.
11. Close door F.


Paper jam in the staple, hole punch finisher

If your printer is configured with a paper transport, then do the following:

1. Remove the jammed paper in bin 1.


Notes

- Make sure that all paper fragments are removed.
- Do not remove the printed pages that are in the staple compiler to avoid missing pages.

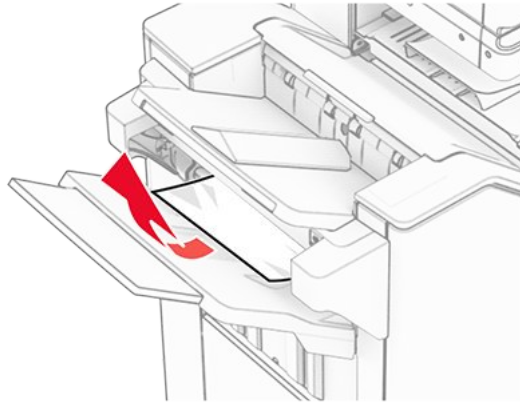


2. Remove the jammed paper in the finisher standard bin.

Note: Make sure that all paper fragments are removed.

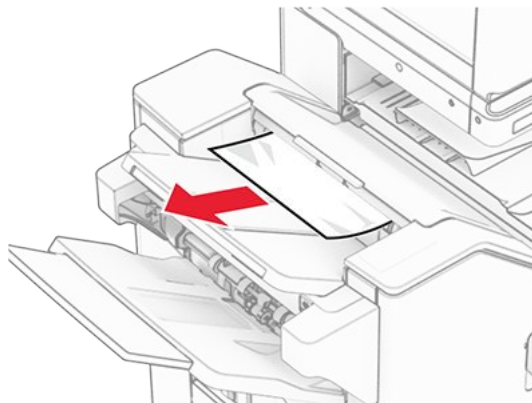

3. Remove the jammed paper in bin 2.



Note: Make sure that all paper fragments are removed.

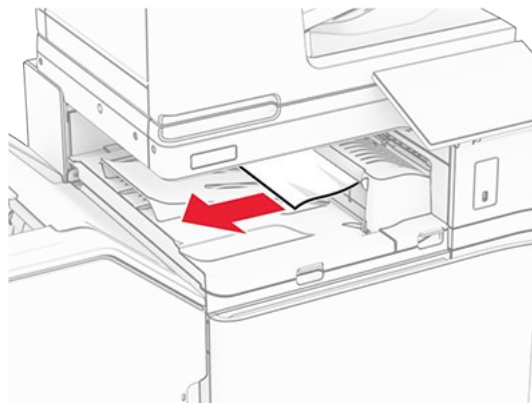

Troubleshoot a problem




4. Open paper transport cover G, and then remove the jammed paper.

Note: Make sure that all paper fragments are removed.

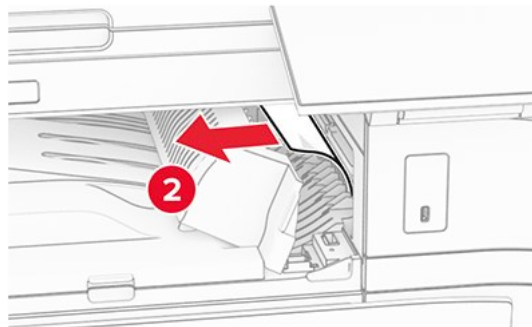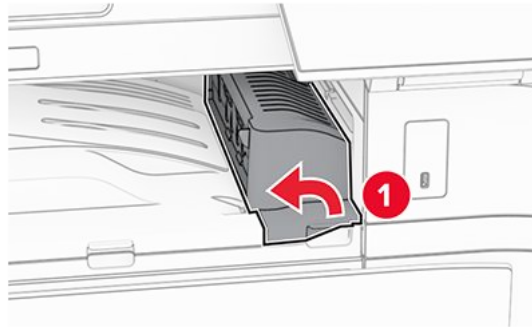


5. Close paper transport cover G.
6. Open door I, open door R1, and then remove the jammed paper.


Note: Make sure that all paper fragments are removed.

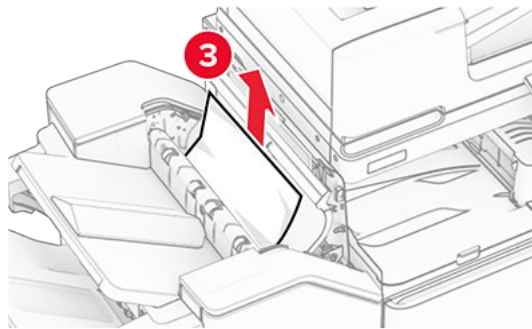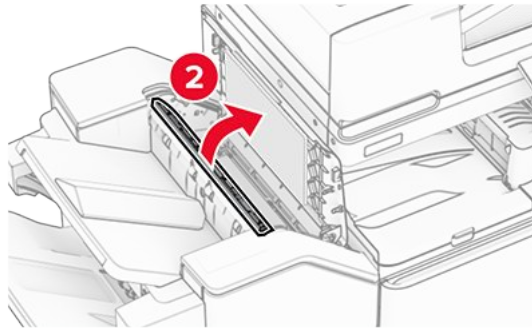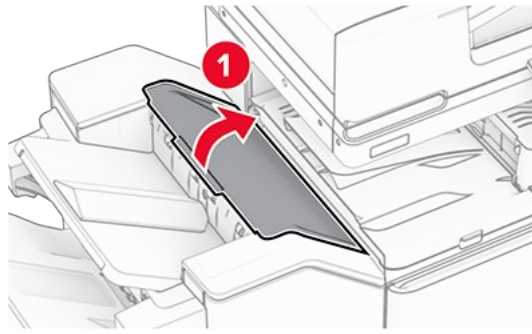


7. Close door R1, and then close door I.
8. Open paper transport cover F.

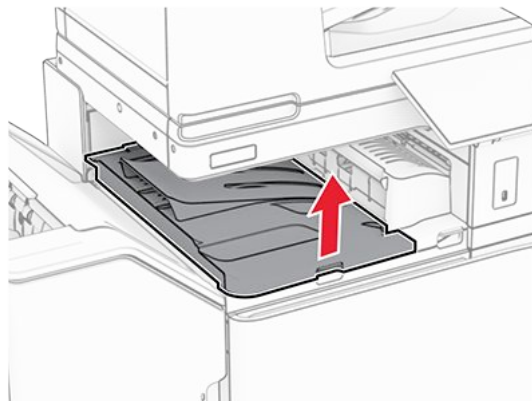

9. Open door H.

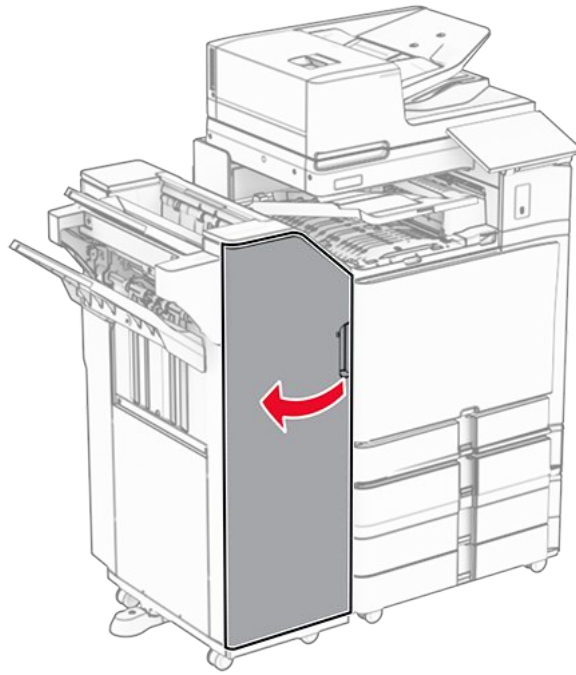


10. Lift handle R4.

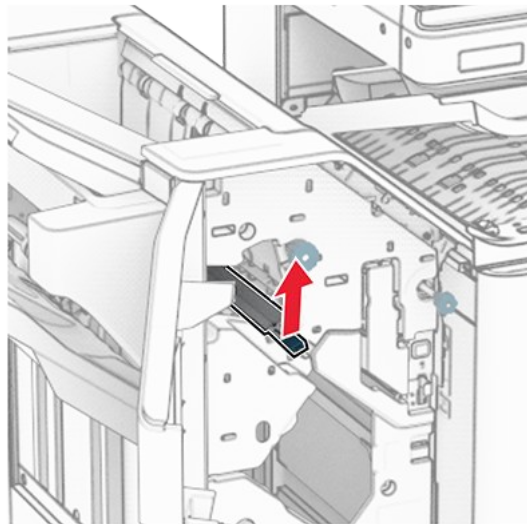


11. Turn knob R3 counterclockwise, and then remove the jammed paper in bin 1.

Note: Make sure that all paper fragments are removed.

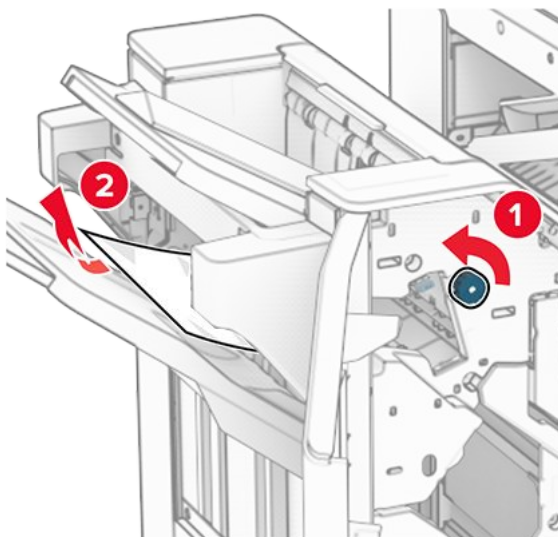

12. Turn knob R2 counterclockwise, and then remove the jammed paper in paper transport cover F.

Note: Make sure that all paper fragments are removed.

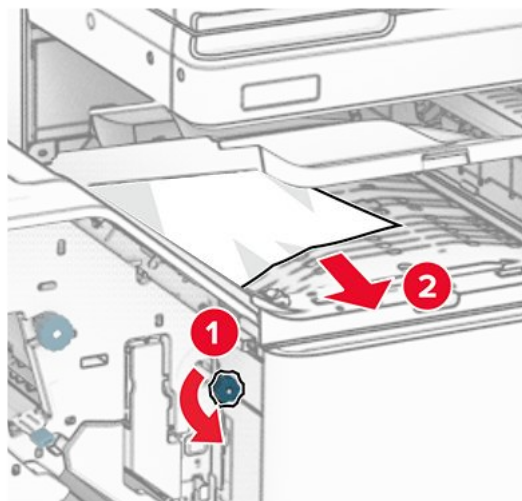


13. Close paper transport cover F.
14. Return handle R4 to its original position.
15. Close door H.

If your printer is configured with a folding paper transport, then do the following:

1. Remove the jammed paper in bin 1.


Notes

- Make sure that all paper fragments are removed.
- Do not remove the printed pages that are in the staple compiler to avoid missing pages.

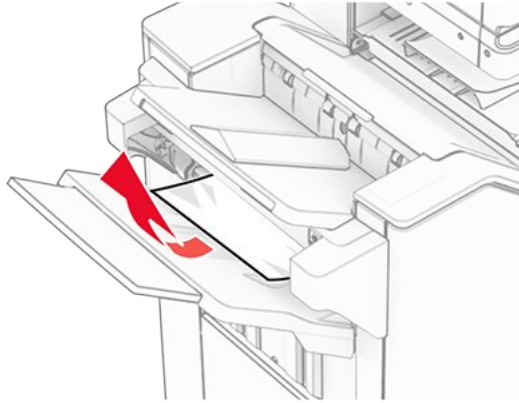


2. Remove the jammed paper in the finisher standard bin.

Note: Make sure that all paper fragments are removed.

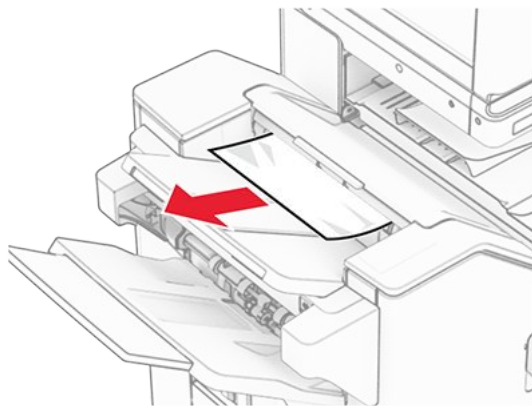


3. Remove the jammed paper in bin 2.


Note: Make sure that all paper fragments are removed.

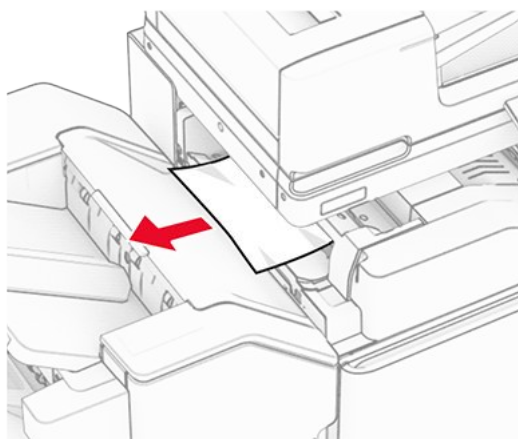


4. Open door F.

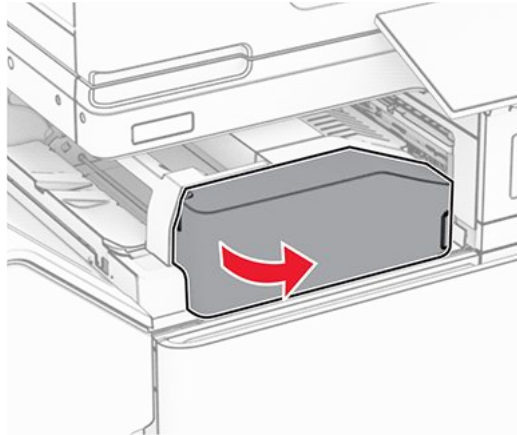


5. Open door N4.

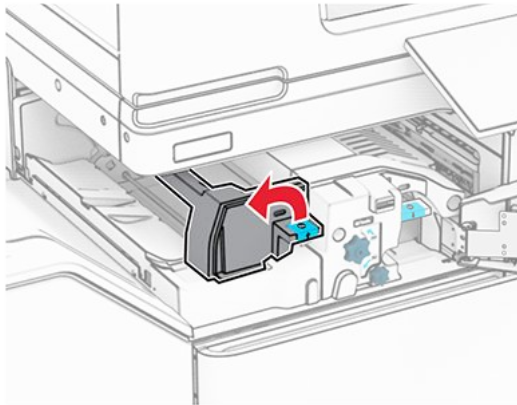


6. Open door N5.

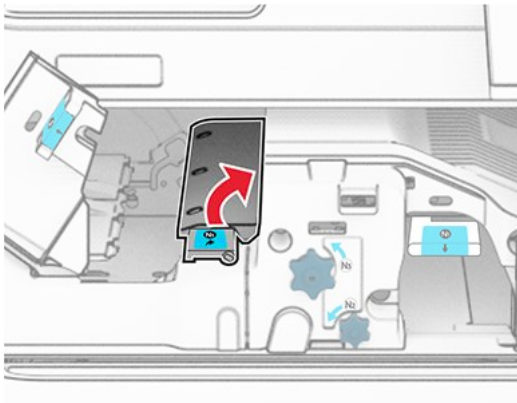

7. Open door H.

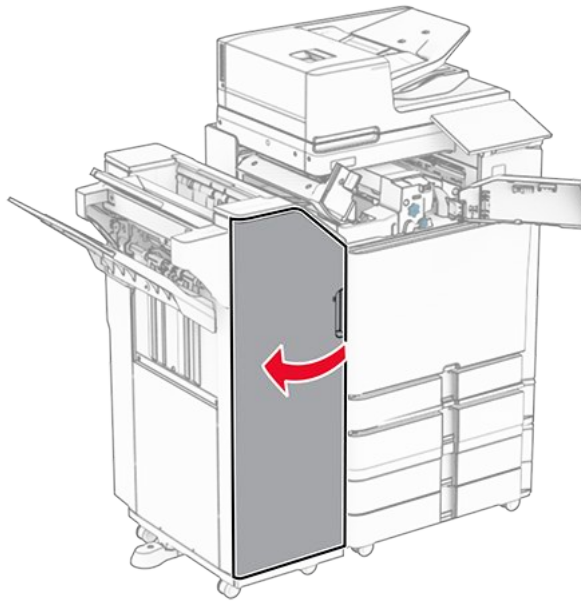


8. Lift handle R4.

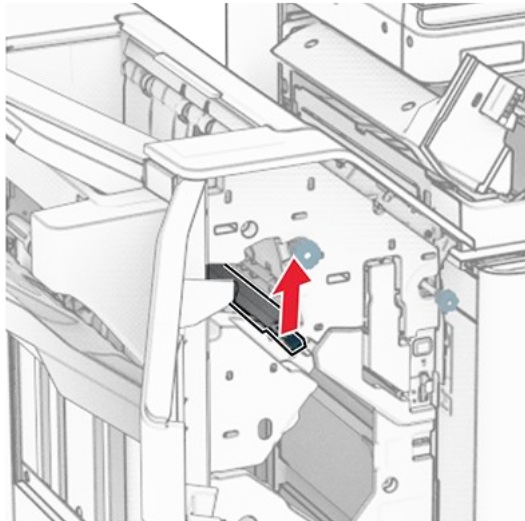


9. Turn knob R3 counterclockwise, and then remove the jammed paper in bin 1.

Note: Make sure that all paper fragments are removed.

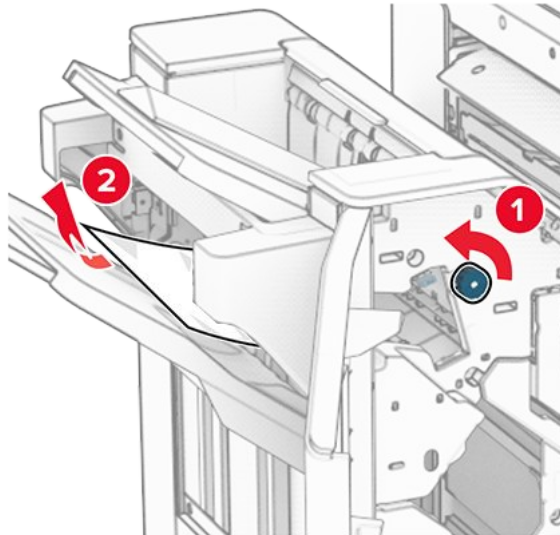

10. Turn knob R2 counterclockwise, and then remove the jammed paper between doors N4 and N5.

Note: Make sure that all paper fragments are removed.

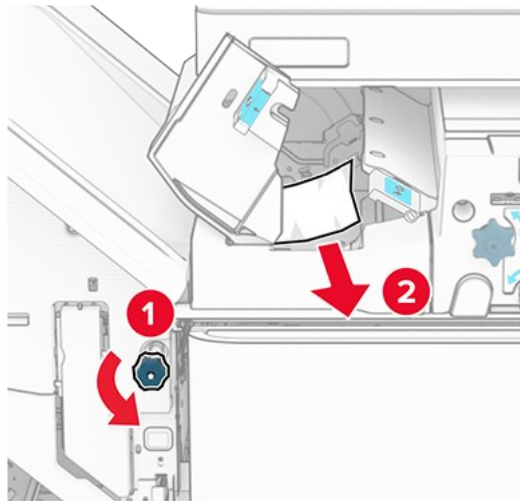

11. Open door B.




CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.


Warning—Potential Damage

To prevent damage from electrostatic discharge, touch any exposed metal frame of the printer before accessing or touching interior areas of the printer.

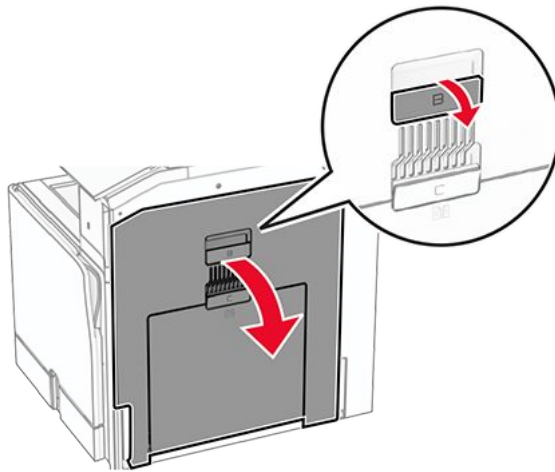


12. Remove the jammed paper under the standard bin exit roller.


Note: Make sure that all paper fragments are removed.

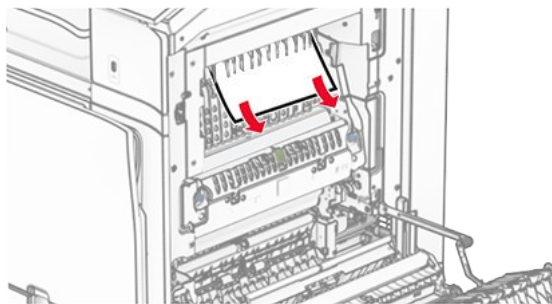

13. Close door B.
14. Push down handle N1.

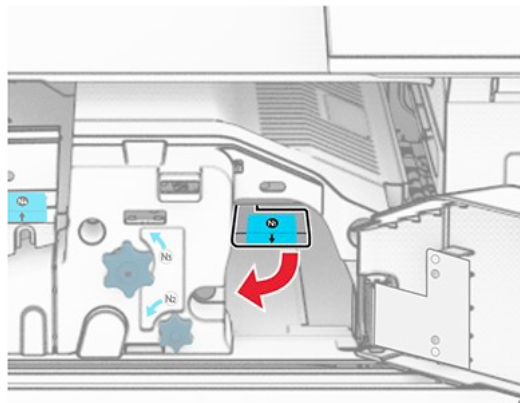

15. Turn knob N2 counterclockwise.

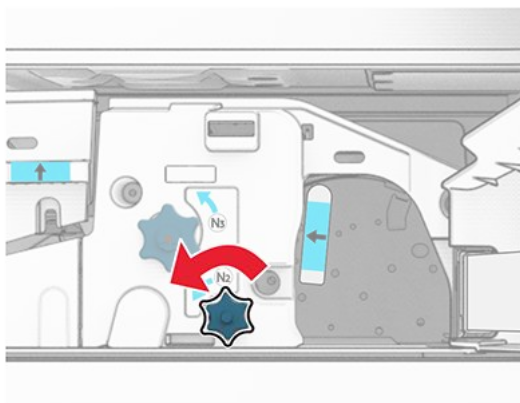


16. Remove the jammed paper.

Warning—Potential Damage

To prevent damage to the printer, remove any hand accessories before removing the jammed paper.

Note: Make sure that all paper fragments are removed.

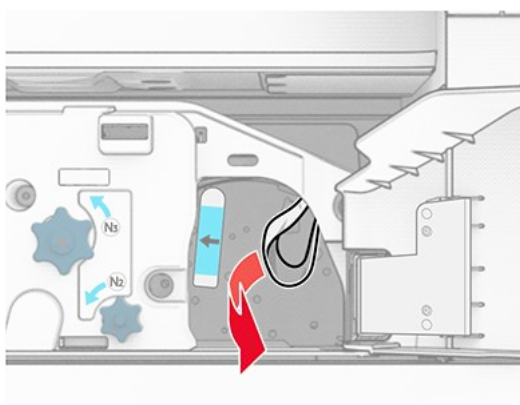


17. Put handle N1 back into place.
18. Close handle N5, and then close handle N4.
19. Close door F.
20. Return handle R4 to its original position.
21. Close door H.

Paper jam in the booklet finisher

If your printer is configured with a paper transport, then do the following:


1. Remove the jammed paper in the finisher standard bin.

Note: Make sure that all paper fragments are removed.

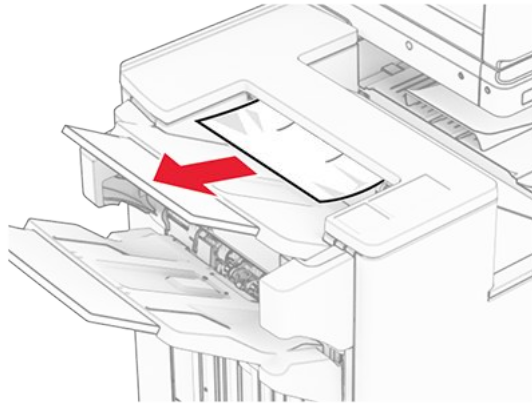

2. Remove the jammed paper in bin 1.


Note: Make sure that all paper fragments are removed.

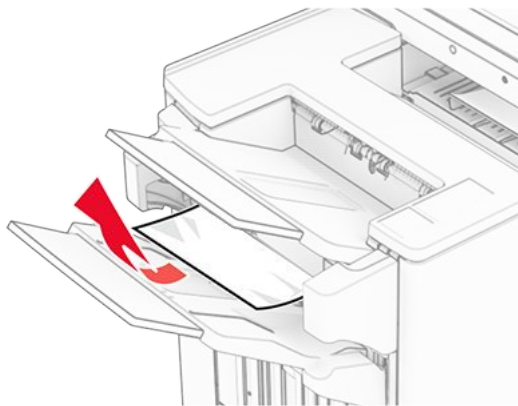

3. Remove the jammed paper in bin 1.

Notes


- Make sure that all paper fragments are removed.
- Do not remove the printed pages that are in the staple compiler to avoid missing pages.

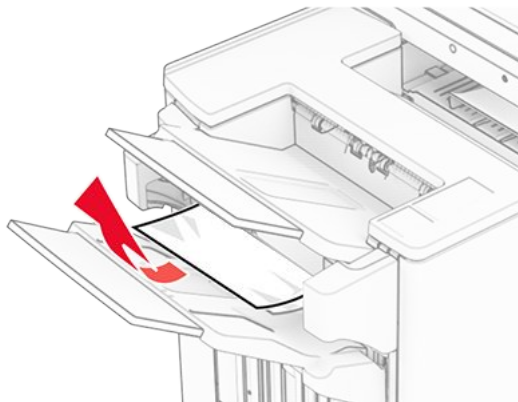

4. Remove the jammed paper in bin 3.



Troubleshoot a problem

Note: Make sure that all paper fragments are removed.

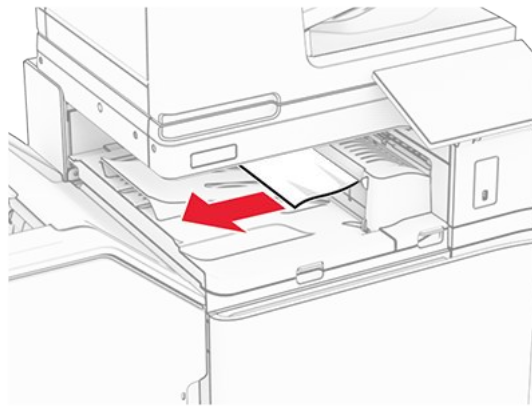


5. Open paper transport cover G, and then remove the jammed paper.


Note: Make sure that all paper fragments are removed.

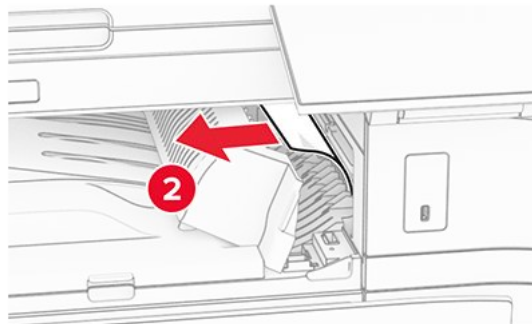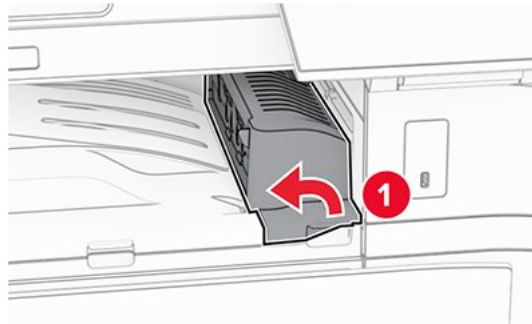

6. Close paper transport cover G.
7. Open paper transport cover F.

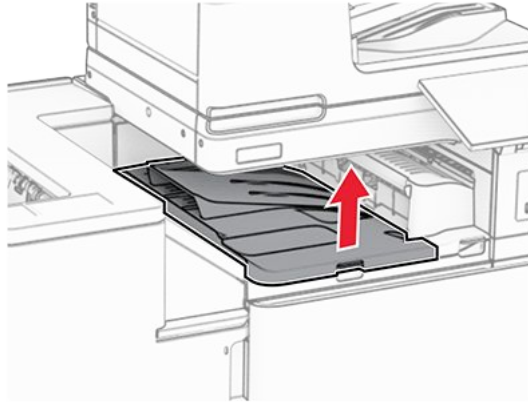


8. Open door H.

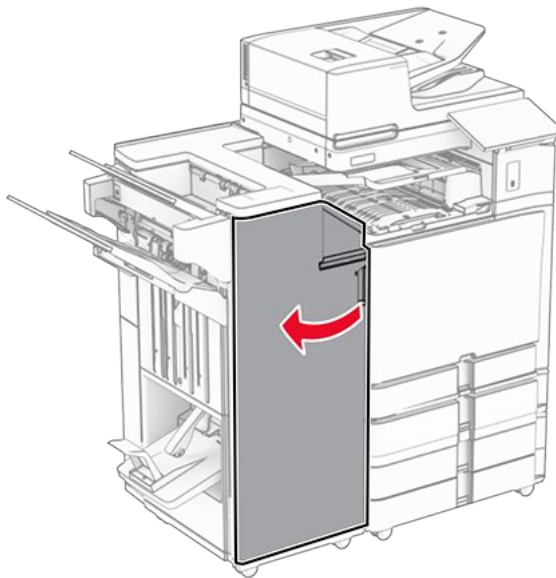



9. Move handle R3 to the right, and then remove the jammed paper.

Note: Make sure that all paper fragments are removed.

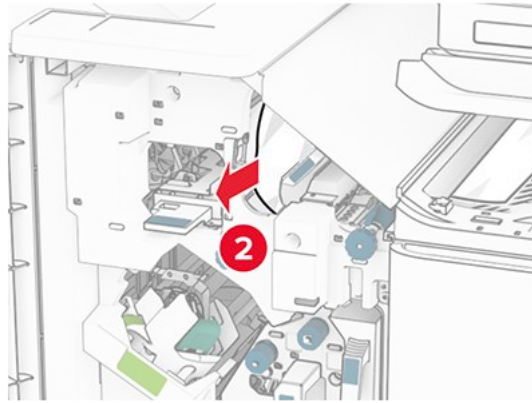




10. Move handle R1 to the left, turn knob R2 counterclockwise, and then remove the jammed paper.

Note: Make sure that all paper fragments are removed.

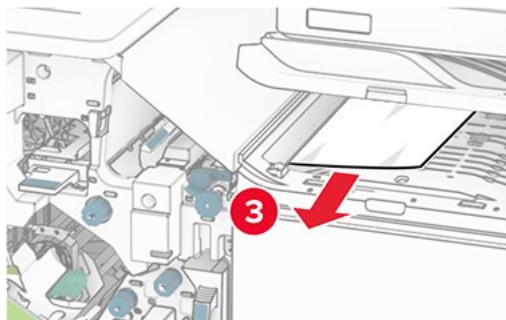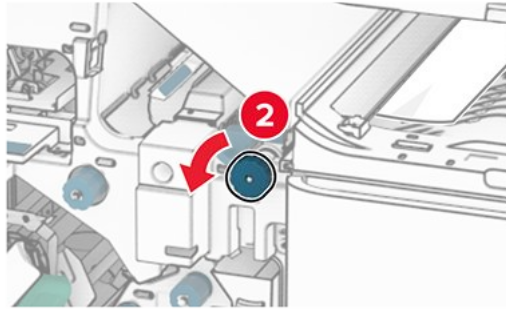




11. Turn knob R5 counterclockwise, and then remove the jammed paper from the finisher standard bin.

Note: Make sure that all paper fragments are removed.

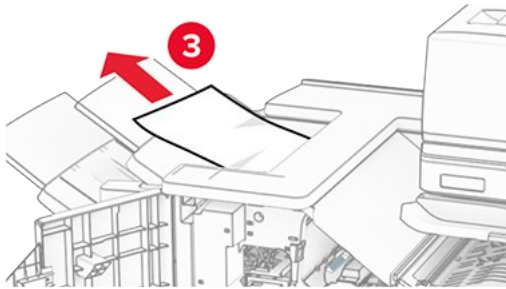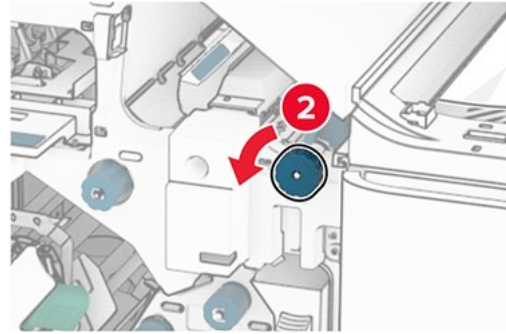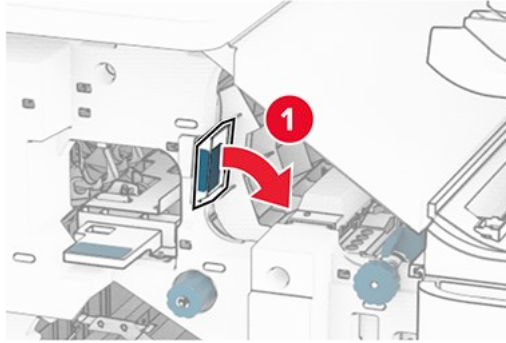

12. Lift handle R4, turn knob R2 clockwise, and then remove the jammed paper.

Note: Make sure that all paper fragments are removed.

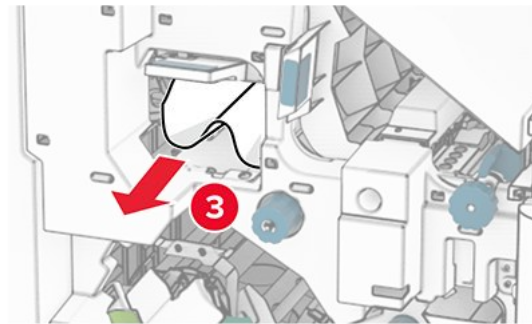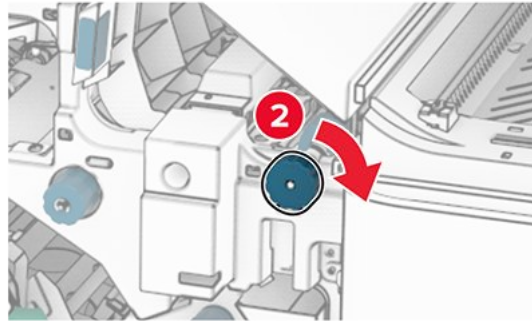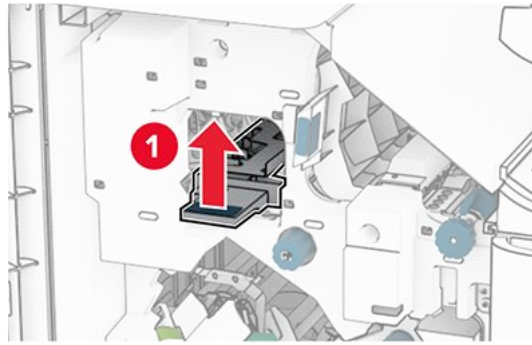


13. Close paper transport cover F.
14. Return handles R1, R3, and R4 to their original position.
15. Close door H.

If your printer is configured with a folding paper transport, then do the following:


1. Remove the jammed paper in the finisher standard bin.

Note: Make sure that all paper fragments are removed.

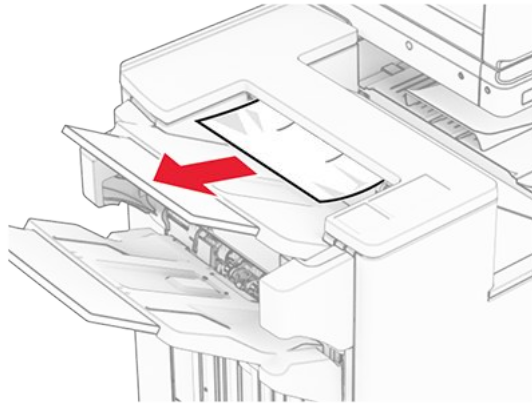

2. Remove the jammed paper in bin 1.


Note: Make sure that all paper fragments are removed.

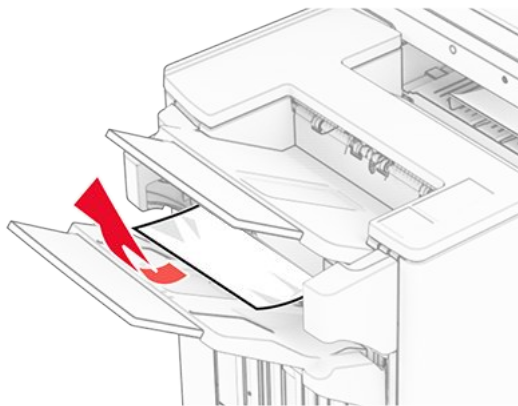

3. Remove the jammed paper in bin 1.

Notes


- Make sure that all paper fragments are removed.
- Do not remove the printed pages that are in the staple compiler to avoid missing pages.

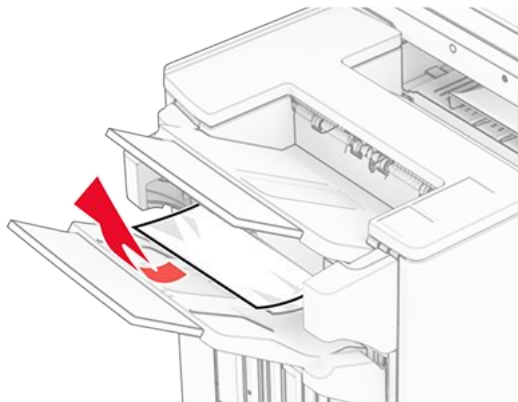


4. Remove the jammed paper in bin 3.

Troubleshoot a problem


Note: Make sure that all paper fragments are removed.

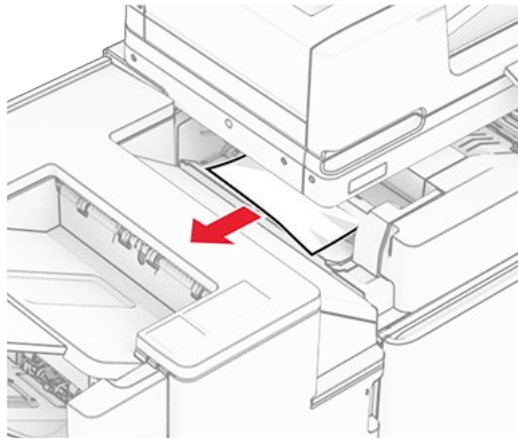


5. Open door F.

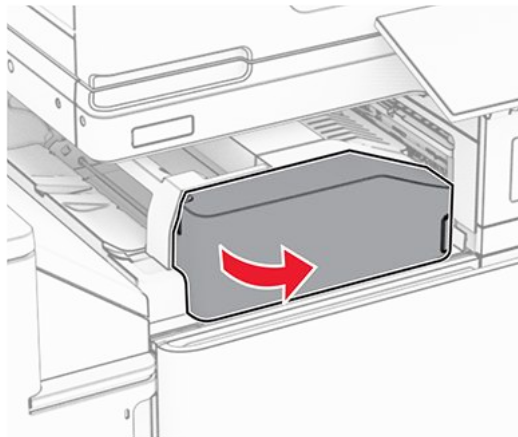


6. Open door H.

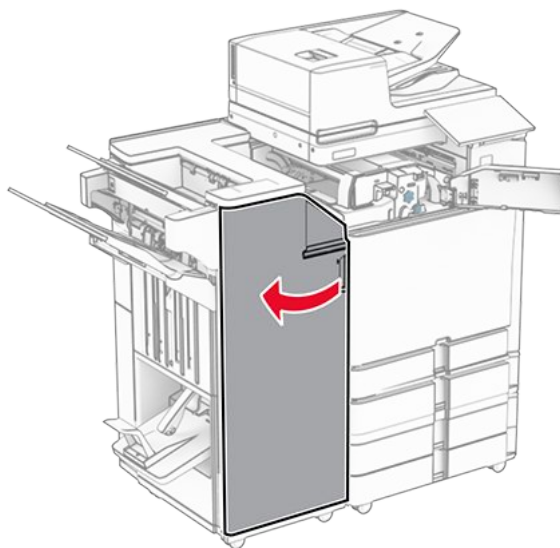


7. Open door N4.

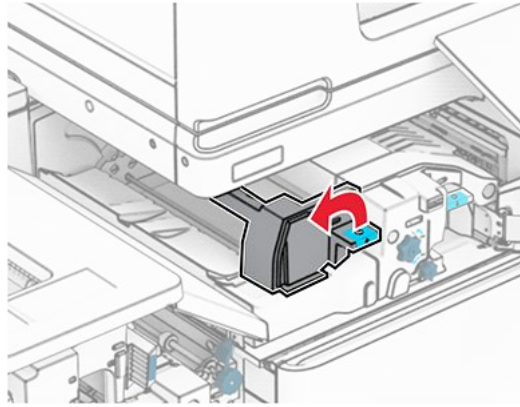

8. Open door N5.

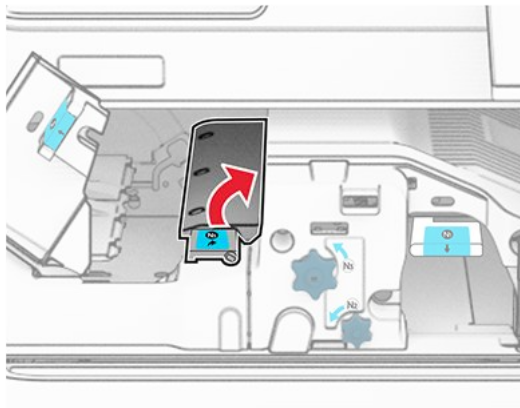


9. Lift handle R4.

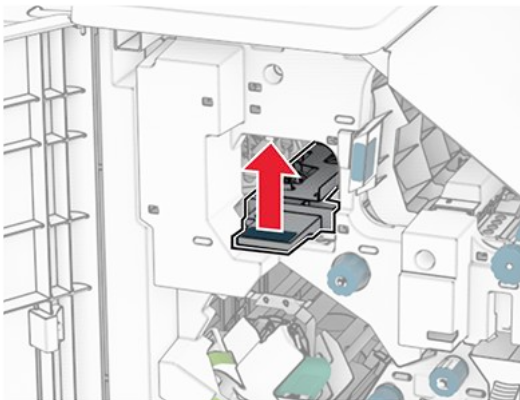




10. Turn knob R2 clockwise, and then remove the jammed paper in handle R4.

Note: Make sure that all paper fragments are removed.

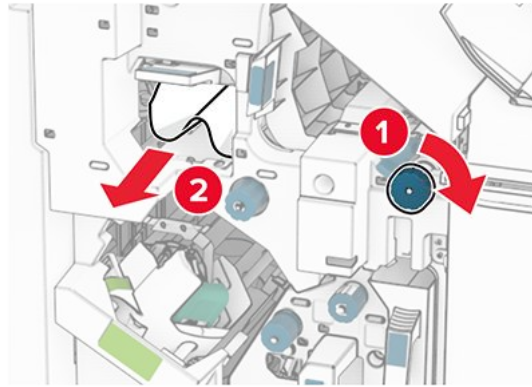

11. Move handle R1 to the left, turn knob R2 counterclockwise, and then remove the jammed paper between doors N4 and N5.

Note: Make sure that all paper fragments are removed.

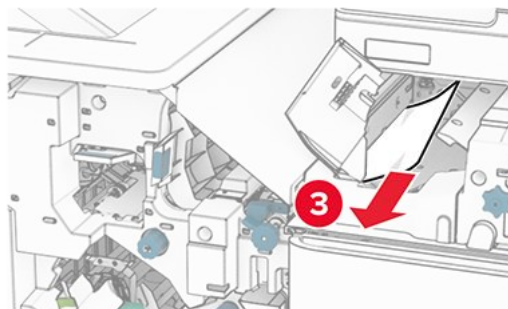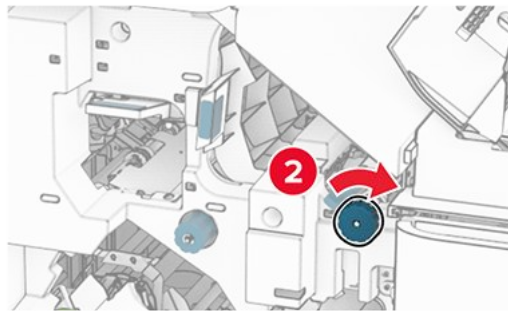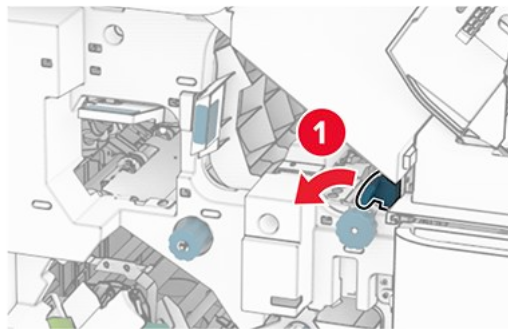

12. Open door B.




CAUTION—HOT SURFACE

The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching it.


Warning—Potential Damage

To prevent damage from electrostatic discharge, touch any exposed metal frame of the printer before accessing or touching interior areas of the printer.

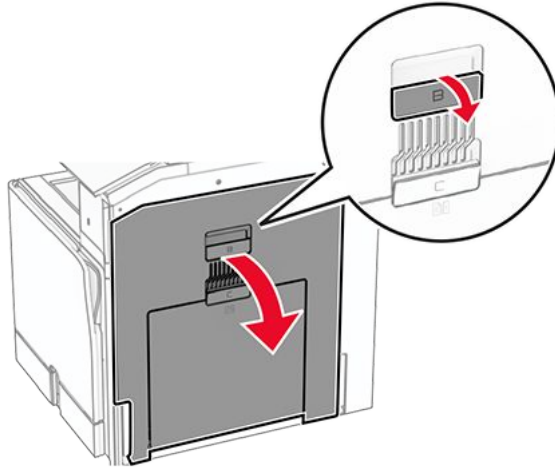


13. Remove the jammed paper under the standard bin exit roller.

Note: Make sure that all paper fragments are removed.

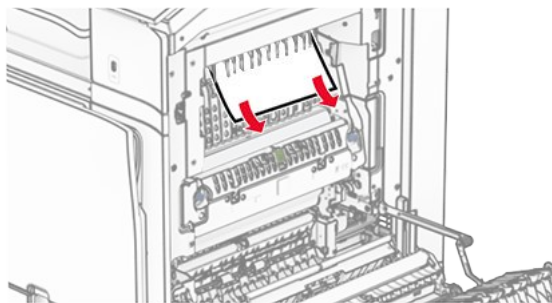


14. Close door B.
15. Push down handle N1.

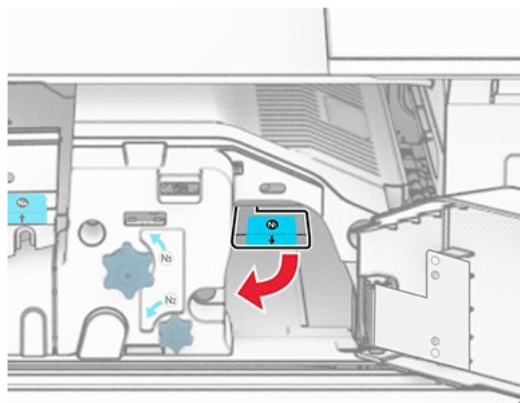

Troubleshoot a problem

16. Turn knob N2 counterclockwise.

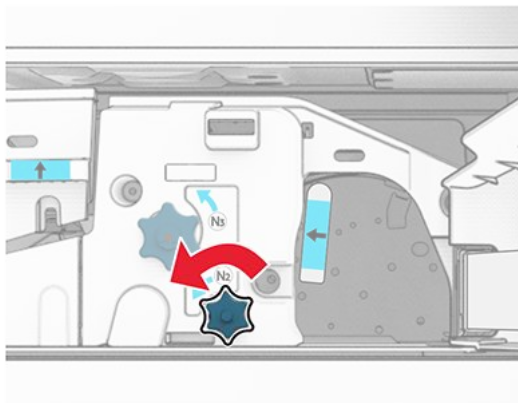


17. Remove the jammed paper.

Warning—Potential Damage

To prevent damage to the printer, remove any hand accessories before removing the jammed paper.

Note: Make sure that all paper fragments are removed.

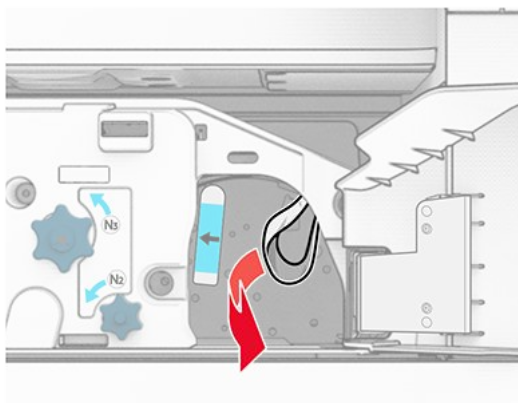


18. Put handle N1 back into place.
19. Close door N5, and then close door N4.
20. Close door F.
21. Return handles R1 and R4 back into their original positions.
22. Close door H.


Paper jam in the booklet maker

1. Remove jammed paper in bin 2.


Note: Make sure that all paper fragments are removed.

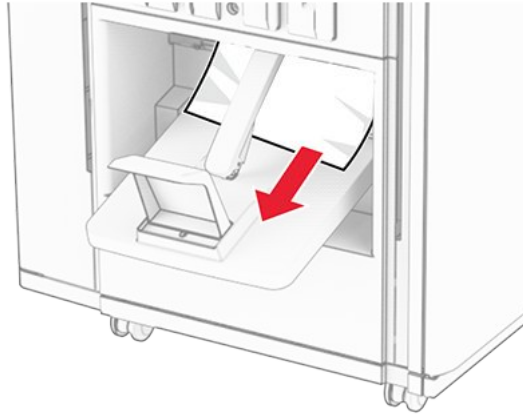

2. Open door H.

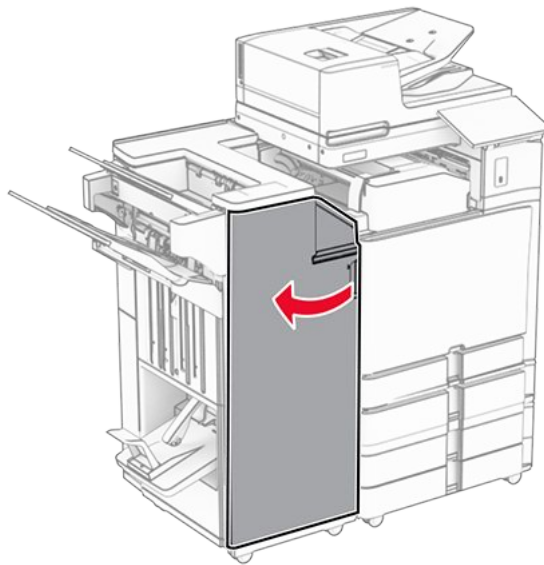


3. Turn knobs R6, R11, and R10 clockwise.

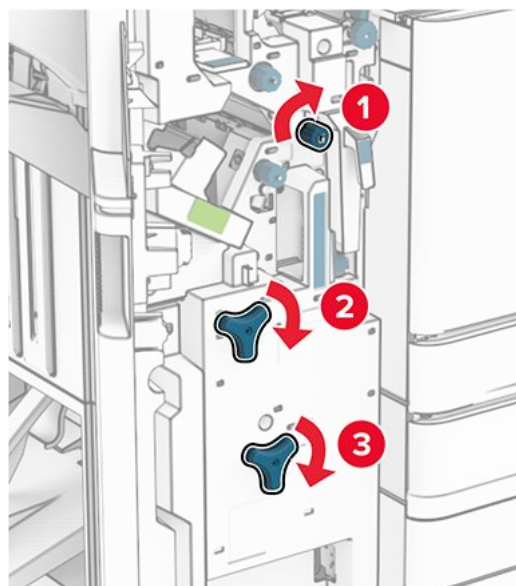


Troubleshoot a problem

4. Pull out the booklet maker.

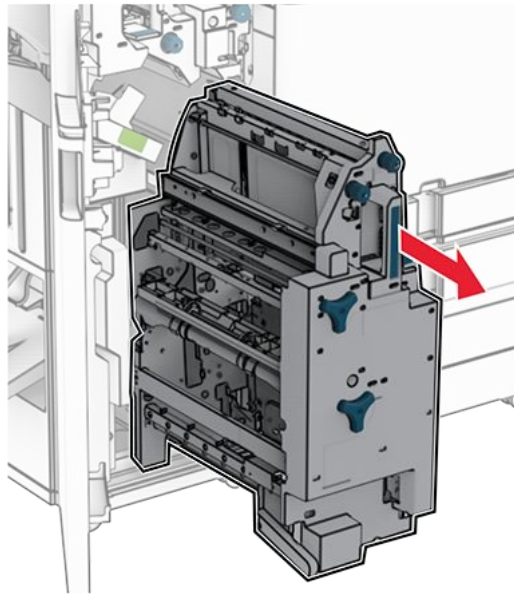


5. Remove the jammed paper.


Note: Make sure that all paper fragments are removed.

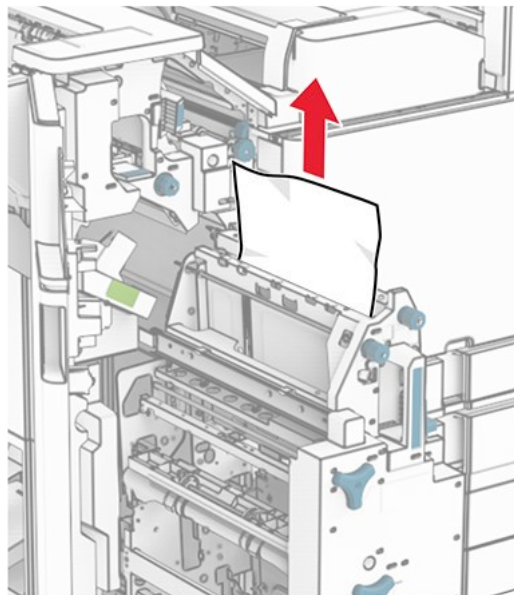

6. Turn knob R9 counterclockwise until it stops.

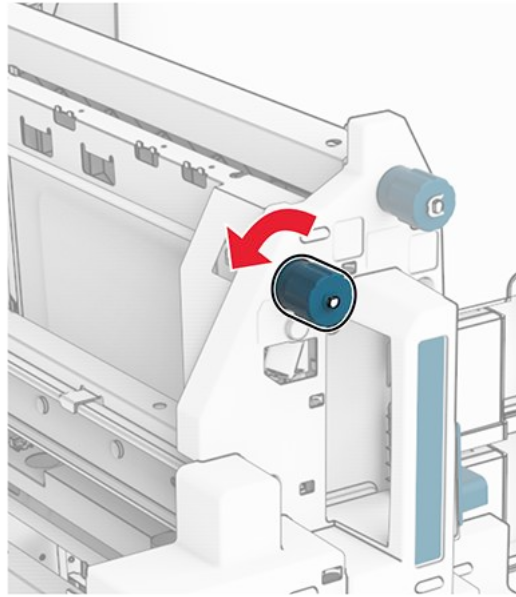


7. Open door R8.

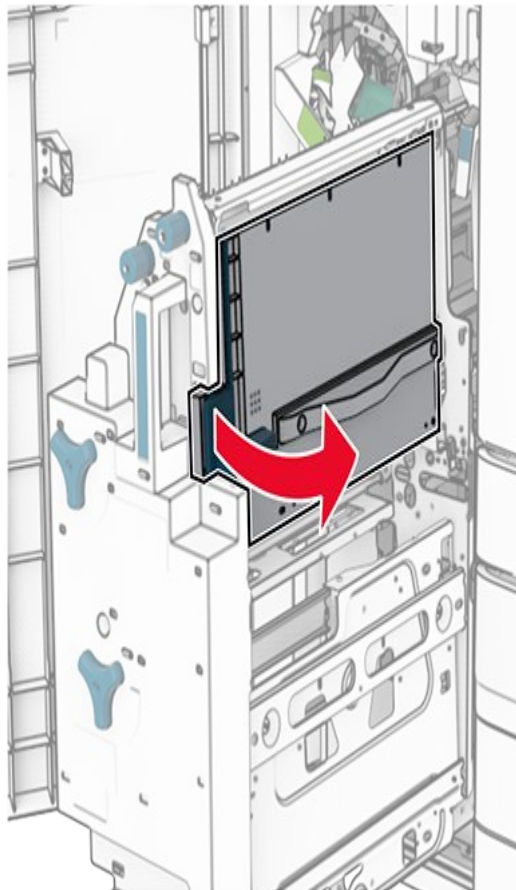

8. Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

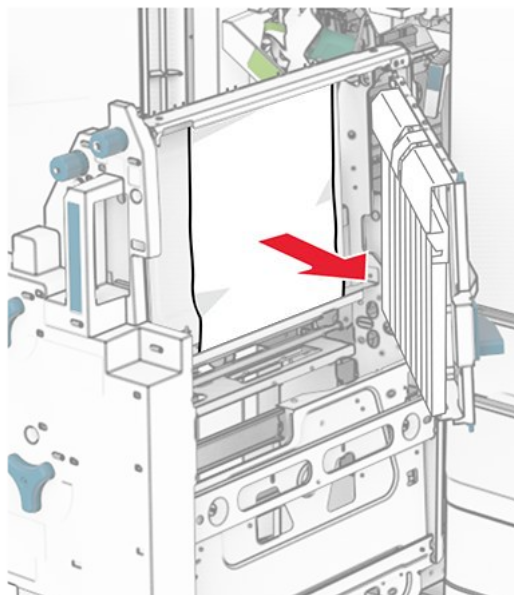

9. Close door R8.
10. Return the booklet maker into the booklet finisher.
11. Close door H.

Network connection problems

Cannot open Embedded Web Server

Try one or more of the following:

- Make sure that the printer is on.
- Make sure that the printer and the computer are connected to the same network.
- Make sure that the printer IP address is correct.

Note: You can find the IP address at the top of the printer display.

- Make sure that you installed a supported browser.
 - Microsoft Edge
 - Safari version 6 or later
 - Google Chrome™ version 32 or later
 - Mozilla Firefox version 24 or later
- Check if the network connection is working.

Note: If the connection is not working, then contact your administrator.

- Make sure that the cable connections to the printer and print server are secure. For more information, see the documentation that came with the print server.
- Check if the web proxy servers are disabled.

Note: If the servers are disabled, then contact your administrator.

If the problem persists, then contact [customer support](#).

Cannot connect the printer to the Wi-Fi network

Try one or more of the following:

- From the control panel, navigate to **Settings > Network/Ports > Network Overview > Active Adapter**, and then select **Auto**.
- Make sure that the printer is connected to the correct Wi-Fi network. For more information, see [Connecting the printer to a Wi-Fi network on page 305](#).

Note: Some routers may share the default Wi-Fi name.

- Make sure that you entered the correct network password.

Note: Take note of the spaces, numbers, and capitalization in the password.

- Make sure that the correct wireless security mode is selected. From the control panel, navigate to **Settings > Network/Ports > Wireless > Wireless Security Mode**.

If the problem persists, then contact [customer support](#).

Hardware options problems

Cannot detect internal option

Try one or more of the following:

- Turn off the printer, wait for about 10 seconds, and then turn on the printer.
- Print the **Menu Settings Page** report, and then check if the internal option appears in the Installed Features list. From the control panel, navigate to **Settings > Reports > Menu Settings Page**.
- Check if the internal option is installed properly into the controller board.
 1. Turn off the printer, and then unplug the power cord from the electrical outlet.
 2. Make sure that the internal option is installed into the appropriate connector on the controller board.
 3. Connect the power cord to the electrical outlet, and then turn on the printer.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

- Check if the internal option is available in the print driver.

Note: If necessary, manually add the internal option in the print driver to make it available for print jobs. For more information, see [Adding available options in the print driver on page 129](#).

If the problem persists, then contact [customer support](#).

Internal solutions port does not operate correctly

Try one or more of the following:

- Print the **Menu Settings Page** report, and then check if the internal solutions port (ISP) appears in the Installed Features list. From the control panel, navigate to **Settings > Reports > Menu Settings Page**.
- Remove, and then reinstall the ISP. For more information, see [Installing an internal solutions port on page 300](#).
- Check the cable and the ISP connection.
 1. Use the correct cable, and then make sure that it is securely connected to the ISP.
 2. Check if the ISP solution interface cable is securely connected to its slot on the controller board.

If the problem persists, then contact [customer support](#).

Parallel or serial interface card does not operate correctly

Try one or more of the following:

- Print the **Menu Settings Page** report, and then check if the internal solutions port (ISP) appears in the Installed Features list. From the control panel, navigate to **Settings > Reports > Menu Settings Page**.
- Remove, and then reinstall the parallel or serial interface card. For more information, see [Installing an internal solutions port on page 300](#).
- Check the connection between the cable and the parallel or serial interface card.

If the problem persists, then contact [customer support](#).

Defective flash detected

Try one or more of the following:

- Select **Continue** to ignore the message and continue printing.
- Cancel the current print job.
- Replace the defective flash memory.

If the problem persists, then contact [customer support](#).

Not enough free space in flash memory for resources

Try one or more of the following:

- Select **Continue** to clear the message and continue printing.
- Delete fonts, macros, and other data that are stored in the flash memory.

Note: Downloaded fonts and macros that are not previously stored in the flash memory are deleted.

- Install a storage drive.

If the problem persists, then contact [customer support](#).

Issues with supplies

Replace cartridge, printer region mismatch

To correct this problem, purchase a cartridge with the correct region that matches the printer region, or purchase a worldwide cartridge.

- The first number in the message after 42 indicates the region of the printer.
- The second number in the message after 42 indicates the region of the cartridge.

Region	Numeric code
Worldwide or Undefined region	0
United States, Canada, Australia, New Zealand	1
European Union, European Economic Area, Switzerland	2
Rest of Asia Pacific	3
Latin America, Puerto Rico, Mexico	4
Rest of Europe, Middle East, Africa, Central Eastern Europe, Commonwealth of Independent States	5
Invalid region	9

Note: To find the region settings of the printer and toner cartridge, print the **Print Quality Test Pages**. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**. You can find the information in the **Cartridge Information** section of the Print Quality Test page.

Refilled regular *[color]* cartridge

The printer has detected a Lexmark Regular cartridge that has been refilled with non-genuine toner by a party other than Lexmark.

Select **OK** to continue.

All printer component life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results when using supplies or parts in your Lexmark printer that are remanufactured by parties other than Lexmark.

For more information, see the printer statement of limited warranty.

Non-Lexmark supply

The printer has detected a non-Lexmark supply or part installed in the printer.

Your Lexmark printer is designed to function best with genuine Lexmark supplies and parts. Use of third-party supplies or parts may affect the performance, reliability, or life of the printer and its imaging components.

All life indicators are designed to function with Lexmark supplies and parts and may deliver unpredictable results if third-party supplies or parts are used. Imaging component usage beyond the intended life may damage your Lexmark printer or associated components.

Warning—Potential Damage

Use of third-party supplies or parts can affect warranty coverage. Damage caused by the use of third-party supplies or parts may not be covered by the warranty.

To accept any and all of these risks and to proceed with the use of non-genuine supplies or parts in your printer, touch and hold the error message on the display using two fingers for 15 seconds. When a confirmation dialog box appears, touch **Continue**.

If you do not want to accept these risks, then remove the third-party supply or part from your printer and install a genuine Lexmark supply or part. For more information, see [Using genuine Lexmark parts and supplies on page 443](#).

If the printer does not print after clearing the error message, then reset the supply usage counter.

1. From the control panel, navigate to **Settings > Device > Maintenance > Configuration Menu > Supply Usage And Counters**.
2. Select the part or supply that you want to reset, and then select **Start**.
3. Read the warning message, and then select **Continue**.
4. Using two fingers, touch the display for 15 seconds to clear the message.

Note: If you are unable to reset the supply usage counters, then return the supply item to the place of purchase.

Paper feed problems

Paper curl

Try one or more of the following:

- Adjust the guides in the tray to the correct position of the paper loaded.
- Depending on your operating system, specify the paper type from the Printing Preferences or Print dialog. Make sure that the setting matches the paper loaded.

Note: You can also change the setting on the printer control panel. Navigate to **Settings > Paper > Tray Configuration > Paper Size/Type**.

- Remove the paper, flip it over, and then reload the paper.
- Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

If the problem persists, then contact [customer support](#).

Envelope seals when printing

Try one or more of the following:

- Use an envelope that has been stored in a dry environment.

Note: Printing on envelopes with high moisture content can seal the flaps.

- Make sure that the paper type is set to **Envelope**. From the control panel, navigate to **Settings** › **Paper** › **Tray Configuration** › **Paper Size/Type**.

If the problem persists, then contact [customer support](#).

Collated printing does not work

Try one or more of the following:

- From the control panel, navigate to **Settings** › **Print** › **Layout** › **Collate**, and then select **On [1,2,1,2,1,2]**.
- From the document that you are trying to print, open the Printing Preferences or Print dialog, and then select **Collate**.
- Reduce the number of pages to print.

If the problem persists, then contact [customer support](#).

Tray linking does not work

Try one or more of the following:

- Make sure that the linked trays contain the same paper size and paper type and loaded in the same orientation.
- Make sure that the paper guides are positioned correctly.
- Set the paper size and paper type to match the paper loaded in the linked trays. From the control panel, navigate to **Settings** › **Paper** › **Tray Configuration** › **Paper Size/Type**.
- Make sure that **Tray Linking** is set to **Automatic**. For more information, see [Linking trays on page 127](#).

If the problem persists, then contact [customer support](#).

Paper frequently jams

Try one or more of the following:

- Check if the paper is loaded correctly.

Notes

- Make sure that the paper guides are positioned correctly.
 - Make sure that the stack height is below the maximum fill line.
 - Make sure to print on recommended paper size and paper type.
- Set the correct paper size and paper type. From the control panel, navigate to **Settings** › **Paper** › **Tray Configuration** › **Paper Size/Type**.
 - Load paper from a fresh package.

Note: Paper absorbs moisture due to high humidity. Store the paper in its original wrapper until you are ready to use it.

If the problem persists, then contact [customer support](#).

Jammed pages are not reprinted

1. From the control panel, navigate to **Settings** › **Device** › **Notifications** › **Jam Content Recovery**.
2. In the **Jam Recovery** menu, select **On** or **Auto**.

If the problem persists, then contact [customer support](#).

Emailing problems

Disabling the “SMTP server not set up” error message

1. From the control panel, navigate to **Settings** › **Email** › **Email Setup**.
2. Set **Disable “SMTP server not set up”** error to **On**.

To prevent the error from happening again, do one or more of the following:

- Update the printer firmware. For more information, see the **Printer firmware instructions** section.
- Configure the email SMTP settings. For more information, see [Configuring the email SMTP settings on page 322](#).

Cannot send emails

Try one more of the following:

- Make sure that the email SMTP settings are configured correctly. For more information, see [Configuring the email SMTP settings on page 322](#).
- Make sure that the printer is connected to a network and the network is connected to the Internet.

If the problem persists, then contact [customer support](#).

Faxing problems

Caller ID is not shown

1. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **Fax Receive Settings** › **Admin Controls**.
2. Set **Enable Caller ID** to **On**.

If the problem persists, then contact [customer support](#).

Cannot send or receive faxes using analog fax

Try one or more of the following:

- Resolve any error messages that appear on the display.
- Make sure that the cable connections for the telephone, handset, or answering machine are secure.
- Check for a dial tone.
 - Call the fax number to check if it is working properly.
 - If you are using the On Hook Dial feature, then turn up the volume to check if you hear a dial tone.
- Check the telephone wall jack.
 1. Connect the analog telephone directly to the wall jack.
 2. Listen for a dial tone.
 3. If you do not hear a dial tone, then use a different telephone cable.
 4. If you still do not hear a dial tone, then connect the analog telephone to a different wall jack.
 5. If you hear a dial tone, then connect the printer to that wall jack.
- Check if the printer is connected to an analog phone service or to the correct digital connector.
 - If you are using an Integrated Services for Digital Network (ISDN) telephone service, then connect to an analog telephone port of an ISDN terminal adapter. For more information, contact your ISDN provider.
 - If you are using DSL, then connect to a DSL filter or router that supports analog use. For more information, contact your DSL provider.
 - If you are using a private branch exchange (PBX) telephone service, then make sure that you are connecting to an analog connection on the PBX. If none exists, then consider installing an analog telephone line for the fax machine.
- Temporarily disconnect other equipment and disable other telephone services.
 1. Disconnect other equipment (such as answering machines, computers, modems, or telephone line splitters) between the printer and the telephone line.
 2. Disable call waiting and voice mail. For more information, contact your telephone company.
- Scan the original document one page at a time.

If the problem persists, then contact [customer support](#).

Can receive but not send faxes using analog fax

Try one or more of the following:

Troubleshoot a problem

- Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
- Set up the shortcut number properly.
 - Check if the shortcut number is set for the telephone number that you want to dial.
 - Dial the telephone number manually.

If the problem persists, then contact [customer support](#).

Can send but not receive faxes using analog fax

Try one or more of the following:

- Make sure that the paper source is not empty.
- Check the ring count delay settings. From the control panel, navigate to **Settings** › **Fax** › **Fax Setup** › **Fax Receive Settings** › **Rings to Answer**.
- If the printer is printing blank pages, then see [Blank or white pages on page 515](#).

If the problem persists, then contact [customer support](#).

Cannot set up etherFAX

Try one or more of the following:

- Check the printer connectivity.
 1. From the control panel, navigate to **Settings** › **Reports** › **Network** › **Network Setup Page**.
 2. Check the network status on the printed page.
- Make sure that the printer is connected to a network and the network is connected to the Internet.
- Make sure that etherFAX is set up correctly. For more information, see [Setting up the fax function using etherFAX on page 103](#).

If the problem persists, then go to <https://www.etherfax.net/lexmark>.

Cannot send or receive faxes using etherFAX

Try one or more of the following:

- Make sure that the printer is connected to a network and the network is connected to the Internet.
- Make sure that etherFAX is set up correctly. For more information, see [Setting up the fax function using etherFAX on page 103](#).
- Split large documents into smaller file sizes.

If the problem persists, then go to <https://www.etherfax.net/lexmark>.

Poor fax print quality

Try one or more of the following:

- Resolve any print quality defects.
 1. Print the **Test Quality Pages**. From the control panel, navigate to **Settings > Troubleshooting > Print Quality Test Pages**.
 2. Correct any print quality defects. For more information, see the **Print quality is poor** section.
- If you are using an analog fax, then decrease the incoming fax transmission speed.
 1. From the control panel, navigate to **Settings > Fax > Fax Setup > Fax Receive Settings > Admin Controls**.
 2. In the **Max Speed** menu, select a lower transmission speed.

If the problem persists, then contact [customer support](#).

Missing information on the fax cover page

1. Turn off the printer, wait for about 10 seconds, and then turn on the printer.
2. Send or retrieve the fax.

If the problem persists, then contact [customer support](#).

Cannot send the fax cover page from the computer

Try one or more of the following:

- Make sure that the print driver is updated. For more information, go to www.lexmark.com/downloads.
- Clear the **Always display settings prior to faxing** setting.
 1. From the document that you are trying to fax, open the **Print** dialog.
 2. Select the printer, and then click **Properties, Preferences, Options, or Setup**.
 3. Click **Fax**, and then clear the **Always display settings prior to faxing** setting.

If the problem persists, then contact [customer support](#).

Scanning problems

Cannot scan to a computer

Try one or more of the following:

- Perform a copy job. If the job failed, then turn off the printer, wait for about 10 seconds, and then turn on the printer.
- Check the printer connectivity.
 1. Print the **Network Setup Page**. From the control panel, navigate to **Settings > Reports > Network**, and then select **Network Setup Page**.
 2. Check the first section of the page and confirm if the status is connected.
- Make sure that the printer and the computer are connected to the same network.

If the problem persists, then contact [customer support](#).

Cannot scan to a network folder

Try one or more of the following:

- Create a network folder shortcut, and then scan a document using the shortcut. For more information, see [Scanning to a network folder on page 338](#).
- Make sure that the network folder path and format are correct. For example, `//server_hostname/foldername/path`, where `server_hostname` is a fully qualified domain (FQDN) or IP address.
- Make sure that you have a write access permission to the network folder.
- Make sure that the printer and the network folder are connected to the same network.
- Update the network folder shortcut.
 1. Open a web browser, and then type the printer IP address in the address field.

Notes

- You can find the IP address at the top of the printer display.
- Make sure that the printer and computer are connected to the same network.

2. Click **Shortcuts**, and then select a shortcut.

Note: If you have multiple shortcut types, then select **Network Folder**.

3. In the **Share Path** field, type the network folder path. For example, `//server_hostname/foldername/path`.

Note: Always use forward slashes when typing the share path.

4. From the **Authentication** menu, select your authentication method.

Note: If **Authentication** is set to “**Use assigned username and password**,” then in the Username and Password fields, type your credentials.

5. Click **Save**.

If the problem persists, then contact [customer support](#).

Partial copies of document or photo

Try one or more of the following:

- Make sure that the document or photo is loaded face down on the upper left corner of the scanner glass.
- Match the paper size setting and the paper loaded in the tray. For more information, see [Setting the paper size and type on page 109](#).

If the problem persists, then contact [customer support](#).

Poor copy quality

Try one or more of the following:

- Clean the scanner. For more information, see [Cleaning the scanner on page 489](#).
- Make sure that the document or photo is loaded face down on the upper-left corner of the scanner glass.
- Check the quality of the original document or photo and adjust the scan quality settings accordingly.

If the problem persists, then contact [customer support](#).

Vertical dark streaks when scanning from the ADF

1. Open the scanner cover, and then remove the glass cleaner tool.
2. Wipe the ADF glass beside the scanner glass.
3. Open door A1, and then clean the ADF glass.
4. Return the tool to its place.
5. Close the scanner cover.


Note: For more information on cleaning the scanner, see [Cleaning the scanner on page 489](#).

If the problem persists, then contact [customer support](#).

Jagged image or text when scanning from the ADF

1. Load 50 sheets of clean, plain paper into the ADF.

Note: The plain paper helps clean or remove dust and other coatings from the ADF feed rollers.

2. From the control panel, swipe right to the control center, and then select .
3. Load an original document into the ADF tray or on the scanner glass. For more information, see [Using the automatic document feeder and scanner glass on page 21](#).
4. Scan the document.

If the problem persists, then contact [customer support](#).

Scan job was not successful

Try one or more of the following:

- Make sure that the Ethernet or USB cable is securely connected to the computer and the printer.
- Check the file that you want to scan, and make sure that:
 - The file name is not already used in the destination folder.
 - The document or photo that you want to scan is not open in another application.
- Make sure that the **Append time stamp** or the **Overwrite existing file** check box is selected in the destination configuration settings.

If the problem persists, then contact [customer support](#).

Scanner does not close

Try one or more of the following:

- Remove any paper, debris, or foreign objects inside the scanner.
- Clean the lid and frame.
- Check if the hinges or latches are damaged or misaligned and replace if necessary.

If the problem persists, then contact [customer support](#).

Scanning takes too long or freezes the computer

Try one or more of the following:

- Close all applications that are interfering with the scan.
- Reduce the scan resolution
- Restart the printer.
- Use a USB or Ethernet connection.

If the problem persists, then contact [customer support](#).

Scanner does not respond

Try one or more of the following:

- Check if the power cord is connected properly to the printer and the electrical outlet.



CAUTION—POTENTIAL INJURY

To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

- Check if the printer is turned on, and then resolve any error messages that appear on the display.
- Turn off the printer, wait for about 10 seconds, and then turn on the printer.

If the problem persists, then contact [customer support](#).

Adjusting scanner registration

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Configuration Menu** › **Scanner Configuration** › **Scanner Manual Registration**.
2. In the **Print Quick Test** menu, select **Start**.
3. Place the test page on the scanner glass, and then select **Flatbed Registration**.
4. In the **Copy Quick Test** menu, select **Start**.
5. Compare the test page with the original document.

Note: If the margins of the test page are different from the original document, then adjust the **Left Margin** and **Top Margin** settings.

6. Repeat [step 4](#) and [step 5](#) until the margins of the **Copy Quick Test** page closely match the original document.

Adjusting ADF registration

1. From the control panel, navigate to **Settings** › **Device** › **Maintenance** › **Configuration Menu** › **Scanner Configuration** › **Scanner Manual Registration**.
2. In the **Print Quick Test** menu, select **Start**.
3. Place the test page on the ADF tray.
4. Select **Front ADF Registration** or **Rear ADF Registration**.

Notes

- To align **Front ADF Registration**, place the test page faceup, short edge first into the ADF.
- To align **Rear ADF Registration**, place the test page facedown, short edge first into the ADF.

5. In the **Copy Quick Test** menu, select **Start**.
6. Compare the test page with the original document.

Note: If the margins of the test page are different from the original document, then adjust the **Horizontal Adjust** and **Top Margin** settings.

7. Repeat [step 5](#) and [step 6](#) until the margins of the **Copy Quick Test** page closely match the original document.

Color quality problems

Modifying the colors in printed output

1. From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging** › **Color Correction**.
2. In the **Color Correction** menu, select **Manual**.
3. In the **Color Correction Content** menu, select the appropriate color conversion setting.

Object type	Color conversion tables
RGB Image RGB Text RGB Graphics	<ul style="list-style-type: none">◦ Vivid—Produces brighter, more saturated colors and can be applied to all incoming color formats.◦ sRGB Display—Produces an output that approximates the colors shown on a computer monitor. Black toner usage is optimized for printing photographs.◦ Display-True Black—Produces an output that approximates the colors shown on a computer monitor. This setting uses only black toner to create all levels of neutral gray.◦ sRGB Vivid—Provides an increased color saturation for the sRGB Display color correction. Black toner usage is optimized for printing business graphics.◦ Off
CMYK Image CMYK Text CMYK Graphics	<ul style="list-style-type: none">◦ US CMYK—Applies color correction to approximate the Specifications for Web Offset Publishing (SWOP) color output.◦ Euro CMYK—Applies color correction to approximate Euroscale color output.◦ Vivid CMYK—Increases the color saturation of the US CMYK color correction setting.◦ Off

FAQ about color printing

What is RGB color?

RGB color is a method of describing colors by indicating the amount of red, green, or blue used to produce a certain color. Red, green, and blue light can be added in various amounts to produce a large range of colors observed in nature. Computer screens, scanners, and digital cameras use this method to display colors.

What is CMYK color?

CMYK color is a method of describing colors by indicating the amount of cyan, magenta, yellow, and black used to reproduce a particular color. Cyan, magenta, yellow, and black inks or toners can be printed in various amounts to produce a large range of colors observed in nature. Printing presses, inkjet printers, and color laser printers create colors in this manner.

How is color specified in a document to be printed?

Software programs are used to specify and modify the document color using RGB or CMYK color combinations. For more information, see the software program Help topics.

How does the printer know what color to print?

When printing a document, information describing the type and color of each object is sent to the printer and is passed through color conversion tables. Color is translated into the appropriate amounts of cyan, magenta, yellow, and black toner used to produce the color you want. The object information determines the application of color conversion tables. For example, it is possible to apply one type of color conversion table to text while applying a different color conversion table to photographic images.

What is manual color correction?

When manual color correction is enabled, the printer employs user-selected color conversion tables to process objects. Manual color correction settings are specific to the type of object being printed (text, graphics, or images). It is also specific to how the color of the object is specified in the software program (RGB or CMYK combinations). To apply a different color conversion table manually, see [Modifying the colors in printed output on page 600](#).

If the software program does not specify colors with RGB or CMYK combinations, then manual color correction is not useful. It is also not effective if the software program or the computer operating system controls the adjustment of colors. In most situations, setting the Color Correction to Auto generates preferred colors for the documents.

How can I match a particular color (such as a corporate logo)?

From the printer Quality menu, nine types of Color Samples sets are available. These sets are also available from the Color Samples page of the Embedded Web Server. Selecting any sample set generates multiple-page prints consisting of hundreds of colored boxes. Each box contains a CMYK or RGB combination, depending on the table selected. The observed color of each box is obtained by passing the CMYK or RGB combination labeled on the box through the selected color conversion table.

By examining Color Samples sets, you can identify the box with color closest to the color being matched. The color combination labeled on the box can then be used for modifying the color of the object in a software program. For more information, see the software program Help topics. Manual color correction may be necessary to use the selected color conversion table for the particular object.

Selecting which Color Samples set to use for a particular color-matching problem depends on:

- The Color Correction setting being used (Auto, Off, or Manual)
- The type of object being printed (text, graphics, or images)
- How the color of the object is specified in the software program (RGB or CMYK combinations)

If the software program does not specify colors with RGB or CMYK combinations, then the Color Samples pages are not useful. Additionally, some software programs adjust the RGB or CMYK combinations specified in the program through color management. In these situations, the printed color may not be an exact match of the Color Samples pages.

The print appears tinted

Try one or more of the following:

Troubleshoot a problem

- From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging**, and then select **Color Adjust**.
- From the control panel, navigate to **Settings** › **Print** › **Quality** › **Advanced Imaging**, select **Color Balance**, and then adjust the settings.

If the problem persists, then contact [customer support](#).

| Contacting customer support

Before contacting customer support, make sure to have the following information:

- Printer problem
- Error message
- Printer model type and serial number

Go to <https://support.lexmark.com> to receive email or chat support, or browse through the library of manuals, support documentation, drivers, and other downloads.

Technical support via telephone is also available. In the U.S. or Canada, call 1-800-539-6275. For other countries or regions, go to www.lexmark.com/supportdirectory.

Recycle and dispose

Recycling Lexmark products

1. Go to www.lexmark.com/recycle.
2. Select your country or region.
3. Select a recycling program.

Recycling Lexmark packaging

Lexmark continually strives to minimize packaging. Less packaging helps to ensure that Lexmark printers are transported in the most efficient and environmentally sensitive manner and that there is less packaging to dispose of. These efficiencies result in fewer greenhouse emissions, energy savings, and natural resource savings.

Lexmark cartons are 100% recyclable where corrugated recycling facilities exist. Facilities may not exist in your area.

The foam used in Lexmark packaging is recyclable where foam recycling facilities exist. Facilities may not exist in your area.

When you return a cartridge to Lexmark, you can reuse the box that the cartridge came in. Lexmark will recycle the box.

Notices

Product information

Product name:

Lexmark CX950se, Lexmark CX950g; Lexmark CX951se, Lexmark CX951g; Lexmark XC9525; Lexmark XC9535 MFPs

Machine type:

7566

Models:

288, 298

Edition and legal notices

Edition notices

June 2025

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, go to <https://support.lexmark.com>.

For information on Lexmark's privacy policy governing the use of this product, go to www.lexmark.com/privacy.

For information on supplies and downloads, go to www.lexmark.com.

© 2025 Lexmark International, Inc.

All rights reserved.

GOVERNMENT END USERS

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7202-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

Trademarks

Lexmark, the Lexmark logo, and MarkNet are trademarks or registered trademarks of Lexmark International, Inc. in the United States and/or other countries.

Gmail, Android, Google Play, and Google Chrome are trademarks of Google LLC.

Macintosh, macOS, Safari, and AirPrint are trademarks of Apple Inc., registered in the U.S. and other countries.

iCloud is a service mark of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Microsoft, Microsoft 365, Microsoft Edge, Outlook, and Windows are trademarks of the Microsoft group of companies.

The Mopria™ word mark is a registered and/or unregistered trademark of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

PCL® is a registered trademark of the Hewlett-Packard Company. PCL is Hewlett-Packard Company's designation of a set of printer commands (language) and functions included in its printer products. This printer is intended to be compatible with the PCL language. This means the printer recognizes PCL commands used in various application programs, and that the printer emulates the functions corresponding to the commands.

PostScript is a registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Wi-Fi®, Wi-Fi Direct®, and Wi-Fi Protected Access® are registered trademarks of Wi-Fi Alliance®. WPA™, WPA2™, and Wi-Fi Protected Setup™ are trademarks of Wi-Fi Alliance®.

All other trademarks are the property of their respective owners.

Licensing notices

All licensing notices associated with this product can be viewed from the CD:\NOTICES directory of the installation software CD.

STATEMENT OF LIMITED WARRANTY FOR LEXMARK LASER PRINTERS, LEXMARK LED PRINTERS, AND LEXMARK MULTIFUNCTION LASER PRINTERS

Lexmark International, Inc., Lexington, KY

This limited warranty applies to the United States and Canada. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark Remarketer, referred to in this statement as "Remarketer."

Limited warranty

Lexmark warrants that this product:

—Is manufactured from new parts, or new and serviceable used parts, which perform like new parts

—Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was intended. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt and ends 12 months later provided that the warranty period for any supplies and for any maintenance items included with the printer shall end earlier if it, or its original contents, are substantially used up, depleted, or consumed. Fuser Units, Transfer/Transport Units, Paper Feed items, if any, and any other items for which a Maintenance Kit is available are substantially consumed when the printer displays a “Life Warning” or “Scheduled Maintenance” message for such item.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the Lexmark designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item.

The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

As part of your warranty service and/or replacement, Lexmark may update the firmware in your printer to the latest version. Firmware updates may modify printer settings and cause counterfeit and/or unauthorized products, supplies, parts, materials (such as toners and inks), software, or interfaces to stop working. Authorized use of genuine Lexmark products will not be impacted.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area contact Lexmark on the World Wide Web.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

Extent of limited warranty

Lexmark does not warrant uninterrupted or error-free operation of any product or the durability or longevity of prints produced by any product.

Warranty service does not include repair of failures caused by:

- Modification or unauthorized attachments
- Accidents, misuse, abuse or use inconsistent with Lexmark user's guides, manuals, instructions or guidance
- Unsuitable physical or operating environment
- Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- Operation of a product beyond the limit of its duty cycle
- Use of printing media outside of Lexmark specifications
- Refurbishment, repair, refilling or remanufacture by a third party of products, supplies or parts
- Products, supplies, parts, materials (such as toners and inks), software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. **IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES.** This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Specifications

Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, Chapter I, Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class 1 consumer laser product conforming to the requirements of IEC 60825-1:2014, EN 60825-1:2014+A11:2021, and EN 50689:2021.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service conditions. The printer has a non-serviceable printhead assembly that contains a laser with the following specifications:

Class: IIIb (3b) AlGaAs

Nominal output power (milliwatts): 25

Wavelength (nanometers): 770–800

Temperature information

Operating temperature and relative humidity (RH) ¹	10 to 32.2°C (50 to 90°F) and 15 to 80% RH 15.6 to 32.2°C (60 to 90°F) and 8 to 80% RH Maximum wet-bulb temperature ² : 22.8°C (73°F) Non-condensing environment
Printer / cartridge / imaging unit long-term storage ²	15.6 to 32.2°C (60 to 90°F) and 8 to 80% RH Maximum wet-bulb temperature ² : 22.8°C (73°F)
Printer / cartridge / imaging unit short-term shipping ³	-40 to 40°C (-40 to 104°F)

¹ In some cases, performance specifications (such as cartridge usage and first-page-out speed) must be measured at a standard office environment of approximately 22.2°C (72°F) and 45% RH.

² Supplies shelf life is approximately 2 years. This is based on storage in a standard office environment at 22°C (72°F) and 45% humidity.

³ Wet-bulb temperature is determined by the air temperature and the relative humidity.

Power requirements

The following nominal voltage ranges are supported in applicable countries or regions: 100–110 V / 50Hz, 110–127 V / 60Hz, and 220–240 V / 50Hz (not dual-voltage).

Product power consumption

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	One-sided: 601 (CX951, XC9535); 448 (CX950, XC9525); Two-sided: 557 (CX951, XC9535); 442 (CX950, XC9525)
Copy	The product is generating hard-copy output from hard-copy original documents.	652 (CX951, XC9535); 495 (CX950, XC9525)
Scan	The product is scanning hard-copy documents.	64.0 (CX951, XC9535); 65.0 (CX950, XC9525)
Ready	The product is waiting for a print job.	38.5 (CX951, XC9535); 37.5 (CX950se) 38.5 (CX950g, XC9525)
Sleep Mode	The product is in a high-level energy-saving mode.	1.0 (CX951, XC9535); 0.9 (CX950, XC9525)

Mode	Description	Power consumption (Watts)
Hibernate	The product is in a low-level energy-saving mode.	0.2
Off	The product is plugged into an electrical outlet, but the power switch is turned off.	0.2

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average. Values are subject to change. See www.lexmark.com for current values.

Sleep Mode

This product is designed with an energy-saving mode called **Sleep Mode**. The Sleep Mode saves energy by lowering power consumption during extended periods of inactivity. The Sleep Mode is automatically engaged after this product is not used for a specified period of time, called the **Sleep Mode Timeout**.

Factory default Sleep Mode Timeout for this product (in minutes):	15
---	----

By using the configuration menus, the Sleep Mode Timeout can be modified between 1 minute and 120 minutes, or between 1 minute and 114 minutes, depending on the printer model. If the printer speed is less than or equal to 30 pages per minute, then you can set the timeout only up to 60 minutes or 54 minutes, depending on the printer model. Setting the Sleep Mode Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Sleep Mode Timeout to a high value maintains a fast response, but uses more energy.

Some models support a **Deep Sleep Mode**, which further reduces power consumption after longer periods of inactivity.

Hibernate Mode

This product is designed with an ultra-low power operating mode called **Hibernate mode**. When operating in Hibernate Mode, all other systems and devices are powered down safely. The Hibernate mode can be entered in any of the following methods:

- Using the Hibernate Timeout
- Using the Schedule Power modes

Factory default Hibernate Timeout for this product in all countries or regions	3 days
--	--------

The amount of time the printer waits after a job is printed before it enters Hibernate mode can be modified between one hour and one month.

Notes on EPEAT-registered imaging equipment products:

- Standby power level occurs in Hibernate or Off mode.
- The product shall automatically power down to a standby power level of ≤ 1 W. The auto standby function (Hibernate or Off) shall be enabled at product shipment.

Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the electrical outlet.

Total energy usage

It is sometimes helpful to estimate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

Environmental and sustainability notices

Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply to your product.

1-meter average sound pressure, dBA	
Printing	One-sided mono: 44 (CX950, XC9525); 46 (CX951, XC9535); One-sided color: 44 (CX950, XC9525); 46 (CX951, XC9535); Two-sided mono: 45 (CX950, XC9525); 46 (CX951, XC9535); Two-sided color: 45 (CX950, XC9525); 47 (CX951, XC9535)
Scanning	Mono: 55; Color: 42
Copying	Mono: 49 (CX950, XC9525); 50 (CX951, XC9535); Color: 46 (CX950, XC9525); 47 (CX951, XC9535)
Ready	14

Values are subject to change. See www.lexmark.com for current values.

Waste from Electrical and Electronic Equipment (WEEE) directive



Notices

The WEEE logo signifies specific recycling programs and procedures for electronic products in countries of the European Union. We encourage the recycling of our products.

If you have further questions about recycling options, visit the Lexmark website at www.lexmark.com for your local sales office phone number.

India E-Waste notice



This product including components, consumables, parts and spares complies with the “India E-Waste Rules” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1% by weight and 0.01% by weight for cadmium, except for the exemption set in the Rule.

Lithium-ion rechargeable battery



This product may contain a coin-cell, lithium-ion rechargeable battery, which should only be removed by a trained technician. Crossed-out wheeled bin means the product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling. In the event the battery is removed, do not dispose of the battery in your household waste. There may be separate collection systems for batteries in your local community, such as a battery-recycling drop-off location. The separate collection of waste batteries assures appropriate treatment of waste including reuse and recycling and prevents any potential negative effects on human health and environment. Please responsibly dispose of the batteries.

Regulation (EU) 2023/1542

This product may contain a coin-cell lithium rechargeable battery. This battery complies with Regulation (EU) 2023/1542. Compliance is indicated by the CE marking:






This product may contain one of the following coin-cell batteries:

- Battery identification: Seiko Model Number MS621FE
 Manufacturer: Seiko Instruments Inc.
 Manufacturer address: 8, Nakase 1-chome, Mihama-ku, Chiba-shi, Chiba 261-8507, Japan
- Battery identification: Panasonic Model Number ML621
 Manufacturer: Panasonic Energy Co., Ltd.
 Manufacturer address: 1-1 Matsushita-cho, Moriguchi City, Osaka 570-8511, Japan
- Battery identification: FDK Model Number ML621
 Manufacturer: FDK Corporation
 Manufacturer address: Shibaura Crystal Shinagawa, 1-6-41 Konan, Minato-ku, Tokyo 108-8212 Japan

Environmental labeling for packaging

Per Commission Regulation Decision 97/129/EC Legislative Decree 152/2006, the product packaging may contain one or more of the following symbols.

	<p>This symbol indicates that the packaging may contain corrugated fiberboard.</p>
	<p>This symbol indicates that the packaging may contain non-corrugated fiberboard.</p>
	<p>This symbol indicates that the packaging may contain paper.</p>

For more information, go to www.lexmark.com/recycle, and then choose your country or region. Information on available packaging recycling programs is included with the information on product recycling.

Product disposal

Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options.

Returning Lexmark cartridges for reuse or recycling

The Lexmark Cartridge Collection Program allows you to return used cartridges for free to Lexmark for reuse or recycling. One hundred percent of the empty cartridges returned to Lexmark are either reused or demanufactured for recycling. The boxes used to return the cartridges are also recycled.

To return Lexmark cartridges for reuse or recycling, do the following:

1. Go to www.lexmark.com/recycle.
2. Select your country or region.
3. Select **Lexmark Cartridge Collection Program**.
4. Follow the instructions on the screen.

ENERGY STAR

Any Lexmark product bearing the ENERGY STAR® emblem on the product or on a start-up screen is certified to comply with Environmental Protection Agency (EPA) ENERGY STAR requirements as of the date of manufacture.



Notices for wireless products

Regulatory notices for wireless products

This section contains regulatory information that applies only to wireless models.

If in doubt as to whether your model is a wireless model, then see the "Wireless support" section or go to <http://support.lexmark.com>.

Modular component notice

Wireless models contain one of the following modular components:

Lexmark MarkNet N8450 / AzureWave AW-CM467-SUR; FCC ID:TLZ-CM467; IC:6100A-CM467

To determine which modular components are installed in your particular product, refer to the labeling on your actual product.

Exposure to radio frequency radiation

The radiated output power of this device is far below the radio frequency exposure limits of the FCC and other regulatory agencies. A minimum separation of 20 cm (8 inches) must be maintained between the antenna and any persons for this device to satisfy the RF exposure requirements of the FCC and other regulatory agencies.

Innovation, Science and Economic Development Canada

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Innovation, Sciences et Développement économique Canada

Cet appareil est conforme aux normes RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences et (2) il doit accepter toutes les interférences, y compris les celles qui peuvent entraîner un fonctionnement indésirable.

European Community (EC) directives conformity

This product is in conformity with the protection requirements of EC Council directive 2014/53/EU on the approximation and harmonization of the laws of the Member States relating to radio equipment. The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The EEA/EU authorized representative is: Lexmark International Technology Hungária Kft., 8 Lechner Ödön fasor, Millennium Tower III, 1095 Budapest HUNGARY. Email: EU-Product-Safety@lexmark.com. The EEA/EU Importer is: Lexmark International Technology S.à.r.l. 20, Route de Pré-Bois, ICC Building, Bloc A, CH-1215 Genève, Switzerland. A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/european-union-declaration-of-conformity.html. Compliance is indicated by the CE marking:



Restrictions

This radio equipment is restricted to indoor use only. Outdoor use is prohibited. This restriction applies to all the countries listed in the table below:

AT	BE	BG	CH	CY	CZ	DE	DK	EE	

EL	ES	FI	FR	HR	HU	IE	IS	IT
LI	LT	LU	LV	MT	NL	NO	PL	PT
RO	SE	SI	SK	TR	UK (NI)			

EU and other countries statement of radio transmitter operational frequency bands and maximum RF power

This radio product transmits in either the 2.4GHz (2.412–2.472GHz in the EU) or 5GHz (5.15–5.35, 5.47–5.725GHz in the EU) bands. The maximum transmitter EIRP power output, including antenna gain, is $\leq 20\text{dBm}$ for both bands.

United Kingdom (UK) conformity

This product is in conformity with the protection requirements of the Radio Equipment Regulations 2017. The manufacturer of this product is: Lexmark International, Inc., 740 West New Circle Road, Lexington, KY, 40550 USA. The UK Importer is: Lexmark International Ltd, Building Q1 Quantum Business Park, 60 Norden Road, Maidenhead, Berkshire, United Kingdom SL6 4AY. A declaration of conformity is available upon request from the UK Importer or may be obtained at www.lexmark.com/en_us/about/regulatory-compliance/uk-declaration-of-conformity.html.

Compliance is indicated by the UKCA marking:



Restrictions or requirements in the UK

This radio equipment is restricted to indoor use only. Outdoor use is prohibited.

UK statement of radio transmitter operational frequency bands and maximum RF power

This radio product transmits in either the 2.4GHz (2.412–2.472 GHz in the UK) or 5GHz (5.15–5.35, 5.47–5.725 in the UK) bands. The maximum transmitter EIRP power output, including antenna gain, is $\leq 20\text{dBm}$ for both bands.

Notice to users in Thailand

ประกาศถึงผู้ใช้ในประเทศไทย

This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.

เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้
รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม
พ.ศ. 2498



nanb. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (InsWi)

Other regulatory notices

Static sensitivity notice



This symbol identifies static-sensitive parts. Do not touch the areas near these symbols without first touching a metal surface in an area away from the symbol.
To prevent damage from electrostatic discharge when performing maintenance tasks such as clearing paper jams or replacing supplies, touch any exposed metal frame of the printer before accessing or touching interior areas of the printer even if the symbol is not present.

Applicability of Regulation (EU) 2019/2015 and (EU) 2019/2020

Per Commission Regulation (EU) 2019/2015 and (EU) 2019/2020, the light source contained within this product or its component is intended to be used for Image Capture or Image Projection only, and is not intended for use in other applications.

The UK Product Security and Telecommunications Infrastructure Act 2022 (PSTI Act)—Summary Statement of Compliance

Lexmark International Inc., 740 West New Circle Road, Lexington, KY 40550 USA, declares that this product complies with the applicable security requirements in Schedule 1 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The defined support period for this product can be found at the following web page: <https://www.lexmark.com/firmware-eos>.

A copy of the Statement of Compliance is available for download at the following web page: https://www.lexmark.com/en_us/about/regulatory-compliance/all-regulatory-docs.html.

Thailand NBTC technical standards conformity statement

คำประกาศเรื่องการเป็นไปตามมาตรฐานทางเทคนิคของ กสทช. ประเทศไทย

This telecommunication equipment conforms to the technical standards or requirements of NBTC.
เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

User's Guide